

ENTRY POINTS

FROM	ENTER THIS MAP		
MAP NUMBER	ENTRY POINT	PAGE NUMBER	STEP NUMBER
0020	A	1	001

EXIT POINTS

EXIT THIS MAP		TO	
PAGE NUMBER	STEP NUMBER	MAP NUMBER	ENTRY POINT
1	003	0020	A
1	004	0020	A
2	006	0020	A
2	007	0020	A

001
(ENTRY POINT A)

- SEE IF A PROGRAMMER OR C E CONSOLE IS INSTALLED.

IS A PROGRAMMER OR C E CONSOLE INSTALLED ON THE SYSTEM?

N

002
- SEE IF THERE A SUSPECT CARD, AS FOLLOWS:

AN ATTACHMENT CARD.
A DEVICE CARD.
A STORAGE CARD.
A PROCESSING UNIT CARD.
AND SO FORTH.

IS THERE A SUSPECT CARD AS NOTED PER YOUR OR CUSTOMER INFORMATION?

N

003
- OBTAIN THE FOLLOWING:
C E MAINTENANCE CONSOLE TOOL
MAINTENANCE PROGRAM LOAD DEVICE.

INSTALL THE MAINTENANCE TOOL(S):

SEE THE PROCESSING UNIT MAINTENANCE INFORMATION MANUAL:
'MAINTENANCE CONSOLE ATTACHMENT PROCEDURE'
'MAINTENANCE PROGRAM LOAD DEVICE ATTACHMENT PROCEDURE'.
SEE THE MLD VOLUME 1, PAXXX FOR THE PROCESSING UNIT TOP CARD CONNECTOR(S).
GO TO MAP 0020, ENTRY POINT A.

004
- SEE THE TABLE---

- OBTAIN THE FOLLOWING:
1. THE SUSPECT CARD.
2. THE C E MAINTENANCE CONSOLE TOOL.
3. THE MAINTENANCE PROGRAM LOAD DEVICE.

INSTALL THE MAINTENANCE TOOL(S):

SEE THE PROCESSING UNIT MAINTENANCE INFORMATION MANUAL:
'MAINTENANCE CONSOLE ATTACHMENT PROCEDURE'
'MAINTENANCE PROGRAM LOAD DEVICE ATTACHMENT PROCEDURE'.
SEE THE MLD VOLUME 1, PAXXX FOR THE PROCESSING UNIT TOP CARD CONNECTOR(S).
GO TO MAP 0020, ENTRY POINT A.

005
- SEE IF THERE A SUSPECT CARD, AS FOLLOWS:

AN ATTACHMENT CARD.
A DEVICE CARD.
A STORAGE CARD.
A PROCESSING UNIT CARD.
AND SO FORTH.

DO YOU SUSPECT AN ATTACHMENT CARD?

N

006
- OBTAIN THE FOLLOWING:
THE MAINTENANCE PROGRAM LOAD DEVICE.

INSTALL THE MAINTENANCE TOOL:

SEE THE PROCESSING UNIT MAINTENANCE INFORMATION MANUAL:
'MAINTENANCE PROGRAM LOAD DEVICE ATTACHMENT PROCEDURE'.
GO TO MAP 0020, ENTRY POINT A.

'THE SUSPECT ATTACHMENT CARD' = :

DEVICE/ATTACHMENT SUSPECT	OBTAIN THE FOLLOWING ATTACHMENT CARD:
4962 DISK	4962 ATTACHMENT CARD
4964 DISKETTE	4964 ATTACHMENT CARD
4966 DISKETTE	4966 ATTACHMENT CARD
4974 PRINTER	4974 ATTACHMENT CARD
4978 DISPLAY	4978 ATTACHMENT CARD
4979 DISPLAY	4979 ATTACHMENT CARD
4982 SENSOR I/O	4982 ATTACHMENT CARD
XXXX I/O DEVICE	49XX ATTACHMENT CARD
RPQ DEVICE	RPQ ATTACHMENT CARD

A
1

NO DISKETTE UNIT MAP
PAPER ONLY MAP
PAGE 2 OF 2

MAP 0028-2

007

- SEE THE TABLE--->

OBTAIN THE FOLLOWING:

1. THE SUSPECT CARD.
2. THE MAINTENANCE PROGRAM LOAD DEVICE.

INSTALL THE MAINTENANCE TOOL:

SEE THE PROCESSING UNIT MAINTENANCE
INFORMATION MANUAL:
MAINTENANCE PROGRAM LOAD DEVICE ATTACHMENT
PROCEDURE.

GO TO MAP 0020, ENTRY POINT A.

'THE SUSPECT ATTACHMENT CARD' = :

DEVICE/ATTACHMENT SUSPECT	OBTAIN THE FOLLOWING ATTACHMENT CARD:
4962 DISK	4962 ATTACHMENT CARD
4964 DISKETTE	4964 ATTACHMENT CARD
4966 DISKETTE	4966 ATTACHMENT CARD
4974 PRINTER	4974 ATTACHMENT CARD
4978 DISPLAY	4978 ATTACHMENT CARD
4979 DISPLAY	4979 ATTACHMENT CARD
4982 SENSOR I/O	4982 ATTACHMENT CARD
XXXX I/O DEVICE	49XX ATTACHMENT CARD
RPQ DEVICE	RPQ ATTACHMENT CARD

20NOV81 PN6060920

EC466795 PEC466794

MAP 0028-2