

ENTRY POINTS

FROM ENTER THIS MAP			
MAP NUMBER	ENTRY POINT	PAGE NUMBER	STEP NUMBER
0020	AK	3	028
0020	KD	3	021
0020	LR	4	039
0020	OL	2	015
0020	PQ	1	004

EXIT POINTS

EXIT THIS MAP		TO	
PAGE NUMBER	STEP NUMBER	MAP NUMBER	ENTRY POINT
4	033	0020	PD
4	036	0020	PD
3	020	0023	CE
3	017	0070	A

001
 (ENTRY POINT A)

THE CONSOLE INSTALLED IS A 4978 RPQ.
 - SEE IF THIS MESSAGE IS ON THE 4978 ALTERNATE CONSOLE.
 'PRESS ANY KEY IN 15 SECONDS TO CHANGE KEYBOARD DESCRIPTION.'

IS THIS MESSAGE ON THE ALTERNATE CONSOLE?
 N

002
 - SEE THE NOTE --->
 - SEE IF THIS MESSAGE IS ON THE 4978 ALTERNATE CONSOLE.

'DESCRIBE KEYBOARD
 PRESS THE KEY REQUESTED
 ATTENTION'

IS THIS MESSAGE ON THE 4978 RPQ DEVICE?
 N

003
 GO TO PAGE 2, STEP 015,
 ENTRY POINT OL.

004
 (ENTRY POINT PQ)

THE ALTERNATE CONSOLE FUNCTION IS ASSIGNED TO A 4978 RPQ DISPLAY STATION. THE 4978 WILL SUPPORT MORE THAN ONE KEYBOARD. ANY KEY CAN BE ANY SCAN CODE. DCP MUST BE INSTRUCTED WHICH KEY IS ASSOCIATED WITH EACH FUNCTION AND CHARACTER USED BY THE ALTERNATE CONSOLE.

MLD VOLUME 01 SDBXX HAS THE KEYBOARD(S) FOR THE 4978(S) ON THIS SYSTEM. THE KEYS USED FOR OPERATION OF THE ALTERNATE CONSOLE ARE INDICATED IN THE TABLE. ALL OTHER KEYS ARE NOT USED BY DCP. NOTE THE KEYS THAT ARE ASSIGNED TO ALTERNATE CONSOLE FUNCTION(S) AND CHARACTER(S).

AFTER THE PROMPT MESSAGE IS DISPLAYED, PRESS THE KEY YOU WANT TO ASSIGN TO THAT PROMPT MESSAGE. WHEN DCP HAS RECEIVED THE INTERRUPT AND SCAN CODE FOR THE KEY, IT WILL PROMPT EACH FUNCTION AND CHARACTER KEY NEEDED FOR EACH OF THE OTHER ALTERNATE CONSOLE KEYS. WHEN THE 'Z' KEY HAS BEEN PRESSED, DCP WILL WRITE THE KEYBOARD DESCRIPTION TABLE TO DISKETTE AND CONTINUE RUNNING.

IS A PROGRAMMER OR C E MAINTENANCE CONSOLE INSTALLED ON THE PROCESSING UNIT?
 N

005
 - SEE BINDER MLD VOLUME 01, SDBXX THAT HAS A TABLE OF THE KEYBOARD FOR THIS 4978.
 - NOTE THE KEY THAT IS ASSIGNED TO THE 'ATTENTION' FUNCTION KEY.
 - PRESS THE KEY THAT IS ASSIGNED THE 'ATTENTION' FUNCTION KEY.

DOES THE DISPLAY MESSAGE EQUAL 'ENTER'?
 N

006
 IF THE 4978 RPQ DOES NOT DISPLAY 'ENTER' IN 15 SECONDS, THE KEY CAN BE FAILING.

GO TO PAGE 3, STEP 021,
 ENTRY POINT KD.

THE 4978 RPQ DISPLAY DEVICE WILL DISPLAY THIS MESSAGE WHEN ALL THESE CONDITIONS ARE MET:

1. 4978 IS ENTERED IN THE CONFIGURATION TABLE.
2. 4978 IS ASSIGNED AS THE ALTERNATE CONSOLE.
3. 4978 KEYBOARD DESCRIPTION IS NOT MADE.

B C

4978 ALTERNATE CONSOLE
PAPER ONLY MAP
PAGE 2 OF 5

MAP 0030-2

007
THE 'ATTENTION' KEY IS ASSIGNED.
NOTE THE KEY TO BE ASSIGNED THE 'ENTER'
FUNCTION.

- PRESS THE KEY TO BE ASSIGNED THE 'ENTER'
FUNCTION.

DOES THE DISPLAY MESSAGE EQUAL

'PROGRAM FUNCTION (P F)'?

Y
N

008
IF THE 4978 RPQ DOES NOT DISPLAY 'PROGRAM
FUNCTION (P F)' IN 15 SECONDS, THE KEY CAN
BE FAILING.
GO TO PAGE 3, STEP 021,
ENTRY POINT KD.

009
NOTE THE KEY TO BE ASSIGNED THE 'P F'
FUNCTION.

- PRESS THE KEY TO BE ASSIGNED THE 'P F'
FUNCTION.

DOES THE DISPLAY MESSAGE PROMPT SOME OTHER
KEY?

Y
N

010
IF THE 4978 RPQ DOES NOT DISPLAY A PROMPT
MESSAGE IN 15 SECONDS, THE KEY CAN BE
FAILING.
GO TO PAGE 3, STEP 021,
ENTRY POINT KD.

011
GO TO PAGE 3, STEP 028, ENTRY POINT AK.

012
- SEE BINDER MLD VOLUME 01, SD8XX THAT HAS A
TABLE OF THE KEYBOARD FOR THIS 4978.

- NOTE THE KEY THAT IS ASSIGNED TO THE
'ATTENTION' FUNCTION KEY.

- PRESS THE KEY THAT IS ASSIGNED TO THE
'ATTENTION' FUNCTION KEY.

DOES THE DISPLAY MESSAGE EQUAL 'ENTER'?

Y
N

013
- WAIT 15 SECONDS.
- SEE THE DATA LEDS.

DO THE DATA LEDS EQUAL '3817'?

Y
N

014
- SEE THE DATA LEDS.

DO THE DATA LEDS EQUAL '3801'?

Y
N

015
(ENTRY POINT OL)

- GO TO THE 4978 RPQ PROLOG FOR THE
OFFLINE DIAGNOSTIC(S).
- RUN THE 4978 RPQ OFF LINE
DIAGNOSTIC(S).

DID USING THE OFFLINE DIAGNOSTIC(S)
REPAIR THE PROBLEM?

Y
N

016
- EXCHANGE THE 4978 ATTACHMENT CARD.

DID THE 4978 ATTACHMENT CAPD REPAIR
THE PROBLEM?

Y
N

3 3 3 3 3 3
D E F G H J

20NOV81 PN6060922
EC466795 PEC466794
MAP 0030-2

PAPER ONLY MAP
PAGE 3 OF 5

017
- USE THE FAILING SYMPTOM FROM THE
4978 RPO MAP AS THE 'FAILING
INDICATION' AND:
GO TO MAP 0070, ENTRY POINT A.

018
- VERIFY THE REPAIR.

019
- VERIFY THE REPAIR.

020
THE KEY WORKED.
THE ATTACHMENT CARD DID NOT RETURN A 'C
4' TO THE PROCESSING UNIT.
THE ATTACHMENT CARD IS SUSPECT.
GO TO MAP 0023, ENTRY POINT CE.

021
(ENTRY POINT KD)

THE KEY JUST PRESSED CAN BE FAILING.
- PRESS ANY OTHER KEY.

DID THIS KEY FAIL?
Y
N

022
THE FAILURE IS THE FIRST KEY PRESSED.
GO TO PAGE 2, STEP 015,
ENTRY POINT OL.

023
MORE THAN ONE KEY IS FAILING.
THIS IS THE ERROR SYMPTOM.
GO TO PAGE 2, STEP 015, ENTRY POINT OL.

024
THE DISPLAY MESSAGE IS 'ENTER'
THE 'ATTENTION' FUNCTION KEY IS ASSIGNED.

- SEE THE KEY THAT IS ASSIGNED TO THE 'ENTER'
FUNCTION KEY.
- PRESS THE KEY THAT IS ASSIGNED TO THE
'ENTER' FUNCTION KEY.

DOES THE DISPLAY MESSAGE EQUAL 'PROGRAM
FUNCTION' (PF)?
Y
N

025
GO TO STEP 021, ENTRY POINT KD.

026
THE DISPLAY MESSAGE IS 'PROGRAM FUNCTION (P
F)'.
THE 'ENTER' FUNCTION KEY IS ASSIGNED.

NOTE THE KEY THAT IS ASSIGNED TO THE 'P F'
FUNCTION KEY.

- PRESS THE KEY THAT IS ASSIGNED TO THE 'P F'
FUNCTION KEY.

DOES THE DISPLAY PROMPT SOME OTHER KEY TO BE
ASSIGNED?
Y
N

027
GO TO STEP 021, ENTRY POINT KD.

028
(ENTRY POINT AK)

NOTE THE KEY THAT IS ASSIGNED TO THE PROMPT
MESSAGE.

- PRESS THE KEY THAT IS ASSIGNED TO THE PROMPT
MESSAGE.

DOES THE DISPLAY MESSAGE PROMPT SOME OTHER
KEY?
Y
N

029
- WAIT 15 SECONDS.
IF THE DISPLAY DOES NOT PROMPT THE NEXT KEY,
GO TO STEP 021, ENTRY POINT KD.

A K
1 3

4978 ALTERNATE CONSOLE
PAPER ONLY MAP
PAGE 4 OF 5

MAP 0030-4

030

- SEE THE DISPLAY MESSAGE.

DOES THE DISPLAY MESSAGE EQUAL 'Z'?

Y
N

031

GO TO PAGE 3, STEP 028,
ENTRY POINT AK.

032

THE DISPLAY MESSAGE IS 'Z'.
NOTE THE KEY THAT IS ASSIGNED TO THE 'Z'
KEY.

- PRESS THE KEY THAT IS ASSIGNED TO THE 'Z'

KEY
- WAIT ONE (1) MINUTE.

DOES THE DISPLAY MESSAGE EQUAL 'Z'?

Y
N

033

THE KEYBOARD DESCRIPTION IS COMPLETE.
GO TO MAP 0020, ENTRY POINT PD.

034

GO TO PAGE 3, STEP 021, ENTRY POINT KD.

035

THIS MESSAGE IS ON THE SCREEN FOR YOU TO
CHANGE THE KEYS ASSIGNED ON THE 4978 DISPLAY
IF YOU WANT TO USE THE KEYS ASSIGNED WITHOUT
CHANGE.

- ANSWER THE FOLLOWING QUESTION 'NO'.

DO YOU WANT TO CHANGE THE 4978 RPQ KEYBOARD
DESCRIPTION?

Y
N

036

YOU DO NOT WANT TO CHANGE THE KEYS ASSIGNED.
GO TO MAP 0020, ENTRY POINT PD.

037

- PRESS ANY KEY ON THE 4978 RPQ KEYBOARD IN 15
SECONDS.

AFTER THE KEY IS PRESSED, A THREE LINE MESSAGE
IS DISPLAYED.

'DESCRIBE KEYBOARD
PRESS THE KEY REQUESTED
ATTENTION'

IS THIS MESSAGE ON THE 4978 RPQ DEVICE?

Y
N

038

- SEE IF A PROGRAMMER OR C E CONSOLE IS
INSTALLED.

IS A PROGRAMMER OR C E CONSOLE INSTALLED?

Y
N

039

(ENTRY POINT LR)

YOU WANT TO CHANGE THE 4978 KEYBOARD
DESCRIPTION. A KEY WAS NOT PRESSED IN 15
SECONDS.

- PRESS AND RELEASE THE LOAD KEY.

WAIT FOR THE FOLLOWING MESSAGE ON THE
DISPLAY:

'PRESS ANY KEY IN 15 SECONDS TO CHANGE
KEYBOARD DESCRIPTION'

- PRESS ANY KEYBOARD KEY.

AFTER THE KEY IS PRESSED, A THREE LINE
MESSAGE IS DISPLAYED.

'DESCRIBE KEYBOARD
PRESS THE KEY REQUESTED
ATTENTION'

IS THIS MESSAGE ON THE 4978 RPQ DEVICE?

Y
N

040

GO TO PAGE 2, STEP 015,
ENTRY POINT OL.

5 5 5
L M N

20NOV81 PN6060922

EC466795 PEC466794

MAP 0030-4

L M N
4 4 4

4978 ALTERNATE CONSOLE

MAP 0030-5

PAPER ONLY MAP

PAGE 5 OF 5

041
GO TO PAGE 1, STEP 004,
ENTRY POINT PQ.

042
- SEE THE DATA LEDS.

DO THE DATA LEDS EQUAL '3816' OR '3817'?

Y
N

043
GO TO PAGE 4, STEP 039,
ENTRY POINT LR.

044
GO TO PAGE 2, STEP 015, ENTRY POINT OL.

045
GO TO PAGE 1, STEP 004, ENTRY POINT PQ.

20NOV81 PN6060922
EC466795 PEC466794
MAP 0030-5