

ENTRY POINTS

FROM		ENTER THIS MAP	
MAP NUMBER	ENTRY POINT	PAGE NUMBER	STEP NUMBER
2000	A	1	001
2000	AC	1	064
2000	AE	1	016
2000	DC	1	066
2000	LB	1	044
2000	LE	1	033
2000	LO	1	035
2000	PC	1	040
2000	TC	1	045
2000	TR	4	028

EXIT POINTS

EXIT THIS MAP		TO	
PAGE NUMBER	STEP NUMBER	MAP NUMBER	ENTRY POINT
7	071	2071	A
7	072	2071	A

001
 (ENTRY POINT A)

A 4955 PROCESSING UNIT IS INSTALLED.

- SEE IF THE 4955 MODEL INSTALLED IS:

MODEL A:
 MODEL B:
 MODEL C:
 MODEL D:

IS THE 4955 MODEL INSTALLED ONE OF THE ABOVE?

N

002
 THE 4955 MODEL INSTALLED IS:

MODEL F:
 MODEL G:

- SEE IF ONLY ONE (1) STORAGE CARD IS INSTALLED.

IS ONLY ONE (1) STORAGE CARD INSTALLED?

N

003
 - SEE THE NOTE --->
 - UNSEAT ALL STORAGE CARD(S) BUT ONE (1).
 - LEAVE THE STORAGE CARD SEATED NEXT TO THE PROCESSING UNIT.
 - ENSURE THE CARD JUMPERS IF INSTALLED, ARE CORRECT.
 - SEE HLD VOLUME ONE (1), LOGIC AXXXX.
 - POWER ON THE PROCESSING UNIT.
 - RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

THE STORAGE CARD POSITION NEXT TO THE PROCESSING UNIT CARDS IS THE POSITION USED TO TEST ALL REMOVED STORAGE CARD(S).

THE STORAGE SIZE IS CHANGED, THERE MAY BE A CONFIGURATION ERROR OR A DIAGNOSTIC FAILURE. NOTE THIS WHEN USING THE 'FAILURE INDICATION', DO NOT CONFUSE THE 'CONFIGURATION ERROR' CAUSED BY STORAGE SIZE WITH THE 'ERROR INDICATION' USED BY YOU.

THE JUMPERS, IF INSTALLED, AND THE CONFIGURATION TABLE MAY HAVE TO BE CHANGED.

DID THE SAME FAILURE OCCUR?

N

004
 (ENTRY POINT LB)

A REMOVED STORAGE CARD IS SUSPECT.

- POWER OFF THE PROCESSING UNIT.
 - REMOVE THE INSTALLED STORAGE CARD.
 - MARK IT AND SET IT TO ONE SIDE.
 - INSTALL A SUSPECT STORAGE CARD THAT IS NOT TESTED.
 - POWER ON THE PROCESSING UNIT.
 - RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?

N

005
 - SEE IF ALL REMOVED STORAGE CARDS ARE INSTALLED.

ARE ALL STORAGE CARDS INSTALLED?

N

3 2 2 2 2 2
 A B C D E F

006
GO TO PAGE 1, STEP 004,
ENTRY POINT LB.

007
- SEE IF THE SYSTEM IS REPAIRED.
IS THE SYSTEM REPAIRED?
Y
N

008
GO TO STEP 016,
ENTRY POINT AE.

009
- VERIFY THE REPAIR.

010
- EXCHANGE THE STORAGE CARD JUST
INSTALLED.
- VERIFY THE REPAIR.

011
THE SEATED STORAGE CARD IS SUSPECT.
- POWER OFF THE PROCESSING UNIT.
- REMOVE THE SUSPECT STORAGE CARD.
- MARK IT AND SET IT TO ONE SIDE.
- INSTALL A STORAGE CARD THAT IS NOT
SUSPECT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO
SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?
Y
N

012
- EXCHANGE THE STORAGE CARD JUST REMOVED.
- VERIFY THE REPAIR.

013
GO TO STEP 016, ENTRY POINT AE.

014
THE STORAGE CARD IS SUSPECT.
- EXCHANGE THE STORAGE CARD WITH A KNOWN GOOD
CARD.
- ENSURE THE CARD JUMPERS IF INSTALLED, ARE
CORRECT.
- SEE MLD VOLUME ONE (1), LOGIC AXXXX.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE
THE FAILURE.

DID THE SAME FAILURE OCCUR?
Y
N

015
THE STORAGE CARD IS BAD.
- VERIFY THE REPAIR.

016
(ENTRY POINT AE)
THE ADDRESS EXPANSION CARD IS SUSPECT.
HAS THE ADDRESS EXPANSION CARD BEEN EXCHANGED
BEFORE?
Y
N

017
- POWER OFF THE PROCESSING UNIT.
- EXCHANGE THE ADDRESS EXPANSION CARD.
- ENSURE THE CARD JUMPERS IF INSTALLED, ARE
CORRECT.
- SEE MLD VOLUME ONE (1), LOGIC AXXXX.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO
SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?
Y
N

018
THE ADDRESS EXPANSION CARD IS BAD.
- VERIFY THE REPAIR.

019
GO TO PAGE 6, STEP 060, ENTRY POINT PC.

020
GO TO PAGE 6, STEP 060, ENTRY POINT PC.

A
1

021
THE PROCESSING UNIT MODEL INSTALLED IS:
4955 MODEL A.
4955 MODEL B.
4955 MODEL C.
4955 MODEL D.

- SEE IF ONLY ONE (1) STORAGE CARD IS
INSTALLED ON THE SYSTEM.

IS ONLY ONE STORAGE CARD INSTALLED?

Y
N

- 022
- POWER OFF THE PROCESSING UNIT.
 - UNSEAT ALL STORAGE CARD(S) BUT FIRST STORAGE CARD.
 - LEAVE THE STORAGE CARD SEATED NEXT TO THE PROCESSING UNIT.
 - UNSEAT THE RELOCATION TRANSLATOR CARD, IF INSTALLED.
 - SEE THE NOTE --->
 - POWER ON THE PROCESSING UNIT.
 - RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

THE STORAGE SIZE IS CHANGED.
THERE MAY BE A CONFIGURATION ERROR OR A DIAGNOSTIC FAILURE.
NOTE THIS WHEN USING THE 'FAILURE INDICATION'. DO NOT CONFUSE THE 'CONFIGURATION ERROR' CAUSED BY STORAGE SIZE WITH THE 'ERROR INDICATION' USED BY YOU.

THE JUMPERS, IF INSTALLED, AND THE CONFIGURATION TABLE MAY HAVE TO BE CHANGED.

DID THE SAME FAILURE OCCUR?

Y
N

- 023
(ENTRY POINT LE)
- POWER OFF THE PROCESSING UNIT.
 - INSTALL A STORAGE CARD TO THE RIGHT OF THE LAST INSTALLED STORAGE CARD, IN THE NEXT OPEN CARD POSITION.
 - SEE THE NOTE --->
 - POWER ON THE PROCESSING UNIT.
 - RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

THE STORAGE SIZE IS CHANGED.
THERE MAY BE A CONFIGURATION ERROR OR A DIAGNOSTIC FAILURE.
NOTE THIS WHEN USING THE 'FAILURE INDICATION'. DO NOT CONFUSE THE 'CONFIGURATION ERROR' CAUSED BY STORAGE SIZE WITH THE 'ERROR INDICATION' USED BY YOU.

THE JUMPERS, IF INSTALLED, AND THE CONFIGURATION TABLE MAY HAVE TO BE CHANGED.

DID THE SAME FAILURE OCCUR?

Y
N

- 024
- SEE IF 64K STORAGE IS INSTALLED NOW.

IS 64K STORAGE INSTALLED NOW?

Y
N

- 025
- SEE IF ALL REMOVED STORAGE CARDS ARE INSTALLED.

ARE ALL STORAGE CARDS INSTALLED?

Y
N

6 6 6 4 4 4
G H J K L M

K L M
3 3 3

4955 STORAGE ISOLATION MAP

MAP 2072-4

PAPER ONLY MAP

PAGE 4 OF 7

026
GO TO PAGE 3, STEP 023,
ENTRY POINT LE.

027
GO TO STEP 028, ENTRY POINT TR.

028
(ENTRY POINT TR)

IF A TRANSLATOR CARD IS UNSEATED:
- ANSWER THE QUESTION 'YES'.

IF A TRANSLATOR CARD IS NOT INSTALLED:
- ANSWER THE QUESTION 'NO'.

IS A TRANSLATOR CARD UNSEATED?
N

029
- SEE IF THE SYSTEM IS REPAIRED.

IS THE SYSTEM REPAIRED?
N

030
GO TO PAGE 6, STEP 060,
ENTRY POINT PC.

031
- VERIFY THE REPAIR.

032
- SEE IF THE STORAGE TRANSLATOR CARD WAS
EXCHANGED BEFORE.

WAS THE TRANSLATOR CARD EXCHANGED BEFORE?
N

033
- POWER OFF THE PROCESSING UNIT.
- ENSURE THE JUMPERS ON THE TRANSLATOR CARD
ARE CORRECT, IF USED.
- RESEAT THE TRANSLATOR CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO
SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?
N

034
- SEE IF ALL REMOVED STORAGE CARDS ARE
INSTALLED.

ARE ALL STORAGE CARDS INSTALLED?
N

035
(ENTRY POINT LO)

- POWER OFF THE PROCESSING UNIT.
- INSTALL A STORAGE CARD TO THE RIGHT OF
THE LAST INSTALLED STORAGE CARD, IN
THE NEXT OPEN CARD POSITION.
- SEE THE NOTE --->
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED
TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?
N

036
- SEE IF ALL REMOVED STORAGE CARDS ARE
INSTALLED.

ARE ALL STORAGE CARDS INSTALLED?
N

THE STORAGE SIZE IS CHANGED.
THERE MAY BE A CONFIGURATION ERROR OR A
DIAGNOSTIC FAILURE.
NOTE THIS WHEN USING THE 'FAILURE INDICATION'.
DO NOT CONFUSE THE 'CONFIGURATION ERROR'
CAUSED BY STORAGE SIZE WITH THE 'ERROR
INDICATION' USED BY YOU.

THE JUMPERS, IF INSTALLED, AND THE
CONFIGURATION TABLE MAY HAVE TO BE CHANGED.

5 5 5 5 5 5
N B D R S F

20NOV81 PN6060926

EC466795 PEC466794

MAP 2072-4

4 4 4 4 4 PAPER ONLY MAP

PAGE 5 OF 7

037
GO TO PAGE 4, STEP 035,
ENTRY POINT LO.

038
- SEE IF THE SYSTEM IS REPAIRED.
IS THE SYSTEM REPAIRED?
Y
N

039
GO TO PAGE 6, STEP 060,
ENTRY POINT PC.

040
- VERIFY THE REPAIR.

041
- POWER OFF THE PROCESSING UNIT.
- REMOVE THE STORAGE CARD JUST
INSTALLED.
- MARK IT AND SET IT TO ONE SIDE.
- INSTALL A KNOWN GOOD STORAGE CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED
TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?
Y
N

042
THE REMOVED STORAGE CARD IS BAD.
- VERIFY THE REPAIR.

043
GO TO PAGE 6, STEP 060,
ENTRY POINT PC.

044
GO TO PAGE 6, STEP 060,
ENTRY POINT PC.

045
(ENTRY POINT TC)

THE STORAGE TRANSLATOR CARD IS SUSPECT.

- POWER OFF THE PROCESSING UNIT.
- EXCHANGE THE TRANSLATOR CARD.
- ENSURE THE CARD JUMPERS IF INSTALLED, ARE
CORRECT.
- SEE HLD VOLUME ONE (1), LOGIC AXXXX.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO
SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?
Y
N

046
THE TRANSLATOR CARD IS BAD.
- VERIFY THE REPAIR.

047
GO TO PAGE 6, STEP 060, ENTRY POINT PC.

048
- SEE IF ALL REMOVED STORAGE CARDS ARE
INSTALLED.

IS ALL STORAGE INSTALLED?
Y
N

049
GO TO PAGE 4, STEP 035, ENTRY POINT LO.

050
GO TO PAGE 6, STEP 060, ENTRY POINT PC.

051
- POWER OFF THE PROCESSING UNIT.
- REMOVE THE LAST STORAGE CARD INSTALLED.
- MARK IT AND SET IT TO ONE SIDE.
- INSTALL A KNOWN GOOD STORAGE CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?

N

052
THE MARKED STORAGE CARD IS BAD.
- VERIFY THE REPAIR.

053
GO TO STEP 060,
ENTRY POINT PC.

054
- POWER OFF THE PROCESSING UNIT.
- REMOVE THE STORAGE CARD INSTALLED.
- MARK IT AND SET IT TO ONE SIDE.
- INSTALL A KNOWN GOOD STORAGE CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?

N

055
THE MARKED STORAGE CARD IS BAD.
- VERIFY THE REPAIR.

056
GO TO STEP 060, ENTRY POINT PC.

057
THERE IS ONLY ONE STORAGE CARD INSTALLED.

- POWER OFF THE PROCESSING UNIT.
- REMOVE THE STORAGE CARD.
- MARK IT AND SET IT TO ONE SIDE.
- INSTALL A KNOWN GOOD STORAGE CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?

N

058
THE MARKED STORAGE CARD IS BAD.
- VERIFY THE REPAIR.

059
- SEE IF A RELOCATION TRANSLATOR CARD IS INSTALLED.

IS A RELOCATION TRANSLATOR CARD INSTALLED?

N

060
(ENTRY POINT PC)

- SEE IF THE ROS CARD WAS EXCHANGED PREVIOUSLY.

WAS THE ROS CARD EXCHANGED PREVIOUSLY?

N

061
- POWER OFF THE PROCESSING UNIT.
- EXCHANGE THE ROS CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?

N

062
THE ROS CARD IS BAD.
- VERIFY THE REPAIR.

063
GO TO PAGE 7, STEP 064,
ENTRY POINT AC.

U Y
8 6

4955 STORAGE ISOLATION MAP
PAPER ONLY MAP
PAGE 7 OF 7

MAP 2072-7

064
(ENTRY POINT AC)

- SEE IF THE ADDRESS CARD WAS EXCHANGED PREVIOUSLY.

WAS THE ADDRESS CARD EXCHANGED PREVIOUSLY?

Y
N

065

- POWER OFF THE PROCESSING UNIT.
- EXCHANGE THE ADDRESS CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?

Y
N

066

THE ADDRESS CARD IS BAD.
- VERIFY THE REPAIR.

067

GO TO STEP 068,
ENTRY POINT DC.

068

(ENTRY POINT DC)

- SEE IF THE DATA CARD WAS EXCHANGED PREVIOUSLY.

WAS THE DATA CARD EXCHANGED PREVIOUSLY?

Y
N

069

- POWER OFF THE PROCESSING UNIT.
- EXCHANGE THE DATA CARD.
- POWER ON THE PROCESSING UNIT.
- RUN THE FAILING DIAGNOSTIC, IF NEEDED TO SEE THE FAILURE.

DID THE SAME FAILURE OCCUR?

Y
N

070

THE DATA CARD IS BAD.
- VERIFY THE REPAIR.

071

GO TO MAP 2071, ENTRY POINT A.

072

GO TO MAP 2071, ENTRY POINT A.

073

GO TO PAGE 5, STEP 045, ENTRY POINT TC.