

[Home page](#) | [Help](#) | [Clear](#)


[English](#) | [French](#) | [Spanish](#) | [German](#)

[Search](#) | [Subjects](#) | [Titles A-Z](#) | [Courses](#) | [Illustrations](#) | [Topics](#) | [e-Course builder](#)

 Full TOC

 Contract Document

 Expand Chapter

 Add to e-Course

 Preferences





















[Printable version](#)

[Export document as HTML file](#) [Help](#)

[Export document as PDF file](#)

 **Mechanic Motor Vehicle 1st Year - Transparencies (CIMI, GTZ; 51 pages)** 

-  [Vernier Caliper parts and principle](#)
-  [Reading of Vernier Caliper](#)
-  [Micrometer parts and graduations](#)
-  [Micrometer reading](#)
-  [Wheel alignment](#)
-  [Tyre wear Patterns and causes](#)
-  [Clutch actuation \(Hydraulic\)](#)
-  [Types of gears](#)
-  [Function of Universal joint and slip joint](#)
-  [Hydraulic brakes](#)
-  [Relationship between piston and flywheel movement](#)
-  [Four Stroke cycle operation \(petrol\)](#)
-  [Four Stroke cycle operation \(Diesel\)](#)
-  [Two stroke cycle operation \(Petrol\)](#)
-  [Bore dial gauge-checking ovality and taper](#)
-  [Overhead valve operating mechanism](#)
-  [Cooling system](#)
-  [Fuel pump operation](#)
-  [Carburettor Function](#)

-  **Carburettor Function**
-  **Float and starting circuit**
-  **Idling and main circuit**
-  **Pump and Econostat circuit**
-  **Lubrication system (Engine oil circulation)**
-  **Lubrication system (full flow and by pass flow oil filter)**
-  **Ignition system**

Mechanic Motor Vehicle 1st Year - Transparencies



Directorate General of Employment & Training, Ministry of Labour, Govt. of India.

Developed by

CENTRAL INSTRUCTIONAL MEDIA INSTITUTE

 


in collaboration with **DEUTSCHE GESELLSCHAFT FUER TECHNISCHE ZUSAMMENARBEIT (GTZ) Germany.**


P.O. Box 3142, 76, GST Road, Guindy, Madras - 600 032. Phone: 234 5256, 234 5257, Fax: (0091-44) 234

2791

Vernier Caliper parts and principle

TR 01 02 01 01 95

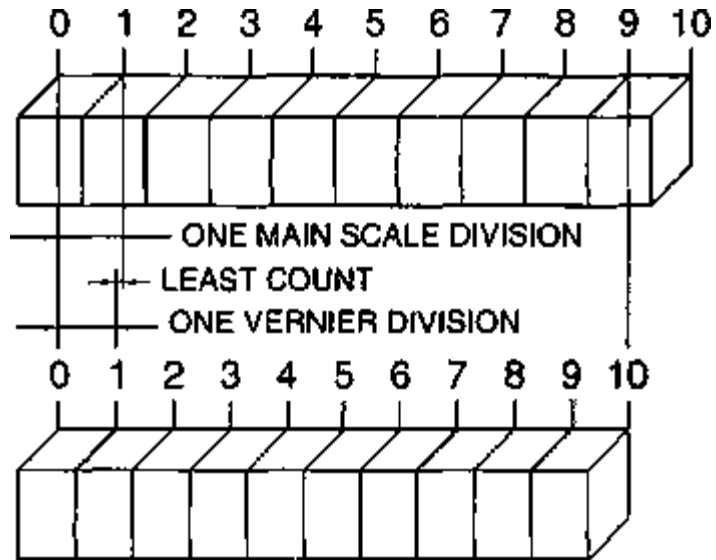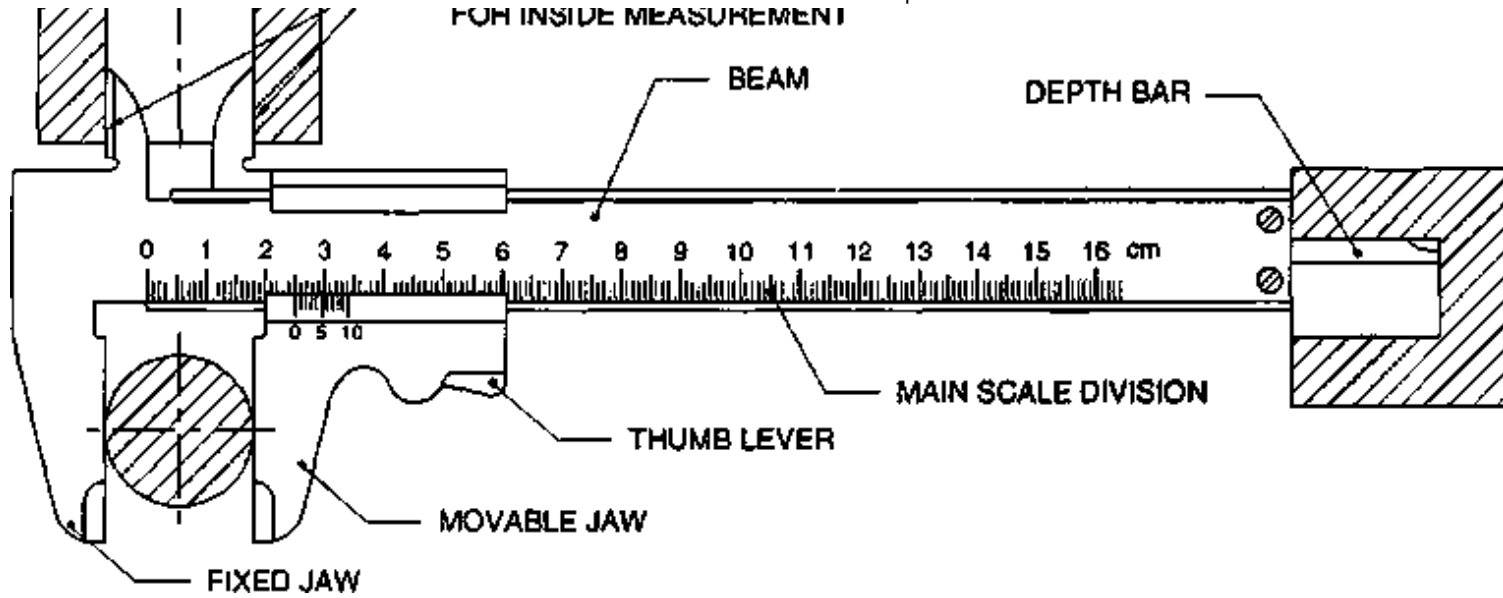


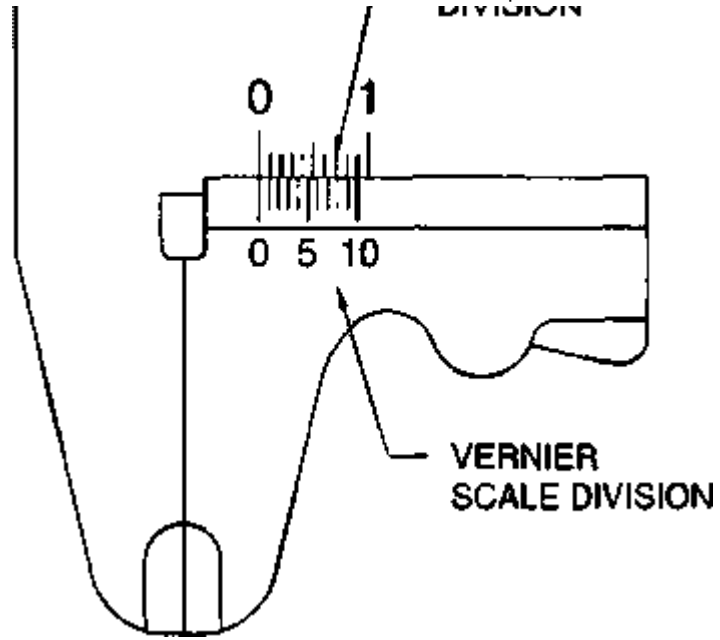

Reading of Vernier Caliper

TR 01 02 01 02 95



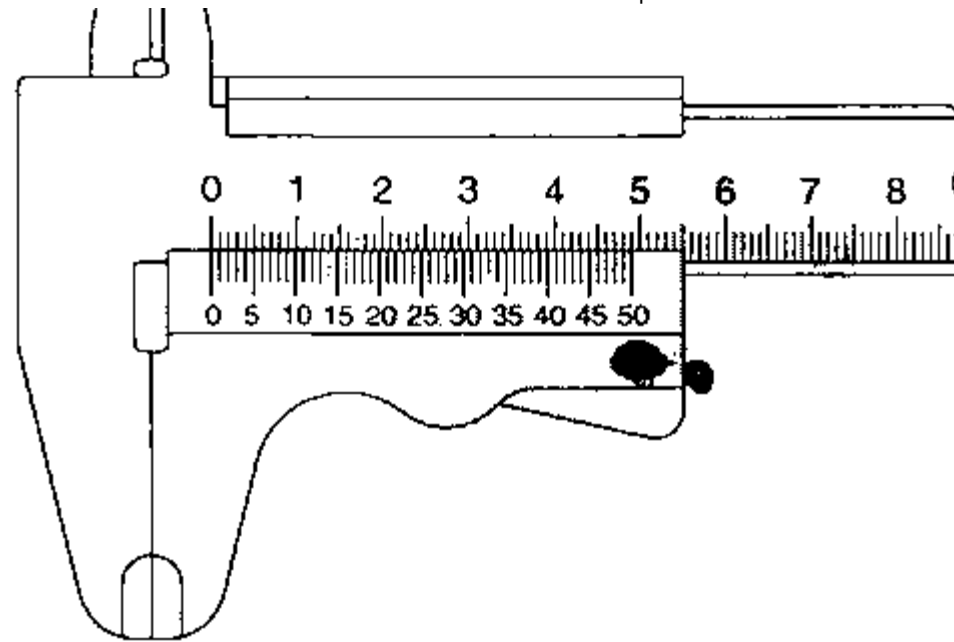


49 Main scale divisions are divided into 50 vernier scale divisions

$$\begin{aligned} \text{VALUE OF 1 VSD} &= \frac{49}{50} \text{ mm} \\ \text{LEAST COUNT} &= 1\text{MD} - 1\text{VSD} \\ &= 1 - \frac{49}{50} \\ &= \frac{1}{50} = 0.02 \text{ mm} \end{aligned}$$


$$\text{MAIN SCALE READING} = 10.00 \text{ mm}$$

$$\begin{aligned} \left. \begin{array}{l} \text{VALUE OF COINCIDING} \\ \text{VERNIER DIVISION} \end{array} \right\} &= 0.40 \text{ mm} \\ \text{READING} &= 10.40 \text{ mm} \end{aligned}$$




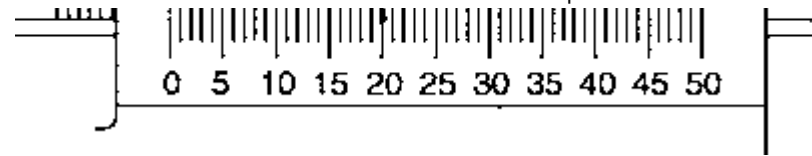


ASSIGNMENTS:-

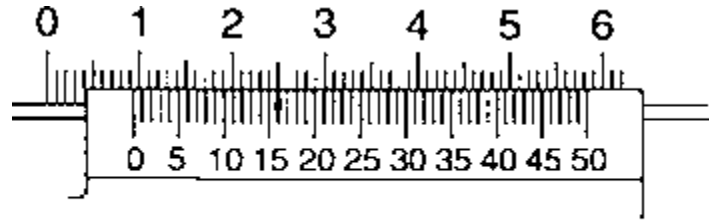


A READING 9.32 mm

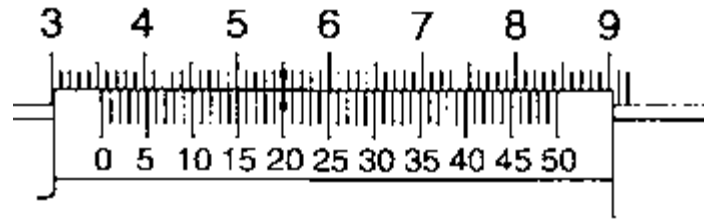

B READING 35.40 mm

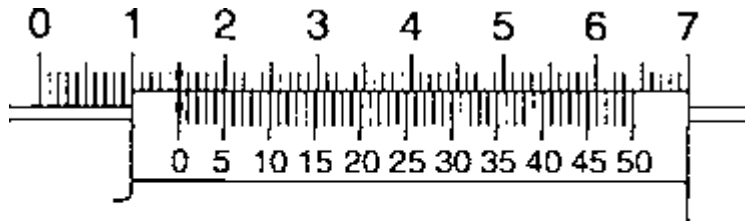

C READING 15.00 mm

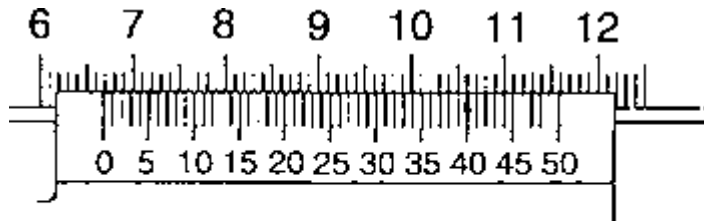


D READING 66.80 mm

Micrometer parts and graduations

TR 01 02 02 01 95




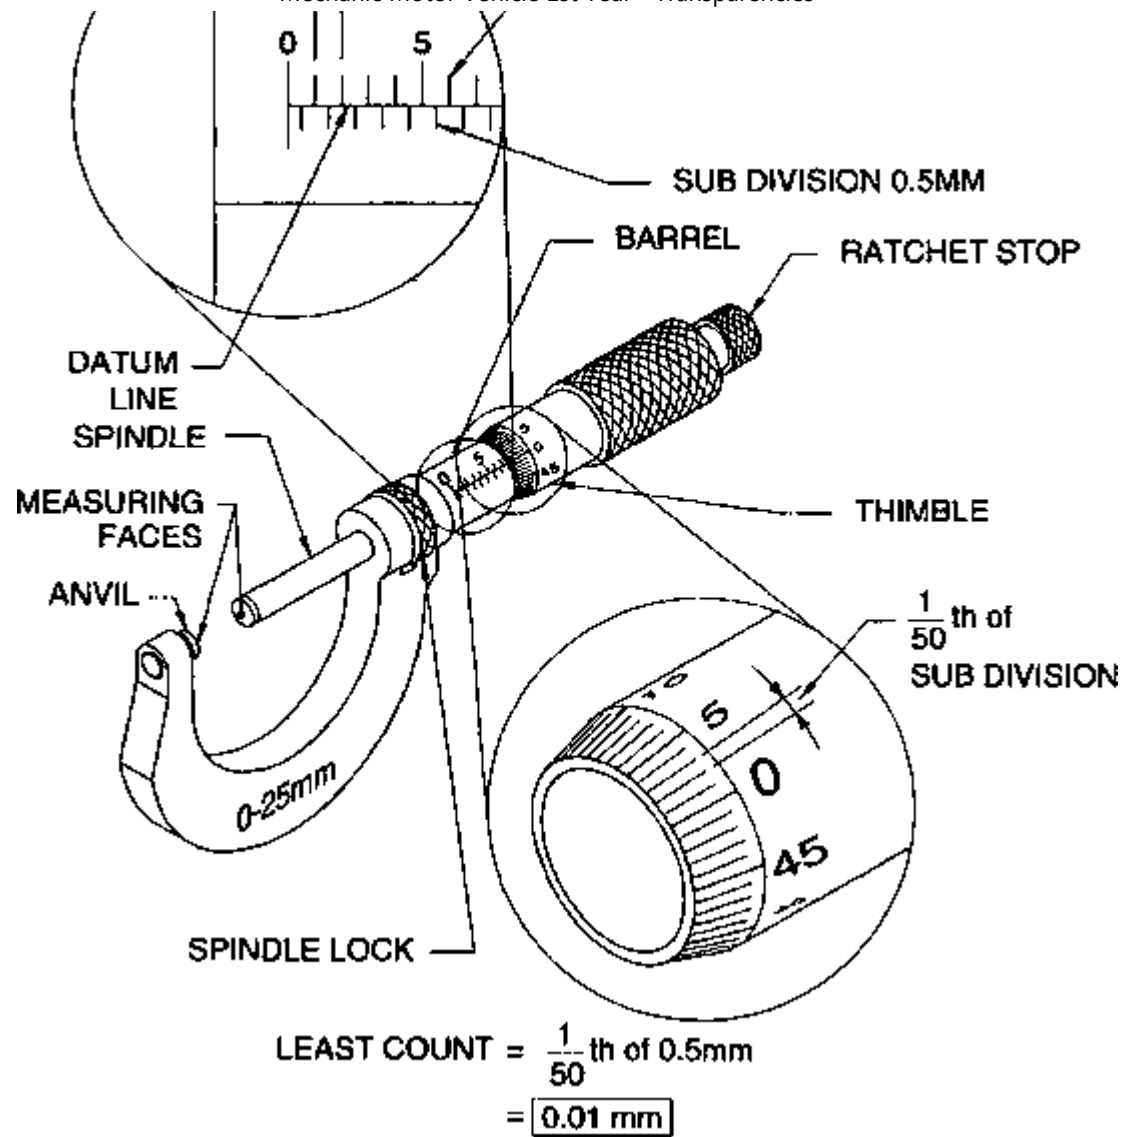


Micrometer reading

TR 01 02 02 02 95

MICROMETER GRADUATIONS

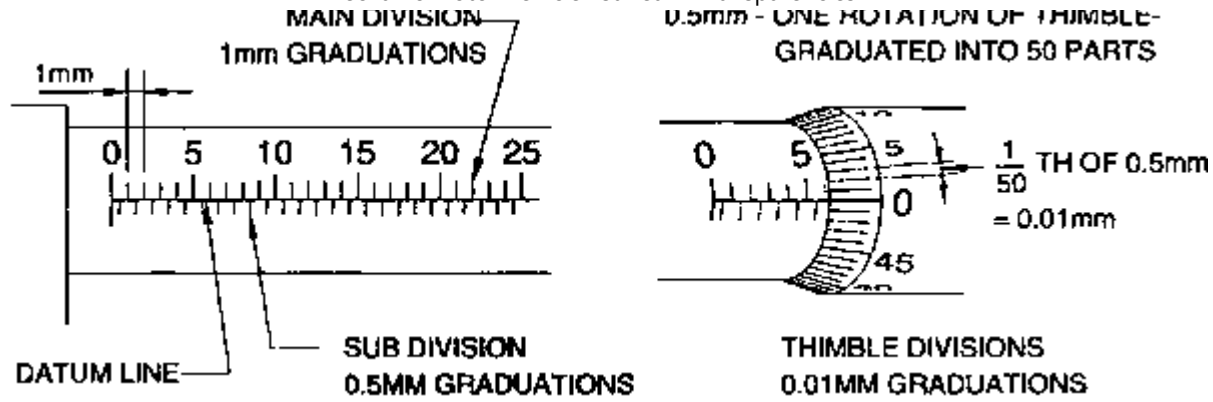

MICROMETER READING

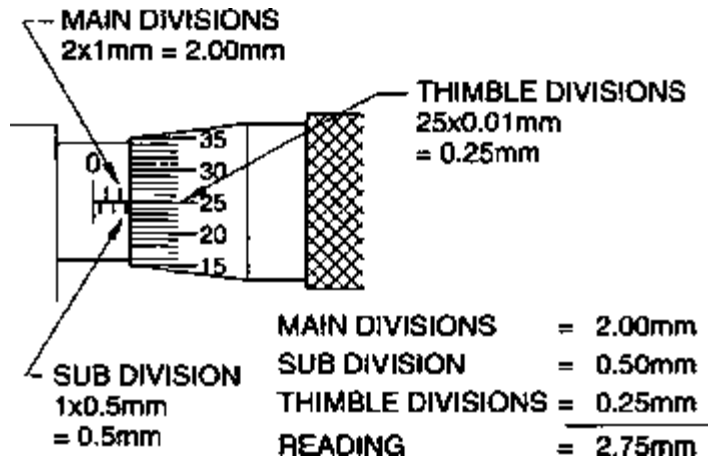


Example




MAIN DIVISIONS	=	12.00mm
SUB DIVISION	=	0.50mm
THIMBLE DIVISIONS	=	0.24mm
READING	=	12.74mm


ASSIGNMENTS:-

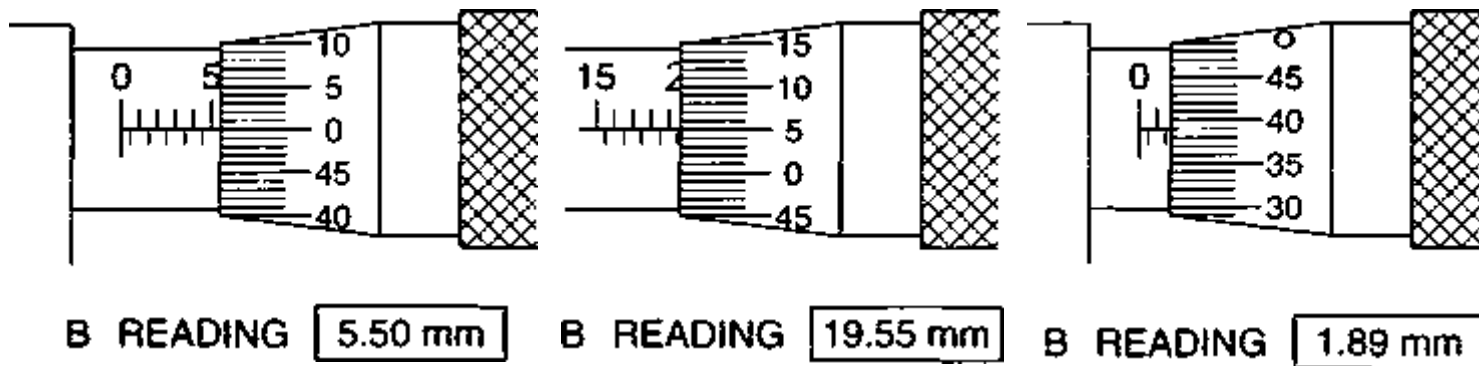


Wheel alignment

TR 10 09 04 01 95

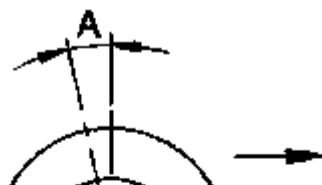

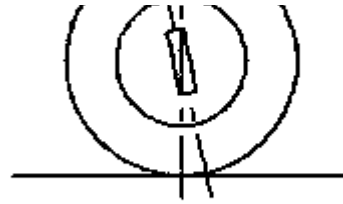


A = Caster angle

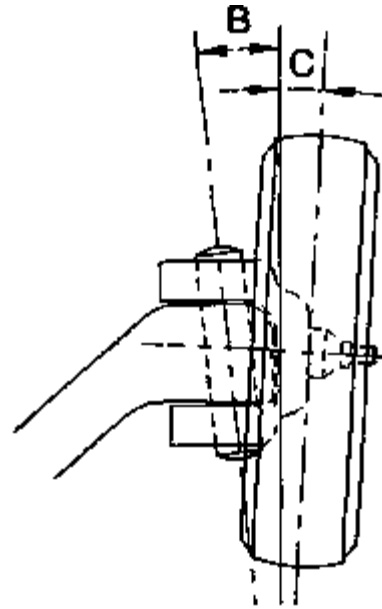


B King pin inclination

C Camber angle

B+C= Included angle


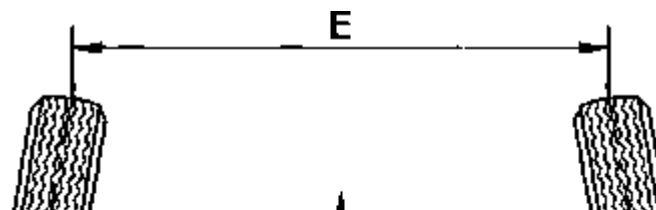


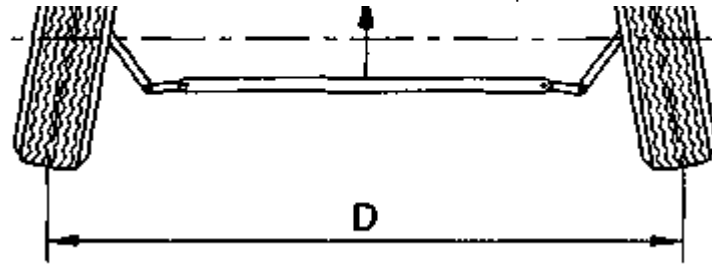


D-E = Toe-in

Tyre wear Patterns and causes


TR 10 09 03 01 95

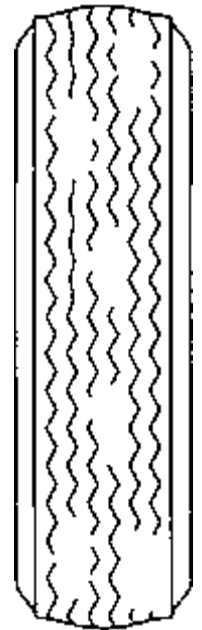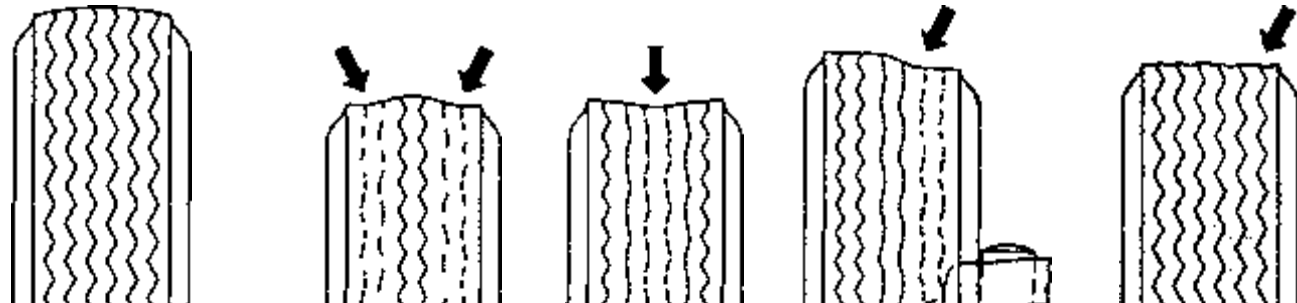


figure

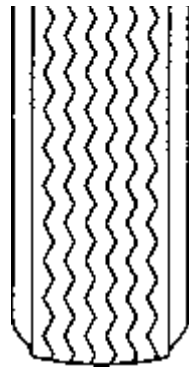


figure

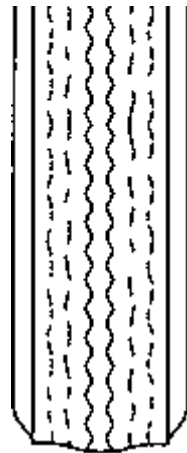


figure

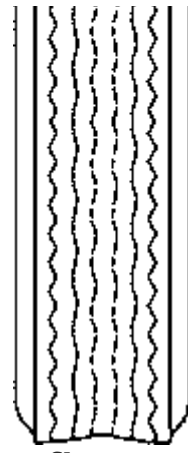

figure

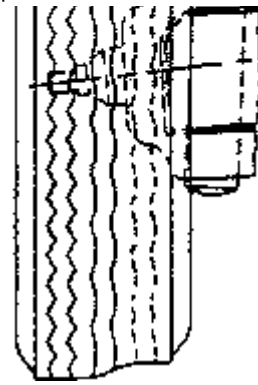

figure

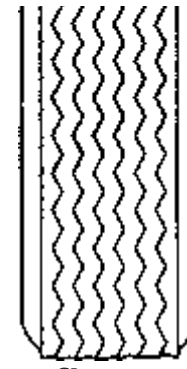

figure

**WEAR
PATTERN**

IDEAL

**At
shoulders**

At center

On one side

**Feathered
edge**

Bald spots

CAUSE

**PERFECT
CONDITION**

**Under
inflation**

**Over
inflation**


**Excessive
camber**


**Incorrect
toe**

**Unbalanced
wheel**

Clutch actuation (Hydraulic)

TR 10 02 06 01 95

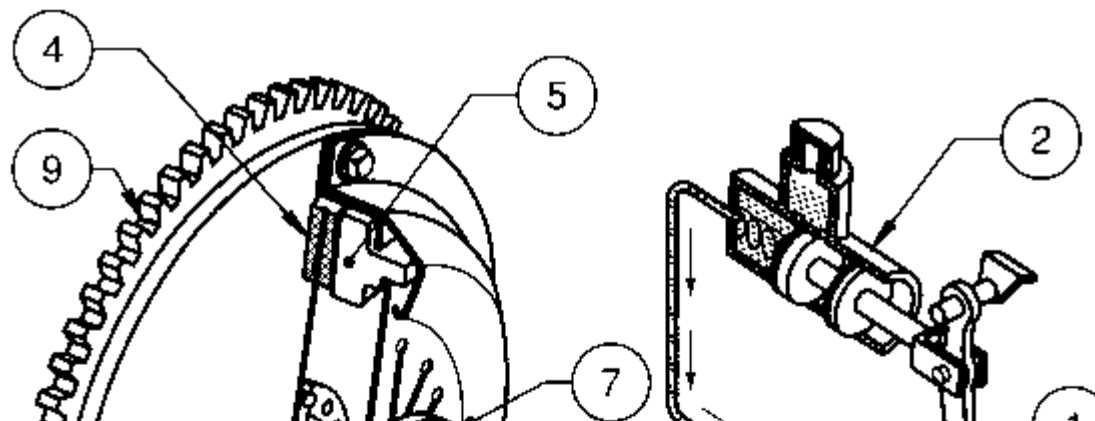

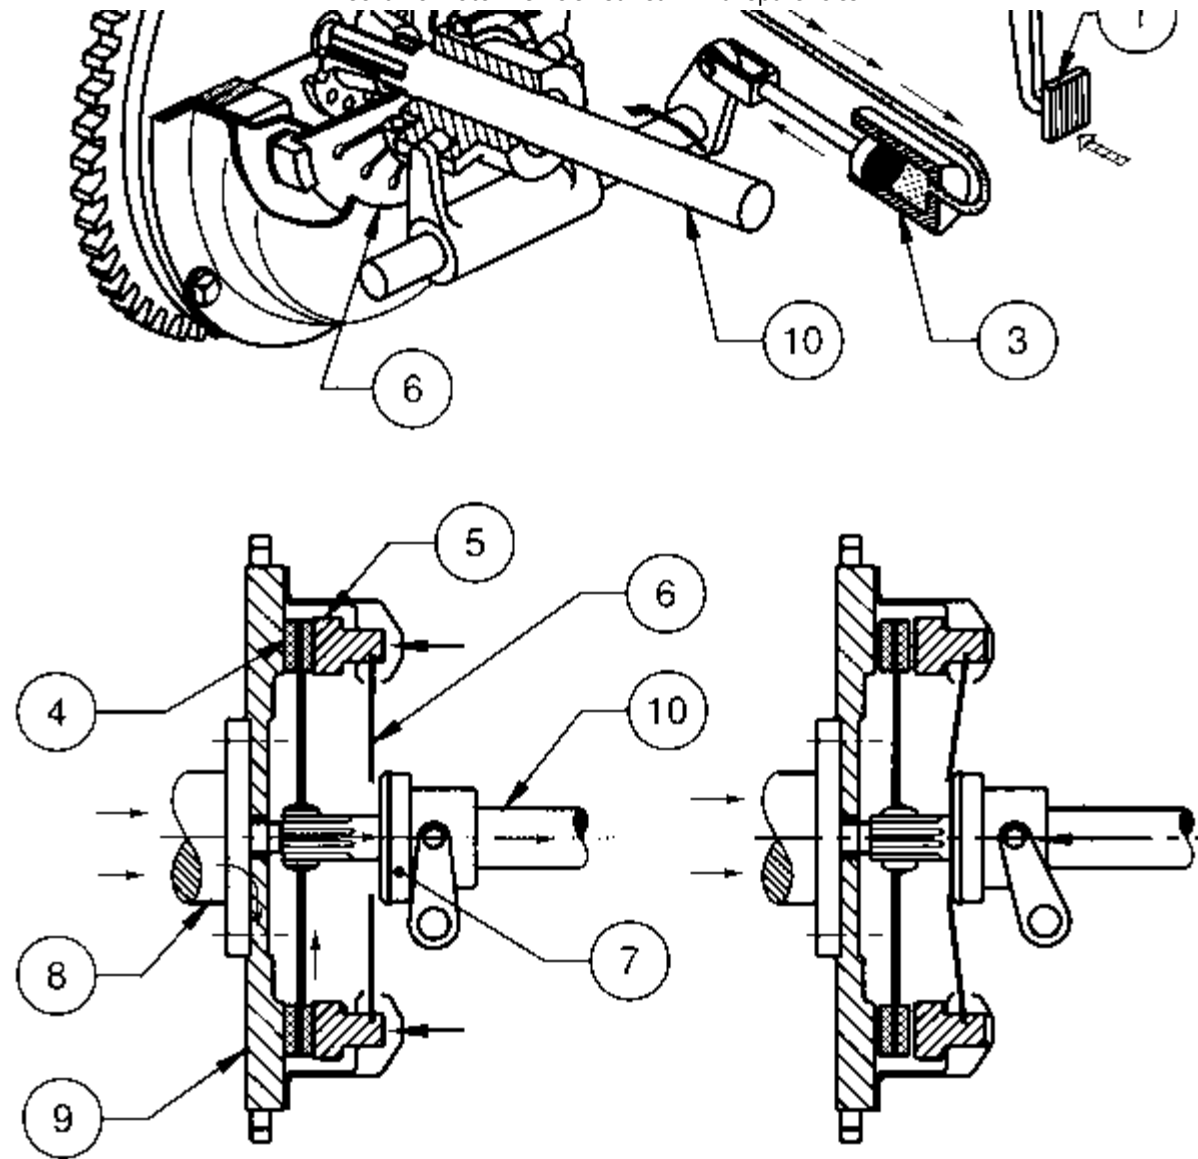

Action: The diaphragm spring (6) pushes the pressure plate (5) against the clutch plate (4). Power flows from crankshaft (8) ' flywheel (9) ' pressure plate (5) ' clutch plate (4) ' and to


Action: The downward movement of the clutch pedal (1) pumps fluid from the master cylinder (2) to the slave cylinder (3) and pushes the release bearing (7) and the diaphragm (6) inwards. The pressure plate (5) and the clutch plate (4) move away from the flywheel (9). No power flows from the crankshaft (8) to the

primary shaft (10)

primary shaft (10)

Types of gears

TR 10 03 07 01 95

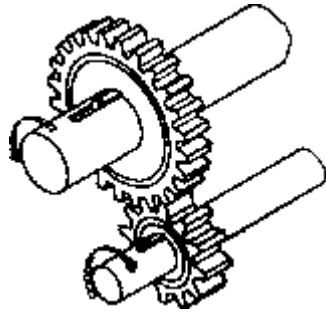


Spur Gears

Teeth are straight and parallel

Only one tooth is in contact at a time.

There is no axial thrust

APPLICATION - Gear box

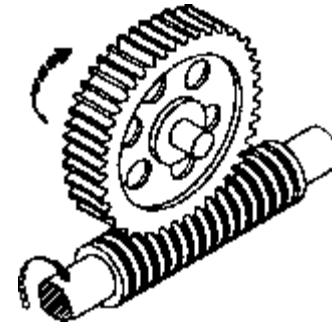



Worm Gears

Teeth are at an angle and curved

More teeth are in contact at a time

There is axial thrust

APPLICATION - Gear box.

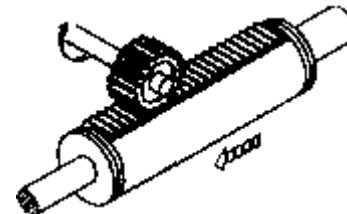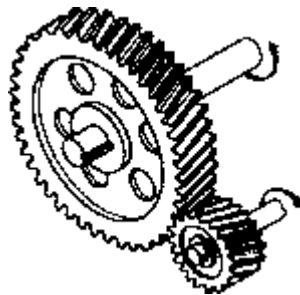


Helical gears

Teeth are at an angle

More teeth are in contact at a time

There is axial thrust

APPLICATION - Gear box.

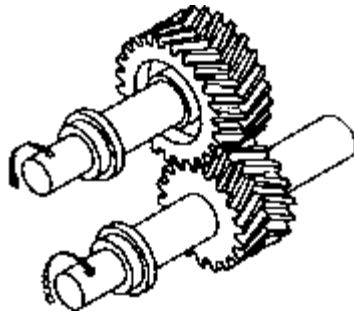

Rack and Pinion


Teeth are parallel

Only one tooth is in contact at a time

There is no axial thrust.

Converts rotary motion into linear motion.

APPLICATION - Steering

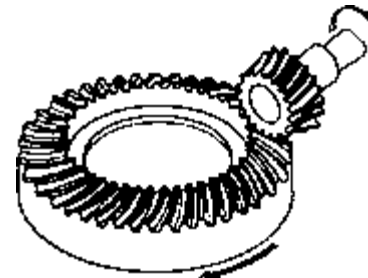

Herring Bone Gears

Teeth are straight at an angle

More teeth are in contact at a time

Axial thrust is neutralized

APPLICATION - Gear box

Spiral Bevel Gears

Teeth are curved

More teeth are in contact at a time

Produces axial thrust

Transmits torque at 90°


APPLICATION - Final drive differential

Function of Universal joint and slip joint




- CONDITION A On bump
- B On plain surface
- C On Ditch


TR 10 05 02 01 95

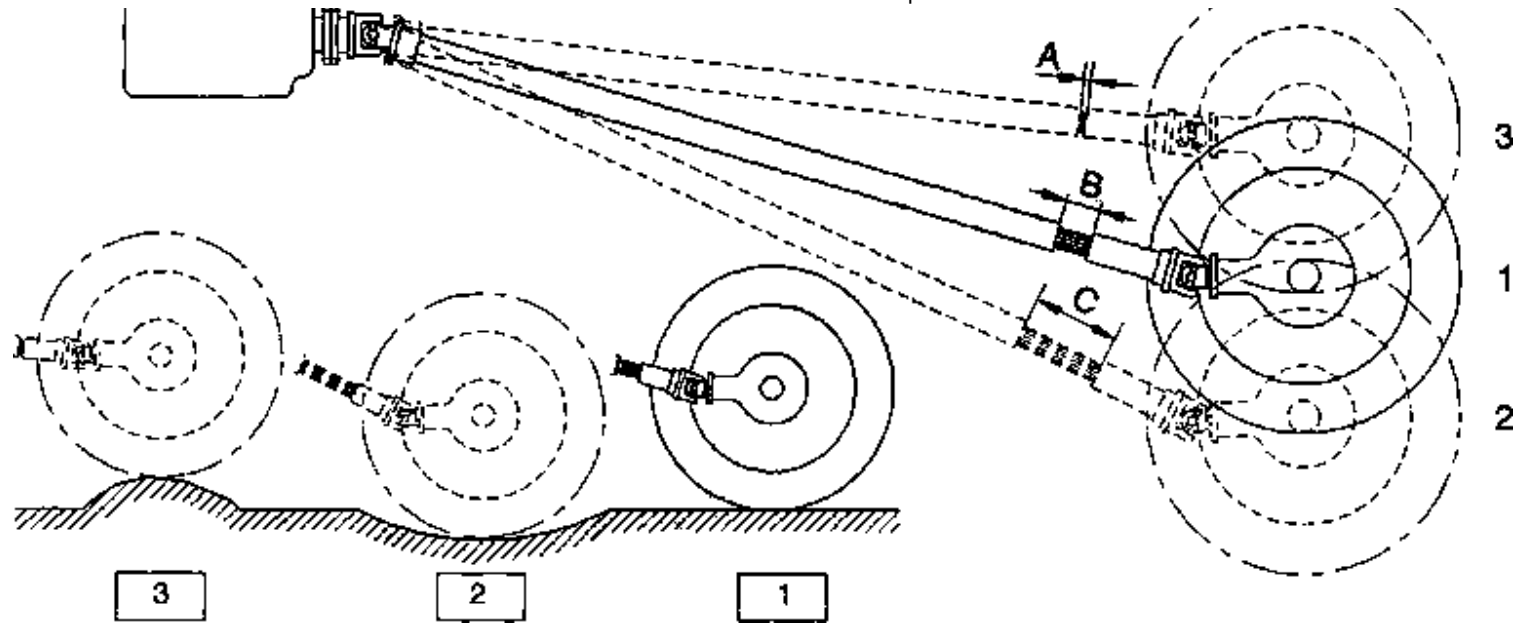

Hydraulic brakes

TR 10 11 02 01 95

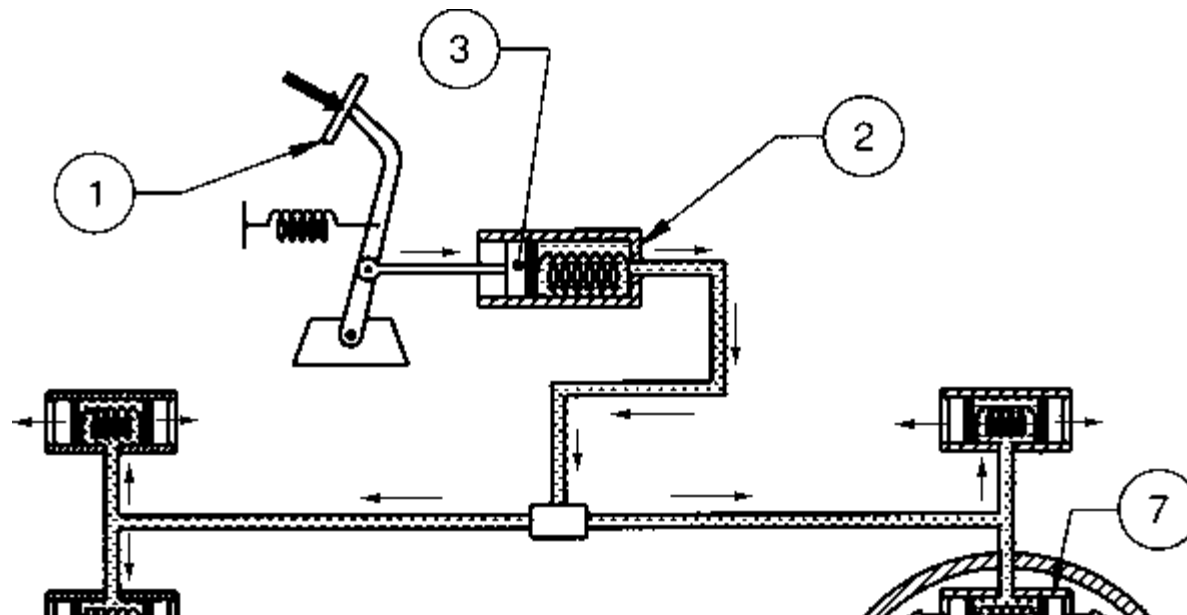

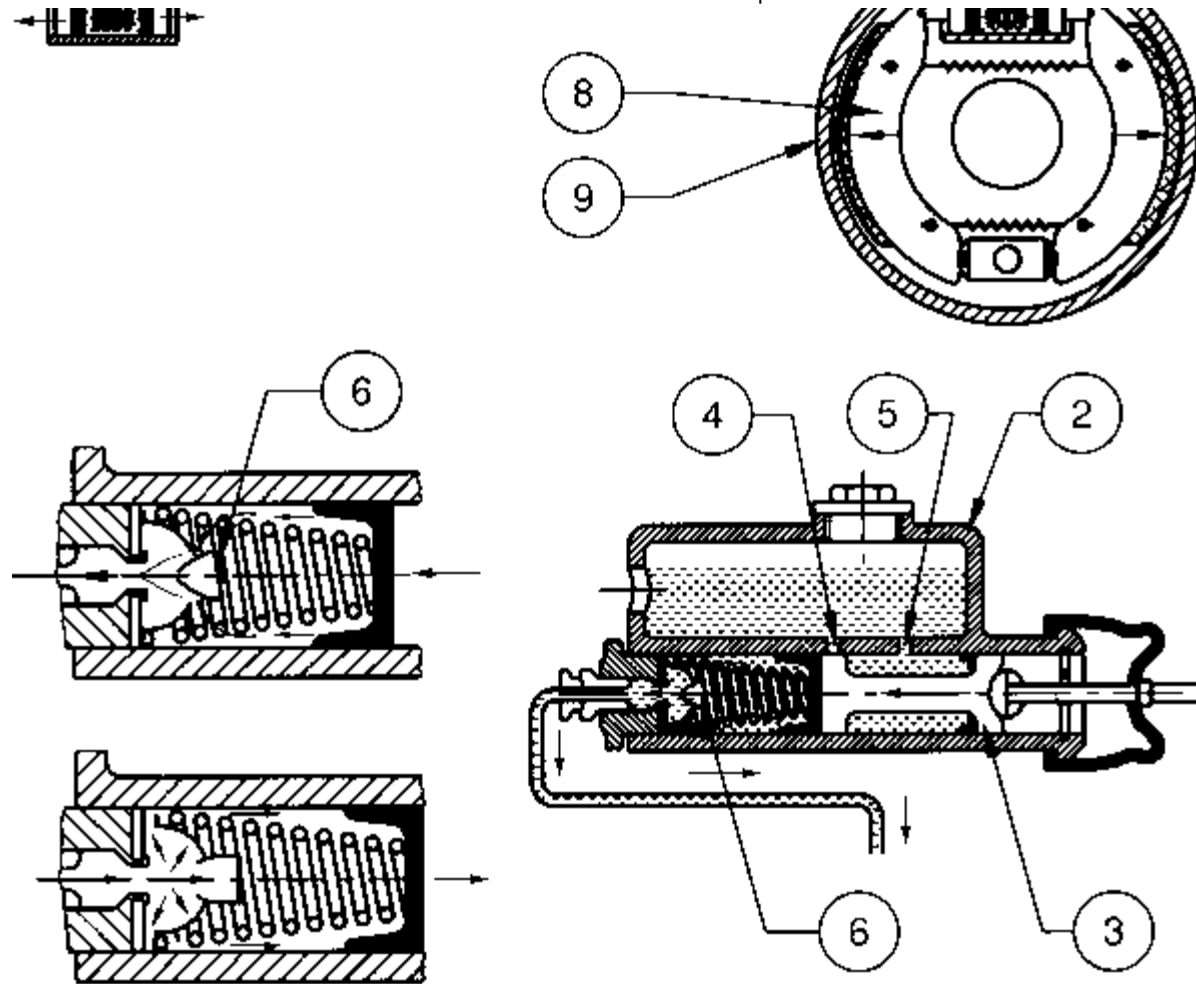

When the brake pedal (1) is pressed, the push rod forces the piston (3) of the Master Cylinder (2) forward against the spring tension. The primary cup covers compensating port (4). The pressurised fluid is supplied to the wheel cylinders (7) through the non return check valve (6). The wheel cylinder piston pushes the brake shoes (8) towards the brake drum (9) and stops the rotation of the brake drum.

When the brake pedal (1) is released, the pedal comes to its original position with the help of the pedal return spring and shoes by the retracting springs. Wheel cylinder pistons are pushed inside and the fluid is sent back to master cylinder (2) by lifting the check valve (6) from its seat through the compensating


port (4) and the transfer port (5).

Relationship between piston and flywheel movement

TR 10 01 01 01 95


- A Top Dead center (T.D.C)
- B Bottom Dead Center (B.D.C.)
- C Stroke length
- D Crank throw







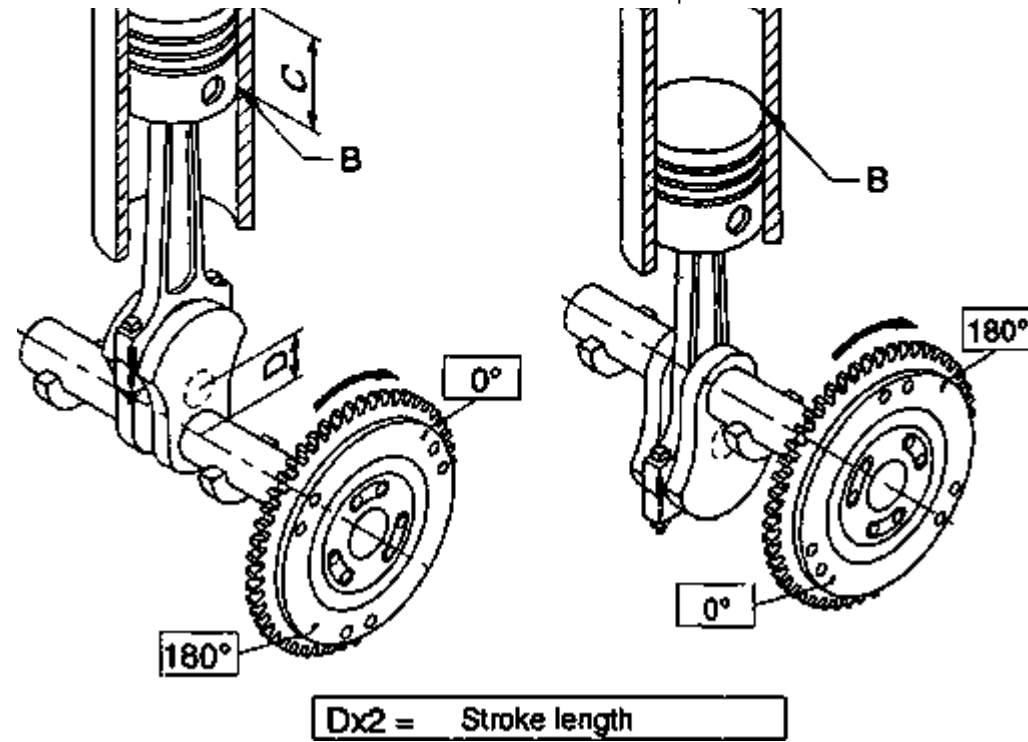

Four Stroke cycle operation (petrol)


TR 10 01 01 02 95

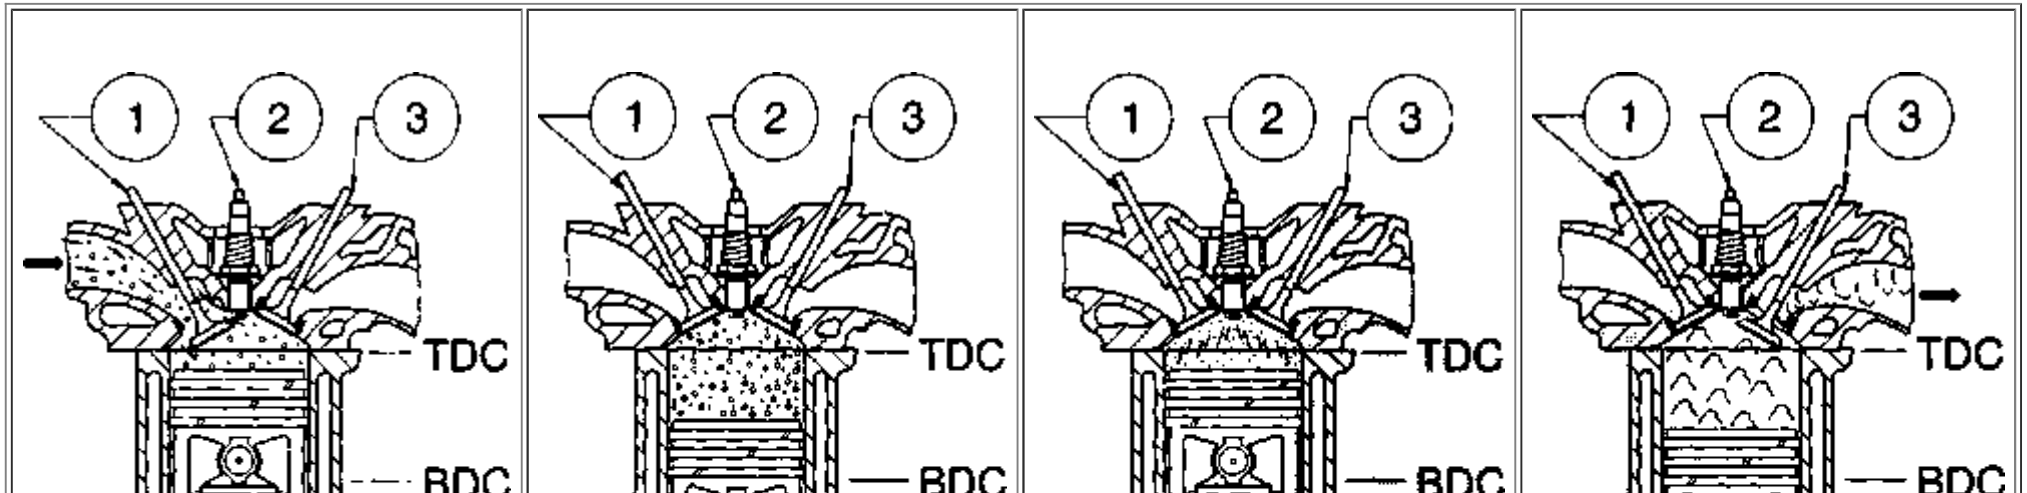

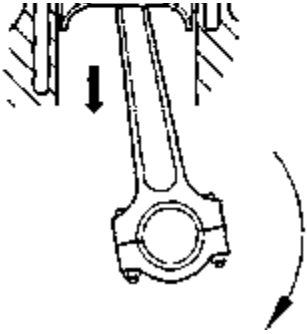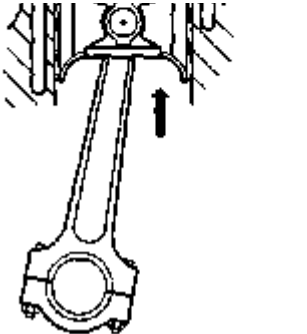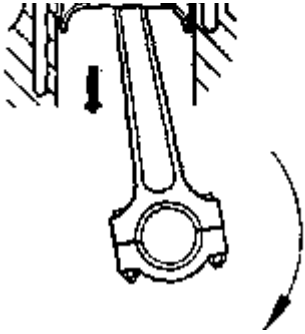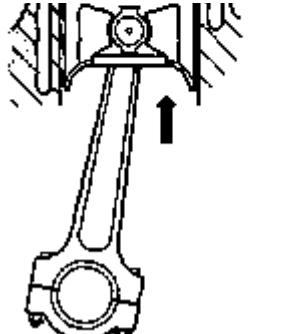			
<p>A - Suction Stroke</p>	<p>B - Compression Stroke</p>	<p>C - Power Stroke</p>	<p>D - Exhaust Stroke</p>
<p>Action: Inlet valve (1) opens and air fuel mixture enters inside the cylinder.</p>	<p>Action: Inlet valve (1) and exhaust valve (3) are closed. Air fuel mixture is compressed.</p>	<p>Action: Valves (1) and (3) are closed. Spark from the spark plug (2) ignites the mixture. Piston is forced down by the burnt gases.</p>	<p>Action: Exhaust valve (3) opens and burnt gases are forced out.</p>

Four Stroke cycle operation (Diesel)


TR 10 01 01 03 95



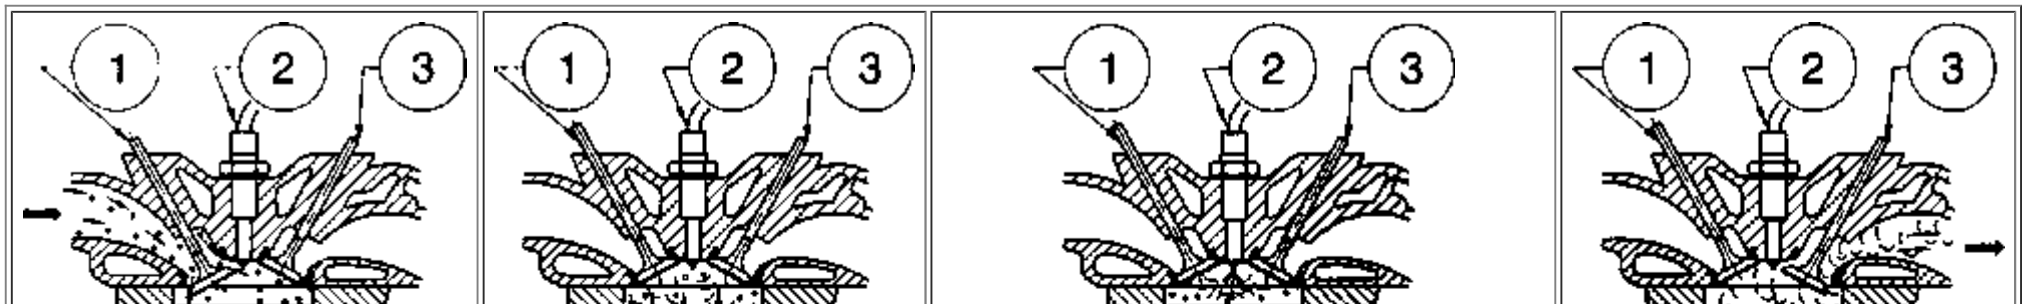


<p>A - Suction Stroke</p>	<p>B - Compression Stroke</p>	<p>C - Power Stroke</p>	<p>D - Exhaust Stroke</p>
<p>Action: Inlet valve (1) opens and only air enters inside the cylinder.</p>	<p>Action: Inlet valve (1) and exhaust valve (3) are closed. Air is compressed.</p>	<p>Action: Valves (1) & (3) are closed and Injector (2) sprays diesel. Diesel is ignited by hot compressed air. Piston is forced down by burnt gases.</p>	<p>Action: Exhaust valve (3) opens and burnt gases are forced out from the cylinder.</p>

Two stroke cycle operation (Petrol)


TR 10 01 01 04 95

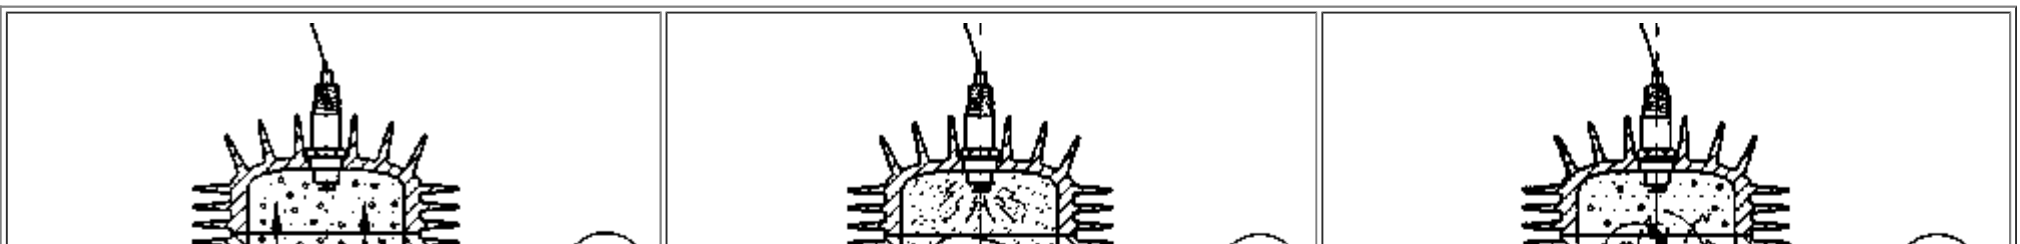


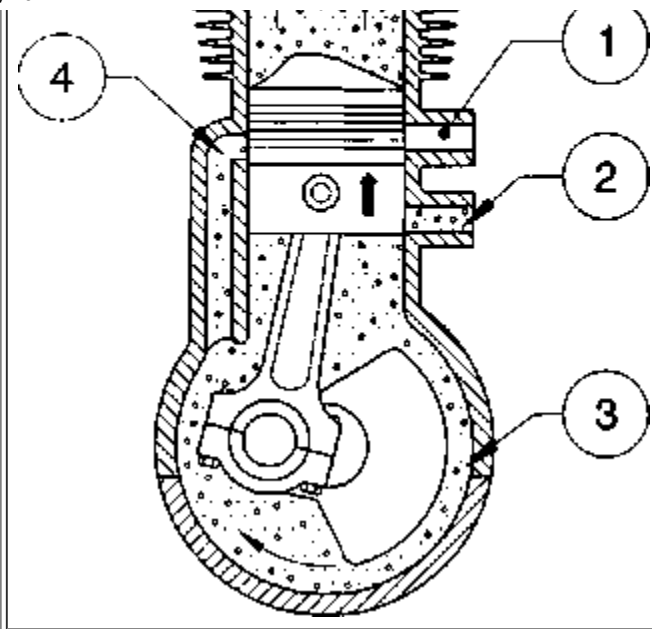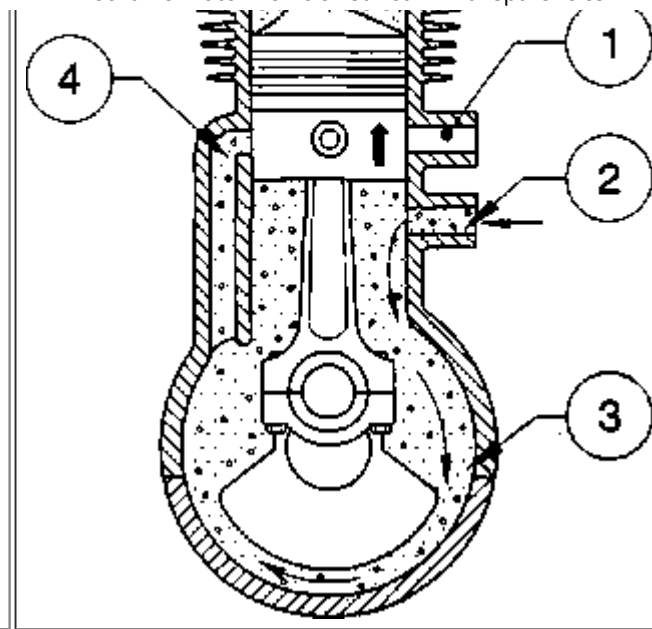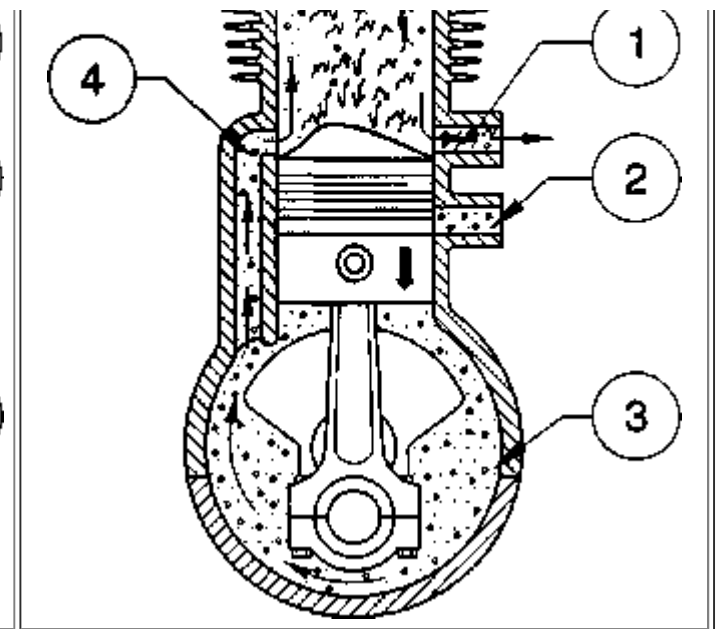		
<p>A - Beginning of Compression Stroke</p>	<p>B - Suction and Compression Stroke</p>	<p>C - Power and Exhaust Stroke</p>
<p>Action: All the ports 1,2 & 4 are closed. Air fuel mixture is compressed above the piston.</p>	<p>Action: Inlet port (2) opens and the charge goes inside crank case (3). Charge above the piston is compressed and ignited.</p>	<p>Action: Piston is forced down, transfer port (4) and exhaust port (1) opens and burnt gases are forced out by the charge entered through the transfer port (4).</p>


Bore dial gauge-checking ovality and taper

TR 10 01 08 01 95

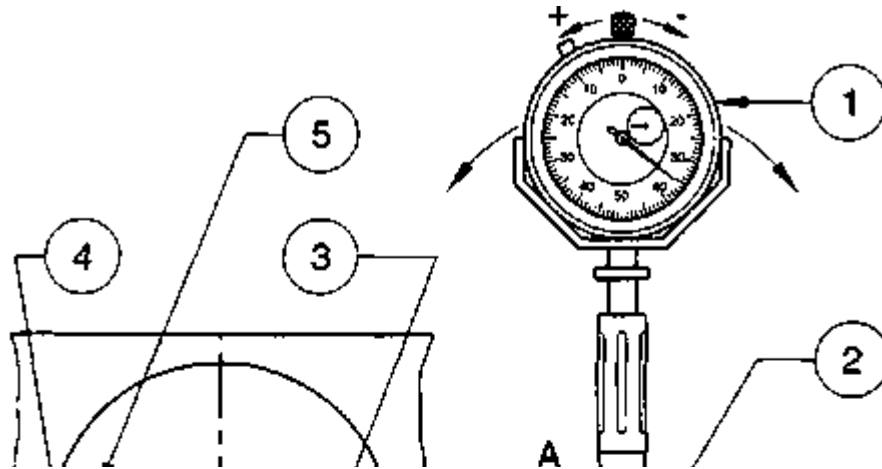


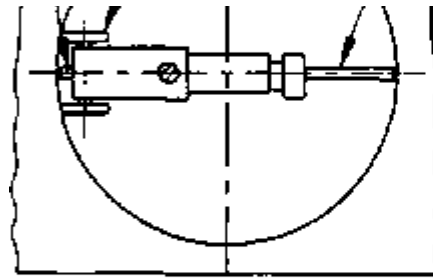


ENLARGED
VIEW - A

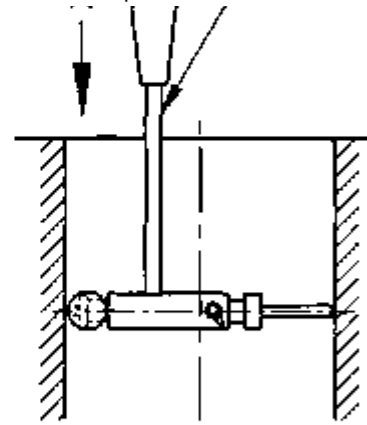

1. Dial
2. Stem
3. Extension Rod
4. Plunger
5. Guide shoe

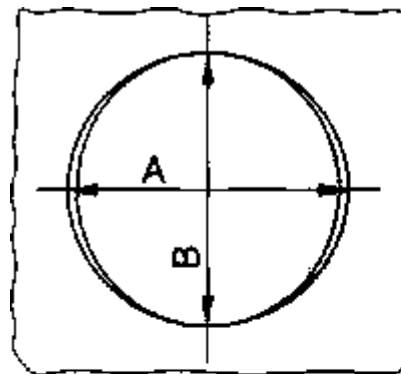



A-B	Ovality
-----	---------

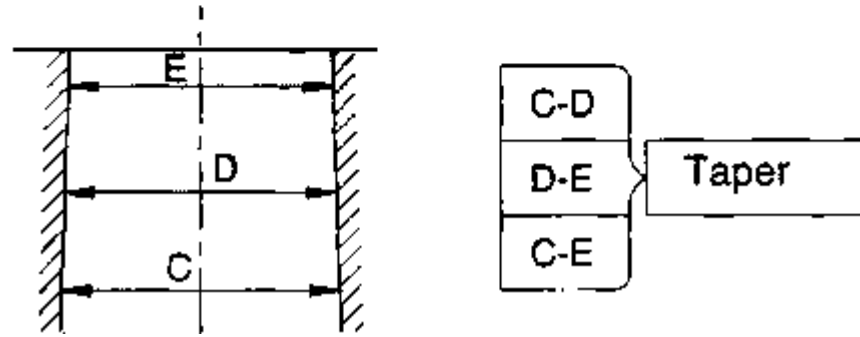

Overhead valve operating mechanism

TR 10 01 01 05 95

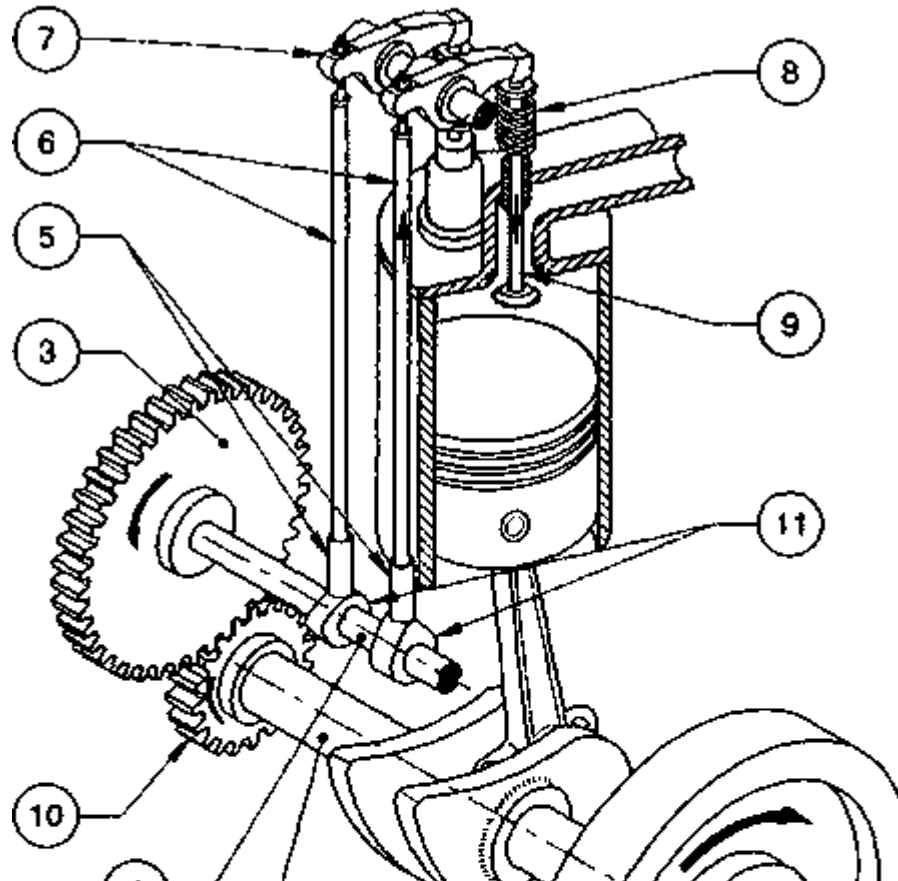

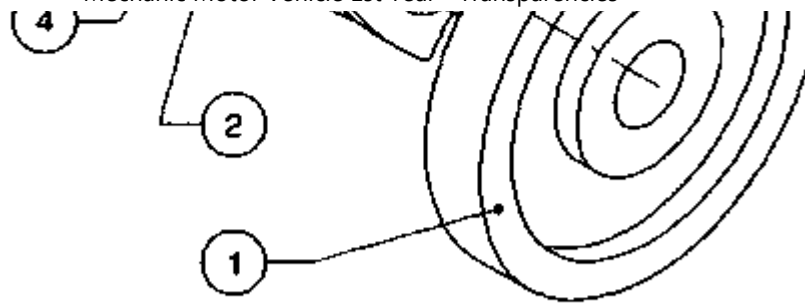

Crankshaft Gear (10)

21 teeth

Camshaft Gear (3)

42 teeth

The flywheel (1) rotates in clock-wise direction.

The crankshaft (2) and the gear (10) also rotate in clockwise direction.

The camshaft gear (3) and the camshaft (4) rotate in the anti-clockwise direction at half of the crankshaft speed.


The eccentricity of the cam lobe (11) pushes the tappet (5) and the push rod (6) in upward direction. The push rod (6) pushes the rocker lever (7).

The rocker lever (7) swivels and the valve (9) is opened against the pressure of the spring (8).

Cooling system


TR 10 01 07 01 95



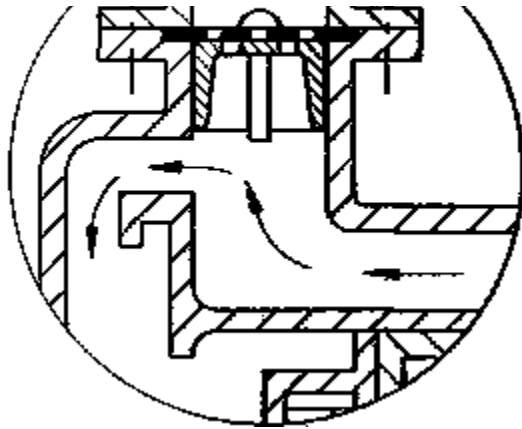


Engine cold

When the thermostat (5) is closed the by-pass port (9) opens and water circulates in the engine itself and warms up quickly.

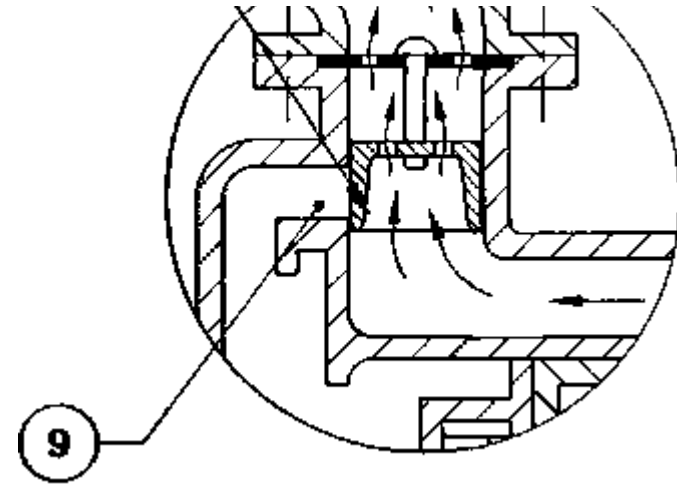


Engine hot

When the thermostat (5) is opened, the by-pass port (9) closes. Water is circulated to the radiator through outlet (10)


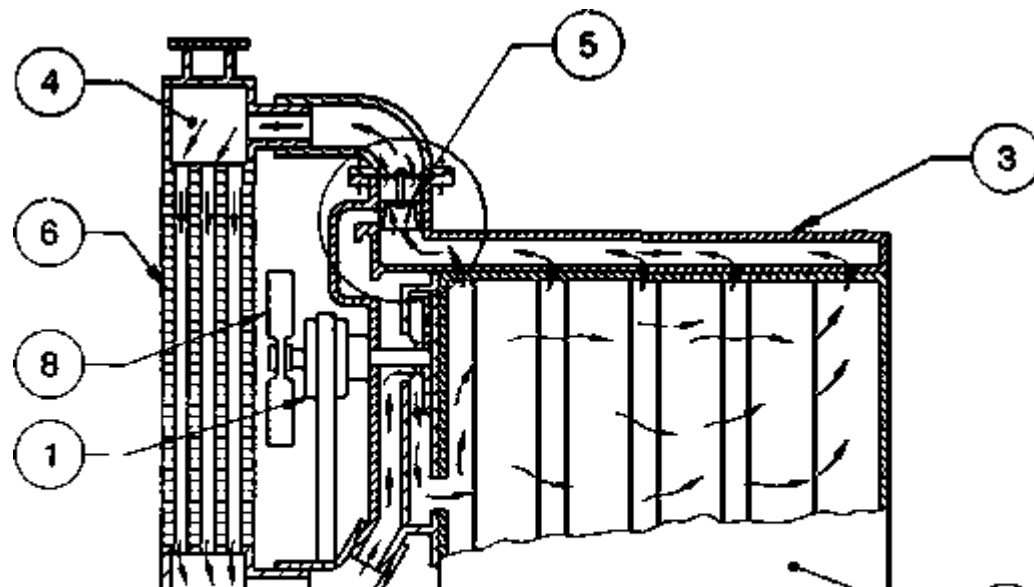


Water flows from pump (1) ' Engine block (2) ' Cylinder head (3) ' radiator upper tank (4) through thermostat (5) ' Radiator core (6) ' Lower tank (7) ' and to water pump (1). Air passes through the radiator cores with the help of a fan (8)

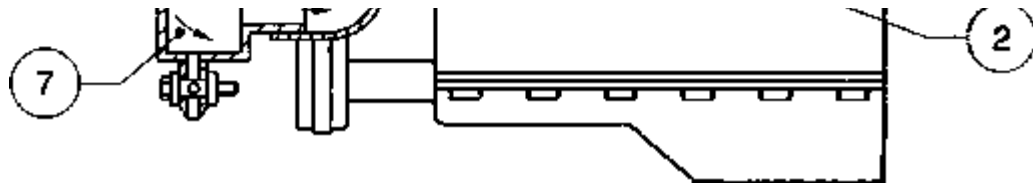


Fuel pump operation


TR 10 01 02 01 95

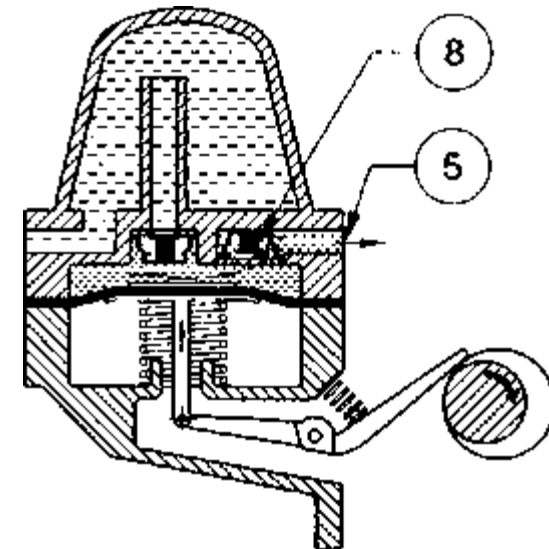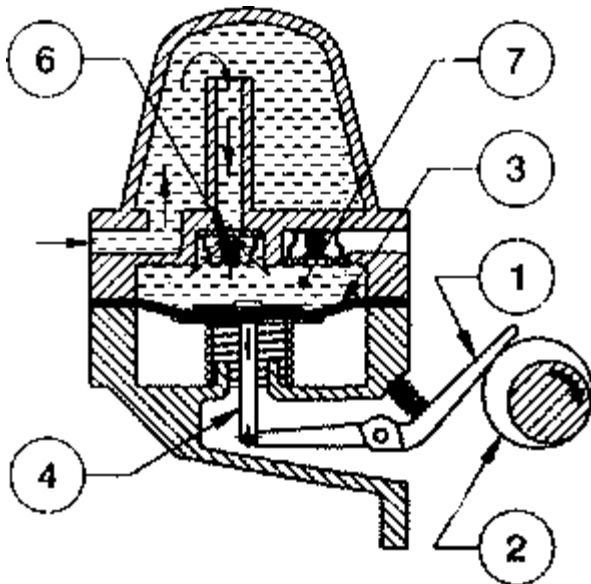

Suction

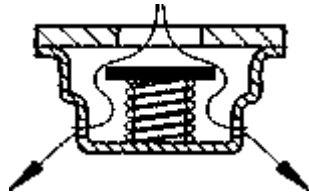


6

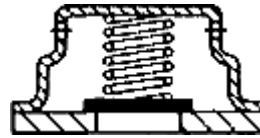


8

Delivery

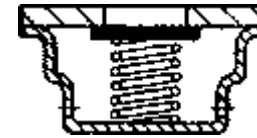

6

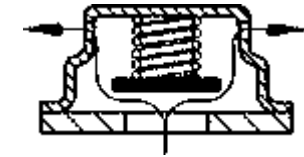


8

DETAILS:

When the rocker arm (1) is actuated by a cam lobe (2), diaphragm (3) is pulled down. The inlet valve (6) opens and the fuel is sucked in chamber (7).

When the diaphragm is pushed up by the spindle (4), the outlet valve (8) opens and the fuel is sent to carburetor via outlet (5).

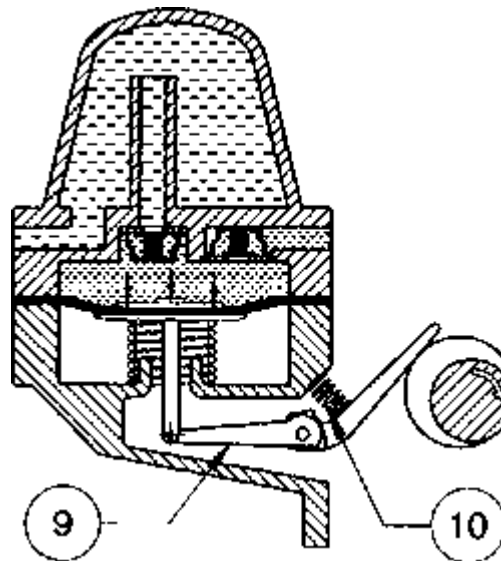



Idling

When the float chamber is full, back pressure keeps the diaphragm (3) down and the connecting link (9) does not move, only the rocker arm (1) moves. The spring (10) reduces the rattling noise.

Carburettor Function

TR 10 01 02 02 95


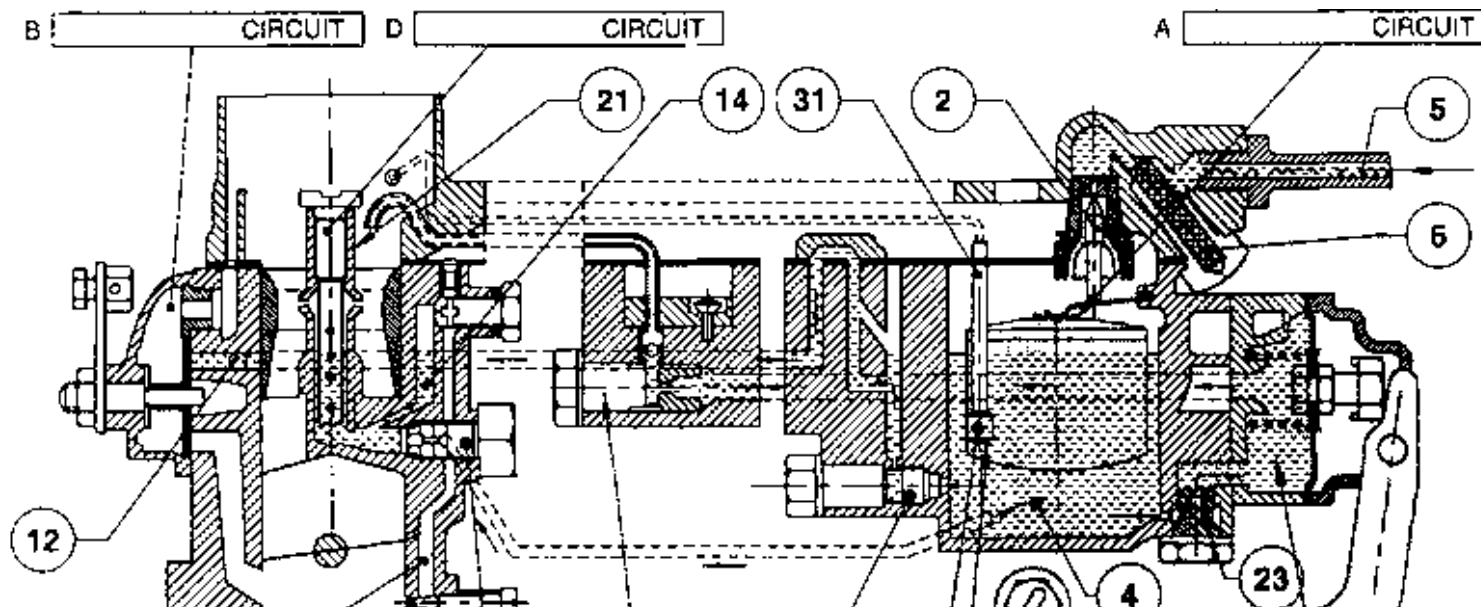


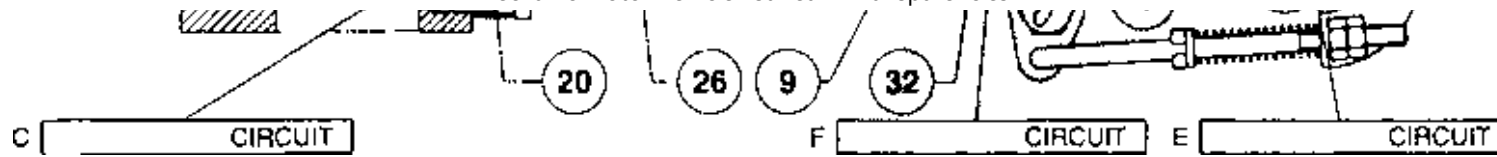


- A Float circuit:** When the needle valve (2) opens, fuel flows to the float chamber (4) through the inlet (5) and filter (6).
- B Starting circuit:** Petrol is drawn from the float chamber (4) through the starter jet (9) to the passage (12).
- C Idling circuit:** Petrol is drawn to the well (14) from the float chamber (4) through the main jet (20)
- D Main circuit:** Petrol is drawn from the float chamber (4) to the emulsion tube (21) through the main jet (20)
- E Pump circuit:** Petrol is drawn from the float chamber (4) to the pump chamber through the pump inlet valve (23) and to the pump jet (26)
- F Econostat circuit:** Petrol is drawn from the float chamber (4) to the econostat tube (31) through the jet (32)

Float and starting circuit


TR 10 01 02 03 95

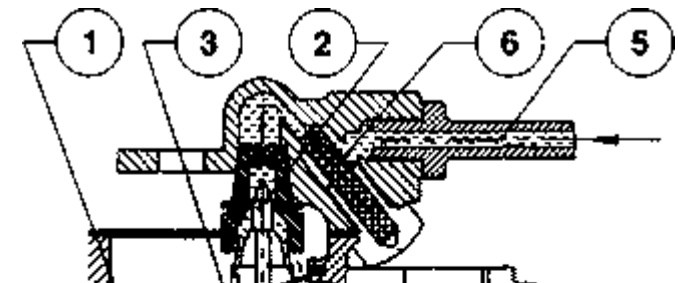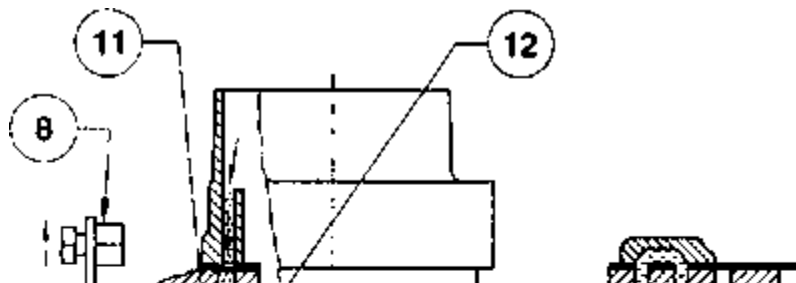

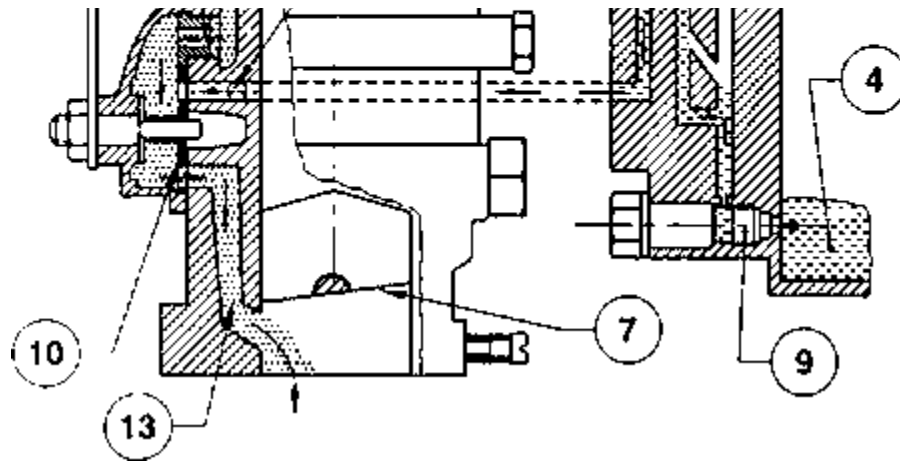

B Starting circuit

When the dash board knob is pulled out, the starter valve lever (8) rotates the starter disc valve (10) and opens the fuel passage (12). Petrol is drawn from the float chamber (4) through the starter jet (9) to the fuel passage (12). Air is drawn from the air jet (11). Air fuel mixture passes through the passage (13) below the throttle (7).


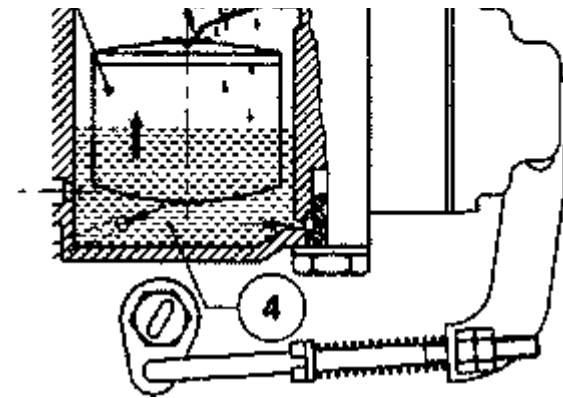



A Float circuit

When the fuel flows to various circuits, fuel level in the float chamber (4) drops. The float (1) move down and the needle valve (2) opens. Fuel flows through the inlet (5) and the filter (6) to the float chamber (4).
When the fuel level rises in the float chamber (4) the float (1) moves up and closes the needle valve (2) by the toggle (3).

Idling and main circuit


TR 10 01 02 04 95

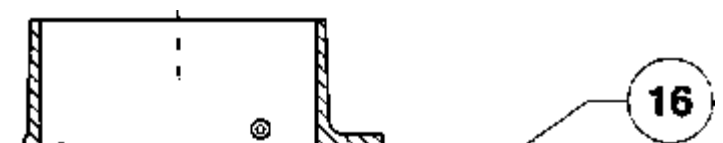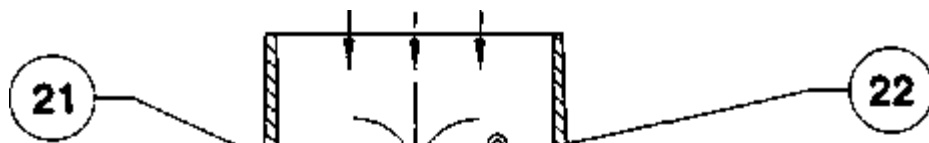

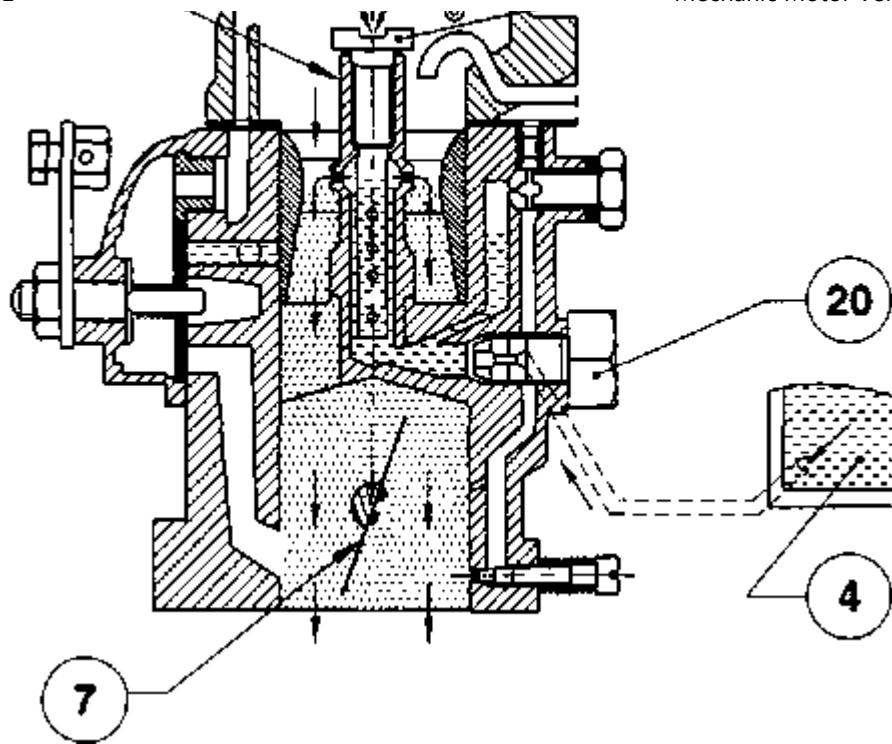

D Main circuit

On further wide opening of the throttle valve (7), air velocity increases across the narrow passage and creates more vacuum. Petrol is drawn from the float chamber (4) through the main jet (20) to the emulsion tube (21). Vacuum draws petrol through the emulsion tube orifices and air through choke tube and the air correction jet (22).


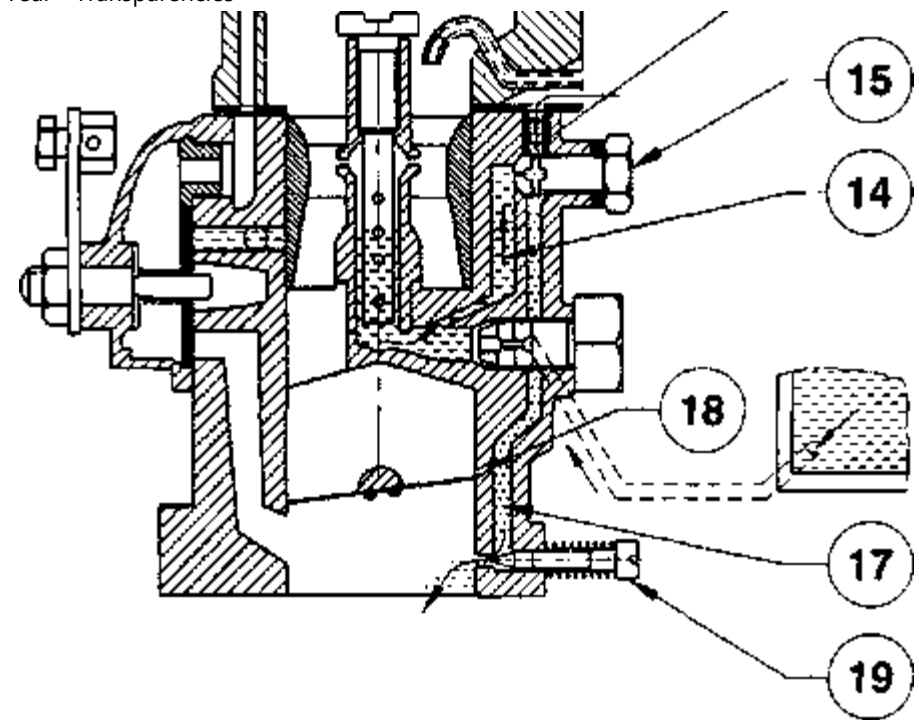


C Idling circuit

When the throttle valve (7) is closed, the vacuum in the engine causes petrol to flow from the well (14) to the pilot jet (15) and air through the air bleeder (16). Both air and fuel mixture passes through the orifice (17) to run the engine at idling speed. Volume of the mixture is controlled by the screw (19). When the throttle (7) is opened slightly, the by pass orifice (18) discharges extra mixture required for slow speed.

Pump and Econostat circuit

TR 10 01 02 05 95

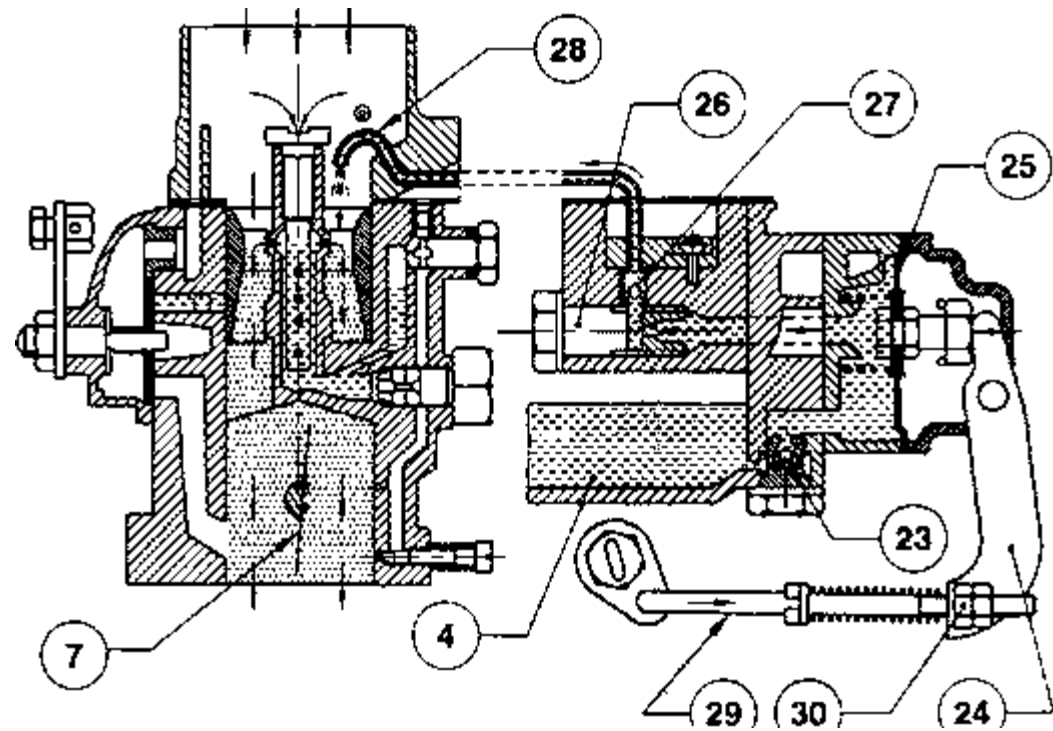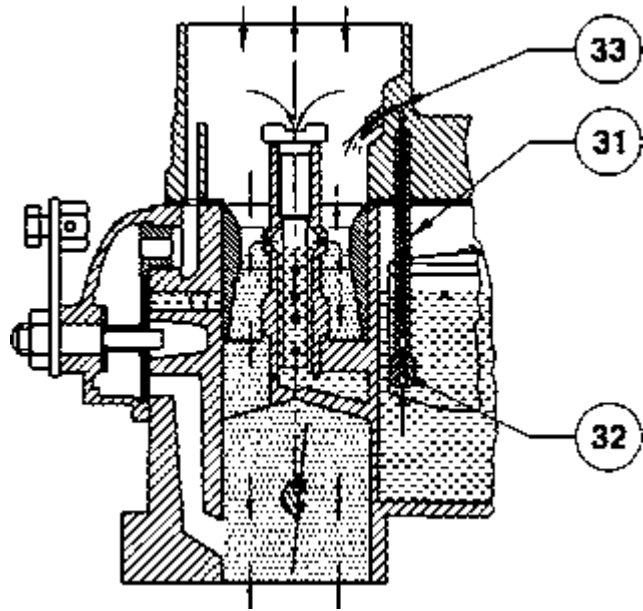



F Econostat circuit


Under full load and full throttle opening at cruising speed, petrol is sucked from the float chamber (4) to the econostat tube (31) through the jet (32) and injected by an injector (33) which provides maximum fuel economy.

E Pump circuit

When the throttle (7) is closed, the diaphragm (25) is pushed back. Petrol enters from the float chamber (4) to the pump chamber through the non return inlet ball valve (23). Due to sudden wide opening of the throttle (7), the lever (24) pushes the diaphragm (25) forward. Petrol passes through the pump jet (26) and opens the non return outlet ball valve (27). The petrol is injected to the choke tube by the injector nozzle (28). This action supplies extra amount of fuel required for avoiding flat spot. The spring loaded rod (29) is adjusted by a nut (30) for effective travel of the lever (24).



Lubrication system (Engine oil circulation)

TR 10 01 06 01 95

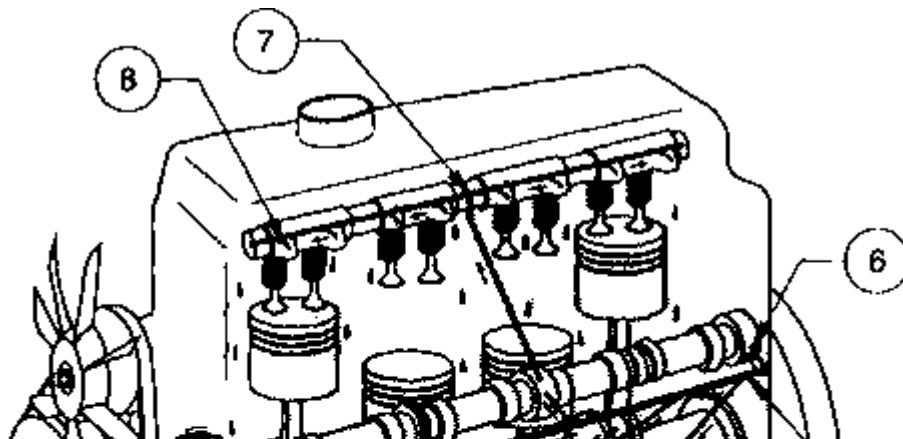


Oil circulation

Oil flows from stainer (10) ' Oil pump (1) ' Filter (15) ' Oil gallery (5) ' Main bearings (4) ' Connecting rod bearings (3) ' and finally to sump. From main gallery (5) to ' Camshaft bearings (6) ' rocker shaft (7) ' rocker arms (8) ' and to sump. From main gallery to timing gear/chain (9) ' and to sump. Excess pressure from pump (1) is relieved by the oil pressure relief valve (2)

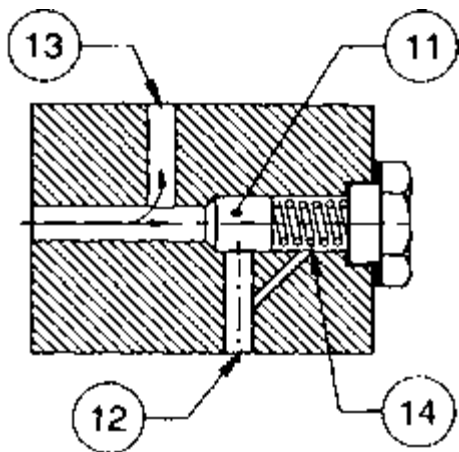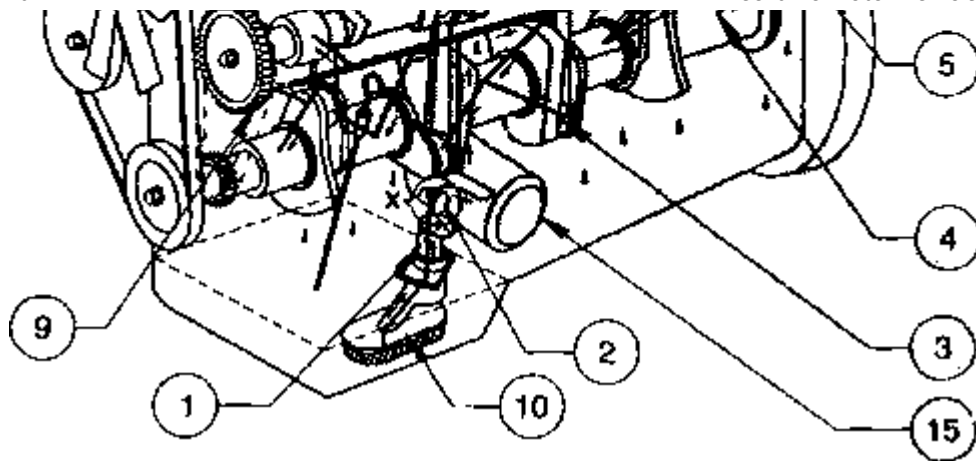

Detail X-A: oil under normal pressure

Relief valve plunger (11) closes the by-pass port (12) and oil passes through outlet port (13) and to the oil filter (15)

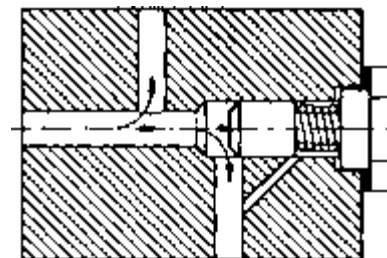



Detail X-B - Oil pressure more than specified limit

The relief valve plunger (11) moves against the spring pressure (14) and opens the by-pass port (12). Excess of pressurised oil escapes through by-pass port (12) and to the oil filter (15)

pass port (12) and to the oil sump.

Lubrication system (full flow and by pass flow oil filter)

TR 10 01 06 02 95

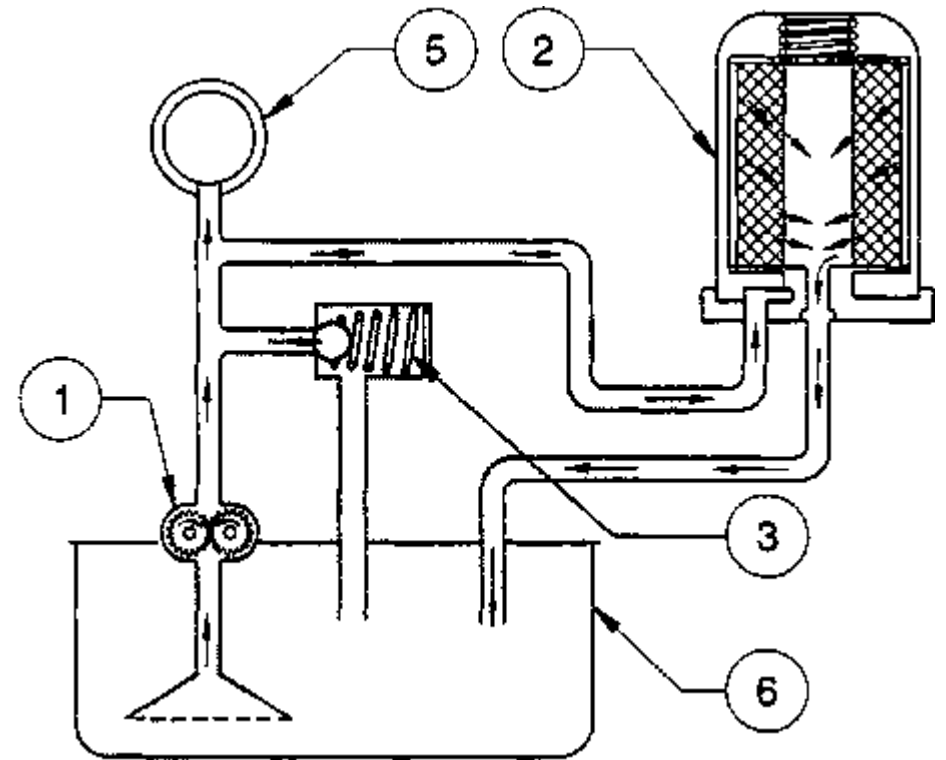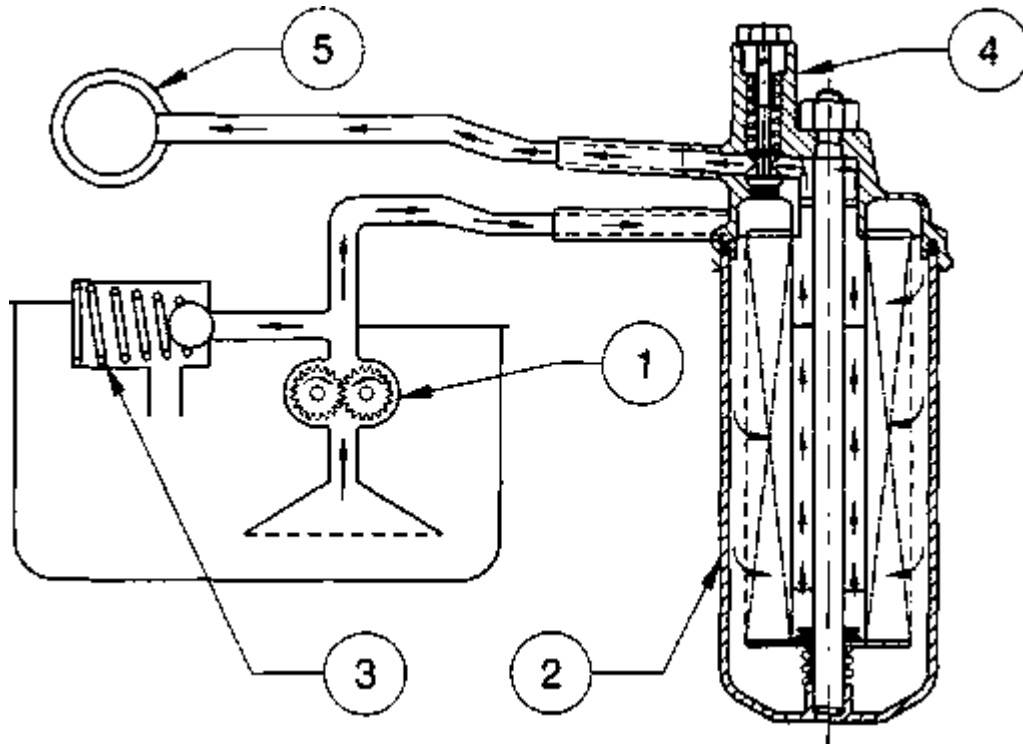

Type - Full flow oil filter


Function: From the oil pump (1) all the oil passes through the filter (2) to the main oil gallery (5). By pass valve (4) provided in the filter allows oil to reach main oil gallery directly when the filter is choked. Excess oil pressure is relieved by oil pressure relief valve (3).


Type - By pass flow oil filter

Function: From the oil pump (1) only part of oil enters to the filter (2) and goes to the oil sump (6). The remaining oil goes directly to the main oil gallery (5). Excess oil pressure is relieved by oil pressure relief valve (3)

Ignition system

TR 10 10 04 01 95

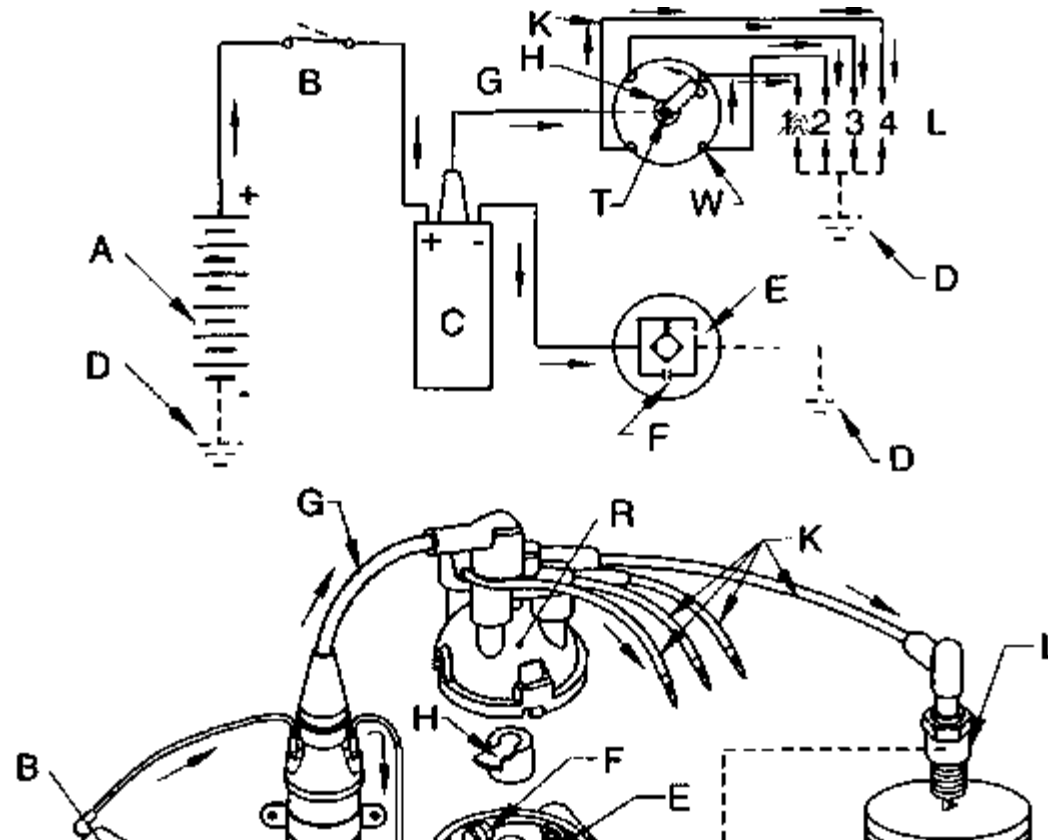

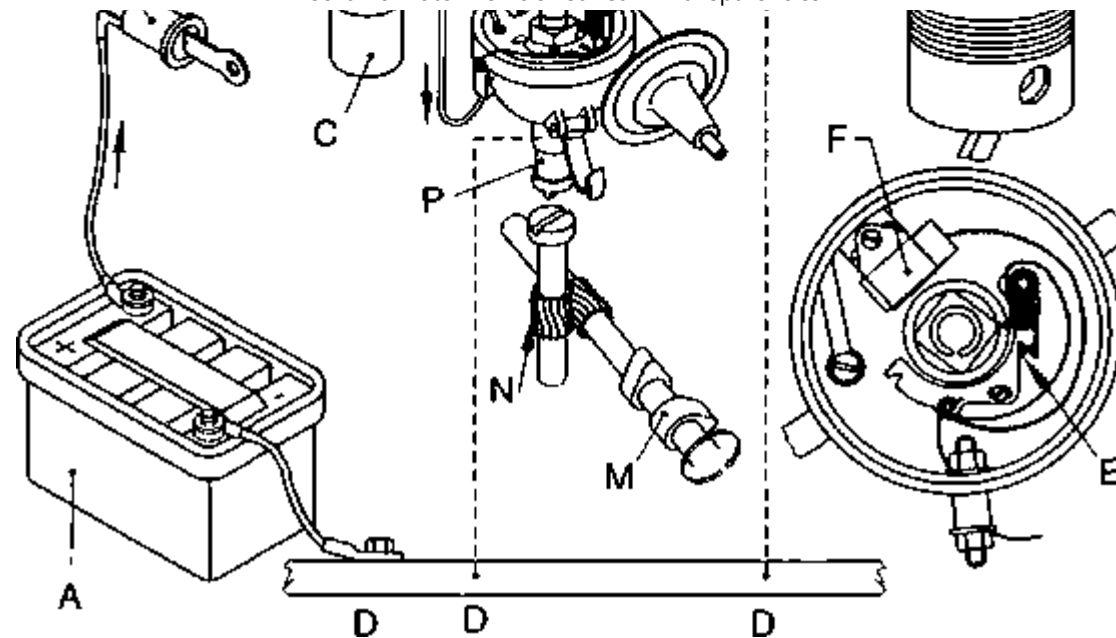

FIRING ORDER: 1-3-4-2

Function: Current flows from battery (A) ' Ignition switch (B) ' the primary windings of the Ignition coil (C) ' CB points (E) ' earth (D). Condenser (F) is fitted parallel to CB points (E). High tension current from coil (C) ' High tension wire (G) ' Carbon rod (T) at the centre of the distributor cap (R) ' rotor (H) ' distributor cap segments (W) ' HT wires (K) ' spark plug (L). The battery (A) the distributor (P) and the spark plug (L) are earthed at points (D) on the vehicle frame. Distributor (P) gets drive from the engine camshaft (M) through the screw gear (N) and rotates at half of the engine speed.

[Please provide your feedback](#)

[English](#) | [French](#) | [Spanish](#) | [German](#)