

Cabling Instructions

Attention: When connecting or disconnecting the stack link cables between hubs, align the cables so they are level and parallel to the A and B connectors to ensure the signal pins are not damaged (see Figure 1 and Figure 2).

Use equal pressure to hold in the retaining clamps on each side of connector when inserting or disconnecting the cable.

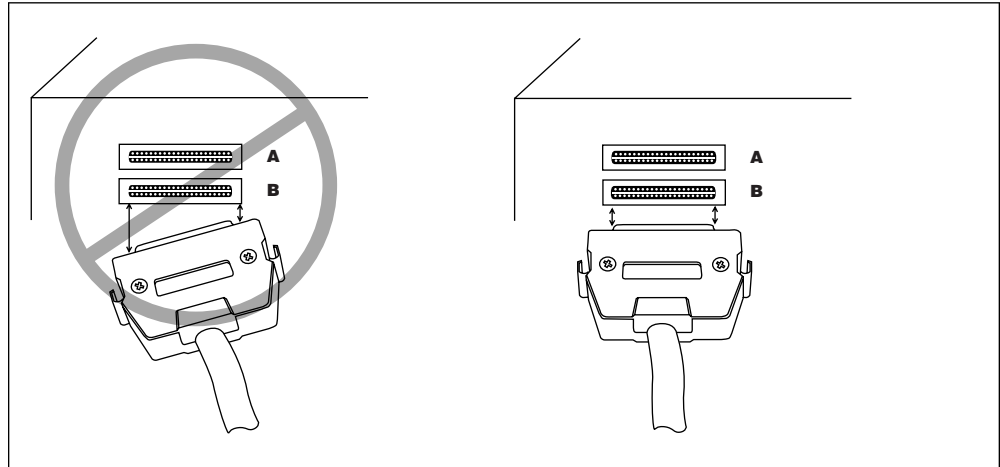


Figure 1. Horizontal Cable and Connector Alignment

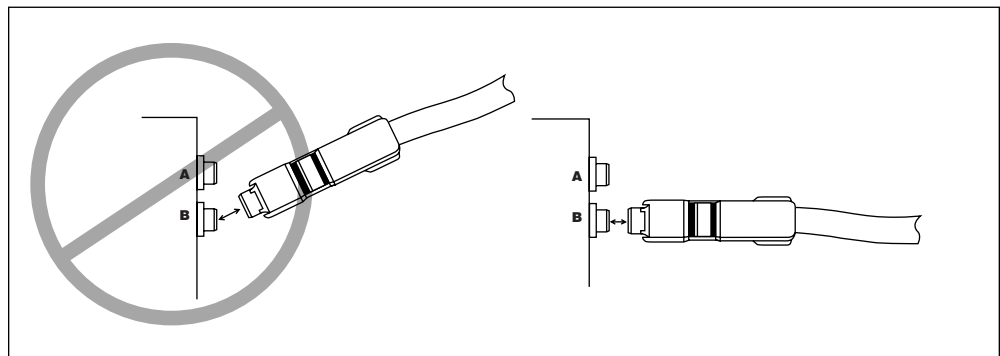


Figure 2. Vertical Cable and Connector Alignment