

# **IBM Token-Ring Adapter Features**

## **First Edition (September 1998)**

**The following paragraph does not apply to the United Kingdom or any country where such provisions are inconsistent with local law:** INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or program(s) described in this publication at any time.

It is possible that this publication may contain reference to, or information about, IBM products (machines and programs), programming, or services that are not announced in your country. Such references or information must not be construed to mean that IBM intends to announce such IBM products, programming, or services in your country.

Requests for technical information about IBM products should be made to your IBM Authorized Dealer or your IBM Marketing Representative.

A form for readers' comments appears at the back of this publication. If the form has been removed, address your comments to:

Department CGF  
Design & Information Development  
IBM Corporation  
PO Box 12195  
RESEARCH TRIANGLE PARK NC 27709-9990  
USA

When you send information to IBM, you grant IBM a nonexclusive right to use or distribute the information in any way it believes appropriate without incurring any obligation to you.

© **Copyright International Business Machines Corporation 1998. All rights reserved.**

Note to U.S. Government Users — Documentation related to restricted rights — Use, duplication or disclosure is subject to restrictions set forth in GSA ADP Schedule Contract with IBM Corp.

---

# Contents

NetWare Network Computing Products from IBM	v
Related Information	v
<b>Chapter 1. Introduction</b>	1-1
Downloads	1-1
<b>Chapter 2. Remote Program Load</b>	2-1
Overview	2-1
Benefits	2-1
Supported Environments	2-1
Installation and Configuration	2-1
Setting Up Your Client Computer to Support RPL/DHCP	2-2
Setting Up Your OS/2 LAN Server to Support RPL	2-3
Setting Up Your Novell NetWare Server to Support RPL	2-4
Messages	2-6
RPL Messages	2-6
DHCP Messages	2-8
Troubleshooting	2-10
Bring-Up Error	2-11
Open Error	2-11
Ring Status Error	2-12
PC Error	2-13
<b>Chapter 3. IBM LAN Client</b>	3-1
Overview	3-1
Benefits	3-1
DOS Conventional Memory Usage Reduction	3-1
Supported Environments	3-2
Supported IBM LAN Adapters	3-2
Supported Software	3-2
Supported Operating Systems	3-3
Restrictions for This Release	3-3
Installation and Configuration	3-3
Related Documents	3-4
<b>Chapter 4. LAN Adapter Management Agent</b>	4-1
Overview	4-1
Benefits	4-1
Supported Environments	4-2
LAN Adapters	4-2
Operating Systems	4-2
System Requirements	4-2
Windows NT, Windows 95, Windows 98 Software Requirements	4-2
OS/2 Software Requirements	4-2
IBM Nways Management Applications	4-2
Installation and Configuration	4-3
Windows NT, Windows 95, and Windows 98	4-3
OS/2	4-3
Example Scenarios	4-4
Remote DMI	4-4

MIB Browsing	4-5
<b>Chapter 5. Route Switching</b>	<b>5-1</b>
History	5-1
Overview	5-1
Benefits	5-2
Example Scenarios	5-2
One-Armed Router	5-2
Managing Route Switching with IBM LAN Adapter Management Agent	5-3
Supported Environments	5-4
System Requirements	5-4
Installation and Configuration	5-4
Route Switching Parameters	5-4
Windows 95, Windows 98, and Windows NT	5-6
Novell Netware Server	5-6
LAN Client	5-7
OS/2	5-7
<b>Chapter 6. Class of Service</b>	<b>6-1</b>
Overview	6-1
Benefits	6-1
Example Scenarios	6-2
Win32 and OS/2 Environments	6-2
Win32 Environments	6-2
Supported Environments	6-2
System Requirements	6-3
Installation and Configuration	6-3
CoS for IP Parameters	6-3
Windows NT, Windows 95, and Windows 98	6-4
Novell Netware Server	6-5
LAN Client	6-5
OS/2	6-6
<b>Chapter 7. Redundant NIC</b>	<b>7-1</b>
Overview	7-1
Benefits	7-1
Example Scenarios	7-1
Managing a Redundant NIC NT Server with the Agent	7-1
Supported Environments	7-2
Installation and Configuration	7-2
Windows NT	7-2
NetWare	7-3
Using Redundant NIC Software	7-7
Messages	7-12
<b>Chapter 8. Network Adapter Performance Tuning</b>	<b>8-1</b>
<b>Glossary</b>	<b>X-1</b>
<b>Index</b>	<b>X-13</b>

---

## NetWare Network Computing Products from IBM

The following additional license terms apply to the Novell IntranetWare Client for DOS and Windows 3.1 code, included with IBM's LAN Client program. In the event of any inconsistency between the following terms and the terms of the IBM License Agreement for Productivity Aids, the following terms shall prevail.

IF YOU DOWNLOAD OR USE THIS PROGRAM YOU AGREE TO THESE TERMS.

The IBM program you have licensed may be designed to run in a single computer system only, or it may contain modules designed to run in multiple computer system environments. The type of environment that applies is limited by the definitions that follow:

**SINGLE USER PROGRAM** means a program which operates on an intelligent single-user device by which the device acts as a standalone system or a peer system on a Communications Network

**COMMUNICATIONS NETWORK** means a computer system which allows a number of independent computing devices to communicate with each other

**NETWORK HOST OR NETWORK SERVER** means a single machine on which a Host program or NLM or VAP operates to provide the host or server resources to the other machines in a network

**HOST PROGRAM** means that portion of the NetWare network operating system that executes on the Network Host or Network Server

**CLIENT PROGRAM** means that portion of the NetWare network operating system that executes on the personal workstation

**NLM PROGRAM OR VAP PROGRAM** means an application program that executes under control of the NetWare network operating system on the Network Host or Network Server

**DOCUMENTATION** means the manual(s) and other printed material packaged by IBM with the Program

If you have licensed a Host Program, an NLM Program or a VAP Program, and/or Client Program, you are authorized to 1) use one copy of the Host Program on a single Network Host or Network Server; 2) use a single copy of an NLM Program or a VAP Program on a single Network Host or Network Server; and 3) use the Client Program, and to, without additional charge, reproduce and use copies, subject to the limitation identified in the Program Document- ation, of the Client Program, in support of the Host Program

---

## Related Information

Refer to these publications for additional information:

- *IBM Token-Ring Family Adapter User's Guide*
- Other adapter books available on the IBM Networking Web site:

[www.networking.ibm.com](http://www.networking.ibm.com)



---

## Chapter 1. Introduction

A LAN adapter exists at the intersection of two complex environments: the computer and the network. The purpose of this manual is to provide the additional information necessary to extend the function of your IBM Token-Ring adapter in the dimensions of the computer and the network.

This manual complements the Installation and Testing Instructions manual for your adapter. The Installation and Testing Instructions contains the information that you need to install and use your adapter.

Operating efficiently in complicated multivendor environments requires a standards-based solution. The features in this manual are based on industry-wide standards such as Intel's Wired for Management Baseline, the DMTF's Desktop Management Interface and the IETF's Next Hop Routing Protocol. These standards-based solutions create a solid foundation for future enhancements necessary to keep pace in an ever-changing networked world.

These features take advantage of the increasing processing power in computers and provide adapter-based solutions in the areas of remote system setup, manageability, IP switching, class of service, and high availability. These solutions help your computer and network operate at a higher level of efficiency.

You should be familiar with the computer in which the features will be installed and the computer's operating system and network software.

---

## Downloads

The software implementing these features can be downloaded from the IBM Token-Ring PCI Family Adapters CD-ROM or from the World Wide Web.

### CD-ROM

Point your Web browser to x:\web\lessmain, where x is your drive letter. Select the appropriate adapter and then select **Downloads**. Then select an operating system to expand its section and select a download package.

### World Wide Web

Point your Web browser to [www.networking.ibm.com/support](http://www.networking.ibm.com/support). Select the appropriate adapter from the list of IBM Networking Hardware products and then select **Downloads**. Then select an operating system to expand its section and select a download package.





---

## Chapter 2. Remote Program Load

---

### Overview

The Remote Program Load (RPL) function enables an adapter to boot a computer using files that the computer receives from a LAN server. The computer that requests these files is referred to as the *client computer*, and the computer that responds with these files is referred to as the *LAN server*. In order for RPL to take place, two things must occur. First, the RPL feature of the adapter in the client machine initiates the RPL request. Second, a LAN server responds to the RPL request with the files to bring up, or boot, the client computer.

The Remote Program Load function also supports Dynamic Host Configuration Protocol (DHCP) to remote boot a computer from a LAN server. In order for DHCP to take place, two things must occur. First, the DHCP feature of the adapter in the client computer initiates the DHCP request. Second, a LAN server responds to the DHCP request with the files to bring up, or boot, the client computer.

The PCI Token-Ring Adapter supports DHCP from any server that supports Attachment A through Attachment G of the Network PC System Design Guidelines, Version 1.0b-August 5, 1997. This specification can be downloaded from [www.microsoft.com/hwdev/netpc.htm](http://www.microsoft.com/hwdev/netpc.htm) or [developer.intel.com/design/netpc/index.htm](http://developer.intel.com/design/netpc/index.htm).

The following sections are included here:

- "Installation and Configuration"
- "Setting Up Your OS/2 LAN Server to Support RPL" on page 2-3
- "Setting Up Your Novell NetWare Server to Support RPL" on page 2-4
- "Messages" on page 2-6
- "Troubleshooting" on page 2-10

---

### Benefits

The Remote Program Load (RPL) function enables an adapter to boot a computer using files that the computer receives from a LAN server.

### Supported Environments

The adapter supports RPL from the following servers:

- IBM OS/2 LAN Server Version 3.0
- IBM OS/2 LAN Server Version 4.0
- IBM OS/2 Warp Server
- Novell NetWare 4.11 or higher

---

### Installation and Configuration

## Setting Up Your Client Computer to Support RPL/DHCP

For the RPL/DHCP process to begin, the feature must be enabled on the adapter installed in the client computer, and the client computer must recognize the RPL/DHCP feature of the adapter as the first or only bootable device present.

### Enabling the RPL/DHCP Feature on the Adapter

The adapter is shipped with the RPL/DHCP feature enabled. You can ensure that it is enabled by running the diagnostics and, at the diagnostics test panel, pressing F5 to view or change the RPL setting. You can also check the RPL setting with LANAI DC.

### Making the RPL/DHCP Feature the First Bootable Device

All IBM PCs support RPL, and many IBM-compatible PCs do also. If your computer is not an IBM PC, refer to your computer's user's manual or contact the manufacturer if you are not sure whether it supports RPL.

On most IBM PCs you can make this adapter the first bootable, or startup, device by choosing **Network** as the first startup device in the startup sequence in the configuration utility (usually you enter the configuration utility by pressing F1 when the IBM logo and Configuration Utility program symbol appear during the power-on process). If drive A is the first bootable device, consider making the adapter the second bootable device. Refer to the user's manual for your IBM PC if you need further instructions for altering the startup sequence or entering the configuration utility.

Many non-IBM machines and some older IBM machines do not have a configuration utility, or do not allow a choice of a network-bootable device in the configuration utility. On these machines you can either remove the hard disk or use the RPLENABL.EXE utility program provided with this adapter in the RPLPKG.EXE package on the CD-ROM to disable the hard disk as a bootable device. Once the hard disk is disabled as a bootable device, computers that support RPL adapters will attempt to boot from the network as long as no diskette is in the diskette drive.

Once you have successfully selected RPL as the first startup, or boot, device you will see a DHCP panel when your client machine is booting. By default, the adapter will first try DHCP as the first protocol. Any time before the client has connected to the DHCP server, you can press **ALT-S** to switch to RPL. The following figure is an example of the DHCP panel:

```
                                IBM PCI Token-Ring DHCP
ET-02:15:36
ID-268 0030
BU-0000
AA-0004AC570001
AL-000001 PX10AH
BL-CD0110
RM-C800
OP-0000 16

DD-0002
AR-
DR-
XR-
TR-
AC-8C00 00002000 8820
AE-000 OP-0011
Press ALT-S to switch to RPL
Press ESC to return to BIOS
Ending DHCP
```

```
                                IBM PCI Token-Ring RPL
ET-02:15:36
ID-268 0030
BU-0000
AA-0004AC570001
AL-000001 PX10AH
BL-CR1.0243
RM-C800
OP-0000 16

RQ-000F
SF-
SN-
RS-2010
PC-0606
AC-8C00 00002000 8820
AE-000 OP-0011
Press ALT-S to switch to DHCP
Press ESC to return to BIOS
Ending RPL
```

This example shows all of the possible error and status message prefixes. You will normally not see the error status condition prefixes, such as PC-, unless an error condition occurs. These error and status messages are described in "Messages" on page 2-6.

## Setting Up Your OS/2 LAN Server to Support RPL

This manual assumes that you have already set up your OS/2 LAN Server for RPL and installed the DOS or OS/2 RPL image. If you have not, refer to the OS/2 LAN Server documentation and install RPL support before installing RPL support for the adapter on the OS/2 LAN Server. In summary, at this point you should have already performed the following steps:

- 1 Installed OS/2 LAN Server DOS or OS/2 RPL support.

- 2** Run RIPLINST.EXE if you installed OS/2 RPL support, to install an OS/2 RPL image. The RIPLINST.EXE utility is normally on diskette 7 of the OS/2 installation diskettes. You must use the OS/2 unpack command to unpack the RIPLINST file before you can run it.
- 3** Installed any service fix packs required:
  - LAN Server 3.0: IP07060 or higher
  - LAN Server 4.0: IP08152 or higher
 Use the OS/2 SYSLEVEL command on your OS/2 LAN Server to check the CSD level.
- 4** Run any post-service updates for RPL described in the fix pack IPxxxxx.INF file (where xxxxx is the fix pack level being applied).
- 5** Run GETRPL.EXE to update the RPL access profiles (requires the RPL service to be stopped, and you to be logged on with administrator authority).
- 6** Run NET START RPL to start the RPL service.

Once these steps are complete, run the following steps on the OS/2 LAN Server to add RPL support for the adapter:

- 1** Run X:\RPL\CFGRPL.COM from the CD-ROM or the NDIS Drivers diskette in an OS/2 window.
- 2** Run NET STOP RPL to stop the RPL service.
- 3** Run GETRPL.EXE to update the RPL access profiles (requires the RPL service to be stopped, and you to be logged on with administrator authority).
- 4** Run NET START RPL to start the RPL service.
- 5** Create an RPL workstation image for each client computer with an adapter installed. This procedure is described in the LAN Server documentation. For the Server Record Identifier use:

<b>Client Operating Environment</b>	<b>Record Identifier</b>
OS/2 3.0	R_230_DTKTRP
DOS	R_DTKTRP_NDIS

---

## Setting Up Your Novell NetWare Server to Support RPL

- 1** Power on a NetWare Client machine and log on to the NetWare Server with supervisor authority.
- 2** Copy the RPL.NLM file to the NetWare server \SYSTEM directory from the \RPL directory on the CD-ROM.
- 3** Copy the \_0249.RPL file to the NetWare server \LOGIN directory from the \RPL directory on the CD-ROM.

- 4** Generate a bootable client diskette for this adapter, and run the DOSGEN program located in the \SYSTEM directory on the Novell NetWare Server. For information on running DOSGEN or for more detailed information on setting up unique RPL images for specific adapters, refer to the Novell NetWare documentation.

The following steps are a sample procedure for creating a NetWare Client boot image:

- a** Prepare a bootable DOS diskette. Perform either step 4a1 for a VLM image or step 4a2 for a NETX image:

- 1** VLM image

Place the following files on the bootable DOS diskette:

LXL.COM	AUTOEXEC.BAT	CONFIG.SYS	NET.CFG
VLM.COM	IBMTRPO.EXE	ROUTE.COM	IPXODI.COM
REDIR.VLM	CONN.VLM	SECURITY.VLM	NWP.VLM
PRINT.VLM	IPXNCP.VLM	NDS.VLM	FIO.VLM
NETX.VLM	TRAN.VLM	BIND.VLM	GENERAL.VLM

Your CONFIG.SYS file should have the following statements:

```
REM Use these three if you want to use high memory and
REM XMS memory.
REM DOS=HIGH
REM DEVICE=A:\HIMEM.SYS
REM DEVICE=A:EMM386.EXE NOEMS
FILES=40
BUFFERS=20
LASTDRIVE=Z
```

Your AUTOEXEC.BAT file should have the following statements:

```
PATH A:\
SET NWLANGUAGE=ENGLISH
LSL
IBMTRPO
ROUTE
IPXODI
REM If you issue commands that reload COMMAND.COM,
REM you must also copy COMMAND.COM
REM to the NetWare Server \system directory and
REM uncomment the COMSPEC command statement below.
REM SET COMSPEC=F:\SYSTEM\COMMAND.COM
VLM
LOGIN yourID
```

- 2** NETX image

Place the following files on the bootable DOS diskette:

IBMTRPO.EXE	AUTOEXEC.BAT	LSL.COM	NETX.EXE
ROUTE.COM	IPXODI.COM	NET.CFG	

Your AUTOEXEC.BAT should have the following statements:

```

PATH A:\
LSL
IBMTRPO
ROUTE
IPXODI
REM If you issue commands that reload COMMAND.COM,
REM you must also copy COMMAND.COM
REM to the NetWare Server \system directory and
REM uncomment the COMSPEC command statement below.
REM SET COMSPEC=F:\SYSTEM\COMMAND.COM
NETX
F:
LOGIN yourID

```

- b** Update the diskette with IBMTRPO.EXE from the CD-ROM.
- c** Generate the image using DOSGEN (see the Novell documentation for information regarding creating images and running DOSGEN).

Following is a sample of the NET.CFG file for VLM or NETX clients:

```

Link Driver IBMTRPO
    FRAME TOKEN-RING MSB
    DATARATE AUTO
    RXBUFFERS 9
    TXBUFFERS 1

NetWare DOS Requester
    FIRST NETWORK DRIVE = F
    NETWARE PROTOCOL = NDS BIND

```

- 5** Add the following two lines to the AUTOEXEC.NCF file located in the \SYSTEM directory on the NetWare Server:

```

load rpl
bind rpl to <driver>

```

where <driver> is the Token-Ring driver loaded on your NetWare Server.

---

## Messages

### RPL Messages

---

#### ET-00:00:45

**Explanation:** Elapsed Time. A continuously updated field indicating the elapsed time since the RPL feature gained control.

---

#### ID-268 BBDF

**Explanation:** Identification. An indication of which adapter is using the RPL function. 268 indicates a PCI Token-Ring Adapter. BBDF indicates the PCI bus, device, and function number for the PCI slot in which the adapter is inserted.

---

**BU-0000**

**Explanation:** Bring-Up. This field is displayed as X'0000' if the adapter has been successfully initialized and opened. If not, a code other than X'0000' is displayed and the field is highlighted. See "Troubleshooting" on page 2-10.

---

**AA-08005A2B0000**

**Explanation:** Adapter address. The permanently encoded address of the Token-Ring adapter in your computer. This address is always 12 hexadecimal characters (6 bytes) long.

---

**AL-000001 PX10AH**

**Explanation:** Adapter Level. The Engineering Change (EC) level of the code on the Token-Ring adapter.

---

**BL-CD0106**

**Explanation:** BIOS Level (module level). The EC level of the code in the RPL feature.

---

**RM-CC00**

**Explanation:** Memory (read-only memory). Segment address in memory where BIOS has placed the RPL ROM.

---

**OP-0000 04**

**Explanation:** Open Return Code. The first 4 digits are X'0000' and the last 2 digits identify the adapter data rate, if the adapter has been successfully opened and attached to the network. If not, a code other than X'0000' is displayed and the field is flashing. See "Troubleshooting" on page 2-10.

---

**RQ-0001**

**Explanation:** Request Count (FIND Frame Count). The number in hexadecimal of FIND frames that have been transmitted. An excessive request count indicates that the LAN server is not present, is congested, or is not correctly configured to RPL this adapter.

---

**SF-0001**

**Explanation:** SEND.FILE.REQUEST Frame Count. The number of SEND.FILE.REQUEST frames that have been transmitted. An excessive SEND.FILE.REQUEST frame count indicates that the LAN server is not responding after having been found.

---

**SN-0023**

**Explanation:** File Response Sequence Number. This value is displayed when the LAN server has responded to the SEND.FILE.REQUEST. It indicates how many times valid FILE.DATA.RESPONSE frames have been received.

---

**RS-0040**

**Explanation:** Ring Status. This field displays a code indicating the status of the network. The field will be highlighted if the operation cannot continue; it will not be highlighted if processing can continue. See "Troubleshooting" on page 2-10.

---

**PC-4020**

**Explanation:** Computer error. This field displays an error code indicating that the adapter has difficulty in functioning with the computer. In most cases, the panel will be frozen and this field will be highlighted because the adapter cannot continue. See "Troubleshooting" on page 2-10.

---

**AC-0040 0000 0000 0000**

**Explanation:** Adapter check. The adapter has detected an internal error and cannot continue. Reboot your computer. If this problem persists, record the adapter check code, and contact your network administrator.

---

**AE-        *nnn* XX-0011**

**Explanation:** Adapter error. The adapter in your computer could not establish communication with the LAN server. The *nnn* indicates the instance number. The reason for this error is indicated by the XX message to the right of AE-*nnn*. XX can be either BU or OP. The BU and OP messages are described previously in this section.

---

**Press ALT-S to switch to DHCP**

**Explanation:** If the user wants to switch from RPL to DHCP, press ALT-S to switch after 10 seconds.

---

**Press ESC to return to BIOS**

**Explanation:** On newer computers that support the BIOS Boot Specification Version 1.01 or higher, press ESC at any time during the RPL process to return to BIOS in 10 seconds. On older machines that do not support the BIOS Boot Specification, this line will not be seen, nor will this function be available.

## DHCP Messages

---

**ET-00:00:45**

**Explanation:** Elapsed Time. A continuously updated field indicating the elapsed time since the RPL feature gained control.

---

**ID-268 BBDF**

**Explanation:** Identification. An indication of which adapter is using the RPL function. 268 indicates a PCI Token-Ring Adapter. BBDF indicates the PCI bus, device, and function number for the PCI slot in which the adapter is inserted.

---

**BU-0000**

**Explanation:** Bring-Up. This field is displayed as X'0000' if the adapter has been successfully initialized and opened. If not, a code other than X'0000' is displayed and the field is highlighted. See "Troubleshooting" on page 2-10.

---

**AA-08005A2B0000**

**Explanation:** Adapter address. The permanently encoded address of the Token-Ring adapter in your computer. This address is always 12 hexadecimal characters (6 bytes) long.



---

**AL-000001 PX10AH**

**Explanation:** Adapter level. The Engineering Change (EC) level of the code on the Token-Ring adapter.

---

**BL-CD0106**

**Explanation:** BIOS level (module level). The EC level of the code in the RPL feature.

---

**RM-CC00**

**Explanation:** Memory (read-only memory). Segment address in memory where BIOS has placed the RPL ROM.

---

**OP-0000 04**

**Explanation:** Open return code. The first 4 digits are X'0000' and the last 2 digits identify the adapter data rate, if the adapter has been successfully opened and attached to the network. If not, a code other than X'0000' is displayed and the field is flashing. See "Troubleshooting" on page 2-10.

---

**DD-0001**

**Explanation:** DHCP discover count. The number in hexadecimal of DHCP Discover frames that have been transmitted. The field will be highlighted with a value of 0004 10 if the server is not present, is congested, or is not currently configured to respond to DHCP messages.

---

**AR-0001**

**Explanation:** ARP request count. The number in hexadecimal of ARP Requests broadcasted onto the network. If the field is highlighted as XXXX 00, the client received a reply to its ARP request. Check to see if any other machine is assigned the client's IP address and check the DHCP server's DHCP scope of addresses.

---

**DR-0001**

**Explanation:** DHCP request count. The number in hexadecimal of DHCP Request packets transmitted to the DHCP server/Proxy DHCP server. The field will be highlighted with a value of XXXX 10 if the server is not present, is congested, or is not correctly configured to respond to DHCP Request messages.

---

**XR-0001**

**Explanation:** Extended DHCP request count. The number in hexadecimal of Extended (PXE) DHCP Request packets transmitted to the BINL (Boot Image Negotiation Layer) server. The field will be highlighted with a value of XXXX 10 if the server is not present, is congested, or is not correctly configured to respond to Extended (PXE) DHCP Request messages.

---

**TF-0009**

**Explanation:** TFTP block count. The number in hexadecimal of UDP data packets received during the TFTP of the initial bootstrap program. The field will be highlighted with a value of XXXX 10, indicating a general timeout, if the server is not present or is congested. If the field is highlighted with a value of XXXX 3X, check the path and filename of the initial bootstrap program on the server and check if the server's TFTP program is active.

---

**RS-0040**

**Explanation:** Ring status. This field displays a code indicating the status of the network. The field will be highlighted if the operation cannot continue; it will not be highlighted if processing can continue. See "Troubleshooting."

---

**PC-4020**

**Explanation:** Computer error. This field displays an error code indicating that the adapter has difficulty in functioning with the computer. In most cases, the panel will be frozen and this field will be highlighted because the adapter cannot continue. See "Troubleshooting."

---

**AC-0040 0000 0000 0000**

**Explanation:** Adapter check. The adapter has detected an internal error and cannot continue. Reboot your computer. If this problem persists, record the adapter check code, and contact your network administrator.

---

**AE-      *nnn* XX-0011**

**Explanation:** Adapter error. The adapter in your computer could not establish communication with the LAN server. The *nnn* indicates the instance number. The reason for this error is indicated by the XX message to the right of AE-*nnn*. XX can be either BU or OP. The BU and OP messages are described previously in this section.

---

**Press ALT-S to switch to RPL**

**Explanation:** If the user wants to switch from DHCP to RPL, press ALT-S to switch after 10 seconds.

---

**Press ESC to return to BIOS**

**Explanation:** On newer computers that support the BIOS Boot Specification Version 1.01 or higher, press ESC at any time during the RPL process to return to BIOS in 10 seconds. On older machines that do not support the BIOS Boot Specification, this line will not be seen, nor will this function be available.

---

## Troubleshooting

If you do not get the expected results when using an RPL feature on a client computer, see Table 2-1 on page 2-11.

If other computers on the network need problem determination, you might need one or more of the following documents:

- The operator's guide for your computer
- The problem determination guide for network-related problems

Table 2-1. Failure Indication Messages

Failure Indication	Action
The computer's BASIC panel appears, or the computer boots to the hard disk or diskette drive.	Perform the steps in "Installation and Configuration" on page 2-1.
The BU field on the client computer display panel is highlighted.	See "Bring-Up Error" on page 2-11.
The OP field on the client computer display panel is highlighted.	See "Open Error" on page 2-11.
The RS field on the Client computer display panel has a value other than zero (0) and is highlighted.	See "Ring Status Error" on page 2-12.
The PC field on the Client computer display panel is highlighted or is shown with counters not being updated.	See "PC Error" on page 2-13.
The Client computer display panel shows any response that has not been identified.	Contact your network administrator.

## Bring-Up Error

The client computer display panel shows that the elapsed time (ET) field has stopped with only a few seconds of time accumulated, and the bring-up (BU) error field is highlighted. The RPL feature tried three times and was unable to initialize the adapter for use. The BU error codes and the action to take are listed in Table 2-2.

Table 2-2. Bring-Up Error Causes and Actions

BU Error Code	Cause	Action
0020-002F, 0030-003F	A module on the adapter is not responding correctly.	The adapter appears defective. Run the diagnostics.
0048	Initialize time-out.	The adapter appears defective. Run the diagnostics.
All others.		Adapter failure. The adapter appears defective. Run the diagnostics. Contact your network administrator if problems persist.

## Open Error

The open error field (OP) contains an error code. This code might be displayed normally or flashing.

If the error code is flashing, the RPL feature is trying to open the adapter after an unsuccessful attempt.

If the problem persists, record the 4 digits of the flashing OP field. Using Open Error and the Reason Code as the symptom, refer to the *IBM Token-Ring Network Problem Determination Guide* to resolve the problem.

OP Error Code	Cause	Action
0011, 0010	No media attached.	Connect the UTP or STP cable to the adapter.

OP Error Code	Cause	Action
002D	A Client computer is trying to be the first active computer on a Token-Ring network.	Start your RPL server. If the error persists, reboot the Client computer.
All Others	Adapter open failure.	Refer to the <i>IBM Token-Ring Network Problem Determination Guide</i> .

## Ring Status Error

A ring error was detected when the RPL feature or bootstrap program was executing. The ring status error field (RS) contains the error code. Locate the error code in Table 2-3 to determine the correct action to take. Some values might be displayed that are a combination of the values listed in the table. The x's used in the RS Error Code column can be any hexadecimal number from 0 through F.

Table 2-3. Ring Status Error Causes and Actions

RS Error Code	Cause	Action
Cxxx to Dxxx	No receive signal was detected. The network is beaconing. The adapter is transmitting beacon frames.	Refer to the <i>IBM Token-Ring Network Problem Determination Guide</i> .
2000	This adapter has detected a soft-error condition.	No action required.
08xx	Wire fault. The adapter has detected a problem in itself or in its lobe.	Refer to the <i>IBM Token-Ring Network Problem Determination Guide</i> .
04xx	The adapter detected an internal hardware error.	Contact your network administrator.
x1xx	Remove received. This adapter was removed from the network.	Contact your network administrator for assistance.
0080	Counter overflow. One of the error log counters has incremented past 256.	Restart the computer.
0040 or 0060	Single station. The adapter has opened and is the only station on the network. This bit resets when another station inserts.	No action is required unless other stations are known to be operating on this network. If other stations are on the network, refer to the <i>IBM Token-Ring Network Problem Determination Guide</i> .
0020	Ring recovery. The adapter is transmitting or receiving claim token frames.	No action is required.
0004	Full-duplex. The adapter is operating in full-duplex mode.	No action is required.
All others.	Reserved.	Contact your network administrator for assistance.

## PC Error

The RPL feature has detected a problem with either the software or hardware in the client computer. Retry the operation by restarting the computer at least once. If the problem persists, locate the error code in Table 2-4 to determine the correct action to take.

Table 2-4. PC Error Causes and Actions

PC Error Code	Cause	Action
05xx	An invalid command control block (CCB) code was issued to the adapter support subset. xx = the CCB code.	Check the bootstrap program if it is user-written. If not, contact your network administrator for assistance. Provide the CCB code.
06xx (not highlighted)	PROGRAM.ALERT frames being transmitted. The xx portion of the value represents the alert code.  00 = Unexpected error response frame received.  02 = File not found.  04 = Out of memory space.  06 = Memory overrun.  08 = Unexpected DLC status received.	Restart the computer. If this error persists, contact your network administrator for assistance.
07xx	The adapter failed a wrap test. xx = system status block (SSB) return code.	The adapter appears defective. Run the diagnostics. Contact your network administrator if problems persist.
All others.	A computer hardware or software error has occurred.	Perform the computer diagnostic test procedure or contact your network administrator for assistance.



---

## Chapter 3. IBM LAN Client

---

### Overview

IBM LAN Client provides program interfaces to support network application programs using selected IBM Token-Ring PCI Family Adapters. It allows a DOS/Windows client workstation to communicate with an IBM LAN Server at Version 3.0, 4.0, and Warp Server, or with a Novell NetWare Server at Version 2.15c or higher, or to use TCP/IP applications in Windows. (The IBM and Novell client code is included with this package but, with the exception of PING, TCP/IP applications are not.) In addition, support is provided for programs written to the NetBIOS or IEEE 802.2 application programming interfaces.

---

### Benefits

- Requires as little as 4 KB conventional memory. (See “DOS Conventional Memory Usage Reduction” for more details.)
- Uses one common environment for concurrent multiple protocols.
- One or more of NetBIOS, IPX, TCP/IP, and IEEE 802.2.
- Does not require shim modules, such as ODINSUP and LANSUP.
- Includes client software for attachment to Novell NetWare Servers or IBM LAN Servers.
- Includes DOS LAN Services 5.x.
- Includes Novell IntranetWare Client for DOS and Windows 3.1.
- Provides full access to essential NetWare services such as NetWare Directory Services (NDS).
- Provides improved connection reliability, including the ability to auto-reconnect open files.
- Provides enhanced large internet packet (LIP) and packet burst support.
- Includes an installation tool with a graphical user interface (GUI) for easy installation of client software.
- Includes a command-line version of the installation tool for use by network administrators installing on a large number of workstations.
- Allows the same adapter device driver to be used for client workstations and for Novell NetWare servers, reducing support complexity.

### DOS Conventional Memory Usage Reduction

LAN Client minimizes the use of DOS conventional memory for network communications. With IBM LAN Client, IBM LAN adapter drivers and protocol stacks no longer require large amounts of DOS memory below 1 MB. Table 3-1 on page 3-2 shows how little memory is required for IBM LAN Client, compared with existing implementations. This table shows how much DOS conventional memory is used by IBM LAN Client for three popular communication protocols, compared with current usage.

Table 3-1. Adapter Memory Reduction Table

Protocol	Before IBM LAN Client	With IBM LAN Client
IPX	59 KB	5 KB
IEEE 802.2	95 KB	4 KB
NetBIOS	95 KB	4 KB

---

## Supported Environments

### Supported IBM LAN Adapters

IBM LAN Client provides support for the following IBM adapters:

- IBM Token-Ring PCI Family Adapters
  - IBM 16/4 Token-Ring PCI Adapter 2
  - IBM 16/4 Token-Ring PCI Adapter 2 with Wake on LAN
  - IBM High-Speed 100/16/4 Token-Ring PCI Adapter
  - PCI Token Ring Adapter
  - PCI Wake on LAN Token Ring Adapter
- Auto LANStreamer PCI Adapter
- Auto 16/4 Token-Ring ISA Adapter
- Token-Ring 16/4 ISA-16 Adapter
- Token-Ring Auto 16/4 Credit Card Adapter (PCMCIA)
- Auto 16/4 Token-Ring MC Adapter
- Token-Ring 16/4 Adapter/A
- Auto Wake Token-Ring ISA Adapter
- Turbo 16/4 Token-Ring ISA Adapter
- Turbo 16/4 Token-Ring PC Card (PCMCIA)

The device driver needed for the adapter, to operate with the IBM LAN Client software is provided on this CD-ROM. The following drivers are provided:

- TOKEN.LAN — for ISA, Micro-Channel, and PCMCIA Token-Ring adapters
- IBMMP.CO.LAN — for the Auto LANStreamer PCI Adapter
- IBMTRPO.LAN — for the IBM Token-Ring PCI Family Adapters

The installation program will copy the driver onto your workstation hard disk when you tell it which adapter you will be using. It will also provide the correct load statements in STARTNET.BAT.

### Supported Software

IBM LAN Client provides support for the following protocols and client applications:

**For DOS 5.0 or higher:**

- IEEE 802.2
- NetBIOS
- DOS LAN Services 5.x (with IBM Warp Server)
- Novell IntranetWare Client for DOS and Windows 3.1 (with Novell NetWare 2.15c and higher)
- PC3270 Version 4.x



- DCAF (Version 1.3 + CSDs)
- Artisoft LANtastic Version 6.0
- Attachmate 3270 Emulation
- LANDP (If you are using Version 2, make sure that the service level of LAN.EXE is MS004 or higher.)

**For Windows 3.1, Windows 3.11, and Windows for Workgroups 3.11:**

- IEEE 802.2
- NetBIOS
- DOS LAN Services 5.x (with IBM Warp Server)
- Novell IntranetWare Client for DOS and Windows 3.1 (with Novell NetWare 4.x)
- AS/400 for Windows (Version 4.0, V3R1M0, and V3R1M1)
- TCP/IP using Winsock 1.1 or 1.2
- PC3270/Windows Version 4.x
- Artisoft LANtastic Version 6.0
- APPC/Windows

**Note:** IBM LAN Station Manager cannot be run in the same workstation as IBM LAN Client.

## Supported Operating Systems

IBM LAN Client supports the following desktop operating systems:

- MS-DOS 5.x and 6.x
- PC-DOS 5.x, 6.x, and 7.0
- Windows 3.1 and 3.11, in enhanced mode
- Windows for Workgroups 3.11

## Restrictions for This Release

The following restrictions apply for this release of IBM LAN Client:

- IBM LAN Client will operate with only one adapter.
- IBM LAN Client cannot be RPL'd from a server.

---

## Installation and Configuration

**1** Run **LCINST.EXE** from the CD-ROM or from the installed version of LCINST from the LAN Client diskettes or the self-extracting package file (LCPKG.EXE).

**Note:** To install LCINST to a hard disk from the LAN Client diskettes insert LAN Client diskette 1 in drive A and type **install**.

**2** Select your software environment from the first IBM LAN Client Installation panel (DOS, Windows, or Windows for Workgroups).

**3** Select your adapter from the IBM LAN Client Adapter Selection panel.

**4** Continue to the IBM LAN Client Application and Protocol Selection panel.

- 5** Select the protocols to install and click **OK**.
- 6** Select the tabs on the IBM LAN Client Configuration panel to configure each protocol.
- 7** Select **Install**.
- 8** Reboot your computer when prompted.

**Note:** A command line version (LCINSTC.EXE) can also be used to install IBM LAN Client. This can be run directly from the CD-ROM, or from the installed version of LCINSTC from the LAN Client diskettes or the self-extracting package file (LCPKG.EXE). For a list of valid parameters that can be used with the command line version, type **LCINSTC /h** and press **Enter**.

---

## Related Documents

In addition to this document, you might need to consult the following publications:

- The appropriate LAN adapter documentation (provided with the adapter)
- *IBM DOS LAN Services and Windows User's Guide*, S10H-9684
- Manuals for Novell IntranetWare Client for DOS and Windows 3.1 and Novell NetWare Server 4.x
- Manuals for Novell TCP/IP interface

IBM documentation can be obtained from your IBM marketing representative or on the Web at [www.networking.ibm.com/support](http://www.networking.ibm.com/support).

Novell documentation can be obtained by contacting Novell, either by calling 1 800 NETWARE (1 800 638-9273) or on the Web at [www.novell.com](http://www.novell.com).

---

## Chapter 4. LAN Adapter Management Agent

---

### Overview

The IBM LAN Adapter Management Agent makes IBM LAN adapters visible to management applications using industry-standard management techniques. The Agent provides manageability using either the Simple Network Management Protocol (SNMP) or the Desktop Management Interface (DMI).

SNMP is the most common management-oriented protocol. The IBM LAN Adapter Management Agent can be coupled with IBM Nways Management Applications to remotely manage IBM LAN adapters resident in the Agent's workstation. The Agent can generally be managed by any SNMP-compliant management application.

DMI is a programming interface developed by members of the PC industry to bring management and control to PC systems. DMI browsers, which are supplied in the Agent package, can also manage other systems using standard communications protocols. DMI is also used by many workgroup management applications.

The Agent runs on Microsoft Windows NT, Windows 95, and Windows 98, and IBM OS/2 workstations and provides an easy-to-use installation process for each environment. Management using SNMP and DMI is available for each operating environment. Some of the attributes provided by the Agent are:

- General: product name, bus information, functional state
- Resources: memory areas, I/O ports, interrupt levels
- Counters: packets and bytes transmitted/received, ring utilization
- Drivers: name, version, specification level
- Addresses: universally administered, locally administered, multicast/functional
- Capabilities: Wake on LAN, auto-sense, full-duplex
- Power management information: wake-up information, power states
- Class of Service: TCP and UDP port range information, priority transmit counters
- Route switching: current route switching mode, switched packet counter
- Redundant NIC information: status, failover notification, failover trigger

---

### Benefits

The IBM LAN Adapter Management Agent allows you to manage the LAN adapters in PC Systems.

---

## Supported Environments

### LAN Adapters

The IBM LAN Adapter Management Agent supports any IBM LAN adapter with a device driver for the Operating Systems listed in the following section. The latest LAN adapter drivers provide the most manageability of the LAN adapter.

### Operating Systems

For Windows environments, the Agent requires that Windows NT Workstation or Windows NT Server Version 3.51 or higher, Windows 95 or Windows 98 be installed on the system. The Agent implements DMI version 2.0 on Windows NT, Windows 95 and Windows 98. Windows environments support SNMP Version 1.

For OS/2 environments, the Agent requires that OS/2 Version 3.0 or higher be installed on the system. The Agent implements DMI version 1.0 on OS/2. OS/2 environments support SNMP Version 2.

---

## System Requirements

### Windows NT, Windows 95, Windows 98 Software Requirements

Before you can install the SNMP function of the IBM LAN Adapter Management Agent on Windows platforms, the SNMP Service must already be installed at the Agent's station. This is because the Agent needs to add entries to the SNMP Service registry parameters. The SNMP Service enables a Windows end station to be administered remotely with an SNMP management tool. The DMI function of the Agent has no installation prerequisites for Windows NT, Windows 95, and Windows 98.

### OS/2 Software Requirements

The Agent requires that TCP/IP for OS/2 Version 3.0 or higher be installed on the OS/2 system.

### IBM Nways Management Applications

Web-based device management using Java technology is provided by coupling the Agent and IBM Nways Management Applications. A LAN Adapter management application is provided by:

- Nways Workgroup Manager for Windows NT, Version 1.1 or higher
- Nways Manager for AIX, Version 1.2 or higher
- Nways Manager for HP-UX, Version 1.2 or higher

---

## Installation and Configuration

### Windows NT, Windows 95, and Windows 98

To install the IBM LAN Adapter Management Agent, you run the SETUP.EXE program from diskette, or by executing the appropriate self-extracting installation package. It installs the following major components:

- DMI service provider
- DMI instrumentation for IBM LAN adapters
- SNMP extension agent
- DMI browser application

The DMI service provider and the DMI instrumentation are installed as Windows Services. On Windows NT, they are originally given a Startup Type of Automatic. On Windows 95 and Windows 98, they are started in the RunServices registry key. The DMI service provider has the service name "Win32sl". The SNMP extension agent is used in conjunction with Microsoft's SNMP extensible agent service to provide a mapping between SNMP and DMI. The DMI Browser application provided is Intel's DMI Explorer. The DMI browser application, this document, and a deinstall icon are contained in the IBM LAN Adapter Management Agent folder.

### OS/2

To install the Agent, you run the INSTALL.EXE program from the installation media. It installs the following major components:

- DMI service provider
- DMI instrumentation for IBM LAN adapters
- DMI-to-SNMP mapper
- SNMP daemon
- DMI browser application

For OS/2 Version 3.0, the DMI service provider and the DMI instrumentation are started automatically by commands in CONFIG.SYS. The DMI-to-SNMP mapper (DMISA.EXE) and SNMP daemon (SNMPD.EXE) start automatically from the system's Startup folder. To start the DMI browser, double-click the icon in the IBM LAN Adapter Management Agent for OS/2 folder.

If you have previously installed the SystemView Agent for OS/2 on your OS/2 Version 3.0 workstation, some of the SNMP and DMI management components will already exist. The DMI service provider is started automatically in CONFIG.SYS. The DMI-to-SNMP mapper (DMISA.EXE) and SNMP daemon (SNMPD.EXE) start automatically from the System Startup folder. To start the DMI browser, double-click the icon in the SystemView Agent for OS/2 folder. The DMI instrumentation for IBM LAN adapters is provided by the INSTALL program and configured to start automatically from CONFIG.SYS.

For OS/2 Version 4.0, some of the SNMP and DMI management components are already provided by the base operating system. The DMI service provider is always running. The DMI-to-SNMP mapper, SNMP daemon, and DMI browser are part of the System Management Agent folder, in the Utility program folder. The System Management Agent folder provides separate icons for startup and configuration of the System Management Agent. The DMI instrumentation for IBM

LAN adapters is provided by the INSTALL program and is configured to start automatically from CONFIG.SYS.

The IBM LAN Adapter Management Agent for OS/2 folder will always include this document and a deinstall icon.

If you alter the adapter configuration in your OS/2 system, you can use the MPTS Configuration program to bind the IBM LAN Adapter Management Agent for OS/2 to the LAN adapters of your choice. Go into the Adapter and Protocol Configuration menu and add the IBM LAN Adapter Management Agent for OS/2 for the adapters that you want to manage.

---

## Example Scenarios

### Remote DMI

Remote DMI allows the DMI Browser to manage IBM LAN adapters in other PC systems. Remote DMI exists only with DMI Version 2.0. The DMI Browser must be started with command line parameters for Remote DMI. The underlying distribution mechanism for Remote DMI is the Remote Procedure Call Network Service. The functionality of Remote DMI is contained in the DMI Browser (idmieX.exe) and the DMI Service Provider (Win32sl.exe). To use Remote DMI, configure the Remote Procedure Call (RPC) Network Service and then start the DMI Browser with the appropriate command line parameters.

1. Configure RPC Network Services
  - From the Control Panel select **Network**.
  - Select **RPC Configuration** and select **Properties**.
  - The Properties are:
    - Name Service Provider - select **DCE Cell Directory Service**.
    - Network Address - provide the host name or IP address of the remote PC system to be managed.
    - Security Service Provider - this can remain Windows NT Security Service.
  - Select **OK** and then close the Network Panel.
2. Start the DMI Browser and direct it to manage a remote PC system:
  - a. From a command prompt change to the Agent installation directory.
  - b. Change to the \bin subdirectory within the Agent install directory.
  - c. Start a DMI Browser instance. The general syntax of the command is:

```
idmiex /path "dce|tcpip|hostname"
```

Some specific examples are:

```
idmiex /path "dce|tcpip|9.37.233.1"  
idmiex /path "dce|tcpip|server99"
```

Note that the DMI Browser in the Agent pulldown menu will manage the local system.

## MIB Browsing

When you use an SNMP-based manager and its MIB browser, the general steps are:

1. Copy the MACDMI.MIB file from the <install dir>\SNMPMGRS path, to the appropriate directory on the manager station. The destination directory is most likely the same location where all the other \*.MIB files are located. For example, when you use NetView for AIX, this is the /usr/OV/snmp\_mibs directory.
2. Load/Install the MACDMI.MIB file into the manager's MIB database. If you are using NetView for AIX, start NetView for AIX, select OPTIONS and then the LOAD/UNLOAD option.
3. View the information provided by the IBM LAN Adapter Management Agent by traversing the MIB tree and browsing to:

iso.org.dod.internet.private.enterprises.ibm.ibmArchitecture.ibmDmi.  
mibsFromMifs.ibmLanAdapter.dmtfGroups

or

1.3.6.1.4.1.2.5.11.1.8.1





---

## Chapter 5. Route Switching

---

### History

Before the explosive growth in the use of Internet-based protocols, the 80/20 rule was followed when designing and deploying an IP-based network. This rule stated that the network should be designed on the assumption that 80% of network traffic would remain within the same subnet while 20% of network traffic would cross subnet boundaries. Maintaining the 80/20 rule allowed routers of that time to keep up with traffic flowing between subnets. With the explosive growth of the use of HTTP, that is, Web-based intranets and the Internet, the 80/20 rule can no longer be maintained.

As users jump from server to server on the Web they might jump from subnet to subnet, requiring almost all network activity to traverse the routers dividing the subnets. In addition, as network backbone technologies increase in speed, such as the move to 100-Mbps Token-Ring, the router bottleneck problem becomes even more of an issue.

Campus network architectures have been moving in two fundamental directions. The first is a continuation of a core networking architecture, with routers moving data between subnets, and the second is an edge networking architecture such as the IBM Switched Virtual Networking framework. In the area of performance improvements, efforts in the core networking model center around improving router performance, for example the recent interest in media-speed routers. By contrast, one of the main interests of the edge networking model is based on improving networking performance by distributing function away from a centralized, single-point-of-failure device.

---

### Overview

Route Switching is IBM's approach to IP switching, or layer 3 switching, that is actually a hybrid of both models. Route Switching still requires a centralized routing function in the network in order to provide the many functions that a router provides, except for the movement of traffic between subnets. With Route Switching, the traffic movement more closely follows the edge networking model.

The Route Switching feature of the IBM Token-Ring Adapters has been integrated within the device driver making installation and configuration as simple as upgrading the device driver. There are two modes of operation for Route Switching: Client/server mode or peer mode. Client mode is the preferred mode. Route Switching is based on the Next Hop Routing Protocol (NHRP) standard from the Internet Engineering Task Force (IETF) and makes use of this standard when operating in either client or peer mode.

When Route Switching is operating in client mode an IBM Multiprotocol Switching Services (MSS) Server is required to perform the Route Switching server function. When in Client mode, the enabled IP host issues requests to the IBM MSS Server for shortcut information for a remote IP host to which it is attempting to communicate. Once the shortcut information is received by the requesting client, subsequent traffic to the remote IP host is sent through the shortcut path instead of

through the routed path. When Route Switching is operating in peer mode, the same request for shortcut information is sent directly through the routers to the remote IP host. If you install and configure Route Switching for peer mode on the remote host, the remote host sends a shortcut reply back to the requesting host. In either case, until the reply is received, the IP traffic will continue to be sent on the routed path.

In both situations, access control maintained by the router is not compromised. In the case of Client mode, the MSS is also performing the routing function and will ensure that shortcut information is not supplied for a remote host that is not allowed to be reached. When in Peer mode, the shortcut request goes through the router to the remote host. Therefore, if the requesting host is not permitted to communicate with the remote host, the request for a shortcut path will never be received by the remote host.

Route Switching can also be set to Automatic mode. When in Automatic mode Route Switching will initially operate in both Client and Peer mode. The first reply to a shortcut request that the host receives will determine the permanent mode of operation. For example, as soon as the adapter opens, Route Switching will begin attempting to discover the MSS servers that exist in the network. At the same time, if IP traffic is being transmitted which is destined to a remote host not in this subnet, Route Switching will also begin sending shortcut requests to these remote IP hosts. If the requesting host receives a server discovery reply from an MSS Server, Route Switching will transition into Client mode. If it receives a reply from a remote IP host, it will transition into Peer mode.

---

## Benefits

Route Switching can greatly improve performance of IP based communications in networks with congested routers. The goal of Route Switching is to bypass the routing functions in an IP-based network without bypassing or undermining the other functions that a router provides, such as a firewall function and possibly broadcast containment. If the routers are creating a delay in the communication between IP hosts, Route Switching will eliminate that delay with just a simple upgrade of the LAN adapter device driver.

If a network currently has routing functions that are in need of performance improvements, Route Switching can add life to these routers and extend their usefulness indefinitely. In other words, with just the simple upgrade of device drivers for the IBM Token-Ring adapters, huge expenses for new higher performance routers can be deferred or completely eliminated.

---

## Example Scenarios

### One-Armed Router

An environment in which Route Switching can be useful is a premise, or one-armed router, configuration. In this configuration there is one router at a location managing a multiple IP subnet network. All IP traffic between hosts on different subnets must go through this router. In this situation two workstations might be on the same physical Token Ring, but from an IP perspective are configured to be on different IP subnets. This is very often the case when the two hosts belong to different business organizations or due simply to when they were installed. In this

situation traffic between these two workstations must leave one workstation, traverse the network all the way to the router, through the router, and then back across the network to the other workstation. With Route Switching configured for Peer mode only the initial IP packets between these two hosts will be sent through the router. If in fact the two workstations are on the same ring, once the Route Switching function in the two workstations exchange their shortcut information, the traffic will only exist on that ring and will not be forwarded across any bridging functions. Suddenly, performance between these workstations is tremendously improved due to the removal of the router from the communications path. Also, the total number of packets flowing in the network is greatly reduced as well as the work load on the overburdened router.

This is just one of many examples of how Route Switching can greatly improve performance.

## Managing Route Switching with IBM LAN Adapter Management Agent

View the following values for the current configuration as well as the current status of Route Switching while using the IBM LAN Adapter Management Agent.

**Route Switching Mode (Win32 only)** Indicates the current state of the Route Switching function.

**MSS Server Count** Valid when Route Switching is operating in Client mode. MSS Server count indicates the number of MSS Server interfaces that have responded to the request made by this computer to determine the Route Switching Servers in the network.

**Maximum number of Cache Entries** States the maximum number of cache entries that are currently in use and contain valid shortcut information.

**Current Number of Active Cache Entries** Indicates the number of cache entries that are currently in use and contain valid shortcut information.

**Switched Frame Count** Count of the frames which have been sent using shortcut information when they otherwise would have been sent through a routed path. Observing this value changing over time indicates that Route Switching is operating.

**Peer Holding Time (Win32 only)** Valid when Route Switching is operating in peer or auto mode. Peer holding time indicates the cache entry holding time value which has been configured. This value is passed by this machine in replies to shortcut information.

---

## Supported Environments

	<b>Windows NT 3.51, 4.0</b>	<b>Windows 95, 98</b>	<b>Windows 3.x</b>	<b>OS/2 Warp 3.0 and higher</b>	<b>Novell Netware Server</b>
IBM High-Speed 100/16/4 Token-Ring PCI Adapter IBM 16/4 Token-Ring PCI Adapter 2 IBM 16/4 Token-Ring PCI Adapter 2 with Wake on LAN PCI Token-Ring Adapter PCI Wake on LAN Token-Ring Adapter	Supported	Supported	Supported (using LAN Client)	Supported	Supported
Turbo 16/4 Token-Ring ISA Adapter Auto Wake 16/4 Token-Ring Network ISA Adapter	Supported (Client mode only)	Supported (Client mode only)	Not Supported	Not Supported	Not Supported
Turbo 16/4 Token-Ring PC Card	Supported (Client mode only)	Supported (Client mode only)	Not Supported	Not Supported	Not Supported

---

## System Requirements

- Peer mode

When Route Switching is operating in Peer mode there are two requirements. First, IP hosts communicating with each other must have a Route Switching-enabled device driver installed and have Route Switching configured to either Peer or Auto mode. Second, there must be a layer 2 path between the IP subnets.

- Client mode

The Client mode of operation is an asymmetric solution in terms of the two IP hosts communicating. This means that Route Switching Client can be configured on only one of the two hosts and benefits can be achieved. In order for Route Switching Client to operate, an IBM MSS properly configured for Route Switching is required.

For more information about MSS, go to [www.networking.ibm.com](http://www.networking.ibm.com).

---

## Installation and Configuration

Installation and configuration information are particular to each adapter and are explained in the installation guide for your adapter. Go to [www.networking.ibm.com](http://www.networking.ibm.com) and view the installation books for your adapter.

## Route Switching Parameters

The Route Switching function operates exactly the same way in every environment and accepts the same parameters in every environment. The following four parameters are used by the Route Switching function:

**Route Switching Mode:** This parameter defines the mode in which the Route Switching function will operate. Route Switching can operate in client, peer, and auto modes, or it can be disabled.

In client mode, Route Switching will operate with an IBM Multiprotocol Switched Services (MSS) Server to provide the Route Switching function. In this mode of operation the endstations will make requests of the server for shortcut information to remote IP hosts with which it is communicating.

In peer mode, Route Switching will operate without the existence of an IBM MSS Server. In this mode of operation the end stations will make requests to the remote IP hosts to which it is communicating for its shortcut information. This mode of operation requires both IP host endstations involved in a conversation to have Route Switching Peer correctly installed and configured in order to operate. When in peer mode, the IP subnet mask must be passed to the Route Switching function.

In auto mode, Route Switching will initially operate in both modes. This means it will attempt to find an IBM MSS Server in the network as well as remote IP host end stations configured with Route Switching Peer. The first positive response it receives will determine the mode of operation of Route Switching for this endstation. For example, if an end station begins to operate in auto mode it will begin to attempt to discover IBM MSS Servers in the network. When IP traffic is transmitted to remote IP hosts residing on a different subnet the Route Switching code will also send a shortcut request to the remote host in order to determine the shortcut information. If the remote host has configured Route Switching to peer or auto mode it will respond to the request. If there are no IBM MSS Servers in the network, the end station will then enter into peer mode of operation. When in auto mode, the IP subnet mask must be passed to the Route Switching function.

If the machine is placed into a reduced power state or is in some way suspended when configured in auto mode, it will return to auto mode when it returns to full power. This allows Route Switching to handle the changing of the network while an end station is not on the network.

**Route Switching IP Subnet Mask:** This parameter is required when Route Switching is operating in either peer or auto mode. It defines the IP subnet mask to which this adapter is connecting. This parameter is typically determined automatically. The Route Switching IP Subnet Mask must be in IP dotted decimal address notation.

**Route Switching Peer Holding Time:** This parameter is used when Route Switching is operating in either peer or auto mode. This value defines the amount of time that shortcut information is considered to be valid by the Route Switching function. When an end station provides its shortcut information to another requesting end station it includes this value along with the information. The requesting end station is allowed to use this shortcut information for this specified amount of time.

**Route Switching Cache Table Size:** This parameter specifies the maximum number of entries that the Route Switching function can maintain at any given moment in time.

Each of the following installation and configuration sections assumes that your adapter is already installed and configured. The following sections define the steps

required to enable Route Switching. If the adapter is not yet installed, refer to the Installation and Configuration manual for the adapter being used.

## Windows 95, Windows 98, and Windows NT

To set the Route Switching parameters, perform the following steps:

- 1 Click **Start ► Settings ► Control Panel**.
- 2 Double-click **IBM Token-Ring Adapter**.
- 3 Select the adapter to be configured with Route Switching from the pull-down window at the top.
- 4 Click **Route Switching**.
- 5 Select **Route Switch Mode of Operation** in the upper box.
- 6 If you select either Peer Mode or Auto Mode, the IP Subnet (Network) Number parameter must be defined. If the Microsoft TCP/IP support is being used, the correct value for this parameter is automatically calculated and placed in the value field for this parameter. If this is not the case, then select the value field for this parameter and type the IP subnet mask for the subnet to which this adapter is connecting. You must enter this parameter in IP dotted-decimal notation.
- 7 Optionally, set the Peer Holding Time and the Cache Table Size to appropriate values based on the above descriptions.
- 8 Click **OK**.
- 9 Click **Close**.
- 10 Reboot the computer for the changes to take effect.

## Novell Netware Server

To set the Route Switching parameters, perform the following steps:

- 1 From the NetWare server console, type **load install**.
- 2 Select **Driver Options**.
- 3 Select **Configure Network Drivers**.
- 4 Select **Select a driver**.
- 5 Select the appropriate driver from the list of available drivers and press **Enter**.
- 6 Select **Select/Modify driver parameters and protocols** and press **Enter**.

For Route Switching Configuration:

- 1 Using the arrow keys, move to the Parameters section, select **Route Switching Mode**, and press **Enter**.

- 2** Select either **Client**, **Peer**, or **Auto** for the parameter value and press **Enter**. You will see other Route Switching parameters in the parameter list.
- 3** Using the arrow keys, select **Route Switching Table Size** and enter a value from 16 to 1024.
- 4** If you selected Auto or Peer in step 2, use the arrow keys to select **Route Switching Holding Time** and enter a value from 2 to 20.
- 5** If you selected Auto or Peer in step 2, use the arrow keys to select **Route Switching Subnet Mask** and enter a valid IP subnet address for your network.

## LAN Client

To set the Route Switching parameters, perform the following steps:

- 1** Run LCINST.EXE from the CD-ROM, or from the installed version of LCINST from the LAN Client diskettes or the self-extracting package file (LCPKG.EXE).  
**Note:** To install LCINST to a hard disk from the LAN Client diskettes, insert LAN Client diskette 1 in drive A and type **install**.
- 2** Select the environment from the first IBM LAN Client Installation panel (Windows or Windows for Workgroups).
- 3** Select your adapter from the IBM LAN Client Adapter Selection panel.
- 4** Continue to the IBM LAN Client Application and Protocol Selection panel.
- 5** Select **TCP/IP** as one of the protocols to install and click **OK**.
- 6** Select the **Route Switch** tab on the IBM LAN Client Configuration panel.
- 7** Check **Enable**.
- 8** Select **Auto**, **Peer**, or **Client** mode.  
**Note:** If you select Auto or Peer, then you must enter an IP Address and a Subnet Mask on the TCP/IP configuration panel. You cannot enable DHCP.
- 9** Select **Table Size** and **Holding Time** values.  
**Note:** Holding Time is not valid if you selected Client mode.
- 10** Click **Install**.

## OS/2

To set the Route Switching parameters perform the following steps:

- 1** Double-click **MPTS** on the desktop.
- 2** Click **OK**.
- 3** Select **LAN Adapters and Protocols** and click **Configure**.

- 4** Select the name of the adapter in the current configuration section of the window and click **Edit**.
- 5** Scroll down through the configuration parameters until Route Switch Mode is displayed.
- 6** Make sure that the cursor is in the data entry portion of this parameter by either scrolling up or down or by clicking the data entry area.
- 7** To set the mode of Route Switching, type one of the following values: **Client**, **Peer**, or **Auto**.
- 8** Move the cursor to the data entry field for the IP Subnet Mask parameter.
- 9** Make sure that the cursor is in the data entry portion of this parameter by either scrolling up or down or by clicking the data entry area.
- 10** Enter the IP dotted-decimal value for the IP subnet network number to which this adapter is going to attach.
- 11** Click **OK**.
- 12** Click **OK** on the right side of the window.
- 13** Follow the instructions on the panels to exit MPTS.



---

## Chapter 6. Class of Service

---

### Overview

The ability to assign relative priorities, or degrees of importance, to traffic as it traverses a network has existed in Token-Ring networks since the inception of the Token-Ring standard. Unfortunately, there has never been a method to assign the priorities to the traffic as the frames were transmitted. Class of Service (CoS) for IP solves this problem by allowing Network Managers to assign priorities to IP traffic transmitted by an IP host.

---

### Benefits

With the use of CoS for IP, you are able to categorize your IP traffic on the network and assign a degree of importance in the network to certain types of IP traffic. This prevents traffic considered to be of low importance from taking valuable network bandwidth away from important traffic. The backing up of a server farm or a session of a computer game will no longer adversely impact the streaming of an educational video session or a real-time video conference.

CoS for IP makes use of a traffic prioritization mechanism which has always existed in the Token-Ring architecture but has never been exploited by higher-layer protocols and applications. CoS for IP does not rely on any special enablement to the infrastructure of the network. That is, the switches and bridges of the network do not necessarily need to know that CoS for IP is being used. Even though the network is not aware of this traffic prioritization mechanism, CoS for IP allows the traffic which has been assigned a high priority to maintain this high-priority status from the time that the traffic enters the network to its final destination. In addition, CoS for IP does not require new protocol stacks and applications that are aware of traffic prioritization. In fact, the traffic being treated as high priority is up to the Network Manager and does not even have to be multimedia related. If performing a backup of a server is considered a high priority then this traffic can be deemed more important by the Network Manager than other traffic on the network.

Because CoS for IP uses a Token-Ring mechanism for implementing traffic prioritization, the best results occur when the traffic which has been given a priority status is sent through a layer 2 switched, or bridged, path and travels entirely on Token-Ring networks. IBM's Route Switching function solves this requirement by establishing the layer 2 path even when the two end stations reside on different subnets. With the advent of Web-based networking and intranet-based IP networks, intersubnet communications is becoming more the normal situation. Route Switching and CoS for IP work together to resolve growing network performance problems not just for high priority traffic but for all traffic in the network.

---

## Example Scenarios

CoS for IP can be used to ensure that time-sensitive traffic, such as streaming audio or video, arrives at the destination computer within the required time. To make use of CoS for IP a network manager would determine the protocol and the port range being used by the server application and configure CoS for IP with these values on the server. For example, a network manager might have a server running a RealNetworks streaming audio server application which is sending audio traffic to clients using UDP port ranges, 26992 through 29040. The network manager would configure CoS for IP for these values and assign a priority level for this range.

CoS for IP can be managed using LAN Adapter Management Agent. The following values can be displayed.

## Win32 and OS/2 Environments

**LAN Adapter Transmit Priority Information** Displays the general transmit priority capabilities of the adapter. For example, this attribute displays the number of physical transmit channels supported by the adapter hardware.

**LAN Adapter Transmit Priority Distribution** Show the frame count and byte count for each priority level. Displaying these values will indicate the priority at which traffic is being sent.

## Win32 Environments

**LAN Adapter Class of Service Information** Displays the number of port ranges defined for each protocol.

**LAN Adapter Class of Service TCP Port Ranges** Displays each of the defined port ranges for the TCP protocol. Displaying these values will confirm that the port ranges configured have been accepted and are being used by the CoS for IP support.

**LAN Adapter Class of Service UDP Port Ranges** Displays each of the defined port ranges for the UDP protocol. Displaying these values will confirm that the port ranges configured have been accepted and are being used by the CoS for IP support.

---

## Supported Environments

CoS for IP is currently supported on the following IBM PCI adapters:

- IBM Token-Ring PCI Family Adapters
  - IBM 16/4 Token-Ring PCI Adapter 2
  - IBM 16/4 Token-Ring PCI Adapter 2 with Wake on LAN
  - IBM High-Speed 100/16/4 Token-Ring PCI Adapter
  - PCI Wake on LAN Token Ring Adapter
  - PCI Token Ring Adapter

The following operating environments support CoS for IP:

- OS/2 Warp 3.0 and above

- Windows NT 3.51 and higher
- Windows 95 and Windows 98
- Windows 3.x (using LAN Client)
- Novell NetWare Server 4.11 and higher

**Special Note Regarding IBM PCI adapters:** The IBM PCI Token-Ring adapters are enabled with advanced technology allowing higher priority traffic to be expedited through the adapter preventing this traffic from being held up behind lower priority traffic. The adapter includes multiple transmit paths for use by the device drivers. This multiple transmit path capability allows the driver to pass a high priority frame to the adapter and have this frame transmitted before a previously queued normal priority frame, eliminating any traffic delays for the high-priority traffic from the moment the traffic is deemed to be high-priority in the device driver. This advanced function exists in all IBM PCI Token-Ring adapters.

---

## System Requirements

There are no special requirements for the machines which will make use of CoS for IP other than having a supported IBM adapter and the correct level of device driver.

CoS for IP makes use of the priority bits defined by the Token-Ring architecture. Because of the use of these layer-2 bit fields, traffic being assigned a higher-than-normal priority should be traversing only a layer 2 path in order to achieve the full effects of CoS for IP. Route Switching compliments CoS for IP by attempting to establish a layer 2 connection for all IP traffic that would otherwise traverse layer 3 devices.

---

## Installation and Configuration

Installation and configuration information are particular to each adapter and are explained in the installation guide for your adapter. Go to [www.networking.ibm.com](http://www.networking.ibm.com) and view the installation books for your adapter.

CoS for IP uses the destination port number of outbound TCP and UDP traffic to determine the Class of Service, or priority, of the traffic. Once the range of port numbers used for a particular TCP- or UDP-based application has been determined, this port range is simply passed to the CoS for IP function within the device driver through the following configuration parameters.

## CoS for IP Parameters

CoS for IP is enabled in the device drivers by simply defining one or more TCP or UDP port ranges. A port range is defined by a starting port value and an ending port value. Each of these values is inclusive, meaning the port values that make up a port range include the starting and ending values. For each port range defined, you must select a priority value from 1 to 6. You can define a maximum of 15 port ranges for each of the two protocols. When configuring CoS for IP in either the OS/2 or Novell Server environments, define these port range parameters in the following format:

- There are a total of 5 port range parameters, each defining 3 port ranges for each of the two protocols.
- The name of each parameter is in the format: TCPPortRange<1..5> or UDPPortRange<1..5>

- The value of each of these 10 parameters is a character string having the following format:

ParmValue := <PortRange>[<PortRange><PortRange>]

PortRange := <PortNumber><PortNumber><PriorityValue>

PortNumber := a 4-character hexadecimal value.

PriorityValue := a 1-character value, where n is a value from 1 to 6.

A bridging device in a Token-Ring network will forward traffic at a priority of 4 when necessary. If CoS for IP is being used in a network made up of bridges this fact must be taken into account. It might be necessary to make use of only priorities 5 and 6 when defining port ranges in order to keep the traffic at a higher priority than the bridged traffic. When the higher priority traffic travels across a bridging function the bridge should maintain the frame priority. For example, a network manager has defined certain UDP traffic to be priority 6 and this traffic is to flow across a number of bridges as it travels from a server to a client. When this traffic is forwarded onto subsequent rings by the bridges the bridges will now forward it with a priority of 6 instead of 4.

Each of the following installation and configuration sections assumes that the adapter is already installed and configured. The following sections define only the steps required to enable CoS for IP. If the adapter is not yet installed, refer to the installation manual for the adapter being used.

## Windows NT, Windows 95, and Windows 98

To set the Class of Service parameters, perform the following steps:

- 1** Select **Start ▶ Settings ▶ Control Panel**.
- 2** Double-click **IBM Token-Ring Adapter**.
- 3** Select the adapter to be configured from the pull-down window at the top.
- 4** Select **Class of Service for IP**.
- 5** Select **Add** on the right side of the window.
- 6** Select the appropriate protocol by clicking either **TCP** or **UDP**.
- 7** Select the value field for the Start port value and enter the starting port value for the port range in decimal notation.
- 8** Select the value field for the End port value and enter the ending port value for the port range in decimal notation.
- 9** Select the priority for this port range by dragging the slider on the right side of the window.
- 10** Select **OK**.
- 11** Repeat steps 5 through 10 for each port range to be defined.

**Note:** Class of Service for IP supports a maximum of 15 defined port ranges for each protocol.

- 12** Select **OK** at the bottom of the window.
- 13** Select **Close** at the bottom of the window.
- 14** Reboot your computer for the changes to take effect.

## Novell Netware Server

To set the Class of Service parameters, perform the following steps:

- 1** From the NetWare server console, type **load install**.
- 2** Select **Driver Options**.
- 3** Select **Configure Network Drivers**.
- 4** Select **Select a driver**.
- 5** Select the appropriate driver from the list of available drivers and press **Enter**.
- 6** Choose **Select/Modify driver parameters and protocols** and press **Enter**.

For Class of Service configuration:

- 1** Using the arrow keys, move to the Parameters section, select **Class of Service**, and press **Enter**.
- 2** Select **Enabled** from the list and press **Enter**. You will see another Class of Service parameter in the parameter list.
- 3** Using the arrow keys, select **Class of Service Set Number** and enter a number from 1 to 16. This will create an indirect reference to a file named **IBMCOSx.CFG**, where x is the number you entered. This file contains the Class of Service keywords and values as defined above. This file can be used by different adapters in the system.

## LAN Client

To set the Class of Service parameters, perform the following steps:

- 1** Run **LCINST.EXE** from the CD-ROM, or from the installed version of **LCINST** from the LAN Client diskettes or the self-extracting package file (**LCPKG.EXE**).  
**Note:** To install **LCINST** to a hard disk from the LAN Client diskettes, insert LAN Client diskette 1 in drive A and type **install**.
- 2** Select the environment from the first IBM LAN Client Installation panel (Windows or Windows for Workgroups).
- 3** Select your adapter from the IBM LAN Client Adapter Selection panel.
- 4** Continue to the IBM LAN Client Application and Protocol Selection panel.
- 5** Select **TCP/IP** as one of the protocols to install and click **OK**.

- 6** Select the **Class of Srv** tab on the IBM LAN Client Configuration panel.
- 7** Fill in the UDP and TCP Port Ranges to be configured along with the appropriate Priority value. You can enter a total of 4 port ranges between UDP and TCP.
- 8** Click **Install**.

## **OS/2**

To set the Class of Service parameters perform the following steps:

- 1** Double-click **MTPS** on the desktop.
- 2** Click **OK**.
- 3** Make sure that LAN Adapters and Protocols is selected and click **Configure**.
- 4** Select the Name of the adapter in the current configuration section of the window and click **Edit**.
- 5** Scroll down through the configuration parameters until the TCP or UDP Class of Service port range parameters are displayed.
- 6** Make sure that the cursor is in the data entry portion of any one of these parameters by scrolling up or down or by clicking the data entry area.
- 7** Define a port range by typing a string that is in the format defined in "CoS for IP Parameters" on page 6-3.
- 8** Continue to define any additional port range parameters in the same manner.
- 9** Click **OK**.
- 10** Click **OK** on the right side of the window.
- 11** Follow the instructions on the panels to exit MPTS.

---

## Chapter 7. Redundant NIC

---

### Overview

The Redundant NIC function provides a high-availability solution for your Windows NT Server 3.51 and 4.0 or NetWare 4.11 server. This function maintains network connectivity in the event of an adapter- or lobe-related failure. You can assign a backup adapter to take control of the network connection if the active adapter fails.

The Redundant NIC function will initiate a failover when a cable fault or a hard error occurs on the adapter. A failover causes the driver to switch traffic from the active adapter to the backup adapter. The active and backup roles are traded between the adapters of the redundant pair.

In many cases, the failover to the backup adapter will occur seamlessly. Due to the failover latency involved in opening the backup adapter onto the ring, some protocols might require that sessions be reestablished. In either case, network connectivity is maintained and server downtime is avoided.

---

### Benefits

The Redundant NIC function provides a high-availability solution for your Token-Ring connected servers. The goal of Redundant NIC is to maintain network connectivity in the event of an adapter- or lobe-related failure.

---

### Example Scenarios

#### Managing a Redundant NIC NT Server with the Agent

During driver configuration, users can define a Redundant NIC pair. The pair consists of an active adapter and a backup adapter. The backup adapter will take over in the event of a failure on the active adapter. These failovers can occur continually as long as the backup adapter is operational. Redundant NIC is offered on Windows NT and NetWare server systems. The LAN Adapter Management Agent can be used to complement the Redundant NIC function on Windows NT.

The Agent will send a DMI indication and SNMP trap upon detecting the completion of a Redundant NIC failover. The Agent also allows a failover to be initiated via DMI or SNMP. The Agent also provides the addresses of the active and backup adapters, a running count of failovers and the status of the backup adapter. The Nways Management Applications format the contents of the failover SNMP trap into a clear message.

The combined Redundant NIC and Agent functions should be used on mission-critical servers and the Nways Management Applications should be used to monitor those servers. Redundant NIC provides the continual network connectivity necessary for the clients using the Windows NT Server. The Agent sends the failover SNMP trap to the Nways Management Application, or any other SNMP-based network management application. Once notified of the server failover, the network administrator can correct the error. For example, the error

might be an accidentally-disconnected cable. Once the cable has been reconnected, the network administrator can then force a failover from the management application and restore the server's original adapter configuration.

---

## Supported Environments

Redundant NIC is currently supported on the following adapters:

- IBM PCI Token-Ring Adapter
- IBM PCI Wake on LAN Token-Ring Adapter
- IBM 16/4 Token-Ring PCI Adapter 2
- IBM 16/4 Token-Ring PCI Adapter 2 with Wake on LAN
- IBM High-Speed 100/16/4 Token-Ring PCI Adapter

The following operating environments are supported:

Windows NT Server 3.51 and 4.0

- NetWare 4.11

---

## Installation and Configuration

### Windows NT

Follow these instructions when setting up a Redundant NIC pair.

1. Ensure that both adapters of a redundant pair are cabled to the same network.
2. Select **Control Panel ► Network ► Adapters** and your adapter. Use the Redundant NIC tab located in Properties for the primary adapters to control your redundant pairs.
3. You must specify a Locally Administered Address (LAA) for the primary adapter. The LAA is located in the Basic tab of Properties for the primary adapter.

### Redundant NIC Usage Tips

- It is strongly recommended that you specify a Ring Speed parameter of 16 Mbps or 4 Mbps instead of Automatic. This will reduce the amount of time needed to perform a failover.
- Once a redundant pair has been defined, the secondary adapter is not configurable until the redundancy has been disabled.
- Once a redundant pair has been defined, neither the primary nor the secondary adapter can be removed until the redundancy has been disabled.
- When a failover occurs, check the cabling of the failed adapter. If it has been disconnected, reconnect it as soon as possible so that it is ready to function as a backup.
- The Redundant NIC function is supported on the IBM PCI Token-Ring adapter family; the Auto LANStreamer PCI adapter is not supported.



## Managing Redundant NIC

The LAN Adapter Management Agent Version 1.40 allows you to manage the Redundant NIC operation. In the event of a failover, the Agent sends an SNMP trap to notify that a failover has occurred. The user can also initiate a failover through the Agent. For more information about the Agent, see Chapter 4, "LAN Adapter Management Agent" on page 4-1. For an example of using the Agent and Redundant NIC, see "Example Scenarios" on page 7-1.

## NetWare

The Redundant NIC function is provided in 2 pieces: RNIC.NLM and IBMTRPO.LAN. When a failover from the active to the backup adapter occurs, the only protocols that can be switched are IP and IPX. Any other protocol information that is bound to the active adapter will be lost.

**Note:** The only protocol information that is retained when a failover occurs is what is bound to the active adapter when the problem occurs. No conflicting protocols should be bound to the backup adapter. The only exception to this is when ROUTE.NLM is used. In that case, ROUTE.NLM should be bound to the active and backup adapters.

Failover can occur from the active to the backup adapter, and also from the backup to the active until a good connection is made. If the backup adapter is not an IBM PCI Token-Ring adapter then only one automatic failover to the backup is supported. The Redundant NIC NLM can monitor four pairs at one time.

### Installation of Redundant NIC Software

Versions of IBMTRPO.LAN prior to Version 2.14 will not work with the Redundant NIC capability.

The network data rate must be set to the same value (16 Mbps or 4 Mbps) on both adapters or the Redundant NIC NLM will not allow the pair to be made. Each adapter must be plugged into the same ring on the network for the failover to be completely transparent to the clients communicating with the server.

The driver communicates adapter failures or cable disconnects to the RNIC NLM via the NESL/NEB interface. If ODINEB.NLM loads after the LAN driver, these messages are never sent to the RNIC NLM by the NESL/NEB subsystem. If the RNIC NLM does not failover after a cable disconnect or failure, verify that ODINEB.NLM is loading before the LAN driver.

If you use INETCFG.NLM to configure your system, follow the steps in "Installation Using INETCFG.NLM" on page 7-4 instead of the following INSTALL.NLM section.

#### ***Installation Using INSTALL.NLM***

1. Install the ODI33F.EXE or higher patch from Novell.
2. Install the adapters you would like to pair into a NetWare 4.11 Server.
3. Copy RNIC.NLM, TOKENTSM.NLM, and ODINEB.NLM from the \NOVELL\NETWARE directory on the driver diskette to SYS:\SYSTEM on the server.
4. LOAD INSTALL on the server and proceed to the section where you install network adapters.
5. Set up the primary adapter:

While in the Load Software panel, you will need the following information:

The path for the driver is A:\NOVELL\NETWARE.

Copy the new driver (IBMTRPO.LAN) and IBMTRPO.LDI from the diskette.

Choose protocols. In the Parameters panel, fill in a node address. Set Standby Mode to DISABLED unless using the "-backup" parameter. Set other parameters as needed.

Save and load the driver. While it is processing, press ALT+ESC to get to the Console panel. Choose the slot of the primary adapter.

Choose a network number to bind to.

6. Set up the secondary adapter:

Choose to load an additional network driver.

Do not copy the driver again.

Select the same protocols you chose to use with the primary adapter. If you chose TCP/IP, use a temporary IP address for the secondary adapter. You must use the same Node Address. Standby Mode must be set to ENABLED. If using the "-backup" parameter then the Standby Mode will probably not exist for a non IBM PCI Token-Ring adapter. Save and load the driver.

While it is processing, press ALT+ESC to get to the Console panel. When asked to load another frame type, answer NO.

Choose the slot of the secondary adapter.

Choose a temporary network number to bind to.

Do not load an additional network driver.

7. Exit back to the Console.

8. Edit the AUTOEXEC.NCF file:

- Before all of the LOAD statements, add LOAD ODINEB.
- After all of the BIND statements, add LOAD RNIC PAIR <pairname> -p<slot#> -s<slot#> and any additional parameters. See "Setting up a Redundant NIC Pair" on page 7-6. If the secondary adapter is not an IBM PCI Token-Ring adapter then the -backup parameter must be used on the pair line. Also, since the secondary adapter probably will not support the standby keyword, the primary adapter must be loaded with the standby keyword.
- Delete all BIND statements for the secondary adapter.

9. Restart the server in order for the changes to take effect.

**Note:** Double-check your AUTOEXEC.NCF every time that you use the INSTALL.NLM program. It is possible that the INSTALL.NLM will move or remove ODINEB.NLM. Make sure that it loads before the network driver (IBMTRPO.LAN) and that RNIC loads after the network driver.

***Installation Using INETCFG.NLM***

1. Install the ODI33F.EXE or higher patch from Novell.
2. Install the adapters you would like to pair into a NetWare 4.11 Server.

3. Copy RNIC.NLM, TOKENTSM.NLM, and ODINEB.NLM from the \NOVELL\NETWARE directory on the driver diskette to SYS:\SYSTEM on the server.

4. LOAD INETCFG on the server and proceed to the section where you add a new board.

5. Set up the primary adapter:

While in the New Board panel, you will need the following information:

The path for the driver is A:\NOVELL\NETWARE.

Choose IBMTRPO from the list.

In the Configuration Panel, name the Board, fill in the slot number, and the node. Standby Mode must be set to DISABLED unless the "-backup" parameter is specified. Set other parameters as needed.

Save the changes.

6. Set up the secondary adapter:

Choose IBMTRPO from the list unless a non IBM PCI Token-Ring adapter is being used as the secondary adapter. In this case, use the appropriate driver for the secondary adapter.

In the Configuration panel, name the Board (the name must be different from that of the primary adapter), fill in the slot number, and the node (must be the same as that of the primary adapter). Standby Mode must be set to ENABLED unless the "-backup" parameter is specified. Set other parameters as needed.

Save the changes.

7. In the Protocols section, select User-specified Protocols, create and name a temporary protocol and save that information.

8. In the Bindings section, choose binding parameters for the primary adapter as needed. Bind the User-specified Protocol that you defined in the previous step to all appropriate frame types of the secondary adapter.

Since the User-specified Protocol that you created does not exist, no protocols will actually be bound to the secondary adapter. You might notice error messages that point this out when the server is starting up. These messages are for information only; no action is required.

9. Exit back to the Console.

10. Edit the AUTOEXEC.NCF file:

- Before the INITSYS.NCF command, add LOAD ODINEB.
- After the INITSYS.NCF command, add LOAD RNIC PAIR <pairname> -p<slot#> -s<slot#> and any additional parameters. See "Setting up a Redundant NIC Pair" on page 7-6. If the secondary adapter is not an IBM PCI Token-Ring adapter than the -backup parameter must be used on the rnic pair line. The primary adapter must also be loaded with the standby keyword.

11. Restart the server in order for the changes to take effect.

**Note:** Double-check your AUTOEXEC.NCF every time you use the INETCFG.NLM program. It is possible that the INETCFG.NLM will move or

remove ODINEB.NLM. Make sure that it loads before the network driver (IBMTRPO.LAN) and that RNIC loads after the network driver.

## Setting up a Redundant NIC Pair

Follow these instructions to prepare RNIC.NLM to monitor your adapter pair.

The Redundant NIC NLM requires that several options be specified in order to create a pair. You can specify the options to RNIC.NLM when you load the nlm or on the command line after RNIC.NLM is loaded. To automate the commands on reboot, add them to your AUTOEXEC.NCF. See the examples in this chapter.

To complete the setup you need to know the following:

- The slot number assigned to each adapter. If the secondary adapter is not a PCI adapter then you need to know the hexadecimal value of the secondary adapter's I/O Port or Memory Mapped base IO address.
- If TCP/IP is bound to your adapter then you need to know your default router's IP address.
- Choose a name for your adapter pair.

To set up a pair when you load the nlm use the following format:

```
load rnic pair <pairname> -p<slot#> -s<slot#> | -x<base address>  
[-r<ip_address>] [-backup]
```

If RNIC is already loaded you can set up a pair by using the RNIC keyword on the system console. Its format is:

```
rnic pair <pairname> -p<slot#> -s|x<slot#> -r<ip_address>  
[-backup]
```

A description of each parameter follows:

**<PAIRNAME>** This parameter is required and identifies the Redundant NIC pair. The pairname must be 12 characters or less. It is case-sensitive. All ASCII characters are accepted.

**-P<SLOT#>** This parameter is required and tells the NLM the slot number of the IBM PCI Token-Ring Adapter that you want to be the active adapter initially.

**-S<SLOT#>** This parameter is required if the secondary adapter can be identified by a slot number. It tells the NLM the slot number of the IBM PCI Token-Ring Adapter that you want to be the backup adapter initially.

**-X<MMIO or IO Port base address>** This parameter is only needed when the -backup keyword is used and you cannot specify a slot for the secondary adapter. This parameter specifies the I/O port or the memory mapped address of the secondary adapter (in hex).

**-R<IP\_ADDRESS>** This parameter is optional. It might be needed if you are using TCP/IP on your active adapter. If you do not load the Token-Ring\_SNAP frame type then you do not need this parameter. If you load the Token-Ring\_SNAP frame type then you only need this parameter if you have IP bound and you have a default IP router. If this parameter is not specified, IP will not know what the default router is after an adapter failover.

**-backup** This parameter is optional. It should only be used if your backup adapter is not an IBM PCI Token-Ring adapter. If this parameter is used the primary adapter must load with the standby keyword.

## Using Redundant NIC Software

### The Command Line Interface

As stated previously, the RNIC command can be used on the system console after RNIC.NLM is loaded. This command can be used to view your pair, manually switch from active to backup, create a pair, destroy a pair, and change the mode.

rnic help

Type RNIC HELP and press ENTER to show the valid options for the rnic command. RNIC will also display this information.

rnic pair

The RNIC PAIR command is described in "Setting up a Redundant NIC Pair" on page 7-6.

rnic unpair

RNIC UNPAIR <PAIRNAME> will disassociate the backup adapter from the primary adapter. This command is necessary when you want to remove an existing pair.

rnic show

To determine the status of the RNIC NLM, enter RNIC SHOW. This will display the configured pair. If a pair is configured the following information will be displayed: the pair name and LAA (node address), the slots that the primary and secondary adapters are using, the switching mode of the pair (manual, automatic, or disabled), the current state of the primary adapter, the current state of the secondary adapter, the number of failovers that have occurred, and the time the last failover occurred.

**Note:** The terms primary and secondary do not refer to which adapter is currently active. The primary adapter is initially the active adapter and was configured by using the -p<slot#> option on the command line. The secondary adapter is initially the backup adapter and was referred to by -s<slot#> or -x<hex port#> on the command line.

rnic unpairall

To remove all pairs that are currently configured.

There are several states that each adapter can be in. The possible states are:

**OPERATING** This adapter is open and operating.

**STANDBY READY** This adapter is ready for failover if the active adapter fails.

**CABLE DISCONNECTED** The cable was disconnected from this adapter while it was active.

**ERROR DETECTED** There might be an adapter check error.

**OPENING** The adapter is trying to open.

**UNLOADED** One or more logical boards can no longer be located for this adapter.

rnic switch

rnic switch <pairname> [ mode manual | mode auto | mode disabled ]

RNIC SWITCH <PAIRNAME> will cause the pair identified by <pairname> to failover from its active to its backup adapter when in auto or manual mode.

Normally the Redundant NIC pair will automatically failover from the active to the backup if a cable fault or adapter failure is detected. Use this command to change the mode of the pair so that an automatic failover will not occur. To prevent automatic failovers from occurring, set the pair to manual mode. In manual mode the rnic switch command is the only way to failover from the active to the backup adapter. Disabled mode will not allow failovers. You can use disabled mode when performing maintenance on the backup adapter.

### **Examples**

1. AUTOEXEC.NCF of a simple Redundant NIC configuration after using INSTALL.NLM:

```
set Time Zone = EST5EDT
set Daylight Savings Time Offset = 1:00:00
set Start Of Daylight Savings Time = (APRIL SUNDAY FIRST 2:00:00 AM)
set End Of Daylight Savings Time = (OCTOBER SUNDAY LAST 2:00:00 AM)
set Default Time Server Type = SINGLE

# Note: The Time zone information mentioned above
# should always precede the SERVER name.
set Bindery Context = 0=workgroup
file server name NWSRV1
ipx internal net 60990060

# The network environment for this server consists
# of a Token-Ring LAN with only one Frame Type
load tcpip
load odineb

# Primary adapter
LOAD IBMTRPO SLOT=3 NODE=400010203182 FRAME=TOKEN-RING NAME=IBMTRPO_1_TOK
BIND IPX IBMTRPO_1_TOK NET=ABCD1
# Secondary adapter loaded with the same frame type as the Primary
LOAD IBMTRPO SLOT=2 NODE=400010203182 STANDBY FRAME=TOKEN-RING
NAME=IBMTRPO_2_TOK

# Create the Redundant NIC pair with Primary slot=3, and Secondary Slot=2
load rnic pair mypair -p3 -s2

mount all
```

2. AUTOEXEC.NCF of a complex Redundant NIC configuration after using INSTALL.NLM:

```

set Time Zone = EST5EDT
set Daylight Savings Time Offset = 1:00:00
set Start Of Daylight Savings Time = (APRIL SUNDAY FIRST 2:00:00 AM)
set End Of Daylight Savings Time = (OCTOBER SUNDAY LAST 2:00:00 AM)
set Default Time Server Type = SINGLE

# Note: The Time zone information mentioned above
# should always precede the SERVER name.
set Bindery Context = 0=workgroup
file server name NWSRV1
ipx internal net 60990060

# The network environment for this server includes both Token-Ring frame
# types, utilizes Source Routing, has an IP network with a default IP gateway,
# and utilizes Route Switching via the IBM 8210
LOAD IPXRTR routing=NLSP
load tcpip
load odineb

# Primary Adapter
LOAD IBMTRPO SLOT=3 NODE=400010203182 RTSWENABLE=YES FRAME=TOKEN-RING
NAME=IBMTRPO_1_TOK
BIND IPX IBMTRPO_1_TOK NET=ABCD1
LOAD IBMTRPO SLOT=3 NODE=400010203182 RTSWENABLE=YES FRAME=TOKEN-RING_SNAP
NAME=IBMTRPO_1_TSP
BIND IPX IBMTRPO_1_TSP NET=FF1
BIND IP IBMTRPO_1_TSP ADDR=10.20.31.82 MASK=ff.ff.ff.0 GATE=10.20.31.254

# Secondary Adapter with the same frame types as Primary loaded, but no
# bindings
LOAD IBMTRPO SLOT=2 NODE=400010203182 STANDBY RTSWENABLE=YES
FRAME=TOKEN-RING NAME=IBMTRPO_2_TOK
LOAD IBMTRPO SLOT=2 NODE=400010203182 STANDBY RTSWENABLE=YES
FRAME=TOKEN-RING_SNAP NAME=IBMTRPO_2_TSP

# Create the Redundant NIC pair with the Primary slot=3, the Secondary
# slot=2, and the Default IP gateway=10.20.31.254
load rnic pair mypair -p3 -s2 -r10.20.31.254

# If Source Routing is needed, then route.nlm must be loaded for
# all the logical boards of both the primary and secondary adapter
load route name=ibmtrpo_1_tok rsp=ar time=10
load route name=ibmtrpo_1_tsp rsp=ar time=10
load route name=ibmtrpo_2_tok rsp=ar time=10
load route name=ibmtrpo_2_tsp rsp=ar time=10

mount all

```

3. AUTOEXEC.NCF of installs with INETCFG (it is the same for both complex and simple installs):

```

set Time Zone = EST5EDT
set Daylight Savings Time Offset = 1:00:00
set Start Of Daylight Savings Time = (APRIL SUNDAY FIRST 2:00:00 AM)
set End Of Daylight Savings Time = (OCTOBER SUNDAY LAST 2:00:00 AM)
set Default Time Server Type = SINGLE
# Note: The Time zone information mentioned above
# should always precede the SERVER name.
set Bindery Context = 0=workgroup
file server name NWSRV2
ipx internal net 35083DE8

; Network driver LOADs and BINDs are initiated via
; INITSYS.NCF. The actual LOAD and BIND commands
; are contained in INITSYS.NCF and NETINFO.CFG.
; These files are in SYS:ETC.
load odineb
sys:etc\initsys.ncf
load rnic pair mypair -p7 -s6

mount all

```

4. What is shown if user selects View All Commands from INETCFG after a simple installation:

```

# The network environment for this server consists
# of a Token-Ring LAN with only one Frame Type
LOAD SNMP
LOAD IBMTRPO NAME=TOK1_TOK FRAME=TOKEN-RING SLOT=7 NODE=400010203181
      RXBUFFERS=32 TXBUFFERS=16 DATARATE=AUTO FULLDUPLEX=YES
RTSWENABLE=NO
LOAD IBMTRPO NAME=TOK2_TOK FRAME=TOKEN-RING SLOT=6 NODE=400010203181
      RXBUFFERS=32 TXBUFFERS=16 DATARATE=AUTO FULLDUPLEX=YES STANDBY
RTSWENABLE=NO
BIND IPX TOK1_TOK net=abcd1 seq=1
LOAD DUMMY
BIND DUMMY TOK2_TOK

```

5. What is shown if user selects View All Commands from INETCFG after a complex installation:



```

# The network environment for this server includes both Token-Ring frame
# types, utilizes Source Routing, has an IP network with a default IP gateway,
# and utilizes Route Switching via the IBM 8210
LOAD SNMP
LOAD IBMTRPO NAME=TOK1_TOK FRAME=TOKEN-RING SLOT=7 NODE=400010203181
      RXBUFFERS=32 TXBUFFERS=16 DATARATE=AUTO FULLDUPLEX=YES
RTSWENABLE=YES RTSWTABLESIZE=1024
LOAD IBMTRPO NAME=TOK1_TSP FRAME=TOKEN-RING_SNAP SLOT=7 NODE=400010203181
      RXBUFFERS=32 TXBUFFERS=16 DATARATE=AUTO FULLDUPLEX=YES
RTSWENABLE=YES RTSWTABLESIZE=1024
LOAD IBMTRPO NAME=TOK2_TOK FRAME=TOKEN-RING SLOT=6 NODE=400010203181
      RXBUFFERS=32 TXBUFFERS=16 DATARATE=AUTO FULLDUPLEX=YES STANDBY
RTSWENABLE=YES RTSWTABLESIZE=1024
LOAD IBMTRPO NAME=TOK2_TSP FRAME=TOKEN-RING_SNAP SLOT=6 NODE=400010203181
      RXBUFFERS=32 TXBUFFERS=16 DATARATE=AUTO FULLDUPLEX=YES
STANDBY RTSWENABLE=YES RTSWTABLESIZE=1024
LOAD IPXRTR ROUTING=NLSP
BIND IPX TOK1_TOK net=abcd1 seq=1
BIND IPX TOK1_TSP net=ff1 seq=2
LOAD ROUTE NAME=TOK1_TOK RSP=AR TIME=10
LOAD ROUTE NAME=TOK1_TSP RSP=AR TIME=10
LOAD ROUTE NAME=TOK2_TOK RSP=AR TIME=10
LOAD ROUTE NAME=TOK2_TSP RSP=AR TIME=10
LOAD TcpiP RIP=Yes Forward=No
BIND IP TOK1_TSP ARP=Yes Mask=ff.ff.ff.0 Address=10.20.31.81
LOAD DUMMY
BIND DUMMY TOK2_TOK
BIND DUMMY TOK2_TSP

```

6. AUTOEXEC.NCF of a simple Redundant NIC configuration after using INSTALL.NLM to configure two pairs (one using a non IBM PCI Token-Ring adapter as the secondary adapter):

```

set Time Zone = EST5EDT
set Daylight Savings Time Offset = 1:00:00
set Start Of Daylight Savings Time = (APRIL SUNDAY FIRST 2:00:00 AM)
set End Of Daylight Savings Time = (OCTOBER SUNDAY LAST 2:00:00 AM)
set Default Time Server Type = SINGLE

# Note: The Time zone information mentioned above
# should always precede the SERVER name.
set Bindery Context = 0=workgroup
file server name NWSRV1
ipx internal net 60990060

# The network environment for this server consists
# of a Token-Ring LAN with only one Frame Type
load tcpip
load odineb

# Primary adapter 1
LOAD IBMTRPO SLOT=4 NODE=400000000004 DATARATE=M16 STANDBY FRAME=TOKEN-RING
NAME=IBMTRPO_4_TOK
BIND IPX IBMTRPO_4_TOK NET=1234
#Secondary adapter 1 (notice this adapter is not an IBM PCI Token-Ring
adapter)
LOAD IBMMPCO SLOT=5 NODE=400000000004 DATARATE=16 ENABLEFDX FRAME=TOKEN-RING
NAME=IBMMPCO_5_TOK

# Primary adapter 2
LOAD IBMTRPO SLOT=3 NODE=400010203182 FRAME=TOKEN-RING NAME=IBMTRPO_1_TOK
BIND IPX IBMTRPO_1_TOK NET=ABCD1
# Secondary adapter loaded with the same frame type as the Primary 2
LOAD IBMTRPO SLOT=2 NODE=400010203182 STANDBY FRAME=TOKEN-RING
NAME=IBMTRPO_2_TOK

# Create the Redundant NIC pair with Primary slot=4, and Secondary
# Slot=5 (this pair uses the -backup parameter because the Secondary
# adapter is not an IBM PCI Token-Ring adapter)
load rnic pair bkpair -p4 -s5 -backup
# Create the Redundant NIC pair with Primary slot=3, and Secondary Slot=2
rnic pair mypair -p3 -s2

mount all

```

---

## Messages

---

### **RNIC-100: FAILED TO ALLOCATE MEMORY FOR LAN BOARDS**

**Explanation:** Your server is not able to allocate memory for RNIC.NLM

**User Action:** Try unloading NLM's that are not needed or add more memory to the server.

---

### **RNIC-101: FAILED TO REGISTER FOR ONE OR MORE NESL EVENTS.**

**Explanation:** The Redundant NIC NLM was unable to register for some NESL/NEB events. This could prevent the Redundant NIC pairs from functioning properly.

**User Action:** Update MSM.NLM to the latest available level.

---

**RNIC-102: PAIRING SUCCEEDED**

**Explanation:** A Redundant NIC pair was created successfully and will be monitored for events from the adapters that make up the pair.

**User Action:** None.

---

**RNIC-103: MUST SPECIFY -P AND -S TO CREATE A REDUNDANT NIC PAIR**

**Explanation:** The Redundant NIC NLM must be told the slot for the primary and secondary adapters when a pair is created.

**User Action:** See "Setting up a Redundant NIC Pair" on page 7-6 for information about creating a pair.

---

**RNIC-104: MUST SPECIFY A NAME FOR A REDUNDANT NIC PAIR**

**Explanation:** Redundant NIC pairs must be given a name for the pairing to be completed.

**User Action:** Try to create the pair again and specify a pair name.

---

**RNIC-105: PAIR NAME IN USE. CHOOSE ANOTHER NAME.**

**Explanation:** You tried to use an existing pair name for another pair.

**User Action:** None.

---

**RNIC-106: THE DEFAULT IP ROUTER ADDRESS THAT WAS SPECIFIED IS INVALID.**

**Explanation:** The default IP router address format that you specified was incorrect.

**User Action:** Verify the IP address of your router.

---

**RNIC-107: UNABLE TO GET OPTIONS STRUCTURE MEMORY.**

**Explanation:** There was a problem allocating memory. The server could be out of memory or there could be a problem with CLIB.NLM.

**User Action:** Try unloading NLM's that are not needed or add more memory to the server.

---

**RNIC-108: NO REDUNDANT NIC PAIRS LOADED**

**Explanation:** There are no configured pairs to show at this time.

**User Action:** None.

---

**RNIC-109: UNABLE TO DETERMINE SLOTS. DRIVER COULD HAVE BEEN UNLOADED.**

**Explanation:** The adapter no longer appears to be where Redundant NIC thought it was. Pairs should get destroyed when the driver unloads. This message indicates that removing the pairs did not work.

**User Action:** Try removing the pair using RNIC UNPAIR <PAIRNAME>. Recreate the pair.

---

**RNIC-110: ALL PAIRS WERE REMOVED.**

**Explanation:** All Redundant NIC pairings were successfully removed.

**User Action:** None.

---

**RNIC-111: INVALID REDUNDANT NIC PAIR NAME**

**Explanation:** The pairname specified with the RNIC switch command does not exist.

**User Action:** Use RNIC SHOW to determine the correct name.

---

**RNIC-112: MANUAL ADAPTER FAILOVER SUCCEEDED**

**Explanation:** An RNIC switch command was issued to a Redundant NIC pair and the failover completed successfully.

**User Action:** None.

---

---

**RNIC-113: INVALID RNIC SWITCH COMMAND**

**Explanation:** The RNIC switch command that you specified was not correct.

**User Action:** Type RNIC HELP to get help with the rnic command.

---

**RNIC-114: SWITCH MODE SET TO <MODE>**

**Explanation:** The Redundant NIC switch mode was successfully set to the specified mode.

**User Action:** None.

---

**RNIC-116: <PAIRNAME> UNPAIRED SUCCESSFULLY**

**Explanation:** The Redundant NIC pair <pairname> was removed successfully.

**User Action:** None.

---

**RNIC-117: UNKNOWN OR MALFORMED COMMAND**

**Explanation:** You typed in a command that was not valid.

**User Action:** Type RNIC HELP to get help with the rnic command.

---

**RNIC-118: <PAIRNAME> REFRESHED SUCCESSFULLY**

**Explanation:** The Redundant NIC pair <pairname> was successfully refreshed.

**User Action:** None.

---

**RNIC-119: THE -S AND -X PARAMETERS ARE MUTUALLY EXCLUSIVE**

**Explanation:** The -s or the -sx parameter should be specified but not both.

**User Action:** Enter the rnic pair command again with either the -s or the -sx parameter.

---

**RNIC-120: WAITING FOR ALL LOGICAL BOARDS TO LOAD**

**Explanation:** The pair will be completed when all logical boards that are needed are loaded.

**User Action:** Load the remaining logical boards that are needed to complete the pair.

---

**RNIC-200: UNABLE TO GET PARAMETER STRUCTURE MEMORY**

**Explanation:** Your server is not able to allocate memory for RNIC.NLM.

**User Action:** Try unloading NLM's that are not needed or add more memory to the server.

---

**RNIC-201: SETUP FAILED: INVALID COMMAND LINE FORMAT**

**Explanation:** You typed an rnic pair parameter that was not valid.

**User Action:** Type RNIC HELP to get help with the rnic command.

---

**RNIC-202: SETUP FAILED: UNABLE TO GET MEMORY FOR RNIC PROFILE**

**Explanation:** Your server is not able to allocate memory for RNIC.NLM.

**User Action:** Try unloading NLM's that are not needed or add more memory to the server.

---

**RNIC-203: SETUP FAILED: PROBLEM INITIALIZING THE ADAPTER PAIR**

**Explanation:** The initialization routine for the pair failed.

**User Action:** Try creating the pair again.

---

**RNIC-204: SETUP FAILED: PARAMETERS STRUCTURE IS MISSING**

**Explanation:** There was a problem accessing the parameters structure.

**User Action:** Try setting up the pair again.

---

---

**RNIC-205: SETUP FAILED: FAILED TO FIND ANY IBM TOKEN-RING BOARDS.**

**Explanation:** The Redundant NIC NLM was not able to find any IBM Token-Ring boards loaded at this time.

**User Action:** Load Token-Ring boards for the primary and secondary adapters.

---

**RNIC-206: SETUP FAILED: PRIMARY ADAPTER NOT FOUND**

**Explanation:** There is no adapter in the slot that you specified as primary.

**User Action:** Specify the correct slot.

---

**RNIC-207: SETUP FAILED: COULD NOT ALLOCATE SPACE TO READ THE MSM CONFIG TABLE**

**Explanation:** Problem allocating memory. It is possible that the machine is low on RAM.

**User Action:** Try unloading NLM's that are not needed or add more memory to the server.

---

**RNIC-208: SETUP FAILED: PROBLEM READING THE MSM CONFIG TABLE**

**Explanation:** The Config table for the adapter could not be read.

**User Action:** Make sure that you are using the correct LAN driver.

---

**RNIC-209: SETUP FAILED: INCORRECT LAN DRIVER VERSION**

**Explanation:** Your LAN driver is too old.

**User Action:** Use the one that came with the RNIC.NLM diskette or a newer version if one is available.

---

**RNIC-210: SETUP FAILED: SECONDARY ADAPTER NOT FOUND**

**Explanation:** There is no adapter in the slot that you specified as secondary.

**User Action:** Specify the correct slot.

---

**RNIC-211: SETUP FAILED: PRIMARY AND SECONDARY LOGICAL BOARDS TO NOT MATCH**

**Explanation:** The logical boards on the primary adapter do not match the logical boards on the secondary adapter.

**User Action:** Check the frame types for the primary and secondary adapters. They should match.

---

**RNIC-212: SETUP FAILED: PRIMARY AND SECONDARY MAC ADDRESSES DO NOT MATCH**

**Explanation:** The same Locally Administered Address must be assigned to each adapter using the NODE ADDRESS=<LAA> command line keyword.

**User Action:** Set the Locally Administered Address on the primary and secondary adapters to the same address.

---

**RNIC-213: SETUP FAILED: COULD NOT FIND MLID CONFIG TABLE TO PERFORM ADAPTER STATUS CHECK**

**Explanation:** There is a problem reading the adapter Config table.

**User Action:** Try setting up the pair again.

---

**RNIC-214: SETUP FAILED: THE PRIMARY ADAPTER MUST NOT BE SHUT DOWN**

**Explanation:** The primary adapter must be open in order for Redundant NIC to initialize correctly.

**User Action:** Specify a primary adapter that is not shut down.

---

- 
- RNIC-215: SETUP FAILED: THE SECONDARY ADAPTER MUST NOT BE OPEN**  
**Explanation:** The secondary adapter must be closed when Redundant NIC is being initialized.  
**User Action:** Specify an adapter that was loaded with the standby keyword.
- 
- RNIC-216: SETUP FAILED: THE RING SPEED FOR THE ADAPTERS DO NOT MATCH**  
**Explanation:** Both adapters must be set to the same ring speed.  
**User Action:** Configure the adapters so that they have the same ring speed.
- 
- RNIC-217: SETUP FAILED: COULD NOT SHUT DOWN THE SECONDARY ADAPTER**  
**Explanation:** The secondary adapter did not respond to a request to shut down.  
**User Action:** Try setting up the pair again.
- 
- RNIC-218: SETUP FAILED: THE PRIMARY ADAPTER SPECIFIED IS PART OF ANOTHER PAIR**  
**Explanation:** The primary adapter you specified is part of another Redundant NIC pair.  
**User Action:** Specify a primary adapter that is not part of a Redundant NIC pair.
- 
- RNIC-219: SETUP FAILED: THE SECONDARY ADAPTER SPECIFIED IS PART OF ANOTHER PAIR**  
**Explanation:** The secondary adapter you specified is part of another Redundant NIC pair.  
**User Action:** Specify a secondary adapter that is not part of a Redundant NIC pair.
- 
- RNIC-220: SETUP FAILED: FAILED TO RESET THE PRIMARY ADAPTER**  
**Explanation:** The primary adapter could not be reset.  
**User Action:** Attempt to create the pair again.
- 
- RNIC-300: UNPAIR FAILED: INVALID RNIC PAIR NAME**  
**Explanation:** The pair that you tried to remove does not exist.  
**User Action:** Type RNIC SHOW to find the correct pair name of the adapters that you would like to remove.
- 
- RNIC-301: UNPAIR FAILED: COULD NOT REMOVE LINK FROM LIST OF PAIRS**  
**Explanation:** There was a problem unpairing the adapters.  
**User Action:** Try to remove the pair again.
- 
- RNIC-400: MANUAL ADAPTER FAILOVER UNSUCCESSFUL: THE SWITCHING MODE IS DISABLED.**  
**Explanation:** When the switching mode is disabled you cannot initiate a manual failover.  
**User Action:** Set the switching mode to manual or auto.
- 
- RNIC-401: MANUAL ADAPTER FAILOVER UNSUCCESSFUL: THE BACKUP ADAPTER IS NOT ABLE TO BECOME ACTIVE AT THIS TIME.**  
**Explanation:** An attempt was made to failover to the backup adapter. The state of the backup adapter is preventing it from becoming an active adapter.  
**User Action:** Make sure that the backup adapter is not open.
- 
- RNIC-402: MANUAL ADAPTER FAILOVER UNSUCCESSFUL: SHUTDOWN OF ACTIVE ADAPTER FAILED**  
**Explanation:** The active adapter could not be shut down.  
**User Action:** Try issuing a manual failover from the command line.

---

**RNIC-403: MANUAL ADAPTER FAILOVER UNSUCCESSFUL: FAILED TO ACTIVATE BACKUP ADAPTER.**

**Explanation:** The backup adapter could not be reset.

**User Action:** Try issuing a manual failover from the command line.





---

## Chapter 8. Network Adapter Performance Tuning

Obtaining the very best performance from a network adapter is not always a simple task. IBM adapters and their device drivers undergo extensive performance analysis in order to derive the best default configuration for the majority of possible configurations in which they are going to be placed. However, each environment introduces specific characteristics that affect the ability of the adapter and device driver to achieve the highest performance. IBM adapters and their device drivers are engineered to allow the user a great amount of flexibility to tune the performance in their specific environment. This includes not only many performance-based configuration parameters but also enhanced functions whose sole purpose is to achieve the highest performance possible, such as Route Switching and Class of Service for IP.

Tuning network adapters for the very highest performance is such a large topic that it is best addressed in a separate document. The following URL will take you to an IBM white paper explaining steps to achieve the best performance from your IBM adapters for your specific networking environment.

[www.networking.ibm.com/per/per10.html](http://www.networking.ibm.com/per/per10.html)



---

# Glossary

This glossary includes terms and definitions from the *IBM Dictionary of Computing* (New York; McGraw-Hill, Inc., 1994).

- The symbol (A) identifies definitions from the *American National Standard Dictionary for Information Systems*, ANSI X3.172-1990, copyright 1990 by the American National Standards Institute (ANSI). Copies can be purchased from the American National Standards Institute, 1430 Broadway, New York, New York 10018.
- The symbol (E) identifies definitions from the ANSI/EIA Standard-440-A, *Fiber Optic Terminology*.
- The symbol (I) identifies definitions from published parts of the *Information Technology Vocabulary*, developed by Subcommittee 1, Joint Technical Committee 1, of the International Organization for Standardization and the International Electrotechnical Commission (ISO/IEC JTC1/SC1).
- The symbol (T) identifies definitions from draft international standards, committee drafts, and

## A

**active.** (1) Able to communicate on the network. (2) Operational. (3) Pertaining to a node or device that is connected or is available for connection to another node or device. (4) Currently transmitting or receiving.

**actual data transfer rate.** The average number of bits, characters, or blocks per unit of time transferred from a data source and received by a data sink.

**adapter.** In a communicating device, a circuit card that, with its associated software and/or microcode, enables the device to communicate over the network.

**adapter address.** The hexadecimal digits that identify an adapter.

**address.** (1) A character or group of characters that identifies a register, a particular part of storage, or some other data source or destination. (A) (2) To refer to a device or an item of data by its address. (I) (A) (3) In word processing, the location, identified by an address code, of a specific section of the recording medium or storage. (T) (4) A name, label, or number identifying a location in storage, a device in a system or network, or any other data source. (5) In data communication, the unique code assigned to each device or workstation connected to a network.

**Address Resolution Protocol (ARP).** A protocol that dynamically maps between Internet addresses,

working papers being developed by ISO/IEC JTC1/SC1.

The following cross-references are used in this glossary:

**Contrast with:** This refers to a term that has an opposed or substantively different meaning.

**Synonym for:** This indicates that the term has the same meaning as a preferred term, which was defined in its correct place in the glossary.

**Synonymous with:** This is a backward reference from a defined term to all other terms that have the same meaning.

**See:** This refers the reader to multiple-word terms that have the same last word.

**See also:** This refers the reader to related terms that have a related, but not synonymous, meaning.

**Deprecated term for:** This indicates that the term should not be used. It refers to a preferred term, which is defined in its proper place in the glossary. baseband adapter addresses, X.25 addresses, and token-ring adapter addresses on a local area network.

**Advanced Program-to-Program Communication (APPC).** (1) The general facility characterizing the LU 6.2 architecture and its various implementations in products. (2) Sometimes used to refer to the LU 6.2 architecture and its product implementations as a whole, or to an LU 6.2 product feature in particular, such as an APPC application program interface.

**agent.** (1) In the client-server model, the part of the system that performs information preparation and exchange on behalf of a client or server application. See also *client-server model* and *network management station (NMS)*. (2) A customer-service person whose job is to handle outgoing or incoming telephone calls (for example, an agent in an ACD group).

**AIX.** Advanced Interactive Executive. See *AIX operating system*.

**AIX operating system.** IBM's implementation of the UNIX operating system. The RISC System/6000 system, among others, runs the AIX operating system. See *UNIX operating system*.

**alert.** (1) A message sent to a management services focal point in a network to identify a problem or an impending problem. (2) In the NetView and NETCENTER programs, a high priority event that warrants immediate attention.

**API.** Application program interface.

**APPC.** Advanced Program-to-Program Communication.

**application.** (1) The use to which an information processing system is put; for example, a payroll application, an airline reservation application, a network application. (2) A collection of software components used to perform specific types of user-oriented work on a computer. (3) In the AS/400 system, the collection of CSP/AE objects that together can be run on the system. An application consists of a program object, up to five map group objects (depending on how many different devices are supported), and any number of table objects.

**application program.** (1) A program that is specific to the solution of an application problem. Synonymous with *application software*. (T) (2) A program written for or by a user that applies to the user's work, such as a program that does inventory control or payroll. (3) A program used to connect and communicate with stations in a network, enabling users to perform application-oriented activities. (4) In SDF/CICS, the program using the physical maps and symbolic description maps generated from a source map set.

**Note:**

Do not use the term *application* in place of *application program*.

**application program interface (API).** (1) A functional interface supplied by the operating system or by a separately orderable licensed program that allows an application program written in a high-level language to use specific data or functions of the operating system or the licensed program. (2) The interface through which an application program interacts with an access method. In VTAM programs, it is the language structure used in control blocks so that application programs can reference them and be identified to VTAM.

**architecture.** A logical structure that encompasses operating principles including services, functions, and protocols. See *computer architecture*, *network architecture*, *Systems Application Architecture (SAA)*, *Systems Network Architecture (SNA)*.

**ARP.** Address Resolution Protocol.

**attach.** To make a device a part of a network logically.

**Note:**

Not to be confused with *connect*, which implies physically connecting a device to a network.

**attaching device.** Any device that is physically connected to a network and can communicate over the network. See *ring attaching device*.

**attachment.** A port or a pair of ports, optionally including an associated optical bypass, that are managed as a functional unit. A dual attachment includes two ports: a port A, and a port B. A single attachment includes a Port S.

## B

**backbone.** (1) In a local area network multiple-bridge ring configuration, a high-speed link to which the rings are connected by means of bridges or routers. A backbone can be configured as a bus or as a ring. (2) In a wide area network, a high-speed link to which nodes or data switching exchanges (DSEs) are connected.

**bandwidth.** (1) The difference, expressed in hertz, between the highest and the lowest frequencies of a range of frequencies. For example, analog transmission by recognizable voice telephone requires a bandwidth of about 3000 hertz (3 kHz). (2) The bandwidth of an optical link designates the information-carrying capacity of the link and is related to the maximum bit rate that a fiber link can support.

**Basic Input/Output System (BIOS).** Code that controls basic hardware operations, such as interactions with diskette drives, hard disk drives, and the keyboard.

**binary digit.** Synonym for *bit*.

**BIOS.** Basic Input/Output System.

**bit.** Either of the digits 0 or 1 when used in the binary numeration system. Synonymous with *binary digit*. (T) See also *byte*.

**block.** A string of data elements recorded or transmitted as a unit. The element may be characters, words, or physical records. (T)

**bridge.** (1) An attaching device that connects two LAN segments to allow the transfer of information from one LAN segment to the other. A bridge can connect the LAN segments directly by network adapters and software in a single device, or it can connect network adapters in two separate devices through software and use of a telecommunications link between the two adapters. (2) A functional unit that connects two LANs that use the same logical link control (LLC) procedures but may use the same or different medium access control (MAC) procedures. (T) Contrast with *gateway* and *router*.

**Note:** A bridge connects networks or systems of the same or similar architectures, whereas a gateway connects networks or systems of different architectures.

**bridging.** The forwarding of a frame from one local area network segment to another. The destination is based upon the medium access control (MAC) sublayer address encoded in the destination address field of the frame header.

**broadband local area network (LAN).** A local area network (LAN) in which information is encoded, multiplexed, and transmitted through modulation of carriers. (T)

**broadcast.** (1) Transmission of the same data to all destinations. (T) (2) Simultaneous transmission of the same data to more than one destination. (3) A packet delivery system where a copy of a given packet is given to all hosts attached to the network. Broadcast can be implemented in hardware (Ethernet, for example) or software. Contrast with *multicast*.

**bus.** (1) A facility for transferring data between several devices located between two end points, only one device being able to transmit at a given moment. (T) (2) A computer configuration in which processors are interconnected in series. See also *hypercube*. (3) A network configuration in which nodes are interconnected through a bidirectional transmission medium. (4) One or more conductors used for transmitting signals or power. (A)

**bypass.** (1) To eliminate a station or an access unit from a ring network by allowing the data to flow in a path around it. (2) The ability of a station to be optically isolated from the network while maintaining the integrity of the ring. (3) The ability of a node to optically isolate itself from the FDDI network while maintaining the continuity of the cable plant.

**byte.** (1) A string that consists of a number of bits, treated as a unit, and representing a character. (T) (2) A binary character operated upon as a unit and usually shorter than a computer word. (A) (3) A group of 8 adjacent binary digits that represent one EBCDIC character. (4) See *n-bit byte*. See also *bit*.

## C

**cable segment.** A section of cable between components or devices on a network. A segment can consist of a single patch cable, multiple patch cables connected together, or a combination of building cable and patch cables connected together. See *LAN segment*, *ring segment*.

**cache.** (1) A special-purpose buffer storage, smaller and faster than main storage, used to hold a copy of instructions and data obtained from main storage and likely to be needed next by the processor. (T) (2) To place, hide, or store in a cache. (3) An optional part of the directory database in network nodes where

frequently used directory information can be stored to speed directory searches.

**carrier.** (1) On broadband networks, a continuous frequency signal that can be modulated with an information-carrying signal. (2) An electric or electromagnetic wave or pulse train that may be varied by a signal bearing information to be transmitted over a communication system. (T)

**channel.** (1) A path along which signals can be sent, for example, data channel, output channel. (A) (2) The portion of a storage medium that is accessible to a given reading or writing station; for example, track, band. (A) (3) The portion of a storage medium that is accessible to a given reading or writing station. (4) In broadband transmission, a designation of a frequency band 6 MH wide.

**channel-attached.** (1) Pertaining to the connection of devices directly by data channels (I/O channels) to a computer. (2) Pertaining to devices connected to a controlling unit by cables rather than by telecommunication lines. See also *local*. Contrast with *telecommunication-attached*.

**claim token.** A process whereby one or more stations bid for the right to initialize the ring.

**class of service (COS).** A designation of the transport network characteristics, such as route security, transmission priority, and bandwidth, needed for a particular session. The class of service is derived from a *mode name* specified in the Bind by the initiator of a session.

**client.** (1) A user. (2) A functional unit that receives shared services from a server. (T)

**client-server.** In TCP/IP, the model of interaction in distributed data processing in which a program at one site sends a request to a program at another site and awaits a response. The requesting program is called a client; the answering program is called a server.

**client-server model.** A common way to describe network services and the model user processes (programs) of those services.

**configuration.** (1) The manner in which the hardware and software of an information processing system are organized and interconnected. (T) (2) The devices and programs that make up a system, subsystem, or network. (3) The task of defining the hardware and software characteristics of a system or subsystem. (4) See also *system configuration*.

**configuration parameters.** Variables in a configuration definition, the values of which characterize the relationship of a product, such as a bridge, to other products in the same network.

**connect.** In a LAN, to physically join a cable from a station to an access unit or network connection point. Contrast with *attach*.

**connection.** (1) In data communication, an association established between functional units for conveying information. (I) (A) (2) In Open Systems Interconnection architecture, an association established by a given layer between two or more entities of the next higher layer for the purpose of data transfer. (T) (3) In SNA, the network path that links two logical units (LUs) in different nodes to enable them to establish communications. (4) In X.25 communication, a virtual circuit between two data terminal equipments (DTEs). A switched virtual circuit (SVC) connection lasts for the duration of a call; a permanent virtual circuit (PVC) is a permanent connection between the DTEs. (5) In TCP/IP, the path between two protocol applications that provides reliable data stream delivery service. In Internet, a connection extends from a TCP application on one system to a TCP application on another system. (6) The path between two protocol functions, usually located in different machines, that provides reliable data delivery service. (7) A logical association between a call participant (party) and a switch. A party's connection represents that party's participation in a telephone call.

**connectivity.** (1) The capability of a system or device to be attached to other systems or devices without modification. (T) (2) The capability to attach a variety of functional units without modifying them.

## D

**data circuit-terminating equipment (DCE).** In a data station, the equipment that provides the signal conversion and coding between the data terminal equipment (DTE) and the line. (I)

### Notes:

1. The DCE can be separate equipment or an integral part of the DTE or of the intermediate equipment.
2. A DCE can perform other functions that are usually performed at the network end of the line.

**data link control (DLC).** A set of rules used by nodes on a data link (such as an SDLC link or a Token Ring) to accomplish an orderly exchange of information.

**data link control (DLC) layer.** (1) In SNA or Open Systems Interconnection (OSI), the layer that schedules data transfer over a link between two nodes and performs error control for the link. Examples of DLC are synchronous data link control (SDLC) for serial-by-bit connection and DLC for the System/370 channel. (2) See *Systems Network Architecture (SNA)*. (3) See also *logical link control (LLC) sublayer, medium access control (MAC) sublayer*.

**Note:** The DLC layer is usually independent of the physical transport mechanism and ensures the integrity of data that reach the higher layers.

**data link control (DLC) protocol.** The LAN protocol used to attach a device to and remove a device from the network. The DLC protocol is also used to send information onto and receive information from the network, exchange data, and control information with network higher level protocols and interfaces.

**data rate.** See *data transfer rate, line data rate*.

**data segment.** A control section of a program which contains only data. It is usually addressed with its own hardware segment and offset.

**data transfer rate.** The average number of bits, characters, or blocks, per unit time passing between corresponding equipment in a data transmission system. (I) See *actual data transfer rate, effective transfer rate*. The rate is expressed in bits, characters, or blocks per second, minute, or hour.

**DCE.** Data circuit-terminating equipment.

**device driver.** The code needed to attach and use a device on a computer or a network.

**device identifier (ID).** An 8-bit identifier that uniquely identifies a physical I/O device.

**diagnostics.** The process of investigating the cause or the nature of a condition or problem in a product or system.

**disable.** To make nonfunctional.

**disabled.** (1) Pertaining to a state of a processing unit that prevents the occurrence of certain types of interruptions. (2) Pertaining to the state in which a transmission control unit or audio response unit cannot accept incoming calls on a line. (3) Nonoperational or nonfunctional.

**disk.** A round, flat, data medium that is rotated in order to read or write data. (T) See also *diskette*.

**diskette.** (1) A small magnetic disk enclosed in a jacket. (T) (2) A thin, flexible magnetic disk and a semi-rigid protective jacket, in which the disk is permanently enclosed.

**diskette drive.** The mechanism used to seek, read, and write data on a diskette.

**DLC.** Data link control.

**dotted decimal notation.** The syntactical representation for a 32-bit integer that consists of four 8-bit numbers written in base 10 with periods (dots)

separating them. It represents IP addresses in the Internet.

**duplex.** Pertaining to communication in which data can be sent and received at the same time. Synonymous with *full-duplex*. Contrast with *half-duplex*.

## E

**enable.** To make functional.

**enabled.** (1) On a LAN, pertaining to an adapter or device that is active, operational, and able to receive frames from the network. (2) Pertaining to the state in which a transmission control unit or an audio response unit can accept incoming calls on a line.

**execute.** To perform the actions specified by a program or a portion of a program. (T)

## F

**feature.** (1) A part of an IBM product that can be ordered separately by the customer. (2) See *switch feature*.

**field.** On a data medium or a storage, a specified area used for a particular class of data; for example, a group of character positions used to enter or display wage rates on a screen. (T)

**file.** A named set of records stored or processed as a unit. (T)

**frame.** (1) In Open Systems Interconnection architecture, a data structure pertaining to a particular area of knowledge and consisting of slots that can accept the values of specific attributes and from which inferences can be drawn by appropriate procedural attachments. Synonymous with *schema*. (T) (2) A data structure that consists of fields, predetermined by a protocol, for the transmission of user data and control data. The composition of a frame, especially the number and types of fields, may vary according to the type of protocol. Synonymous with *transmission frame*. (T) (3) The unit of transmission in some local area networks, including the IBM Token-Ring Network; it includes delimiters, control characters, information, and checking characters. (4) In SDLC, the vehicle for every command, every response, and all information that is transmitted using SDLC procedures. (5) A packet that is transmitted over a serial line or LANs. See also *packet*. (6) In FDDI, a PDU transmitted between co-operating MAC entities on a ring, and consisting of a variable number of octets and control symbols.

**full-duplex.** Synonym for *duplex*.

**function.** (1) A specific purpose of an entity, or its characteristic action. (A) (2) In data communications, a machine action such as carriage return or line feed. (A) (3) In NetView DM, a function is the specification of a transmission activity on a resource or group of resources. Functions are grouped into phases. In CSCM, resources are known as data objects.

## H

**half-duplex (HDX).** In data communication, pertaining to transmission in only one direction at a time. Contrast with *duplex*.

**hard disk.** (1) A rigid magnetic disk such as the internal disks used in the system units of personal computers and in external hard disk drives. Synonymous with *fixed disk*. (2) A rigid disk used in a hard disk drive.

**Note:** The term hard disk is also used loosely in the industry for boards and cartridges containing microchips or bubble memory that simulate the operations of a hard disk drive.

**hard error.** (1) An error condition on a network that requires that the network be reconfigured or that the source of the error be removed before the network can resume reliable operation. Contrast with *soft error*. (2) Synonym for *hard failure*. (T)

**hard failure.** An error condition on a network that requires that the network be reconfigured or that the source of the error be removed before the network can resume reliable operation. Synonymous with *hard error*. (T)

**hardware.** All or part of the physical components of an information processing system, such as computers or peripheral devices. (T) (A)

**hexadecimal.** (1) Pertaining to a selection, choice, or condition that has 16 possible different values or states. (I) (2) Pertaining to a fixed-radix numeration system, with radix of 16. (I) (3) Pertaining to a system of numbers to the base 16; hexadecimal digits range from 0 through 9 and A through F, where A represents 10 and F represents 15.

**host.** (1) In Internet terminology, an end system. (2) In interpretive execution mode, the real machine as opposed to the virtual or interpreted machine (the guest).

## I

**I/O.** Input/output.

**IBM Token-Ring Network.** A baseband local area network with a ring topology that passes tokens from Token-Ring adapter to Token-Ring adapter.

**IEEE.** Institute of Electrical and Electronics Engineers.

**initialize.** In a LAN, to prepare the adapter (and adapter support code, if used) for use by an application program.

**input/output (I/O).** (1) Pertaining to a device whose parts can perform an input process and an output process at the same time. (I) (2) Pertaining to a functional unit or channel involved in an input process, output process, or both, concurrently or not, and to the data involved in such a process.

**Note:** The phrase input/output may be used in place of input/output data, input/output signals, and input/output process when such a usage is clear in context.

(3) Pertaining to input, output, or both. (A)

(4) Pertaining to a device, process, or channel involved in data input, data output, or both.

**interface.** (1) A shared boundary between two functional units, defined by functional characteristics, signal characteristics, or other characteristics, as appropriate. The concept includes the specification of the connection of two devices having different functions. (T) (2) Hardware, software, or both, that links systems, programs, or devices.

**International Organization for Standardization (ISO).** An organization of national standards bodies from various countries established to promote development of standards to facilitate international exchange of goods and services, and develop cooperation in intellectual, scientific, technological, and economic activity.

**Internet.** A worldwide network connecting users through autonomous networks in industry, education, government, and research. The Internet network uses Internet Protocol (IP). The major Internet services include electronic mail, FTP, telnet, World Wide Web, and electronic bulletin boards (Usenet). For network interconnection and routing, and Transmission Control Protocol (TCP) for end-to-end control. (A)

**Internet address.** A 32-bit address assigned to hosts using TCP/IP. See also *TCP/IP*.

**Internet Engineering Task Force (IETF).** One of the task forces of the Internet Architecture Board (IAB) responsible for solving short-term engineering needs of the Internet.

**Internet Packet Exchange (IPX).** The routing protocol used to connect Novell's servers or any workstation or router that implements IPX with other workstations. Although similar to TCP/IP, it uses different packet formats and terminology. See also *TCP/IP* and *Xerox Network Services (XNS)*.

**Internet Protocol (IP).** (1) A protocol that routes data through a network or interconnected networks. IP acts as an interface between the higher logical layers and the physical network. However, this protocol does not provide error recovery, flow control, or guarantee the reliability of the physical network. IP is a connectionless protocol. (2) A protocol used to route data from its source to its destination in an Internet environment.

**interrupt.** (1) A suspension of a process, such as execution of a computer program caused by an external event, and performed in such a way that the process can be resumed. (A) (2) To stop a process in such a way that it can be resumed. (3) In data communication, to take an action at a receiving station that causes the sending station to end a transmission. (4) A means of passing processing control from one software or microcode module or routine to another, or of requesting a particular software, microcode, or hardware function.

**IP.** Internet Protocol.

**IP address.** A 32-bit address assigned to devices or hosts in an IP internet that maps to a physical address. The IP address is composed of a network and host portion.

**IPX.** Internet Packet Exchange.

**ISO.** International Organization for Standardization.

## K

**KB.** (1) For processor storage and real and virtual memory, 1024 bytes. (2) For disk storage capacity and transmission rates, 1000 bytes.

**Kb.** Kilobit.

**kilobit (Kb).** 1000 binary digits.



## L

**LAN.** Local area network.

**LAN adapter.** The circuit card within a communicating device (such as a personal computer) that, together with its associated software, enables the device to be attached to a LAN.

**LAN segment.** (1) Any portion of a LAN (for example, a single bus or ring) that can operate independently but is connected to other parts of the establishment network via bridges. (2) An entire ring or bus network without bridges. See *cable segment*, *ring segment*.

**line data rate.** The rate of data transmission over a telecommunications link.

**local area network (LAN).** (1) Physical network technology that transfers data at high speed over short distances. (2) A network in which a set of devices are connected to one another for communication and that can be connected to a larger network. See also *Token Ring* and *Ethernet*. (3) A computer network located on a user's premises within a limited geographical area. Communication within a local area network is not subject to external regulations; however, communication across the LAN boundary may be subject to some form of regulation. (T) Contrast with *wide area network (WAN)* and *metropolitan area network (MAN)*.

**logical link control (LLC).** (1) The data link control (DLC) LAN sublayer that provides two types of (DLC) operation. The first type is connectionless service, which allows information to be sent and received without establishing a link. The LLC sublayer does not perform error recovery or flow control for connectionless service. The second type is connection-oriented service, which requires the establishment of a link prior to the exchange of information. Connection-oriented service provides sequenced information transfer, flow control, and error recovery. (2) A sublayer of the OSI link layer that defines formats and protocols for exchanging frames between LLC sublayers attached to a local area network. It has provisions that ensure that error-free, nonduplicated, properly ordered frames are delivered to the appropriate data-link user. See also *bridge* and *medium access control (MAC)*.

**logical link control (LLC) protocol.** In a local area network, the protocol that governs the exchange of transmission frames between data stations independently of how the transmission medium is shared. (T) The LLC protocol was developed by the IEEE 802 committee and is common to all LAN standards.

**logical link control (LLC) protocol data unit.** A unit of information exchanged between link stations in

different nodes. The LLC protocol data unit contains a destination service access point (DSAP) address, a source service access point (SSAP), a control field, and user data. See *logical link control (LLC)*.

**logical link control (LLC) sublayer.** One of two sublayers of the ISO Open Systems Interconnection data link layer (which corresponds to the SNA data link control layer), proposed for LANs by the IEEE Project 802 Committee on Local Area Networks and the European Computer Manufacturers Association (ECMA). It includes those functions unique to the particular link control procedures that are associated with the attached node and are independent of the medium; this allows different logical link protocols to coexist on the same network without interfering with each other. The LLC sublayer uses services provided by the medium access control (MAC) sublayer and provides services to the network layer.

## M

**MAC.** Medium access control.

**management information base (MIB).** A collection of objects that can be accessed by means of a network management protocol.

**MB.** (1) For processor storage and real and virtual memory, 1048 576 bytes. (2) For disk storage capacity and transmission rates, 1 000 000 bytes.

**Mb.** Megabit.

**media access control (MAC).** In FDDI, the portion of the data link layer responsible for scheduling and routing data transmissions on a shared medium local area network, for example, an FDDI ring.

**medium access control (MAC).** (1) The sublayer of the data link control layer that supports media-dependent functions and uses the services of the physical layer to provide services to the logical link control sublayer. The MAC sublayer includes the medium-access port. See *logical link control (LLC)*. (2) For local area networks, the method of determining which device has access to the transmission medium at any time.

**medium access control (MAC) frame.** In the IBM Token-Ring Network: (1) An address resolution request frame that has the unique part of a destination address and an "all rings" address. A sender issues this request to determine the ring where the destination station is located and whether the node is active. (2) Response from an active destination node to the requesting source node, providing the source node with the complete address and ring number of the destination node.

**medium access control (MAC) procedure.** In a local area network, the part of the protocol that governs access to the transmission medium independently of the physical characteristics of the medium, but takes into account the topological aspects of the network, in order to enable the exchange of data between data stations.

**medium access control (MAC) protocol.** (1) In a local area network, the protocol that governs access to the transmission medium, taking into account the topological aspects of the network, in order to enable the exchange of data between data stations. (T) See also *logical link control protocol*. (2) The LAN protocol sublayer of data link control (DLC) protocol that includes functions for adapter address recognition, copying of message units from the physical network, and message unit format recognition, error detection, and routing within the processor.

**medium access control (MAC) segment.** An individual LAN communicating through the medium access control (MAC) layer within this network.

**medium access control (MAC) service data unit (MSDU).** In a medium access control (MAC) frame, the logical link control protocol data unit (LPDU) and the routing information field (if the destination station is located on a different ring).

**medium access control (MAC) sublayer.** In a local area network, the part of the data link layer that applies a medium access method. The MAC sublayer supports topology-dependent functions and uses the services of the physical layer to provide services to the logical link control sublayer. (T)

**medium access control (MAC) subvector.** A group of related fields within a medium access control (MAC) major vector.

**medium access control (MAC) vector.** The medium access control (MAC) frame information field.

**memory.** All of the addressable storage space in a processing unit and other internal storages that is used to execute instructions. (T)

**MIB.** (1) Management information base. (2) MIB module.

## N

**NetBIOS.** Network Basic Input/Output System. An operating system interface for application programs used on IBM personal computers that are attached to the IBM Token-Ring Network. See also *BIOS*.

**network.** (1) An arrangement of nodes and connecting branches. (T) (2) A configuration of data processing

devices and software connected for information interchange. (3) A signal path connecting input/output devices to a system. A network can consist of multiple LAN segments connected together with bridging products. See ring (network). (4) The interconnection of two or more subnets. See also *Fiber Distributed Data Interface (FDDI) LAN*.

**network address.** See *Internet address*.

**network administrator.** A person who manages the use and maintenance of a network.

**network architecture.** The logical structure and operating principles of a computer network. (T) See also *systems network architecture (SNA)* and *Open Systems Interconnection (OSI) architecture*.

**Note:** The operating principles of a network include those of services, functions, and protocols.

**network identifier (ID).** A 1- to 8-byte customer-selected name or an 8-byte IBM-registered name that uniquely identifies a specific subnetwork.

**network management.** The process of planning, organizing, and controlling a communications-oriented system.

**network management station (NMS).** The system responsible for managing a network or a portion of a network. The NMS talks to network management agents, that reside in the managed nodes, by means of a network management protocol. See also *agent*.

**network manager.** A program or group of programs that is used to monitor, manage, and diagnose the problems of a network.

**network operator.** (1) A person or program responsible for controlling the operation of all or part of a network. (2) In a multiple-domain network, a person or program responsible for controlling all domains.

## O

**operating system (OS).** Software that controls the execution of programs and that may provide services such as resource allocation, scheduling, input/output control, and data management. Although operating systems are predominantly software, partial hardware implementations are possible. (T)

**Operating System/2 (OS/2).** A set of programs that control the operation of high-speed large-memory IBM personal computers (such as the IBM Personal System/2 computer, Models 50 and above), providing multitasking and the ability to address up to 16 MB of memory. Contrast with *IBM Disk Operating System (DOS)*.

**option.** (1) A specification in a statement that can be used to influence the execution of the statement. (2) A hardware or software function that can be selected or enabled as part of a configuration process. (3) A piece of hardware (such as a network adapter) that can be installed in a device to modify or enhance device function.

**OS.** Operating system.

## P

**packet.** (1) In data communication, a sequence of binary digits, including data and control signals, that is transmitted and switched as a composite whole. (I) (2) Synonymous with *data frame*. Contrast with *frame*.

**panel.** A formatted display of information that appears on a display screen.

**parameter.** (1) A variable that is given a constant value for a specified application and that may denote the application. (I) (A) (2) An item in a menu or for which the user specifies a value or for which the system provides a value when the menu is interpreted. (3) Data passed between programs or procedures.

**path.** (1) In a network, any route between any two nodes. A path may include more than one branch. (T) (2) The route traversed by the information exchanged between two attaching devices in a network. (3) The series of transport network components (path control and data link control) that are traversed by the information exchanged between two network accessible units (NAUs). A path consists of a virtual route and its route extension, if any. See also *explicit route (ER)*, *route extension (REX)* and *virtual route (VR)*.

**personal computer (PC).** (1) A microcomputer primarily intended for stand-alone use by an individual. (T) (2) A desk-top, floor-standing, or portable microcomputer that usually consists of a system unit, a display monitor, a keyboard, one or more diskette drives, internal fixed-disk storage, and an optional printer. PCs are designed primarily to give independent computing power to a single user and are inexpensively priced for purchase by individuals or small businesses.

**pointer.** (1) An identifier that indicates the location of an item of data. (A) (2) A data element that indicates the location of another data element. (T) (3) A physical or symbolic identifier of a unique target.

**port.** (1) An access point for data entry or exit. (2) A connector on a device to which cables for other devices such as display stations and printers are attached. Synonymous with *socket*. (3) The representation of a physical connection to the link hardware. A port is sometimes referred to as an adapter, however, there

can be more than one port on an adapter. A single DLC process can control one or more ports. (4) An abstraction used by transport protocols to distinguish among multiple destinations within a host machine. (5) In FDDI, a PHY entity and a PMD entity in a node, together creating a PHY/PMD pair, that can connect to the fiber media and provide one end of a physical connection with another node.

**port number.** The identification of an application entity to the transport service in IP.

**POST.** Power-on self-test.

**power-on self-test (POST).** A series of diagnostic tests that are run automatically by a device when the power is switched on.

**problem determination.** The process of determining the source of a problem; for example, a program component, a machine failure, telecommunication facilities, user or contractor-installed programs or equipment, an environment failure such as a power loss, or user error.

**procedure.** A set of instructions that gives a service representative a step-by-step procedure for tracing a symptom to the cause of failure.

**protocol.** (1) A set of semantic and syntactic rules that determines the behavior of functional units in achieving communication. (I) (2) In Open Systems Interconnection architecture, a set of semantic and syntactic rules that determine the behavior of entities in the same layer in performing communication functions. (T) (3) In SNA, the meanings of, and the sequencing rules for, requests and responses used for managing the network, transferring data, and synchronizing the states of network components.

## R

**read-only memory (ROM).** (1) A storage device in which data, under normal conditions, can only be read. (T) (2) Memory in which stored data cannot be modified by the user except under special conditions.

**remote.** Pertaining to a system, program, or device that is accessed through a telecommunication line. Contrast with *local*. Synonym for *link-attached*.

**remote program load.** A function provided by adapter hardware components and software that enables one computer to load programs and operating systems into the memory of another computer, without requiring the use of a diskette or fixed disk at the receiving computer.

**return code.** (1) A value (usually hexadecimal) provided by an adapter or a program to indicate the result of an action, command, or operation. (2) A code

used to influence the execution of succeeding instructions. (A)

**ring attaching device.** In a ring network, any device equipped with an adapter that is physically attached to the ring.

**ring network.** (1) A network configuration in which devices are connected by unidirectional transmission links to form a closed path. (2) A network in which every node has exactly two branches connected to it and in which there are exactly two paths between any two nodes. (T) See also *star/ring network*, *Token-Ring network*.

**ring segment.** A ring segment is any section of a ring that can be isolated (by unplugging connectors) from the rest of the ring. A segment can consist of a single lobe, the cable between access units, or a combination of cables, lobes, and/or access units. See *cable segment*, *LAN segment*.

**ring status.** The condition of the ring.

**ROM.** Read-only memory. (A)

**router.** (1) A computer that determines that path of network traffic flow. The path selection is made from several paths based on information obtained from specific protocols, algorithms that attempt to identify the shortest or best path, and other criteria such as metrics or protocol-specific destination addresses. (2) An attaching device that connects two LAN segments, which use similar or different architectures, at the reference model network layer. Contrast with *bridge* and *gateway*. (3) In OSI terminology, a router is a network layer intermediate system.

**routing.** (1) The assignment of the path by which a message is to reach its destination. (2) In SNA, the forwarding of a message unit along a particular path through a network, as determined by parameters carried in the message unit, such as the destination network address in a transmission header.

**routing protocol.** A technique for each router to find another router and to keep up to date about the best way to get to every network. Examples of routing protocols are: Routing Information Protocol (RIP), Hello, and Open Shortest Path First (OSPF).

## S

**segment.** (1) In the IBM Token-Ring Network, a section of cable between components or devices. A segment can consist of a single patch cable, several patch cables that are connected, or a combination of building cable and patch cables that are connected. (2) The unit of transfer between TCP functions in different machines. Each segment contains control and

data fields whereby the current byte stream position and actual data bytes are identified along with a checksum to validate received data. (3) In an OS/2 program, a variable-length area of contiguous storage addresses not exceeding 64 KB. See also *data segment*, *cable segment*, *LAN segment*, *ring segment*.

**select.** The process of choosing a single symbol or menu item by placing the cursor on it and clicking the mouse button. To select multiple symbols simultaneously, press and hold the Shift key down while clicking on the symbols you want to select.

**server.** (1) A functional unit that provides shared services to workstations over a network; for example, a file server, a print server, a mail server. (T) (2) In a network, a data station that provides facilities to other stations; for example, a file server, a print server, a mail server. (A) (3) A class of adapter in a network node that performs local processing and does not have any physical connections to other devices (as do port adapters and trunk adapters). (4) A device, program, or code module on a network dedicated to providing a specific service to a network.

**session.** (1) In network architecture, for the purpose of data communication between functional units, all the activities which take place during the establishment, maintenance, and release of the connection. (T) (2) A logical connection between two network accessible units (NAUs) that can be activated, tailored to provide various protocols, and deactivated, as requested. Each session is uniquely identified in a transmission header (TH) accompanying any transmissions exchanged during the session. (3) The period of time during which a user of a terminal can communicate with an interactive system, usually, elapsed time between logon and logoff.

### Simple Network Management Protocol (SNMP).

(1) An IP network management protocol that is used to monitor routers and attached networks. (2) A TCP/IP-based protocol for exchanging network management information and outlining the structure for communications among network devices. SNMP is an application layer protocol. Information on devices managed is defined and stored in the application's Management Information Base (MIB).

**socket.** (1) In the AIX operating system: (a) A unique host identifier created by the concatenation of a port identifier with a transmission control protocol/Internet protocol (TCP/IP) address. (b) A port identifier. (c) A 16-bit port number. (d) A port on a specific host; a communications end point that is accessible through a protocol family's addressing mechanism. A socket is identified by a socket address. See also *socket address*. (2) An IP address and port number pairing. (3) In TCP/IP, the Internet address of the host computer on which the application runs, and the port

number it uses. A TCP/IP application is identified by its socket. (4) Synonym for *port* (2).

**switch.** (1) On an adapter, a mechanism used to select a value for, enable, or disable a configurable option or feature. (2) In CallPath, equipment that makes, breaks, or changes the connections between telephone lines to establish, terminate, or change a telephone call. Private branch exchange switches reside on a customer's premises, while central office switches reside within the telephone service provider's network.

**switch feature.** A service provided by the switch that can be invoked by a program or by manual phoneset activity. "Do not disturb" is an example of a switch feature.

**system.** In data processing, a collection of people, machines, and methods organized to accomplish a set of specific functions. (1) (A)

**system configuration.** A process that specifies the devices and programs that form a particular data processing system.

## T

**TCP.** Transmission Control Protocol.

**TCP/IP.** Transmission Control Protocol/Internet Protocol.

**telecommunication-attached.** Pertaining to the attachment of devices by teleprocessing lines to a host processor. Synonym for *remote*. Contrast with *channel-attached*.

**token.** (1) In a local area network, the symbol of authority passed successively from one data station to another to indicate the station temporarily in control of the transmission medium. Each data station has an opportunity to acquire and use the token to control the medium. A token is a particular message or bit pattern that signifies permission to transmit. (T) (2) A sequence of bits passed from one device to another along the token ring. When the token has data appended to it, it becomes a frame.

**Token Ring.** (1) A network with a ring topology that passes tokens from one attaching device to another; for example, the IBM Token-Ring Network. See also *local area network (LAN)*. (2) A group of interconnected Token Rings.

**Token-Ring network.** (1) A ring network that allows unidirectional data transmission between data stations, by a token passing procedure, such that the transmitted data return to the transmitting station. (T) (2) A

network that uses a ring topology, in which tokens are passed in a sequence from node to node. A node that is ready to send can capture the token and insert data for transmission. (3) A group of interconnected Token Rings.

**Transmission Control Protocol (TCP).** (1) A communications protocol used in Internet and in any network that follows the U.S. Department of Defense standards for inter-network protocol. TCP provides a reliable host-to-host protocol between hosts in packet-switched communications networks and in interconnected systems of such networks. It assumes that the Internet protocol is the underlying protocol. (2) A transport protocol in the Internet suite of protocols that provides reliable, connection-oriented, full-duplex data stream service.

**Transmission Control Protocol/Internet Protocol (TCP/IP).** (1) A set of protocols that allow cooperating computers to share resources across a heterogeneous network. (2) A set of communication protocols that support peer-to-peer connectivity functions for both local and wide area networks.

**transmission frame.** (1) In data transmission, data transported from one node to another in a particular format that can be recognized by the receiving node. In addition to a data or information field, a frame has some kind of delimiter that marks its beginning and end and usually control fields, address information that identifies the source and destination, and one or more check bits that allow the receiver to detect any errors that occur after the sender has transmitted the frame. (2) In synchronous data link control (SDLC), the vehicle for every command, every response, and all information that is transmitted using SDLC procedures. Each frame begins and ends with a flag. (3) In high level data link control (HDLC), the sequence of contiguous bits bracketed by and including opening and closing flag (01111110) sequences. (4) In a Token-Ring network, a bit pattern containing data that a station has inserted for transmission after capturing a token.

**transmit.** To send information from one place for reception elsewhere. (A)

## U

**UDP.** User Datagram Protocol.

**UNIX operating system.** An operating system developed by Bell Laboratories that features multiprogramming in a multiuser environment. The UNIX operating system was originally developed for use on minicomputers, but has been adapted for mainframes and microcomputers.

**Note:** The AIX operating system is IBM's implementation of the UNIX operating system.

**User Datagram Protocol (UDP).** (1) In TCP/IP, a packet-level protocol built directly on the Internet Protocol layer. UDP is used for application-to-application programs between TCP/IP host systems. (2) A transport protocol in the Internet suite of protocols that provides unreliable, connectionless datagram service. (3) The Internet Protocol that enables an application programmer on one machine or process to send a datagram to an application program on another machine or process. UDP uses the internet protocol (IP) to deliver datagrams.

## V

**version.** A separately licensed program, based on an existing licensed program, that usually has significant new code or new function.

## W

**WAN.** Wide area network.

**wide area network (WAN).** (1) A network that provides communication services to a geographic area larger than that served by a local area network or a metropolitan area network, and that may use or provide

public communication facilities. (T) (2) A data communications network designed to serve an area of hundreds or thousands of miles; for example, public and private packet-switching networks and national telephone networks. Contrast with *local area network (LAN)* and *metropolitan area network (MAN)*.

**window.** (1) In computer graphics, a predetermined part of a virtual space. (2) A division of a screen in which one of several programs being executed concurrently can display information. (3) One or more parts of a display screen with visible boundaries in which information is displayed. (4) See also *help window*.

**wrap test.** A test that checks attachment or control unit circuitry without checking the mechanism itself by returning the output of the mechanism as input; for example, when unrecoverable communication adapter or machine errors occur, a wrap test can transmit a specific character pattern to or through the modem in a loop and then compare the character pattern received with the pattern transmitted. See also *optical wrap*.

---

# Index

## C

client setup for DHCP 2-1  
client setup for RPL 2-1  
CONFIG.SYS for RPL 2-5

## D

DHCP, enabling 2-2

## E

enabling DHCP 2-2  
enabling RPL 2-2

## L

LAN adapter management agent 4-1  
LAN Client installation 3-3

## M

messages, RPL 2-6

## O

OS/2 LAN server to support RPL 2-3

## R

reference documentation 3-4  
related publications v  
remote program load  
    client setup 2-1  
    description 2-1  
    messages 2-6  
    troubleshooting 2-10  
Route Switching  
    configuring 5-1  
RPL support for LAN server 2-3  
RPL, enabling 2-2