

Using AIX Fast Connect for Preflighting Jobs

Contents

Install and Configure AIX Fast Connect for Windows

If you submit jobs from an Infoprint Submit client on Windows 95, windows 98, or Windows NT system, you can decide to share files between your Infoprint AIX server and your Infoprint Submit client. By following the procedure described in Configuring Infoprint Manager to Support Saving RIP Files and Preflighting from Submit, you can create an /**ipdata** file system.

The /**ipdata** file system provides a two-way connection between the client machine from which the job tickets have been submitted and the server that sends them to the printer. By default, Infoprint provides the adobe Acrobat Reader so you can preview PostScript, PDF and TIFF files before they are sent to the printer. If you select the AFP Workbench viewer as your RIPed file viewer, you can view AFP, GIF, and JPEG RIP files before printing them.

Because the raster image processor (RIP) file is generated during the printing process, you can use the /**ipdata** file system to save your RIP files for reprinting jobs instead of having to RIP them again. This feature can save both time and money. The /**ipdata** file system provides a two-way connection between the client machine from which the job tickets have been submitted and the server that sends them to the printer. By default, Infoprint provides the adobe Acrobat Reader so you can preview PostScript, PDF and TIFF files before they are sent to the printer. If you select the AFP Workbench viewer as your RIPed file viewer, you can view AFP, GIF, and JPEG RIP files before printing them.

On an Infoprint Manager for AIX Version 3.2.0 system, Configure Infoprint Manager for AIX to support preflighting jobs from the submit application, Saving RIP files on the server, or to support the Infoprint Library feature requires NFS or other file sharing between workstations and the Infoprint Manager server.

If you plan to connect your AIX server to Windows work stations or servers and your Infoprint AIX server is running AIX 4.3.3 or higher, the IBM package, Fast Connect for POWER Version 3.1, is required. Fast Connect supports a NetBIOS connection. To access current information supporting the fast Connect package, specify the following url in your browser:

http://www.ibm.com/servers/aix/products/ibmsw//manage/fastconn.html.

Note: When you install this product on your Infoprint AIX server, you may receive a failure notification on fileset **cifs.base.ldap 3.1.0.0**, asking you to install fileset **ldap.client.rte 3.1.1.5** before proceeding. If you are using the product to connect to Windows workstations, you can ignore this message and proceed to "Setting Up Fast Connect for Infoprint Manager" on page 2.

If you are running on AIX 4.3.2 or earlier, you must use Fast Connect 2.1. To ensure connectivity with this level, verify that you have installed authorized program analysis reports (APARs) IY08760 and IY09003. This ensures that the following two filesets have been installed at the specific level:

- cifs.basic.rte 2.1.1.13
- cifs.base.cmd 2.1.1.11

If you use Netware with Submit or if you use Macintosh with Submit, contact your IBM SE for configuration assistance or platform specific recommendations regarding software support.

Setting Up Fast Connect for Infoprint Manager

After installing AIX Fast Connect on your AIX server, you must do the following:1. Open a dtterm window, type smit. The following screen displays.

| _ | System Management Interface Tool : root@prince | • |
|-----------------|---|--------------|
| E <u>x</u> it S |)how | <u>H</u> elp |
| Return | To: | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| System | I Management | |
| Sof | tware Installation and Maintenance | |
| Sof: | tware License Management | |
| | | |
| Sys | tem Storage Management (Physical & Logical Storage) | |
| | urity & Users | |
| | nmunications Applications and Services | |
| Prin | t Spooling | |
| | print Printing System | |
| Prol | blem Determination | |
| Per | formance & Resource Scheduling | |
| | tem Environments | |
| Pro- | cesses & Subsystems | |
| | ilications | |
| J Usir | ng SMIT (Information only) | |
| | Cancel | |
| | | |
| | | |

2. Select **Communications Applications and Services** and the following window displays.

| System Management Interface Tool : root@prince | • 🗆 |
|--|--------------|
| E <u>x</u> it <u>S</u> how | <u>H</u> elp |
| Return To: | |
| System Management | |
| | |
| Communications Applications and Services | |
| TCP/IP | |
| NFS | |
| PSF Direct | |
| AIX Fast Connect | |
| | |
| Cancel | |

3. Select **AIX Fast Connect** and the following window displays.

| _ | System Management Interface Tool : root@ muffins | • 🗆 |
|---|--|--------------|
| E | E <u>x</u> it <u>S</u> how | <u>H</u> elp |
| F | Return To: | |
| | System Management | |
| | Communications Applications and Services | |
| Ľ | | |
| A | IX Fast Connect | |
| | Start Server | |
| | Stop Server | |
| | Configuration | |
| | Administration | |
| | Server Shares | |
| | | |
| | | |
| H | | |
| | Cancel | |
| | | |

4. Select **Configuration** and the following window displays.

| System Management Interface Tool : root@prince | • |
|--|--------------|
| E <u>x</u> it <u>S</u> how | <u>H</u> elp |
| Return To: | |
| System Management | |
| Communications Applications and Services | |
| AIX Fast Connect | |
| | |
| Configuration | |
| Attributes | |
| Resources | |
| Fast Connect Users | |
| NetBIOS Name Server (NBNS) | |
| | |
| | |
| | |
| | |
| | |
| Cancel | |
| | |

5. Select **Attributes** and the following window displays.

| Attrib | outes : root@muffins | | |
|--|----------------------|------|---|
| * Server Name | muffins | | |
| Start Server | Now | List | |
| * Domain Name | WORKGROUP | | |
| Description | Fast Connect Server | | |
| Server alias(es) | | | |
| WINS Address | 9.99.161.23 | | |
| Backup WINS address | 9.99.161.24 I | | |
| Proxy WINS Server | ۆ v ff | List | |
| NetBIOS Name Server (NBNS) | Įon | List | |
| Use Encrypted Passwords | Negotiate Encryption | List | |
| Passthrough Authentication Server | Ĭ | | |
| Backup Passthrough Authentication Server | Ĭ | | |
| Allow DCE/DFS access | žno | List | |
| Enable network logon server for client PCs | [disabled | List | |
| Client startup script file name | [startup.bat | | |
| Guest logon support | [disabled | List | |
| Guest logon ID | ľnobody | List | |
| Enable client user name mapping | Žyes | List | |
| Enable share level security | jno 🛛 | List | |
| Share level security user login | ľnobody | List | |
| Enable opportunistic locking | ýes | List | |
| Enable search caching | <u>į</u> no | List | |
| Enable send file API support | įno | List | |
| OK Command | Reset Cance | | ? |

When the **Attributes** window displays, notice that your server name appears by default. Use the default values with the following exceptions:

- For the Start Server field, select Now from the list.
- For the **Use Encrypted Passwords** field, select **Negotiate Encryption** from the list.

If your configuration supports more than one domain, you must use the **WINS Address** field to specify the IP address for the Windows Internet Name service

(WINS) server on the Infoprint Windows server with which you plan to interoperate. Note that you must specify this address if you choose not to specify the **Domain Name** field.

For the **Domain Name** field, ensure that you specify the domain name (WORKGROUP in this example) for the group of Infoprint servers that interoperate to provide resources as a single unit. Note that this example specifies both a **WINS Address** field value and a **Domain Name** field value.

- 6. Once you have completed specifying these values, press the OK button.
- 7. Once successful, return to the SMIT window displayed within steps 3 and 4 of this procedure to stop and start the AIX Fast Connect server so these changes can take effect.

Configure Infoprint Manager to Support Saving RIP Files and Preflighting from Submit

If you have installed Fast Connect and you use Submit from Microsoft Windows workstations, you can configure Infoprint Manager with user access and a shared directory that Infoprint Manager will use for saving processed or rasterized files. This directory is also used when users preview Postscript files from the Infoprint Manager Submit application.

To configure:

- 1. From a dtterm window as **root**, specify cd/usr/lpp/InfoPrint/install/bin.
- 2. Using your AIX editor of choice, edit the **claimdrive.ksh** file to change line 25 from

=VGNAME='mkvg -f -y\$NEWVG -s '8' \$DEFAULT HDISK'

to

```
=VGNAME='mkvg -f -y$NEWVG -s '16'
$DEFAULT HDISK'
```

3. From the dtterm window, type SMIT so that the screen on the following page displays:

| System Management Interface Tool : root@prince | • |
|--|--------------|
| Exit Show | <u>H</u> elp |
| Return To: | |
| | |
| | |
| | |
| | |
| | |
| 2 | |
| System Management | |
| Software Installation and Maintenance | |
| Software License Management | |
| | |
| System Storage Management (Physical & Logical Storage) | |
| Security & Users | |
| Communications Applications and Services | |
| Print Spooling | |
| Infoprint Printing System | |
| Problem Determination | |
| Performance & Resource Scheduling | |
| | |
| Processes & Subsystems | |
| Applications | |
| J Losing Smirt (Information only) | |
| Cancel | |
| | |

4. Select Infoprint Printing System, and the following screen displays:

| System Management Interface Tool : root@prince | • |
|--|--------------|
| E <u>x</u> it <u>S</u> how | <u>H</u> elp |
| Return To: | |
| System Management | |
| | |
| | |
| | |
| Infoprint Printing System | |
| Start/Stop Servers | |
| Migration Tools | |
| Troubleshooting | |
| Production Print Operations | |
| Miscellaneous | |
| Submit an Infoprint Job | |
| Security | |
| Infoprint Utilities | |
| | |
| Cancel | |
| | |

5. Select Infoprint Utilities, and the following screen displays:

| System Management Interface Tool : root@prince | • |
|--|--------------|
| E <u>x</u> it <u>S</u> how | <u>H</u> elp |
| Return To: | |
| System Management | |
| Infoprint Printing System | |
| | |
| | |
| | |
| | |
| Infoprint Utilities | |
| Add or Remove Languages | |
| Claim New Disk for Use With Infoprint | |
| Configure Fast Connect for Infoprint Manager | |
| Configure Infoprint Library | |
| Configure Modern for Dial-Up Diagnostics | |
| Configure Secondary Servers (NFS) | |
| Create Default Users | |
| Enable/Disable Autostart | |
| Notification Daemon | |
| SAP Callback Daemons | |
| Print Test Job | |
| Tune System Performance | |
| Cancel | |

6. Now select **Configure Fast Connect for Infoprint Manager**, and the following screen displays:

| 🗕 🛛 System Management Interface Tool : root@prince 🛛 🕞 |
|--|
| E <u>x</u> it <u>S</u> how <u>H</u> elp |
| Return To: |
| System Management |
| Infoprint Printing System |
| Infoprint Utilities |
| |
| |
| Oraclinum Frank Oraca et fan lefendet Manager |
| Configure Fast Connect for Infoprint Manager |
| Enable Windows N172000 namespace shaning with AIX server |
| Both |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| |
| Cancel |

7. Select Enable Submit Preflighting and file sharing.

An animated icon of a running man will raise his arms when the setup is complete. Your AIX system will now have a shared directory (**/ipdata**) that some Infoprint application use for saving files and sharing data.