

## Laptop Quick Reference Guide

Since a laptop computer does not have the POS such as the printer, scanner, MSR, Presence Sensor, etc., the interface with these devices is simulated through the use of keystrokes on a laptop computer.

The following table summarizes the keystrokes and their functions when the NetVista Town demo is installed on a laptop computer.

<b>Keystroke</b>	<b>Function</b>
MOUSE CLICK	Simulates touching the kiosk screen.
SPACEBAR	Simulates swiping the NetVista Customer Card through the MSR.
ENTER	Simulates scanning the barcode on the back of the NetVista Customer Card.
SHIFT	Simulates swiping the NetVista Employee card through the MSR.
BACKSPACE	Simulates scanning the barcode on the back of the NetVista Employee card.

**Note: All other operations of the NetVista Town demo are as described in this document. These keystroke commands are also valid when a keyboard is connected on the NetVista Kiosk.**