



Version 3.5.0.4



## Nortel CDMA Gateway User Guide

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

---

---

**Note:** Before using this information and the product it supports, read the information in Notices on page 28.

This edition applies to IBM® Tivoli® Netcool® Performance Manager for Wireless and to all subsequent releases and modifications until otherwise indicated in new editions.

© Copyright International Business Machines Corporation, 2010. All rights reserved.

US Government Users Restricted Rights - Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

# Table of Contents

<b>1</b>	<b>About this Documentation</b> .....	<b>1</b>
1.1	Audience .....	1
1.2	Required Skills and Knowledge .....	1
<b>2</b>	<b>Overview</b> .....	<b>2</b>
2.1	The Gateway Framework.....	2
2.2	Nortel CDMA Gateway Overview.....	2
2.2.1	Network Details.....	2
2.2.2	DMS Operational Measurements .....	2
2.2.3	SDM .....	3
2.2.4	SDM File Transfer.....	3
2.2.5	Nortel MTX.....	3
2.2.6	Nortel EVDO .....	5
2.2.7	Nortel RAN.....	8
2.2.8	Nortel PDSN .....	10
2.2.9	Architectural extensions.....	12
<b>3</b>	<b>Engine Rules and Configuration</b> .....	<b>13</b>
3.1	Nortel_MTX_Table .....	13
3.1.1	Rule Configuration .....	13
3.1.2	PIF naming convention .....	13
3.2	Nortel_EVDO .....	13
3.2.1	Rule Configuration .....	13
3.2.2	PIF naming convention .....	16
3.2.3	Nortel_EVDO_Hierarchy_Config .....	16
3.2.4	CARD_INFO .....	17
3.3	BSMMAP_PARSER.....	18
3.3.1	Rule Configuration .....	18
3.3.2	PIF Naming Convention.....	19
3.4	Nortel_PDSN.....	19
3.4.1	Rule Configuration .....	19
	PIF Naming Convention.....	20
<b>4</b>	<b>Post Parser Rules and Configuration</b> .....	<b>22</b>
<b>5</b>	<b>Virtuo DA Configuration</b> .....	<b>23</b>

---

---

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

---

---

5.1	MTX Table .....	23
5.1.1	DA Configuration.....	23
5.2	BSMmap.....	24
5.2.1	DA Configuration.....	24
5.3	MTX Password Rotation.....	26
<b>6</b>	<b>Configuration Support.....</b>	<b>27</b>
<b>Appendix A</b>	<b>Notices and Trademarks.....</b>	<b>28</b>

## References

Name	Description
Gateway Framework User Guide	This use guide describes in detail the functionality of the Gateway Framework, and the standard suite of tools available.
CDMA System Performance Guide	CDMA System Performance – Operational Measurements Guide 411-2133-525
DMS-MTX Operational Measurements Reference Manual	This user guide defines the operational measurement (OM) groups and registers applicable only to a DMS-MTX cellular telephone system. – 411-2131-814.15.17 - September 2005
Nortel DO-EMS User Guide	Nortel CDMA2000 1xEV-DO Element Management Subsystem (DO-EMS) User Guide – 411-2133-927.01.18 - Standard April 2004

# Glossary

PIF	Parser Intermediate Format
LIF	Loader Input Format
1xEVDO	1X Evolution Data Only.
BSS	Base Station Subsystem
BSC	Base Station Controller
RNC	Radio Network Controller
DOM	Data Only Module
PIF	Parser Intermediate Format
LIF	Loader Input Format
1xEVDO	1X Evolution Data Only.
BSS	Base Station Subsystem
BSC	Base Station Controller
RNC	Radio Network Controller

# 1 About this Documentation

## 1.1 Audience

The target audience of this document is IBM Performance Manager for Wireless customers. They should be familiar with telecommunication and IT principles and should also have a good understanding of Solaris.

---

**IMPORTANT:** Before attempting an installation of Performance Manager for Wireless you are strongly advised to read the release notes and any readme files distributed with your Performance Manager for Wireless software. Readme files and release notes may contain information specific to your installation not contained in this guide. Failure to consult readme files and release notes may result in a corrupt, incomplete or failed installation.

---

**Note:** Performance Manager for Wireless Administrators should not, without prior consultation and agreement from IBM, make any changes to the Index Organized tables or database schema. Changes to the Index Organized tables or database schema may result in corruption of data and failure of the Performance Manager for Wireless System. This applies to all releases of Performance Manager for Wireless using all versions of interfaces.

---

## 1.2 Required Skills and Knowledge

This guide assumes you are familiar with the following:

- General IT Principles
- Sun Solaris Operating System
- Oracle Database
- Windows operating systems
- Graphical User Interfaces
- Network Operator's OSS and BSS systems architecture

This guide also assumes that you are familiar with your company's network and with procedures for configuring, monitoring, and solving problems on your network.

## 2 Overview

### 2.1 The Gateway Framework

The Nortel CDMA Gateway, referred to as the Vendor Gateway, uses the Gateway Framework as a container for the execution of its engine and post parser stages. The Gateway Framework and Vendor Gateway are decoupled into two separate installations. The Gateway Framework consists of a library of Perl modules that provide functionality such as:

- a container for the execution of the Vendor Engine and Post Parser rules for data transformation
- Intermediate (PIF) and output data (LIF) storage and management
- logging utilities
- cleanup and crash recovery
- statistics gathering

The Vendor Gateway plugs into the Gateway Framework and extends this functionality to provide the final Gateway that parses the vendor data.

More information on the standard Gateway configuration is contained in the Gateway Framework User Guide. Only vendor specific configuration details will be described in this document.

### 2.2 Nortel CDMA Gateway Overview

#### 2.2.1 Network Details

The Nortel CDMA performance and configurations are obtained for the following network elements:

- Nortel MTX
- Nortel EVDO
- Nortel RAN
- Nortel PDSN

#### 2.2.2 DMS Operational Measurements

Operational Measurements (OMs) are counts of call processing events that provide the operating company with performance data for the DMS-MTX system. System engineers use OM records to ensure that the DMS-MTX switch operates efficiently. OMs provide information regarding system performance, grade of service being offered, connecting facilities, performance, and traffic levels of various elements internal to and connected to the system.

Each time a call is initiated, handed off, or terminated, different call processing events take place within the DMS-MTX system. The basic operation of the Operational Measurement (OM) subsystem is to monitor and count these events during a given transfer period. The results, known as operational measurements (OMs), are then recorded into a set of active registers in the data store.

### **2.2.3 SDM**

The SuperNode Data Manager (SDM) is a fault-tolerant UNIX-based processing platform that uses Motorola technology, and runs operations, administration, maintenance, and provisioning (OAM&P) software applications. It is a high-performance computing platform connected to the operating company's DMS switch.

The SDM and its applications allow the operating company to off-load its OAM&P processes from the switch. The SDM is connected to the operating company's network through an Ethernet connection to its operations intranet.

### **2.2.4 SDM File Transfer**

File transfer can be accomplished with FTP, Secure File Transfer (SFT), or File Transfer Protocol Proxy (FTPP). In an SFT session, the SFT client can access either the SDM, or the computing module (CM) for the purpose of doing file transfers. A DCE account and password is required to use SFT.

The non-DCE SFT configuration uses standard file transfer protocol (FTP) to send un-encrypted (ASCII text) login UserIDs and passwords across the network from the FTP client to the SFT server.

### **2.2.5 Nortel MTX**

The Nortel MTX performance data are obtained from the SDM, while the configuration data are obtained using the Virtuo DA (Data Acquisition) toolkit from the MTX.

#### **2.2.5.1 Performance Data Layout**

The performance data is known as data collection files. Currently the vendor gateway only supports collection of one file per MSC per period from the SDM.

Below is a sample of performance data:

```
Date, Time, Switch Name, Group Name, Key/Info Field, Reg1 Name, Reg1 Value, Reg2 Name,
Reg2 Value, Reg3 Name, Reg3 Value, Reg4 Name, Reg4 Value, Reg5 Name, Reg5 Value, Reg6
Name, Reg6 Value, Reg7 Name, Reg7 Value, Reg8 Name, Reg8 Value, Reg9 Name, Reg9 Value,
Reg10 Name, Reg10 Value, Reg11 Name, Reg11 Value, Reg12 Name, Reg12 Value, Reg13 Name,
Reg13 Value, Reg14 Name, Reg14 Value, Reg15 Name, Reg15 Value, Reg16 Name, Reg16 Value,
Reg17 Name, Reg17 Value, Reg18 Name, Reg18 Value, Reg19 Name, Reg19 Value, Reg20 Name,
Reg20 Value, Reg21 Name, Reg21 Value, Reg22 Name, Reg22 Value, Reg23 Name, Reg23 Value,
Reg24 Name, Reg24 Value, Reg25 Name, Reg25 Value, Reg26 Name, Reg26 Value, Reg27 Name,
Reg27 Value, Reg28 Name, Reg28 Value, Reg29 Name, Reg29 Value, Reg30 Name, Reg30 Value,
Reg31 Name, Reg31 Value, Reg32 Name, Reg32 Value

08-10-
2006,04:00:02,SNJNPRLGCM1,TRK,BSC01_SBS085.2W.192.192,INCATOT,42,PRERTEAB,0,INFAIL,1,NATM
PT,26,NOVFLATB,0,GLARE,0,OUTFAIL,1,DEFLDCA,0,DREU,0,PREU,0,TRU,271,SBU,0,MBU,0,OUTMTCHF,0,
CONNECT,26,TANDEM,45,AOF,0,ANF,0,TOTU,271,ANSWER,16,INVAUTH,0,BLKCTRK,0,MAXBU,0,TRU2WIN,0,
NCTPASS,0,NCTFAIL,0,ACCCONG,0,NOANSWER,0,NPQUERY,43,NPRES,43,NPBDRTF,0

08-10-
2006,04:00:02,SNJNPRLGCM1,TRK,BSC01_SBS086.TM2.192,INCATOT,30,PRERTEAB,0,INFAIL,0,NATMPT,
16,NOVFLATB,0,GLARE,0,OUTFAIL,0,DEFLDCA,0,DREU,0,PREU,0,TRU,163,SBU,0,MBU,0,OUTMTCHF,0,CON
NECT,16,TANDEM,31,AOF,0,ANF,0,TOTU,163,ANSWER,13,INVAUTH,0,BLKCTRK,0,MAXBU,0,TRU2WIN,0,NCT
PASS,0,NCTFAIL,0,ACCCONG,0,NOANSWER,0,NPQUERY,29,NPRES,29,NPBDRTF,0

08-10-
2006,04:00:02,SNJNPRLGCM1,TRK,JACK.TM2.2,INCATOT,0,PRERTEAB,0,INFAIL,0,NATMPT,0,NOVFLATB,
0,GLARE,0,OUTFAIL,0,DEFLDCA,0,DREU,0,PREU,0,TRU,0,SBU,0,MBU,0,OUTMTCHF,0,CONNECT,0,TANDEM,
```

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

0, AOF, 0, ANF, 0, TOTU, 0, ANSWER, 0, INVAUTH, 0, BLKCTRK, 0, MAXBU, 0, TRU2WIN, 0, NCTPASS, 0, NCTFAIL, 0, ACCCONG, 0, NOAN

**Example 1:**

In Example 1, the values exist for the file header, column-head and data fields. The values for the header fields are described in Table 1.

<i>Header Field</i>	<i>Value</i>	<i>Meaning</i>
Date	08-10-2006	Date of the data
Time	04:00:02	Time of the data
Switch Name	SNJNPRLGCM1	MSC/MTX's name
Group Name	TRK	OM group name
Key/Info Field	BSC01_SBS085.2W.192.192	Key or information field

**Table 1 Header Fields**

<i>Column</i>	<i>Description</i>	<i>Value in the example</i>
Reg1 Name	Measurement name	INCATOT
Reg1 Value	Measurement value	42

**Table 2 Record Header Fields**

**2.2.5.2 Configuration Table Data Layout**

The configuration data is used to do data lookup for the FDN construction. It consists of several configuration tables which are CLLI, CDMACELL, NOISLPP, SBSINV, C7LKSET, NOISBSC. A separate expect script module is used to gather this data from the SDM.

Below is a sample of MTX table data:

```
TABLE: C7RTESET
TOP
      ROUTESET      NETNAME      TFPBCAST      DPC
                        ROUTES
-----
      CAGSTP      PR_MSC3      N      ANSI7 ( 2) ( 46) ( 2)$
      (CAGSTP 0) (SJ_STP 1)$
      SJ_STP      PR_MSC3      N      ANSI7 ( 2) ( 46) ( 1)$
BOTTOM

TABLE: CLLI
TOP
      CLLI ADNUM TRKGRSIZ      ADMININF
-----
      DMODEMC      2      4      NEW_MODEM_3X02CA_CLLI
      DUMPANDRESTORE      28      0      DUMP_AND_RESTORE
```

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

---

---

OFFHKSUP	10	10	SUPERVISION_SIGNAL_OFFHOOK
WINKSUP	20	10	SUPERVISION_SIGNAL_WINK
ONHKSUP	11	10	SUPERVISION_SIGNAL_ONHOOK
TRKLPBK	24	0	TRUNK_LOOP_BACK
BOTTOM			

### **2.2.5.3 File naming specification**

The file naming convention for performance and the configuration data is as follows:

- Performance data:

```
<MSCId>.<FileCreationDate>.<FileCreationTime>.<SwitchName>.<ReportingInterval>.csv
```

<MSCId> is the MSC ID.

<FileCreationDate>.<FileCreationTime> is shortly after the data collection end-time.

<SwitchName> indicates the source MSC

<ReportingInterval> is usually "OT" indicating Office Transfer period.

- Configuration data:

The file naming convention for the configuration file is:

```
mtxid.Tables.YYYYMMDDHHMM.cfg
```

## **2.2.6 Nortel EVDO**

The DO-EMS provides 1xEVDO data records and radio network configuration parameters reports in an ASCII readable format. The DO-EMS produces data using a defined directory structure and file naming convention.

Below provides examples of the data files. For a more detailed discussion the reader should refer to the Nortel documentation.

### **2.2.6.1 Performance Data Layout**

The performance data is known as data collection files, dcFiles, which are located in the WebNMS home directory of the DO-EMS server.

Below is a sample dcFiles:

```
NodeName=RN_10.10.50.59
Category=Abis_InterfaceTraffic
ConfName=AbisTraffic
OIDs(Variables):
Var-1 = 1.3.6.1.4.1.6587.4.30.1.4.1.6(airAbisPeerMsgsSent)
Var-2 = 1.3.6.1.4.1.6587.4.30.1.4.1.5(airAbisPeerHellosReceived)
Var-3 = 1.3.6.1.4.1.6587.4.30.1.4.1.4(airAbisPeerHellosSent)
Var-4 = 1.3.6.1.4.1.6587.4.30.1.4.1.7(airAbisPeerMsgsReceived)
```

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

```

IndexOids:
1.3.6.1.4.1.6587.4.30.1.4.1.1(airAbisPeerIPAddr)
airAbisPeerIPAddr      Time                Var-1  Var-2  Var-3  Var-4
-----
10.10.50.1             02/05/2003 23:57:44    *N/A   N/A    N/A    N/A
10.10.50.1             02/05/2003 23:58:45     N/A    N/A    N/A    N/A
10.10.50.1             02/05/2003 23:59:44     N/A    N/A    N/A    N/A
10.10.50.1             02/06/2003 00:00:46     N/A    N/A    N/A    N/A
*N/A: "not available"

```

**Example 2:**

In Example 2, the values exist for the dcFile header, column-head and data fields. The values for the header fields are described in Table 1.

<i>Header Field</i>	<i>Value</i>	<i>Meaning</i>
NodeName	RN_10.10.50.59	Node on which the data is collected
Category	Abis_InterfaceTraffic	OM template name
ConfName	AbisTraffic	Configuration name (User-specified)
OIDs (Variables): Var-1	1.3.6.1.4.1.6587.4.30.1.4.1.6(airAbnisPeerMsgsSent)	Variable alias 1
OIDs (Variables): Var-2	1.3.6.1.4.1.6587.4.30.1.4.1.5(airAbnisPeerHellosReceived)	Variable alias 2
OIDs (Variables): Var-3	1.3.6.1.4.1.6587.4.30.1.4.1.4(airAbnisPeerHellosSent)	Variable alias 3
OIDs (Variables): Var-4	1.3.6.1.4.1.6587.4.30.1.4.1.7(airAbnisPeerMsgsReceived)	Variable alias 4
IndexOIDs	1.3.6.1.4.1.6587.4.30.1.4.1.1(airAbnisPeerIPAddr)	Instance variable

**Table 3 Header Fields**

<i>Column</i>	<i>Description</i>	<i>Value in the example</i>
Instance	The index OID variable	1.3.6.1.4.1.6587.4.30.1.4.1.1(airAbisPeerIPAddr)
Time	The timestamp of each sampling	The date and time of the timestamp - for example 02/10/2003 15:10:00 in the first row of the data values
Var-1	Variable alias 1	1.3.6.1.4.1.6587.4.30.1.4.1.5(airAbnisPeerHellosReceived) - for example, N/A in the first row of the data values
Var-2	Variable alias 2	1.3.6.1.4.1.6587.4.30.1.4.1.4(airAbnisPeerHellosSent) - for example, N/A in the first row of the data values
Var-3	Variable alias 3	1.3.6.1.4.1.6587.4.30.1.4.1.7(airAbnisPeerMsgsReceived) - for example, N/A in the first row of the data values
Var-4	Variable alias 4	1.3.6.1.4.1.6587.4.30.1.4.1.1(airAbnisPeerIPAddr) - for example, N/A in the first row of the data values

**Table 4 Record Header Fields**

### **2.2.6.2 Configuration Data Layout**

There are 4 configuration data files.

- DOM
- INTERFACE
- IS856CHANNELEMENT
- PDSN

### **2.2.6.3 File naming specification**

The file naming convention for performance and the configuration data is as follows:

- Performance data:

The directory structure for the dcFiles is as follows:

"<EMSdcDirectory>/<Nodename>/<date>/<DC\_Templ\_ConfNam>.dat"

where <date> format is mmddyyy.

In Example 1 above, the directory structure would be:

dcFiles/RN\_10.10.50.59/02112003/Abis\_InterfaceTraffic\_AbisTraffic.dat

- Configuration data:

The file naming convention for the 4 configuration files are:

```
domQueryMMDDYYYY_HHMM.txt
ifQueryMMDDYYYY_HHMM.txt
pnQueryMMDDYYYY_HHMM.txt
pdsnQueryMMDDYYYY_HHMM.txt
```

Every RNC consists of a set of configuration files. Every set of configuration files from the RNC will be transferred into its respective directory using the RNC ID:

dcFiles/<configuration\_file>

## 2.2.7 Nortel RAN

In the Nortel NBSS PM system, counters are grouped by Operational Management groups (OM groups). The counter performance statistics from each OM is collected from the network subsystem (e.g. BTS) and sent to BSSM Manager using an event trigger.

These binary files will be processed by an Nortel internal OM parser to produce raw ASCII text files and available for upload and further processing by the vendor gateway through a standard output directory.

### 2.2.7.1 Performance Data Layout

The raw ASCII text files available for processing as described in 1.1.1 above are available in 2 formats:

- ‘raw text’ format
- ‘logfiltered text’ format

The vendor gateway was designed to process the ‘raw text’ format. The OMs or performance counter groups are identified by the FDN (Fully Distinguished Name) in the header information of the file followed by the OM Sequence Number (s) within the data section in the file.

The Sequence Numbers are located in the second column of the data row which itself consists of 3 columns of values.

- 1<sup>st</sup> column – Data type of the value
- 2<sup>nd</sup> column – Sequence Number
- 3<sup>rd</sup> column – Counter value which may consists of a single value or multiple number array containing values.

It is the sequence number that represents the particular PM counters as described in the document in section 1.1.4 above (under BSC/BSC OM descriptions).

To illustrate the various types of data which need to be processed, in the OM example below, the performance data log is identified as belonging to the **ADVANCEDSECTOR MO** by its FDN of “O%:CCLN-1-CBS1:CELLS-1-CELLS1:MCBTS-1-MC1900BTS1341:MCBTSSUBSYSTEM-1-MCBTSSUBSYSTEM1:ROOT-1-ROOT1:BTSCALLPROCESSING-1-BTSCALLPROCESSING1:ADVANCEDFA-1-ADVANCEDFA1:ADVANCEDSECTOR-1-ADVANCEDSECTOR2”.

<pre>O%:CCLN-1-CBS1:CELLS-1-CELLS1:MCBTS-1-MC1900BTS1341:MCBTSSUBSYSTEM-1- MCBTSSUBSYSTEM1:ROOT-1-ROOT1:BTSCALLPROCESSING-1-BTSCALLPROCESSING1:ADVANCEDFA-1- ADVANCEDFA1:ADVANCEDSECTOR-1-ADVANCEDSECTOR2  7 48 97877  129 97 5 0 0 2287 3447 4154  1025 70 4  0 0 0  0 0 0  0 0 0  0 0 0</pre>
---

**Table 5 NBSS PM records**

The first row of data is found to be "17148197877". Therefore, the Sequence Number is "48", and the data value (i.e., the number of pegs) attributable to that OM is "97877". (In this first example, the Sequence Number has been underlined for clarity.)

The 2<sup>nd</sup> row marked in *italics* (for clarity) refers to the OM sequence number 97 followed by an array of data containing 6 values (marked by an initial value of 6) followed by 6 peg values.

Another example of the OM data that can be found is shown on the 3<sup>rd</sup> row which consist of a complex array type. Here the OM sequence number is 70. The following digit '4' signifies 4 data values each data point consists of an array of 3 values.

As explained above, the sequence number represents the measured counter described in the vendor documentation. Here:

Sequence No. 48 – OverheadForwardLinkUtilUWAvg

Sequence No. 97 – VoiceFchForwardLinkUtilAverage

Sequence No. 70 – PerRingAccessCounts (Attempts, Successes, Failures)

### **2.2.7.2 Configuration Data Layout**

The BSM MAP configuration files are network topology files that will be extracted from the EMS using the Virtu DA. These files contain the topology data for the corresponding Nortel RAN performance data.

Below is a sample BSM MAP records:

```
#
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA3"#   CDMA_FREQ = 475
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA1"#   CDMA_FREQ = 425
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA2"#   CDMA_FREQ = 450

"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA3:AdvancedSector1"#   SectorId = Alpha, #   SectorCellId = 193
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA3:AdvancedSector3"#   SectorId = Gamma, #   SectorCellId = 195
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA3:AdvancedSector2"#   SectorId = Beta, #   SectorCellId = 194
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA1:AdvancedSector2"#   SectorId = Beta, #   SectorCellId = 194
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA1:AdvancedSector1"#   SectorId = Alpha, #   SectorCellId = 193
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA1:AdvancedSector3"#   SectorId = Gamma, #   SectorCellId = 195
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA2:AdvancedSector2"#   SectorId = Beta, #   SectorCellId = 194
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA2:AdvancedSector1"#   SectorId = Alpha, #   SectorCellId = 193
```

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

```
"O%:CBS1:Cells1:Compact1900BTS1012:MCBTSSubsystem1:Root1:BTSCallProcessing1:AdvancedFA2:AdvancedSector3"# SectorId = Gamma, # SectorCellId = 195
```

## Table 6 BSM MAP records

### 2.2.7.3 File naming specification

The file naming for the configuration data is as follows:

These files only define the BTS hierarchy. The association with the MTX is obtained from the filename:

MTX.3.0.200606260230.BSMmap

## 2.2.8 Nortel PDSN

The Nortel PDSN system produces ACII Schema files and ACII Performance data files. Counter names are defined and mapped within the Schema files while the corresponding counter performance statistics are produced in the Performance data files.

The parser maps the counter names to the raw counter values using unique mapping keys present in both the Schema and Performance files.

### 2.2.8.1 Schema layout

The Schema should be configured to have the following format:-

<schema\_type> *schema\_name* <schema\_format>

Below are sample Schema records:

```
system systemsch EMS,PDSNSystem,%date%,%time%,%sess-ttlarrived%,%sess-ttlrejected%,%sess-ttlconnected%,%sess-ttlauthsucc%,%sess-ttlauthfail%,%sess-ttlpcup%,%sess-ttlipcpup%,%sess-ttlsrcviol%,%sess-ttlkeepfail%,%sess-curttlcalls%,%sess-cursipconn%,%sess-curmipconn%,%sess-curactcall%,%sess-curdormcall%,%sess-curarrived%,%sess-curcpnegot%,%sess-curcpup%,%sess-curauth%,%sess-curauthed%,%sess-curipcpup%,%sess-curdisc%,%all-ttlarrived%,%all-ttlrejected%,%all-ttlidemult%,%all-ttldereg%,%all-curactive%,%fa-ttlarrived%,%fa-ttlrejected%,%fa-ttlidemult%,%fa-ttldereg%,%fa-curactive%,%ha-ttlarrived%,%ha-ttlrejected%,%ha-ttlidemult%,%ha-ttldereg%,%ha-curactive%,%sess-callldur-1min%,%sess-callldur-2min%,%sess-callldur-5min%,%sess-callldur-15min%,%sess-callldur-1hour%,%sess-callldur-4hour%,%sess-callldur-12hour%,%sess-callldur-24hour%,%sess-callldur-over24hour%,%sess-setuptime-100ms%,%sess-setuptime-200ms%,%sess-setuptime-300ms%,%sess-setuptime-400ms%,%sess-setuptime-500ms%,%sess-setuptime-600ms%,%sess-setuptime-700ms%,%sess-setuptime-800ms%,%sess-setuptime-900ms%,%sess-setuptime-1sec%,%sess-setuptime-2sec%,%sess-setuptime-3sec%,%sess-setuptime-4sec%,%sess-setuptime-6sec%,%sess-setuptime-8sec%,%sess-setuptime-10sec%,%sess-setuptime-12sec%,%sess-setuptime-14sec%,%sess-setuptime-16sec%,%sess-setuptime-over16sec%,%incremental%,%enddate%,%endtime%,%localenddate%,%localendtime%,%sess-ttlfailed%,%uptime%,%uptimestr%,%lic-pdsn%,%lic-ha%,%lic-ggsn%,%lic-l2tplns%,%sess-txbytes%,%sess-rxbytes%,%sess-txpackets%,%sess-rxpackets%,%sess-siptxbytes%,%sess-siprxbytes%,%sess-miptxbytes%,%sess-miprxbytes%,%aaa-ttlreq%,%aaa-curreq%,%aaa-ttlauthreq%,%aaa-curauthreq%,%aaa-ttlauthprobe%,%aaa-curauthprobe%,%aaa-ttlacctreq%,%aaa-curacctreq%,%aaa-ttlauthsucc%,%aaa-ttlauthfail%,%aaa-ttlauthpurged%,%aaa-ttlauthcancelled%,%aaa-ttlauthdmuchal%,%aaa-ttlradauthreq%,%aaa-curradauthreq%,%aaa-ttlradauthreqretried%,%aaa-ttlclauthreq%,%aaa-curclauthreq%,%aaa-ttlpseudoauthreq%,%aaa-curpseudoauthreq%,%aaa-ttlauthnulluser%,%aaa-ttlacctsucc%,%aaa-ttlacctpurged%,%aaa-ttlacctcancelled%,%aaa-ttlradacctreq%,%aaa-ttlradacctreqretried%,%disc-reason-summary%

card cardsch EMS,Card,%localdate%,%localtime%,%card%,%cpubusy%,%cpuidle%,%numproc%,%memused%,%memtotal%

port portsch EMS,Port,%localdate%,%localtime%,%card%,%port%,%rxbytes%,%txbytes%,%ucast_inpackets%,%ucast_outpacket s%,%mcast_inpackets%,%mcast_outpackets%,%bcast_inpackets%,%bcast_outpackets%,%rxpackets%,%txpackets%,%rxdisbytes%,%rxdiscpackets%,%txdisbytes%,%txdiscpackets%,%maxrate%,%frag-rcvd%,%pkt-reassembled%,%frag-tokenel%
```

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

The values for the header fields are described in the table below:-

Header Field	Value	Meaning
<schema_type>	card	This is the identifier for the <b>Counter Block</b> .
<schema_name>	cardsch	The name or identifier of this schema. This is not used.
<schema_format>	EMS,Card,%localdate%,%localtime% %,%card%,%cpubusy%	Specifies the content and format of the statistics.  <i>EMS,Card</i> is used as the <b>identifier</b> to map the config data to the Performance data.  The counters are specified in <i>%counter_name%</i> .  i.e. Counters: localdate, localtime, card, cpubusy

### 2.2.8.2 Performance data layout

Below are sample performance data records:

```
EMS,Card,20071023,084500,5,14.97,85.03,193,1352624,4194304
EMS,Port,20071023,084500,23,4,186335,0,567,0,1044,0,188,0,1799,0,0,2,0,0,100000000,0,0,0
EMS,PDSNSystem,20071023,124500,20739751,7339,11296885,45774569,8444003,22492492,15215091,27985
27,0,13716,11582,1932,4466,9250,0,9,0,0,1,1,2,8790008,2505,8785259,2243,11218,10546820,2598887
,7947933,7945928,1008,3516441,0,3516441,3515243,930,103,70,221,652,1720,2148,3442,5359,1,20623
35,590451,7025,1181,5556,189247,525293,544898,721575,579493,4273698,635982,219124,233432,15427
8,125302,83033,55069,98787,4884,0,20071023,124504,20071023,084504,9643111,13664242,158D 3H
37M,131000,25000,0,1000,180000852393421,41851331050141,206553138916,175132800655,1694405245139
83,39507657739485,10560327879438,2343673310656,439368072,55,75949285,1,0,0,363418575,54,652503
78,10612624,7379,78903,0,65586339,1,282959,2857,0,10360301,0,0,363204788,0,213731,363414225,43
12677,1=31201;2=77393;9=625624;11=6529671;14=15499;15=2;22=50742;23=37450;24=209133;25=1026423
;27=173982;31=67744;33=5854699;34=83828;37=419;39=753219;40=1315598;41=290662;43=194;47=3826;5
5=293206;58=8817;59=67;60=12087;61=51250;69=1006136;71=2201358;99=1;115=5488;126=199;142=85;14
6=1;161=29;170=1;186=1;
```

Using the **identifier** in the <schema\_format> from the tables in *Bulk Statistics Configuration data*, the following is the mapping between the bulk statistics configuration data and the performance data:-

i.e. from configuration data:

```
card          cardsch
EMS,Card,%localdate%,%localtime%,%card%,%cpubusy%,%cpuidle%,%numproc%,%memused%,%
mementotal%
```

From performance data:

```
EMS,Card,20071023,084500,5,14.97,85.03,193,1352624,4194304
```

Counter Block	Counter	Value in counter
Card	localdate	20071023

Card	localtime	084500
Card	card	6
Card	cpubusy	14.97
Card	cpuidle	85.03
Card	numproc	193
Card	memused	1352624
Card	memtotal	4194304

The number of counters in the schema format of the bulk statistics configuration file must be equal to the number of values available in the performance data.

**Note:** Performance data can come from two different server types – FA (foreign agent) & HA (home agent). In order to generate reports per server type, they need to be separated into two directories and they will be differentiated through PDSN16000\_Id (see section 10 regarding PDSN16000\_Id).

### **2.2.8.3 File names**

The file naming convention for Schema and Performance data are both configurable. The file naming convention below is the recommended convention based on sample data received from several customers:

- **Performance data:**

The recommended file naming convention for the performance data file is:-

`bulkstatyyyymmddhhmmss.csv`

- **Schema:**

There is no fixed file naming convention for the Schema file.

The recommended file naming convention for the configuration data is:-

`bulkstat_configuration_yyyymmdd.txt`

### **2.2.9 Architectural extensions**

No external tools were used to parse the Nortel performance data.

## 3 Engine Rules and Configuration

The Nortel CDMA Gateway consists of the following parser modules to parse raw performance and configuration data.

- Nortel\_MTX\_Table
- Nortel\_EVDO
- BSMMAP\_PARSER
- Nortel\_PDSN

### 3.1 Nortel\_MTX\_Table

The parser module is used to parse the configuration table data.

#### 3.1.1 Rule Configuration

To evoke the Nortel\_MTX\_Table module the configuration option 'RULE\_TYPE' must be set to 'Nortel\_MTX\_Table'. The configuration options 'RULE\_TYPE', 'RULE\_DESC', 'INPUT\_FILE\_DESCRIPTION', 'INPUT\_DIR\_DEPTH', 'FILENAME\_HEADER\_FIELDS' and 'DIRECTORY\_HEADER\_FIELDS' are common to all productised gateways and are fully described in Gateways Framework User Guide; all other configuration options listed are specific to the Nortel\_MTX\_Table module.

Mandatory configuration entries:

- TABLE\_NAME\_DESCRIPTION: This is a list of table names to be parsed from the MTX Table config file.

```
TABLE_NAME_DESCRIPTION => ['CDMACELL', 'NOISBSC'],
```

#### 3.1.2 PIF naming convention

The PIF will be output with a name in the following format where '-#' is used as a delimiter:

```
MTX3-#-SBSINV-#-ASCII_DATA-#-I.pif
```

```
<mtxid>-#-<table name>-#-ASCII_DATA-#-I.pif
```

### 3.2 Nortel\_EVDO

This parser module parses raw data and configuration files into PIF format.

#### 3.2.1 Rule Configuration

To evoke the Nortel\_EVDO module the configuration option 'RULE\_TYPE' must be set to 'Nortel\_EVDO'. The configuration options 'RULE\_TYPE', 'RULE\_DESC', 'INPUT\_FILE\_DESCRIPTION', 'INPUT\_DIR\_DEPTH', 'FILENAME\_HEADER\_FIELDS' and 'DIRECTORY\_HEADER\_FIELDS' are

---

---

common to all productised gateways and are fully described in Gateways Framework User Guide; all other configuration options listed are specific to the Nortel\_EVDO module.

Mandatory configuration entries:

- **FIELD\_SEPARATOR**: This is the Key to the field splitting process and controls the fields that are used internally. The field separator delimits the data.

```
FIELD_SEPARATOR => '|',
```

- **DATA\_RECORD\_SEPARATOR**: This is a mandatory string that separates the header section and data section.

```
DATA_RECORD_SEPARATOR => '^-----*$',
```

Optional components:

- **HEADER\_INFO\_FOR\_BLOCK\_NAME**: Uses a header info for data block name.

```
HEADER_INFO_FOR_BLOCK_NAME => 'TYPE',
```

- **HEADER\_COUNTERS\_TO\_KEY\_PIF\_FILENAME**: A list of header info to construct the output file name.

```
HEADER_COUNTERS_TO_KEY_PIF_FILENAME => [ 'TYPE', 'TIME', 'FILENAME' ],
```

- **DEFAULT\_NULL\_VALUE**: A value that is output when data is null.

```
DEFAULT_NULL_VALUE => 'NULL',
```

- **TIMESTAMP\_FILE**: The filename of the path and file name where the last time stamp for each element for all object type is stored. The time stamp is used for filtering records that has already been parsed and being the parsing from the last time stamp onwards. The filename will be concatenated with the date of the record data.

```
TIMESTAMP_FILE => '.EVDO.timestamp',
```

- **DATE\_INFO\_FIELDS**: This is specify the data and time for the **TIMESTAMP\_FILE**. The specific entry names are:

- **DATE**: The date from the record data info that specifies the date.
- **TIME**: The time from the record data info that specifies the time.

```
DATE_INFO_FIELDS => {  
    DATE => 'ENDDATE',  
    TIME => 'ENDTIME',  
}
```

- **OBJECT\_TYPE\_NAME\_FOR\_HEADER\_INFO**: The name for the header info for entity name.

```
OBJECT_TYPE_NAME_FOR_HEADER_INFO => 'ENTITY',
```

- **OBJECT\_TYPE**: A hash defining the entity name and output block name for each object type. The key for **OBJECT\_TYPE** refers to the object type. In each object type key is a hash defining the Entity Name.

An object type may have 1 or more Entity Name depending on the data field description.

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

---

---

Each Entity Eame consists of a hash that may define the OUTPUT\_BLOCK\_NAME, FIELD\_DESCRIPTION, and ADD\_DATA\_FIELDS. All these are optional entries for each entity name hash.

- OUTPUT\_BLOCK\_NAME: The block name for the entity of the object type.
- FIELD\_DESCRIPTION: The pattern to match the data field of the record to be defined with the entity name.
- ADD\_DATA\_FIELDS: A hash of new data fields to be created from within the records' header or data field. Each new data field is a key to a hash consisting of HEADER\_FIELD\_NAME or DATA\_FIELD\_NAME, FIELD\_DESCRIPTION, FIELD\_PREFIX, and FIELD\_SUFFIX.
  - HEADER\_FIELD\_NAME: The header info field name
  - DATA\_FIELD\_NAME: The data info field name
  - FIELD\_DESCRIPTION: The pattern to match the field value with a single sub pattern capture.
  - FIELD\_PREFIX: A string to be prefixed to the new field value.
  - FIELD\_SUFFIX: A string to be prefixed to the new field value.
- DURATION: A mandatory field for every object block. This should be a number in minutes of the duration between the times of the records in the raw data.

A sample OBJECT\_TYPE is defined below, where 'CCHStatsSectorCarrier' is the object type key; DOM\_Sector is the Entity Name; IPADDRESS and SECTORELEMENTNAME are new data fields to add to the data record:

```
OBJECT_TYPE => {
  'CCHStatsSectorCarrier' => {
    DOM_Sector => {
      OUTPUT_BLOCK_NAME => 'SectorCarrier',
      ADD_DATA_FIELDS => {
        IPADDRESS => {
          HEADER_FIELD_NAME => 'NodeName',
          FIELD_DESCRIPTION => 'DOM_(\d+.\d+.\d+.\d+)',
        },
        SECTORELEMENTNAME => {
          DATA_FIELD_NAME => 'sectorElementIndex',
          FIELD_PREFIX => 'element',
        },
      },
      DURATION => 5,
    },
  },
},
```

- UPPERCASE\_COUNTERS: When set to 'True', all counter names will be converted to uppercase. Set to 0 to disable.

```
UPPERCASE_COUNTERS => 'True',
```

- **HEADER\_DATA\_RECORD\_PROCESSING:** This entry enables extra Perl code in the engine to do various manipulations to header and data records. This is the last process within the engine before the data is being output to the PIF files.

```
HEADER_DATA_RECORD_PROCESSING => sub {
    my ($$blkname_ref, $h_ref, $d_ref) = @_;

    # Header record processing
    if ($h_ref->{TIME} =~ /(\d{4})(\d{2})(\d{2})(\d{2})(\d{2})/) {
        my $day = "$1\"-$2\"-$3";
        my $time = "$4\":$5";
        &GenUtils::convert_date_format(\ $day);

        # TIME will be output as a key PIF filename
        # as defined in HEADER_COUNTERS_TO_KEY_PIF_FILENAME
        # It is used by the UNPEGGER during post parsing
        $h_ref->{TIME} = "$day\"_\"$time";
    }

    return 0; # Return 0 if successful
},
```

### 3.2.2 PIF naming convention

The PIF will be output with a name in the following format where '#' is used as a delimiter:

```
<header_counters_to_key_pif_filename>-#-<value of block name>-#-<counter>-#-I.pif
```

where <counter> will either be nonexistent (as in the case when the first file of <original filename> is processed) or it will be an integer (1,2,3,..) (as in the case where a file with same name has file already parsed and whose the resulting PIF still exists in the intermediate directory).

### 3.2.3 Nortel\_EVDO\_Hierarchy\_Config

This configuration module is for the construction of the Nortel EVDO Element ID used in the Nortel\_EVDO gateway, as well as in Post Parser configuration.

It contains a hash known as ENTITY\_HASH which consists of the details for ENTITY name and element ID. The ENTITY\_HASH is traversed recursively to construct the FDN and the element ID.

Below is an example of the ENTITY\_HASH:

```
my %ENTITY_HASH = (
    SYSTEM_ID => {
        '.*' => {
            HEADER_INFO_FIELD => 'SYSTEM_ID',
        },
    },
    NETWORK_ID => {
        '.*' => {
            HEADER_INFO_FIELD => 'NETWORK_ID',
        },
    },
    DO_RNC_ID => {
```

```
        '.*' => {
            HEADER_INFO_FIELD => 'RNC_ID',
        },
    },
    DO_RNC => {
        FDN => [ 'SYSTEM_ID', 'NETWORK_ID', 'DO_RNC_ID' ],
    }
    DO_PDSN_ID => {
        '.*' => {
            DATA_INFO_FIELD => 'pdsnNumberPdsn',
        },
    },
    DO_PDSN => {
        FDN => [ 'DO_RNC', 'DO_PDSN_ID' ],
    },
)

```

The key for the ENTITY\_HASH consists of Entity Name and Element ID.

When the key is an Entity Name, a hash consisting of an FDN entry is expected which is defined with a lists of Element ID.

```
DO_PDSN => {
    FDN => [ 'DO_RNC', 'DO_PDSN_ID' ],
},

```

When the key is an Element ID, a hash consisting of one or more Object Type entries are expected to retrieve data information from either the header or data record. Each Object Type entry is a hash consisting of the following:

- **HEADER\_INFO\_FIELD** or **DATA\_INFO\_FIELD**: Either the header or data info field from the record.
- **HEADER\_INFO\_DESCRIPTION** or **DATA\_INFO\_DESCRIPTION**: The pattern matching the header or data info consisting of a single sub pattern capture.

```
DOM_ID => {
    '.*' => {
        HEADER_INFO_FIELD => 'nodeName',
        HEADER_INFO_DESCRIPTION => 'DOM_(.*)',
    },
},

```

### **3.2.4 CARD\_INFO**

Card info consists of a hash based on the hardware configuration table stated in the vendor documentation. It is a static lookup table to obtain the card slot ID and CPU ID.

The Nortel\_EVDO\_FDN\_Config uses the CARD\_INFO to lookup RNCCardID, DOMCardID, RNCPUID and DOMCPUID.

The Object type key for the Element ID hash consists of a hash entry, CARD\_INFO\_FIELD.

- **CARD\_INFO\_FIELD**: A hash entry for obtaining the element card ID or element CPU ID based on the subentries below.

- HASH\_REF: The hash reference in the CARD\_INFO, either RNCCSlotHash, RNCCPUHash, DOMSlotHash, or DOMCPUHash.
- DATA\_ID: The data record field consisting the ID to refer the HASH\_REF, either a slot number or entity CPU ID.
- HASH\_FIELD: The ID to return for the element ID, either RNCCardID, RNCCPUID, DOMCardID, or DOMCPUID.

The following is an example of the Element ID configuration in the ENTITY\_HASH:

```
DOM_CPU_ID => {
    'CPUUtilization_2.2' => {
        CARD_INFO_FIELD => {
            HASH_REF    => 'DOMCPUHash',
            DATA_ID    => 'airEntCPUID',
            HASH_FIELD  => 'DOMCPUID',
        },
    },
},
```

### 3.3 BSM MAP\_PARSER

This is an additional rule in the Nortel CDMA parser to parse BSMmap files for look up purposes. This particular instance the CDMA\_FREQ counter is inserted from these configuration files and used as the SECTOR\_CARRIER\_ID in the FDN.

#### 3.3.1 Rule Configuration

To evoke the BSM MAP\_PARSER module the configuration option 'RULE\_TYPE' must be set to 'BSM MAP\_PARSER'. The configuration options 'RULE\_TYPE', 'RULE\_DESC', 'INPUT\_FILE\_DESCRIPTION', 'INPUT\_DIR\_DEPTH', 'FILENAME\_HEADER\_FIELDS' and 'DIRECTORY\_HEADER\_FIELDS' are common to all productised gateways and are fully described in Gateways Framework User Guide; all other configuration options listed are specific to the BSM MAP\_PARSER module.

Mandatory configuration entries:

- FIELD\_SEPARATOR: This is the key to the field splitting process and controls the fields that are used internally. The field separator delimits the data.

```
FIELD_SEPARATOR => '|',
```

- DATA\_FIELDS\_DESCRIPTION: This is a hash of field names and regular expressions for the counter info fields.

```
DATA_FIELDS_DESCRIPTION => {
    CCLN          => '(CBS\d+)',
    CELLS         => '(Cells\d+)',
    MCBTS         => '(\w+1900BTS\d+)',
    MCBTSSUBSYSTEM => '(\w+BTSSubsystem\d+)',
    ROOT          => '(Root\d+)',
    BTSCALLPROCESSING => '(BTSCallProcessing\d+)',
    ADVANCEDFA    => '(AdvancedFA\d+)',
}
```

```
ADVANCEDSECTOR => '(AdvancedSector\d+)',
SECTOR_ID       => 'SectorId \= (\w+)',
SECTOR_CELL_ID => 'SectorCellId \= (\d+)',
DCG             => '(DCG\d+)',
SPLIT_MODE     => 'SplitMode \= (\w+)',
SPLIT_MATE     => 'SplitMate \= (\w+)',
CDMA_FREQ      => 'CDMA_FREQ \= (\d+)',
},
```

- **BLOCK\_NAME\_DESCRIPTION:** This is a hash of field names and regular expressions for the block names.

```
BLOCK_NAME_DESCRIPTION => {
  CDMA_FREQ           => 'CDMA_FREQ \= \d+',
  SPLITMODE_SPLITMATE => 'SplitMate \= \w+',
  SECTORID_SECTORCELLID => 'SectorId \= \w+',
},
```

### 3.3.2 PIF Naming Convention

The output file will be the following format :

```
CDMA_FREQ-#-MSC_NAME-#-I.pif
```

Where **MSC\_NAME** is the MSC, which this configuration file is for. The filename is intentionally generic so that when new configuration is parsed it will be overwritten.

## 3.4 Nortel\_PDSN

This is an additional rule in the Nortel CDMA parser to parse PDSN files. Counter names are extracted from PDSN schema files and mapped with counter values from the performance data files.

### 3.4.1 Rule Configuration

To evoke the Nortel\_PDSN module the configuration option 'RULE\_TYPE' must be set to 'Nortel\_PDSN'. The configuration options 'RULE\_TYPE', 'RULE\_DESC', 'INPUT\_FILE\_DESCRIPTION', 'INPUT\_DIR\_DEPTH', 'FILENAME\_HEADER\_FIELDS' and 'DIRECTORY\_HEADER\_FIELDS' are common to all productised gateways and are fully described in Gateways Framework User Guide; all other configuration options listed are specific to the Nortel\_PDSN module.

Mandatory configuration entries:

- **SCHEMA\_DIR:** a mandatory string representation of the directory path where the schema files are stored. The directory will be searched for schema files that match the SCHEMA\_DESCRIPTION entry  

```
SCHEMA_DIR => '/gateways/nortel-pdsn/input_d/schema/'
```
- **SCHEMA\_DESCRIPTION:** an array of file name regular expressions that match and identify the files as a schema file.  

```
SCHEMA_DESCRIPTION => ['^PDSN_Schema_\d+-\d+-\d+\.txt$']
```
- **SCHEMA\_HEADER\_LEADTEXT:** a string or regular expression indicating the start of the header data section in the schema file. If undefined, it is assumed that the first line of the file is the header data line.

**SCHEMA\_HEADER\_LEADTEXT => 'Schema for File'**

- **SCHEMA\_HEADER\_ROWS\_TO\_SKIP**: an integer value indicating the number of header data lines to skip. If undefined, the default value is zero (0).

**SCHEMA\_HEADER\_ROWS\_TO\_SKIP => 2**

- **SCHEMA\_COLUMN\_SEPARATOR**: a string value indicating the column separator. If undefined, the default value is a single white space ( ). It is used to distinguish the different elements in a schema record row.

**SCHEMA\_COLUMN\_SEPARATOR => ' '**

- **SCHEMA\_COUNTER\_MARKER**: a string value indicating the start and end of a counter name. If undefined, the default value is a percent character (%).

**SCHEMA\_COUNTER\_MARKER => '%'**

- **SCHEMA\_COUNTER\_DELIMITER**: a string value separating individual counters in the schema record. If undefined, the default value is a coma (,).

**SCHEMA\_COUNTER\_DELIMITER => ','**

- **DATA\_HEADER\_LEADTEXT**: a string or regular expression indicating the start of the header data section in the performance data file. If undefined, it is assumed that the first line of the file is the header data line.

**DATA\_HEADER\_LEADTEXT => 'Format 5.0'**

- **DATA\_HEADER\_ROWS\_TO\_SKIP**: an integer value indicating the number of header data lines to skip. If undefined, the default value is zero (0).

**DATA\_HEADER\_ROWS\_TO\_SKIP => 0**

- **DATA\_COUNTER\_DELIMITER**: a string value separating individual counters in the performance data record. If undefined, the default value is a coma (,).

**DATA\_COUNTER\_DELIMITER => ','**

- **DATA\_MAX\_SCHEMA\_MATCH\_LEVELS**: an integer value indicating the maximum number of counters to be used when matching a data record with the schema mapping. The parser will start with the maximum number of counters and work backwards until a matching schema map is found or the minimum counter (1) match is reached. If undefined, the default value is 2.

**DATA\_MAX\_SCHEMA\_MATCH\_LEVELS => 2**

- **HEADER\_INFO\_TO\_KEY\_PIF\_FILENAME**: an array indicating the names of header information elements that should be included as prefixes to the intermediate PIF file names.

**HEADER\_INFO\_TO\_KEY\_PIF\_FILENAME => ['FILENAME']**

## **PIF Naming Convention**

Each raw file may produce multiple PIF files. Each PIF file contains only one specific block type.

The output file name will be in the following convention:

**HEADER\_INFO\_TO\_KEY\_PIF\_FILENAME-#-PARENT\_BLOCK-#-BLOCK\_NAME-#-I.pif**

Where,

---

---

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

---

---

**HEADER\_INFO\_TO\_KEY\_PIF\_FILENAME** is a string of header info elements values as specified in the optional '**HEADER\_INFO\_TO\_KEY\_PIF\_FILENAME**' configuration. Each element value is joined by '-#-'.

**PARENT\_BLOCK** is the name of the parent block mapped from the Schema file

**BLOCK\_NAME** is the name of the blocks contained within the PIF file extracted from the record data

## 4 Post Parser Rules and Configuration

No customized post parser rules are provided with Nortel CDMA Gateway.

## 5 Virtuo DA Configuration

Virtuo DA toolkit is used to obtain the configuration data for MTX Table and BSMmap, and MTX password rotation functionality. Please refer to the README in the Virtuo DA toolkit that comes with the Nortel CDMA Gateway for installation and usage.

### 5.1 MTX Table

The Nortel EVDO, MTX13 and RAN require data extraction from MTX table especially for the FDN construction. Data from MTX table is normally incorporated into the performance data by the vendor gateway using the post parser rule. MTX Table parser module is used to do the data extraction from the MTX Table file.

#### 5.1.1 DA Configuration

User needs to update the following configurations accordingly in order for the scripts to run.

The MTX Table configuration is like below:

```
set MTXIP          ????.????.????.???
set MTXPORT        23
set MTXUSER        username
set MTXPSWD        password
set MTXNAME        MTX01
set LOCAL_MTXCFGDIR .
set MTXTABLES      "C7RTESET C7LKSET CLLI CDMACELL TRKMEM PWRCTRL
HOPARMS VCHINV CELLULAR SBSINV"
set GWDESTDIR      "<gways_path>/in_dir"

#
# Path for executables
#
set TELNET         /bin/telnet

#
# Timeouts (sec)
#
set GETTABLETIMEOUT 120

#
# Log
#
set LOGFILENAME    <log_path>/mtxtablesdist.log
set LOGLEVEL       5

#
# Password rotation
#
set PWDLOGFILENAME mtxpwd.log
set PERL5          /opt/perl-5.6.1/bin/perl
```

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

```
set GENPWD          genpwd.pl
```

Descriptions:

Parameter	Descriptions
MTXIP	IP address of the MTX
MTXPORT	Port ID of the MTX
MTXUSER	MTX username
MTXPSWD	MTX login password
MTXNAME	MTX name
LOCAL_MTXCFGDIR	Local directory for MTX configuration
MTXTABLES	List of required MTX tables
GWDESTDIR	Gateway destination directory (IN_DIR)
TELNET	Telnet path
GETTABLETIMEOUT	Timeout to get the table
LOGFILENAME	Filename of the log
LOGLEVEL	Log level of the log
PWDLOGFILENAME	MTX password log file name
PERL5	Perl directory
GENPWD	Generate password script

## 5.2 BSMmap

The Nortel RAN requires data extraction from BSMmap especially for the FDN construction. Data from BSMmap is normally incorporated into the performance data by the vendor gateway using the post parser rule. BSMmap parser module is used to do the data extraction from the BSMmap file.

### 5.2.1 DA Configuration

The BSMmap configuration is like below:

```
set REMOTEHOST     ????.???.????.??
set BSMUSER        username
set BSMPSWD        password
set MTXNAME        "MTX"
set BSMID          "BSM"
set BSMIP          "????.???.????.??"
set BSMOMDIR       "DIR"
set LOCALDIR       ". "
```

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

---

```

set FLEXPMPHOST  ????.????.????.??
set FLEXUSER     username
set FLEXPSWD     password
set FLEXDIR      "/<flex_path>/flexpm"
set NDAYS        1
set GWDESTDIR    "/<gways_path>/in_dir"

#
# Path for executables
#
set TELNET       /bin/telnet
set REMOTEDATE   /usr/bin/date
set REMOTECLIAPP /<remote_path>/cliapp
set REMOTERM     /usr/bin/rm

#
# Timeouts
#
set INITTIMEOUT  180
set RDATETIMEOUT 60
set GENERATETIMEOUT 2

#
# Log
#
set LOGFILENAME  bsmmapdist.log
set LOGLEVEL     5

```

Descriptions:

Parameter	Descriptions
REMOTEHOST	Remote host IP address
BSMUSER	BSM username
BSMPSWD	BSM password
MTXNAME	MTX name
BSMID	BSM ID
BSMIP	BSM IP address
BSMOMDIR	BSM ON directory
LOCALDIR	Local directory for BSM configuration
FLEXPMPHOST	Flexpm host IP address
FLEXUSER	Flexpm username

FLEXPSWD	Flexpm password
FLEXDIR	Flexpm directory
NDAYS	Number of days to keep the file
GWDESTDIR	Gateway input directory (IN_DIR)
TELNET	Telnet path
REMOTEDATE	Date path
REMOTECIAPP	CLIAPP path
REMOTERM	Term path
INITTIMEOUT	Initialisation timeout
RDATETIMEOUT	Remote date timeout
GENERATETIMEOUT	Generate timeout
LOGFILENAME	File name of the log
LOGLEVEL	Log level of the log

### **5.3 MTX Password Rotation**

A part from Nortel Centennial requirement, it is required to have a script to do password changes of the MTX box for every couple of month for security reason. Thus this Virtuo DA has a module/script to do such implementation.

## 6 Configuration Support

Gateway Configurations listed below are available for the respective Tech Pack releases:

- Nortel MTX
- Nortel EVDO
- Nortel NBSS
- Nortel PDSN

# Appendix A Notices and Trademarks

This appendix contains the following:

- Notices
- Trademarks

## 6.1.1.2 Notices

This information was developed for products and services offered in the U.S.A.

IBM may not offer the products, services, or features discussed in this document in all countries. Consult your local IBM representative for information on the products and services currently available in your area. Any reference to an IBM product, program, or service is not intended to state or imply that only that IBM product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any IBM intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any non-IBM product, program, or service.

IBM may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not grant you any license to these patents. You can send license inquiries, in writing, to:

*IBM Director of Licensing  
IBM Corporation  
North Castle Drive  
Armonk NY 10504-1785  
U.S.A.*

For license inquiries regarding double-byte (DBCS) information, contact the IBM Intellectual Property Department in your country or send inquiries, in writing, to:

*Intellectual Property Licensing  
Legal and Intellectual Property Law  
IBM Japan Ltd.  
1623-14, Shimotsuruma, Yamato-shi  
Kanagawa 242-8502 Japan*

**The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law:** INTERNATIONAL BUSINESS MACHINES CORPORATION PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. IBM may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

---

---

**TIVOLI® NETCOOL® PERFORMANCE MANAGER FOR WIRELESS**  
**NORTEL CDMA GATEWAY USER GUIDE**

---

---

Any references in this information to non-IBM Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this IBM product and use of those Web sites is at your own risk.

IBM may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Licenses of this program who wish to have information about it for the purpose of enabling: (i) the exchange of information between independently created programs and other programs (including this one) and (ii) the mutual use of the information which has been exchanged, should contact:

*IBM Corporation*  
*2Z4A/101*  
*11400 Burnet Road*  
*Austin, TX 78758*  
*U.S.A.*

Such information may be available, subject to appropriate terms and conditions, including in some cases, payment of a fee.

The licensed program described in this document and all licensed material available for it are provided by IBM under terms of the IBM Customer Agreement, IBM International Program License Agreement or any equivalent agreement between us.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning non-IBM products was obtained from the suppliers of those products, their published announcements or other publicly available sources. IBM has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to non-IBM products. Questions on the capabilities of non-IBM products should be addressed to the suppliers of those products.

All statements regarding IBM's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

If you are viewing this information softcopy, the photographs and color illustrations may not appear.

### **6.1.1.3 Trademarks**

IBM, the IBM logo and ibm.com are trademarks of International Business Machines Corp., registered in many jurisdictions worldwide. Other product and service names might be trademarks of IBM or other companies. A current list of IBM trademarks is available on the Web at "Copyright and trademark information" at <http://www.ibm.com/legal/copytrade.shtml>.

Adobe, the Adobe logo, PostScript, and the PostScript logo are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States, and/or other countries.

Microsoft and Windows are trademarks of Microsoft Corporation in the United States, other countries, or both.

Linux is a registered trademark of Linus Torvalds in the United States, other countries, or both.

Intel, Intel logo, Intel Inside, Intel Inside logo, Intel Centrino, Intel Centrino logo, Celeron, Intel Xeon, Intel SpeedStep, Itanium, and Pentium are trademarks or registered trademarks of Intel Corporation or its subsidiaries in the United States and other countries.



Java and all Java-based trademarks and logos are trademarks of Sun Microsystems, Inc. in the United States, other countries, or both.

UNIX is a registered trademark of The Open Group in the United States and other countries.

Other company, product or service names may be trademarks or service marks of others.



Printed in the U.S.A.