

- Search user created libraries to satisfy unresolved global symbols
- Dynamically assign memory
- Create a memory map describing the location of each object module and data block loaded

PROGRAM SEGMENTATION

The Linking Loader and Macro Assembler permit the user to segment source programs into five different sections. These sections and their corresponding functions are as follows:

ASCT - Absolute Section (non-relocatable)

There may be a limited number of absolute sections in a user's program. These sections are used to allocate/load/initialize memory locations assigned by the programmer rather than the loader, for example, addresses assigned to ACIA's and PIA's.

BSCT - Base Section

There is only one Base Section. The linking loader allocates portions of this section to each module that needs space in BSCT. BSCT is generally used for variables that will be referenced via direct addressing. BSCT is limited to locations 0-255 of the addressing range.

CSCT - Blank Common (uninitialized)

There is only one CSCT. This section is used for blank common (similar to FORTRAN blank common). This section cannot be initialized.

- **DSCT - Data Section**

There is only one Data Section. The linking loader allocates portions of this section to each module that needs a part of DSCT. DSCT is generally used for variables (RAM) which are to be accessed via extended mode addressing.

- **PSCT - Program Section**

PSCT is similar to DSCT except that it is intended to be used for instructions. The PSCT/DSCT division was made to facilitate a RAM/ROM dichotomy.

This section concept is preserved by the Loader during the load process. As a module is being loaded, each of its sections is combined with the corresponding sections of previously loaded modules. As a result, the absolute load module produced by the Loader will contain one continuous memory area for each section type encountered during the load operation.

In addition to the program segmentation provided by the section concept, the M6800 relocation and linking scheme supports named common. The named common concept provides the function of initializable common areas within BSCT, DSCT, and PSCT. In processing named common definitions, the Loader shall:

- Assign to each named common area a size equal to the largest size defined for the named common during the load process.
- Allocate memory at the end of each section for the named common blocks defined within that section.

The load maps shown in Figure I-1 describe the load process with regard to sections and named common. The module PGM1 requires memory to be reserved in BSCT, CSCT, DSCT, and PSCT, although the only space necessary in DSCT is for the named common NCOM1. The module PGM2 requires that memory be allocated in BSCT, CSCT, DSCT, and PSCT. Neither module defines any ASCT blocks.

The load module's map illustrates a typical memory map that might be produced by loading PGM1 and PGM2. The BSCT for both PGM1 and PGM2 are allocated memory within the first 256 bytes of memory. As shown, the first 32 (20 hex) bytes of BSCT are reserved by the Loader for use by the disc operating system unless otherwise directed. After BSCT, space for blank common is allocated, followed by space for PGM2's DSCT. Since PGM1 requires no DSCT for its exclusive use, none will be allocated. The named common block NCOM1 within DSCT is assigned memory at the end of DSCT. Finally, the PSCT's for PGM1 and PGM2 are allocated along with PSCT's common blocks NCOM2 and NCOM3.

The Loader assigns memory within sections in the order in which the modules are specified. Named common blocks are allocated memory at the end of their corresponding section, in the order in which they are defined. Figure I-2 illustrates a load module map produced by loading PGM2, followed by PGM1. This load module map is slightly different from the map in Figure I-1 where PGM1 was loaded first.

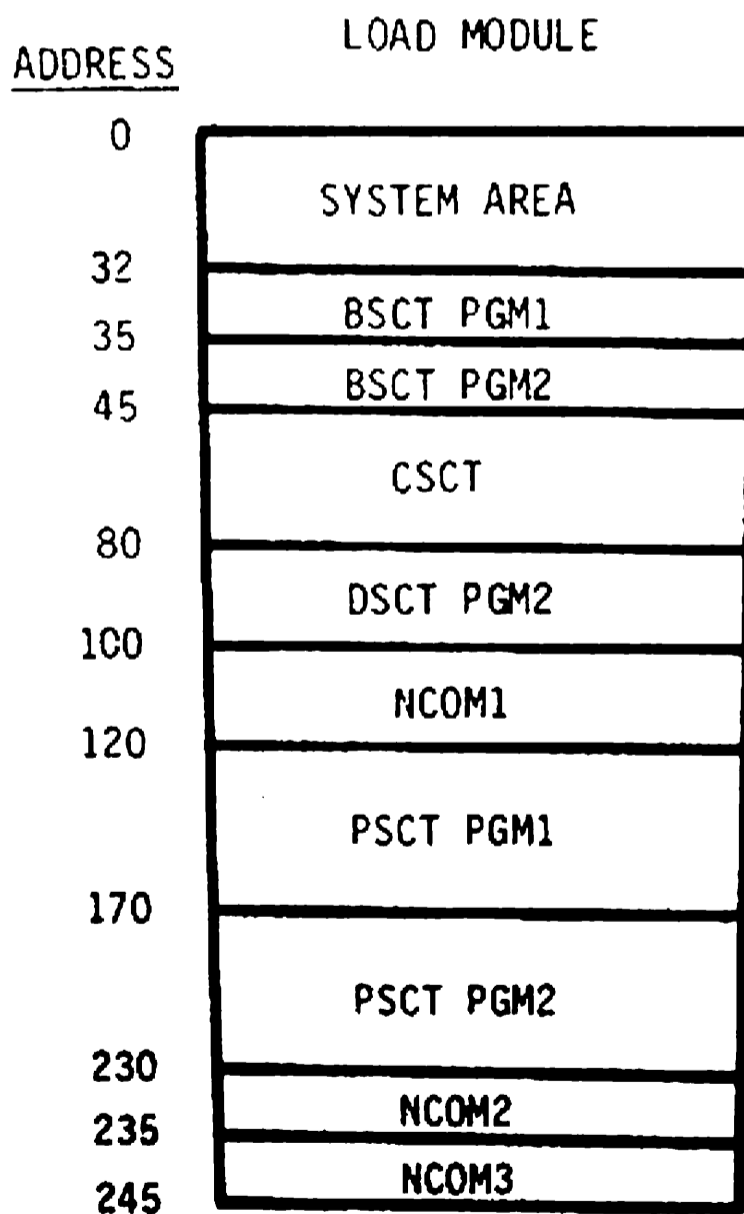
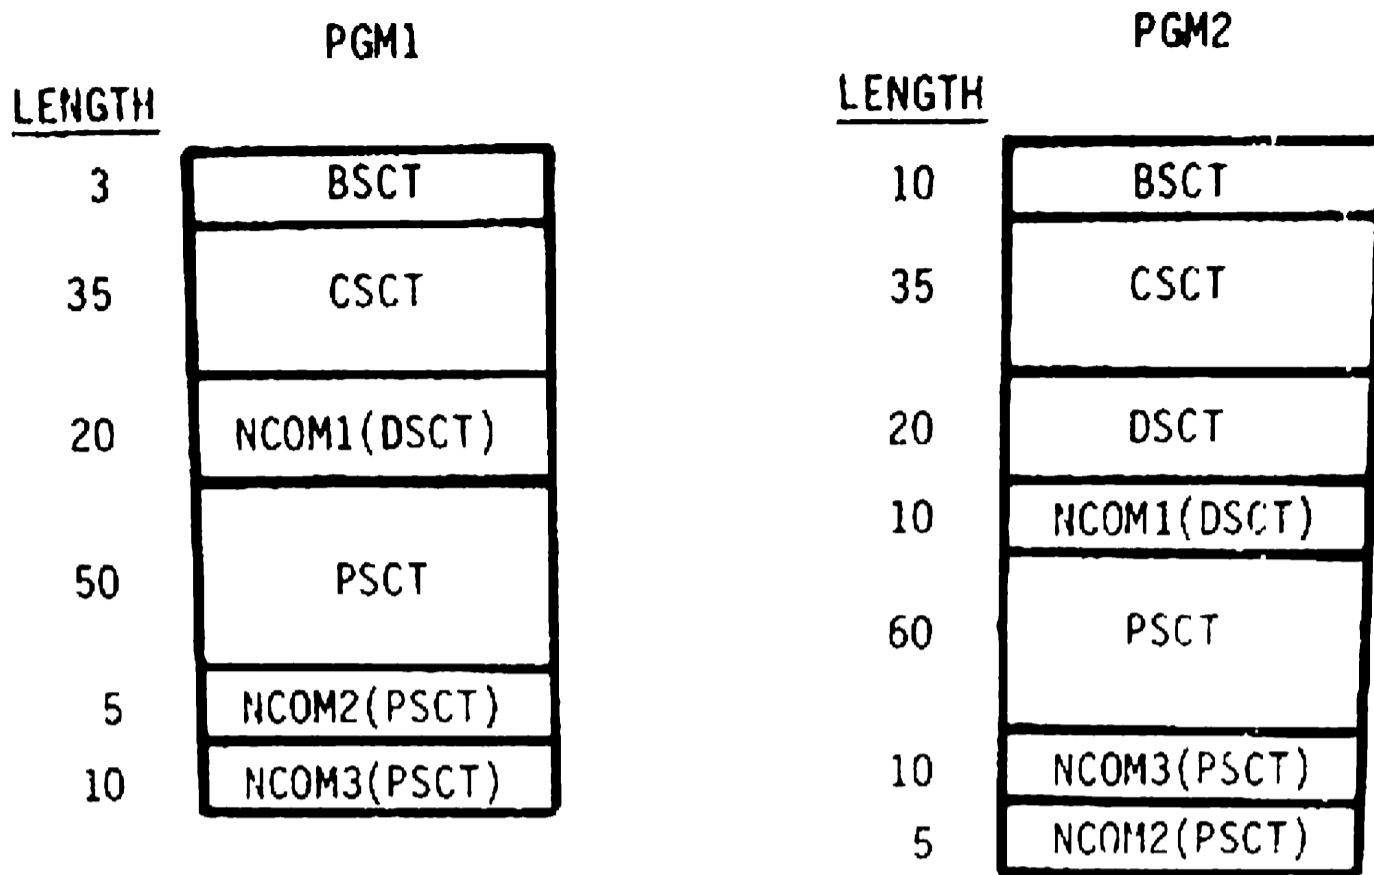


FIGURE I-1
LOAD MAPS

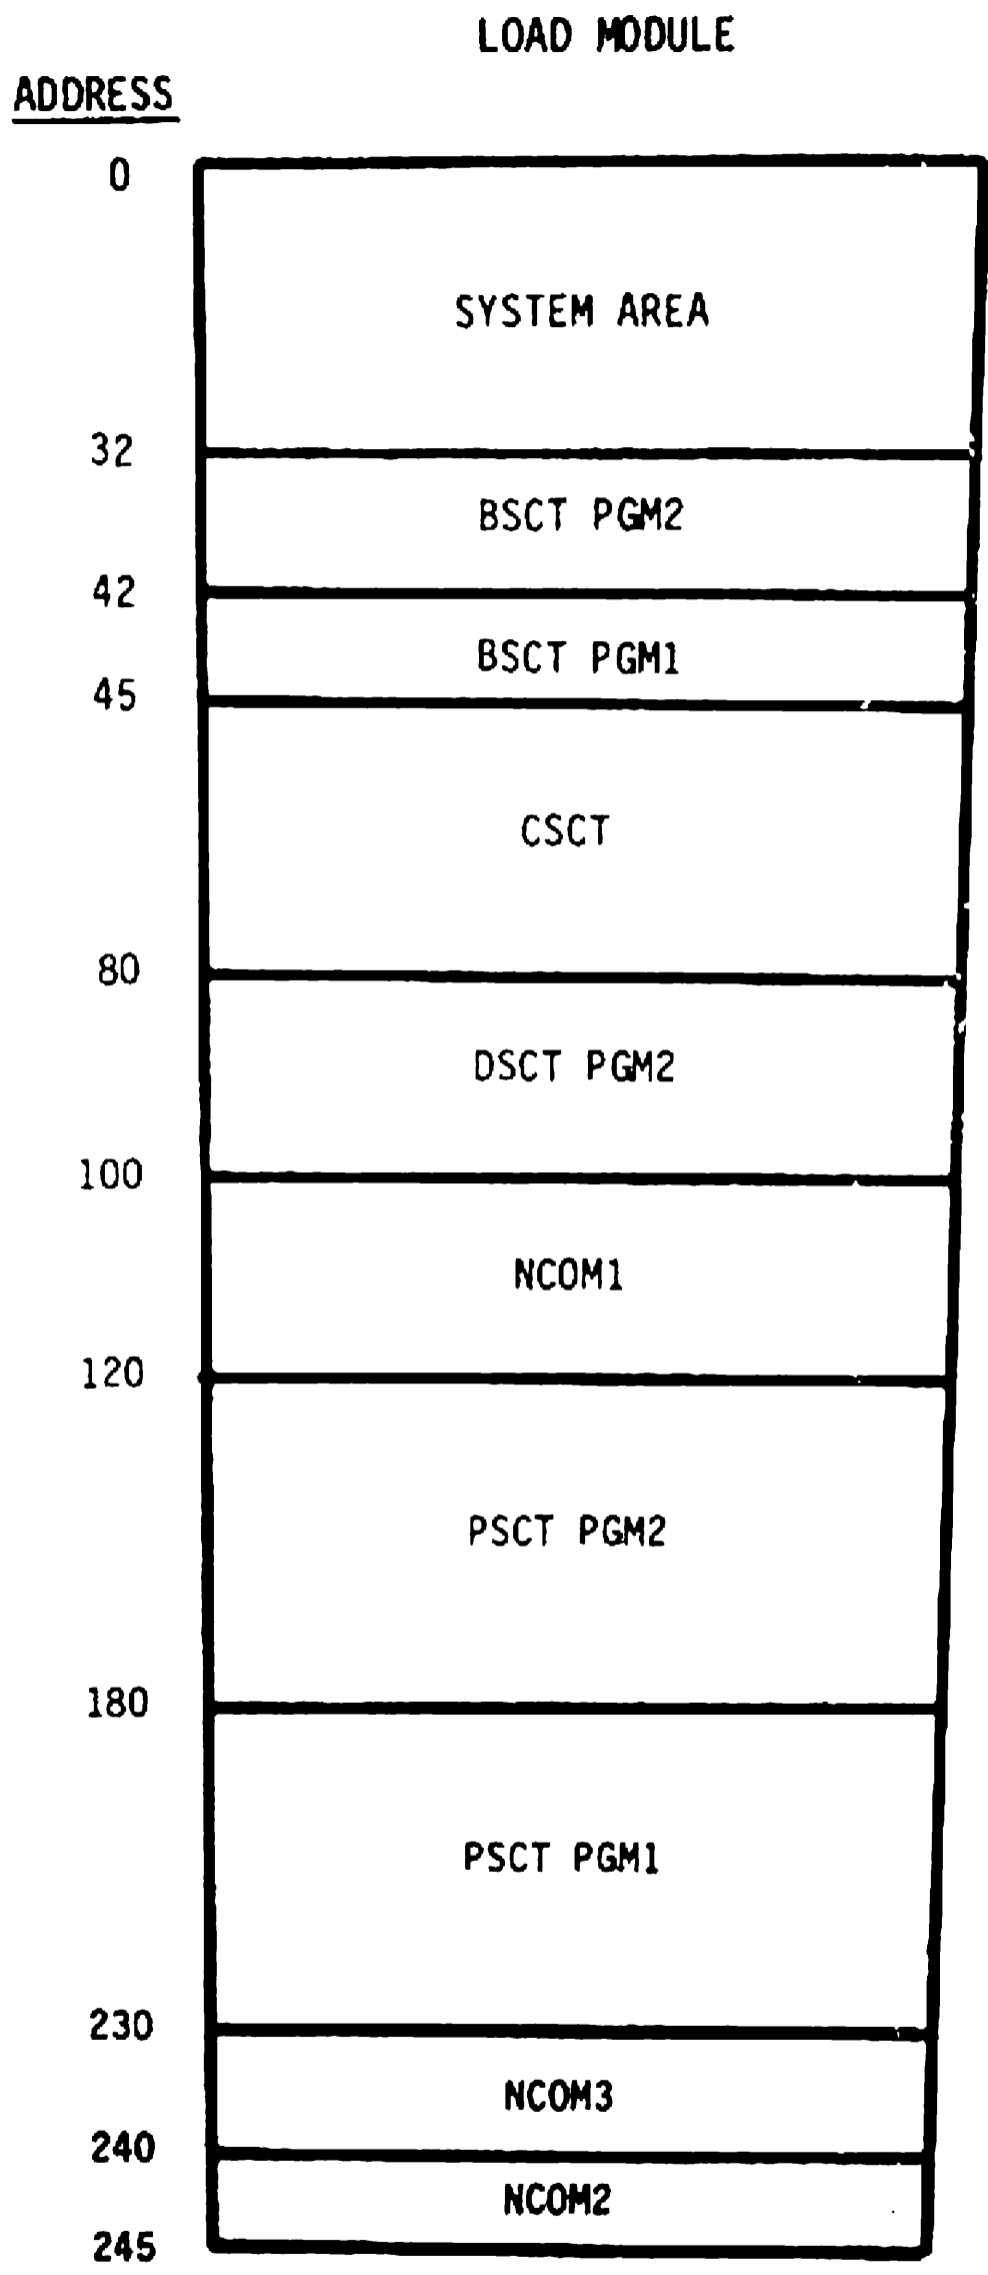


FIGURE I-2

LOAD MAP

RELOCATION

Relocation allows the user to assemble a source program without assigning absolute addresses at assembly time. Instead, absolute memory assignment is performed at load time. In order to relocate a program (within memory), the source program must be assembled with the M6800 Macro Assembler using the OPT REL directive. Programs assembled with this directive will cause the assembler to produce a relocatable object module instead of an absolute object module. These relocatable object modules contain information describing the size of each section (ASCT, BSCT, CSCT, and DSCT) and named common area as well as the relocation data. A complete description of the relocatable object module format is contained in the M6800 Macro Assembler Manual.

In order to load a relocatable object module, the M6800 Linking Loader must be used. The Loader assigns load addresses and produces an absolute object module compatible with the EXORciser loader.

The advantages of using relocation are:

- Reassembly is not required for each new absolute load address.
- Relocation via the M6800 Linking Loader is faster than reassembly.
- Dynamic memory assignment of modules is possible.

LINKING

Linking allows instructions in one program to refer to instructions or data which reside within other programs. If all programs are assigned absolute addresses during assembly time, it is possible to directly reference another program via absolute addresses. However, when using relocatable programs, absolute load addresses are not generally known until load time. In order to access other relocatable programs or data blocks, external reference symbols must be used. These external symbols are commonly called global symbols since they may be referenced by any module at load time. Although global symbols are used to link modules at load time, they must be explicitly defined and referenced at assembly time. This is accomplished by the M6800 Macro Assembler directives, XDEF and XREF. The XDEF directive indicates which symbols defined within a module can be referenced by other modules. The XREF directive indicates that the symbol being referenced is defined outside the module.

At load time, global references are matched with their corresponding global definitions. Any reference within a module to a global symbol is updated with the load address of the global symbol. If the loader detects a global reference without an associated global definition, an undefined global error will be printed and a load address of zero will be assigned to the reference.

MODULE LIBRARIES

The M6800 Linking Loader can automatically search a file for modules which contain definitions satisfying any unresolved global symbols. Such a file is called a library file and is composed of one or more object modules. The Loader sequentially searches the library file. If a module is found which contains a symbol definition satisfying an unresolved global symbol, the module will be loaded. Only those modules which can satisfy an unresolved reference will be loaded. Since a library file is searched only once, modules which reference other modules within the library file should occur within the library file before the referenced module. Otherwise, the user must direct the Loader to search the library again.

MEMORY ASSIGNMENT

During the load process, absolute addresses are assigned to the program sections within the specified modules. Normally the loader will automatically perform this assignment by allocating memory by sections in the order: ASCT, BSCT, CSCT, DSCT and PSCT. However, the user may define the starting and/or ending address of any non-ASCT section. In this case, the Loader will first reserve memory for those sections with defined load addresses before allocating space for any other section. The Loader also permits a user to specify the relative section offset of a module

within a section. However, a section of a module is always loaded in the associated load section in the order in which the module was specified.

LOAD MAPS

The Loader will optionally produce a load map describing the memory layout resulting from the load of the specified modules. Figure I-3 is an example of some of the features included in a typical load map. In addition to this full load map, the Loader may be directed to produce partial load maps listing only the undefined global symbols or section load addresses.

OPERATING ENVIRONMENT

Equipment Requirements

Minimum equipment requirements for the M6800 Linking Loader include:

- EXORciser
- 10K bytes of RAM
- Floppy Disc
- Console

Software Requirements

The M6800 Linking Loader operates under the EDOS2.3 floppy disc operating system to load relocatable object modules produced by the M6800 Macro Assembler.

SECTION II

USING THE M6800 LINKING LOADER

CALLING THE LINKING LOADER

The M6800 Linking Loader must be called while under the control of the disc operating system. When the user types the command

```
RLOAD < c/r >
```

the disc executive will load the Linking Loader. Upon entry, the loader prints

```
M6800 LINKING LOADER REV n.m  
?
```

(where n.m is the revision number)

The character '?' is the Loader's prompt and is printed whenever the Loader has completed the last command and is ready for another.

LOADER INPUT

The input to the Loader is in one of two forms - commands and object modules. The Loader commands control the relocation and linking of desired object modules. The object modules are produced by the M6800 Macro Assembler when the relocation option is specified. Each source program assembled by the Macro Assembler creates a single relocatable object module on a disc file. These disc files or those files created by merging one or more of these files are used as the input to the Loader.

The Loader command structure provides for the loading of an entire file or selected modules within a file. In addition, a disc file may be used as a library file.

COMMAND FORMAT

Each Loader command line consists of a sequence of commands and comments followed by a carriage return. The first blank in a command line terminates the command portion of the line and the remainder is assumed to be comments. Multiple commands may appear on a line by using a semi-colon (;) as a command separator. The format of a command line may thus be defined as:

$$\left[\langle \text{command} \rangle \left[; \langle \text{command} \rangle \right]_0^{00} \right] \left[\langle \text{space} \rangle \left[\langle \text{comments} \rangle \right] \right] \langle \text{c/r} \rangle$$

The commands in a command line are executed only after the Loader detects a carriage return.

If a command line is entered incorrectly, the line may be corrected in either of two manners. First, the command line may be deleted completely by typing CTRL X (the CTRL and X keys typed simultaneously). This causes the Loader to ignore the current command line and a new prompt (?) will be printed. Instead of deleting the entire command line, the command line may be corrected by deleting the character(s) in error. This is accomplished by typing a RUBOUT to delete the last character typed. The typing of a RUBOUT also causes the last character

to be printed. After deleting the character(s) in error, the corrected version of the command line may be entered.

The Loader will execute all the commands in a command line before another prompt is issued. If an error is detected while attempting to process a command, that command will be terminated. The remaining commands in the command line will be ignored.

When using multiple commands per line, it should be noted that selected commands require that they are the last command on a line. These commands include:

- INIT
- All intermediate file commands (IF, IFON, IFOF)
- ABSP when used in conjunction with an intermediate file

LOADER COMMANDS

The Loader commands are divided into three classes: (1) control commands; (2) load directives; (3) state directives. The control commands are used to initiate Pass I and II of the Loader as well as to return to EXBUG or the disc operating system. The load directives are used to identify the modules to be loaded. Finally, the state directives direct the assignment of memory to the various program sections and the production of a load map.

Command Nomenclature

- < f_name > - Used to indicate the name of a disc input file. Disc file names must start with an alphabetic character and contain a maximum of five alphanumeric characters. The disc unit upon which the file resides may be defined by placing a colon (:) after the file name, followed by a valid disc drive number. If a disc unit is not specified, drive zero will be assumed.
- < m_name > - Used to indicate a named module. Named modules are composed of a maximum of six alphanumeric characters, the first of which must be alphabetic.
- < name > - Used to indicate a named file or module as determined by the Loader's current file/module state.
- < number > - Used to indicate a decimal or hexadecimal number. Unless preceded by a '\$' character which is used to denote hexadecimal, the number will be interpreted as decimal. The allowable number range unless explicitly stated otherwise will be:
- 0 - 65,535 (decimal)
0 - \$FFFF (hexadecimal)
- [] - Used to indicate that the enclosed directive(s) is optional.
- []₀⁰⁰ - Used to indicate that the enclosed directive may be repeated any number of times.
- { } - Indicates that one of the enclosed options must be used.

Control Commands

ABSP - Produce Absolute Load Module

FORMAT: ABSP [= < m_name > [, < printable
information >]]

DESCRIPTION: ABSP initiates the second pass of the Loader. During this pass, an absolute binary memory image is produced in EXORciser loadable format on the disc file defined by the B0 command. If an output module name is specified, it will be included in the module's S0 record. Any printable information is also included in the S0 record if specified. The printable information may contain any character and is terminated only by a semi-colon or carriage return. NOTE: A space is a valid character in the printable information and does not terminate the command line. The module name and printable information may not exceed 30 characters.

If an intermediate file (IF) was generated during Pass I, the second pass of the Loader will proceed automatically as directed by the commands entered during

the first pass. When an IF is being used, the ABSP command must be the last command in a command line.

In the event that an IF is not created during Pass I, the same sequence of commands used in Pass I (with the exception of the MAP commands) must be repeated exactly as in Pass I.

Prior to the ABSP command, a binary output file must be defined via the B0 command.

EXAMPLE: ABSP=ROOT, A SQUARE ROOT PROGRAM

As a result of this command, the second pass of the assembler is initiated to produce an absolute module. The phrase 'ROOT, A SQUARE ROOT PROGRAM' is written in the S0 record of the absolute module.

BO - Binary Output

FORMAT: BO = < f_name >

DESCRIPTION: The BO command is used to direct the binary output in EXORciser load format to a disc file. The disc file defined by the BO command must not currently exist on the defined drive.

EXAMPLE: BO=BOBJ Write binary load module on
 file BOBJ on drive 0

 BO=BOBJ1:1 Write binary load module on
 file BOBJ1 on drive 1

EXBUG

FORMAT: EXBUG

DESCRIPTION: The EXBUG command is one of two commands which may be used to exit the Loader. EXBUG causes control to be returned to the EXORciser's EXBUG mode after all Loader files are closed.

EXIT

FORMAT: EXIT

DESCRIPTION: The EXIT command is one of two commands which terminates the Loader's activity. EXIT causes control to be returned to the disc operating system.

IDOF - Suppress Printing of Module ID

FORMAT: IDOF

DESCRIPTION: The IDOF command suppresses the printing of the module name and print information associated with each object module loaded. The Loader is initialized to the IDOF state.

IDON - Print Module ID

FORMAT: IDON

DESCRIPTION: This command causes the printing on the console of the name and printable information associated with each object module loaded or encountered in a library file.

IF - Intermediate File

FORMAT: IF = < f_name >

DESCRIPTION: The IF command defines a file to be used as an intermediate file. An intermediate file is a copy of all Pass I Loader commands and object modules. It is used to direct the Loader during Pass II, instead of requiring the user to retype the Pass I command sequence during Pass II. The IF command also automatically places the Loader in intermediate file mode similar to the IFON command. Like the IFON command, the IF command must be the last command in a command line.

The IF file name must be a valid disc file name and may not be the name of an existing file on the specified disc unit.

EXAMPLE: IF=IFILE Defines IFILE on drive 0 as the intermediate file.

IFOF - Intermediate File Mode Off

FORMAT: IFOF

DESCRIPTION: IFOF temporarily suppresses the creation of the intermediate file until an IFON directive is encountered. This command must be the last command in a command line.

IFON - Intermediate File Mode On

FORMAT: IFON

DESCRIPTION: This command directs the Loader to write all further commands and object modules onto the intermediate file. This directive remains in effect until an IFOF or Pass II command is detected. The IFON command must be the last command on a command line. IFON is implied when the intermediate file is defined by the IF command. If an intermediate file is to be used during Pass II, the IFON directive must be in effect.

INIT - Initialize Loader

FORMAT: INIT

DESCRIPTION: INIT initializes the Loader for Pass I. This command is performed automatically when the Loader is first initiated. The use of this command permits several output object modules to be created by the Loader. The INIT command must be the last command in a command line.

Load Directives

FILE - File Mode

FORMAT: FILE

DESCRIPTION: The FILE directive is used to place the Loader in file mode. While in file mode, the Loader will operate on all the modules within a file as directed by the load directives. The file mode is the default mode. The file mode may be temporarily overridden by the ':M' option of the LOAD command.

LIB - Library Search

FORMAT: LIB $\left[\left[= \langle \text{number} \rangle \right] \left[:M \right] \left[, \left[\langle \text{number} \rangle \right] \left[:M \right] \right]_0^{00} \right]$

DESCRIPTION: The LIB command instructs the Loader to search the specified object modules for those modules which satisfy any undefined global references. Any module that satisfies a global symbol will be loaded.

The object modules to be searched are specified in the same manner as explained in the description of the LOAD command.

Modules loaded via the LIB command may also reference global symbols that are not defined. Since a library file is searched once for each LIB command, care should be taken when creating a library file in order to avoid multiple passes of the same library file.

EXAMPLE: LIB Searches the remaining modules on the input file to resolve unsatisfied global references

LIB=MLIB:1 The file MLIB on disc unit 1 will be used as a library file.

LOAD - Load a File or Module

FORMAT: LOAD $\left[\left[=\langle \text{number} \rangle \right] \left[:M \right] \left[, \left[\langle \text{number} \rangle \right] \left[:M \right] \right] \right] \left[\langle \text{name} \rangle \right]$

DESCRIPTION: The LOAD command directs the M6800 Linking Loader to load the specified object files and/or modules.

If a $\langle \text{number} \rangle$ is given, the Loader will load the next $\langle \text{number} \rangle$ of modules from the disc file defined by the OI command. When the $\langle \text{number} \rangle$ format of the LOAD command is used, the ':M' feature or the MODU directive must be in effect. The ':M' option causes the Loader to enter module mode only for the indicated sub-command. A maximum of 255 modules may be loaded at one time with this form.

The use of the $\langle \text{name} \rangle$ form of the LOAD command causes the Loader to load the defined module or file. The $\langle \text{name} \rangle$ must be a valid file or module name. To load a module by name, the ':M' feature or the MODU directive must be in effect and the module must be contained within the disc file defined by the OI command.

NOTE: Disc files are sequential files and are not rewound prior to a module search.

When no options are specified as part of the LOAD command, only one file or module will be loaded from the disc file defined by the OI command.

EXAMPLE: LOAD=PGM1:1	Loads all modules within file PGM1 on disc drive 1
LOAD=1:M,PGM2:M	Loads from the input file the next module and the module named PGM2
LOAD=PGM3	Loads the file PGM3 from drive 0 or the module PGM3 from the defined input file. The file/module mode of the Loader determines whether a file or module will be loaded.

MODU - Module Mode

FORMAT: MODU

DESCRIPTION: The MODU directive places the Loader in the module mode. While in the module mode, the <name> and <number> options of the load directives shall refer to modules.

SKIP - Skip Input Modules

FORMAT: SKIP=<number> [:M]

DESCRIPTION: The SKIP command directs the Loader to skip the defined number of modules in the file indicated by the OI command. The MODU directive or ':M' option must be in effect. A maximum of 255 modules may be skipped with a single command.

EXAMPLE: SKIP=2:M Skips the next two modules on the input file

SRCH - Search for a File or Module

FORMAT: SRCH=< name > [:M]

DESCRIPTION: SRCH causes the Loader to search for a named object module or file. If the MODU directive is in effect or the ':M' option specified, the current disc file defined by the OI command will be searched for the named module. If the Loader is operating in the file mode as directed by the FILE command, a disc search will be performed for the named file. If the named file is found, this file will become the new object input file for future Loader commands. When in file mode, the file named must be a valid file name and the drive unit may be given by typing a colon (:) and the drive number after the file name. If no drive unit is specified, drive 0 is assumed.

EXAMPLE: SRCH=FADD:1 Searches disc unit 1 for the file FADD. If found, FADD will be the new input file.

SRCH=SINE:M Searches for the module named SINE on the current input file.

State Commands

CUR - Set Current Location Counter

FORMAT: CUR { B
 L
 P } [\] < number >

DESCRIPTION: The CUR command causes the Loader to set the current relative address of the specified section (BSOCT, LSOCT, or PSOCT) to the given number. The defined number must be greater than or equal to the section's current location counter address. The '\ ' option causes the Loader to start the specified section of all future modules loaded on an address modulo the given number. The '\ ' option remains in effect until revoked with a '\ 0' option or until the current pass of the Loader is complete. If the '\ ' option is in effect when memory is assigned, the start address of the section will be modulo the given number. The '\ ' option does not apply to named common blocks within the specified section.

EXAMPLE: CURP=\$100 Sets the relative PSCT location counter to 100 (hexadecimal).

CURP=\\$100 Causes the Loader to update PSCT's relative location counter to the next modulo 100 (hexadecimal) address. This function is performed for each module loaded after this command.

DEF - Loader Symbol Definition

FORMAT: DEF:<name1> = $\left\{ \begin{array}{l} \langle \text{number} \rangle \\ \langle \text{name2} \rangle \end{array} \right\} \left[\begin{array}{l} \text{ASCT} \\ \text{BSCT} \\ \text{DSCT} \\ \text{PSCT} \end{array} \right]$

DESCRIPTION: The DEF command is used to define a global symbol and enter it in the global symbol table. The symbol to be defined is given by name1 and must be a valid Macro Assembler variable name. The symbol may not currently be defined. If the <number> option is used, the symbol will be defined with the given number as the relative address within the specified section. The DEF command may be used to provide another name for a previously defined symbol by using the <name2> option. <name2> must be a currently defined global symbol. The section options - ASCT, BSCT, DSCT, PSCT - are used to define the section associated with the defined section. ASCT is the default section.

EXAMPLE: DEF:ACIA1=\$EC10,ASCT Defines symbol ACIA1
as an ASCT symbol with
absolute address EC10
(hexadecimal).

END - Ending Address

FORMAT: END $\left\{ \begin{array}{c} B \\ C \\ D \\ P \end{array} \right\} = \langle \text{number} \rangle$

DESCRIPTION: The END commands are used to set the absolute ending address of the associated section (BSCT, CSCT, DSCT or PSCT). If both an ending and starting address are defined, the size described by these boundaries must be greater than or equal to the size of the associated section.

EXAMPLE: ENDB=255 BSCT will be allocated such that the last address reserved is 255 (decimal).

MAP - Prints Load Maps

FORMAT: MAP $\left\{ \begin{array}{c} C \\ F \\ S \\ U \end{array} \right\}$

DESCRIPTION: The MAP commands are used to display the current state of the modules loaded on the Loader's state directives.

MAPC - Prints the current size, user defined starting address, and user defined ending address for each of the sections, as well as the size, starting address, and ending address for each ASCT defined.

MAPF - A full map of the state of the loaded modules is produced after the Loader assigns memory. This map includes a list of any undefined symbols, a section load map, a load map for each defined module and named common and a defined global symbol map.

MAPS - The Loader assigns memory to those sections not defined by a user supplied starting and/or ending address. A memory load map which defines the size, starting address and ending address for each section is printed.

MAPU - Prints a list of all global references which currently remain undefined.

STR - Starting Address

FORMAT: STR $\left\{ \begin{array}{c} B \\ C \\ D \\ P \end{array} \right\} = \langle \text{number} \rangle$

DESCRIPTION: The STR commands set the absolute starting address of the associated section (BSCT, CSCT, DSCT, PSCT). Those sections whose starting address is not defined by the user will be assigned a starting address by the Loader.

EXAMPLE: STRP=\$1000 PSCT will be allocated memory starting at 1000 (hexadecimal).

STRB=0 Overwrites the default starting address of BSCT.

APPENDIX A

A SUMMARY OF M6800 LINKING LOADER COMMANDS

<u>COMMAND</u>	<u>FUNCTION</u>
<u>CONTROL COMMANDS</u>	
ABSP [= < m_name > [, < printable information >]]	Initiates Pass II
BO = < f_name >	Specify the binary object file
EXBUG	Give control to EXBUG
EXIT	Give control to the disc operating system
IDOF	Suppress identification printing
IDON	Print module identification information
IF = < f_name >	Specify the intermediate file
IFOF	Intermediate file mode off
IFON	Intermediate file mode on
INIT	Initialize the Loader
OI = < f_name >	Specify the object input file

LOAD DIRECTIVES

FILE	Enter file mode
LIB [[= < number >] [:M] [, [< name >] [:M]] ₀ ⁰⁰]	Library search and load
LOAD [[= < number >] [:M] [, [< name >] [:M]] ₀ ⁰⁰]	Load the indicated file(s)/module(s)
MODU	Enter module mode
SKIP = < number > [:M]	Skip files/modules
SRCH = < name > [:M]	Search for a file or module

COMMAND

FUNCTION

STATE COMMANDS

CUR $\left\{ \begin{array}{c} B \\ D \\ P \end{array} \right\} \cdot [\backslash] \langle \text{number} \rangle$ Set current location counter

DEF: $\langle \text{name1} \rangle \cdot \left\{ \begin{array}{c} \langle \text{number} \rangle \\ \langle \text{name2} \rangle \end{array} \right\} \left[\begin{array}{c} ASCT \\ BSCT \\ DSCT \\ PSCT \end{array} \right]$ Define a symbol

END $\left\{ \begin{array}{c} B \\ C \\ D \\ P \end{array} \right\} \cdot \langle \text{number} \rangle$ Set section ending address

MAPC List user assigned section sizes and addresses

MAPF List full load map

MAPS List loader assigned section sizes and addresses

MAPU List undefined symbols

STAR $\left\{ \begin{array}{c} B \\ C \\ D \\ P \end{array} \right\} \langle \text{number} \rangle$ Set section starting address

APPENDIX B

LINKING LOADER ERROR MESSAGES

Errors detected by the Linking Loader while processing a command or loading a module will result in an error message being printed at the user's terminal. These errors are divided into two classifications: fatal errors and non-fatal (warning) errors. When the Loader detects a non-recoverable error, a fatal error message will be printed. Any commands not processed on the last command line will be ignored and a new prompt printed. If the Loader can recover from an error, only a warning message will be printed.

FATAL ERROR MESSAGES

<u>Message</u>	<u>Explanation</u>
BAE	BSCT Assignment Error - the combined size of BSCT is greater than the amount that can be allocated in the defined BSCT area.
COV	Common Overflow - the size of a section's common is greater than 65,536.
GAE	General Assignment Error - the Loader cannot assign absolute memory addresses. This may result from: <ul style="list-style-type: none">• the definitions of ASCTs• user assignment of section addresses• the combined length of all sections exceeding 65,536• the order in which the Loader assigns memory
ICM	Illegal Command

IOR	Illegal Object Record - the input module is not a valid relocatable object module.
ISY	Illegal Syntax - error in the option or specification field of a command. This error may also occur when a command is not terminated by a semi-color, space or carriage return.
LOV	Local Symbol Table Overflow - not enough memory for all the global (external) symbols defined by the object modules.
SOV	Section Overflow - the size of a section is greater than 65,535.
UAE	User Assignment Error - the user has incorrectly defined load addresses. This error occurs when: <ul style="list-style-type: none"> • the user defined end address is less than the user defined start address • the space allocated by the user defined start and end addresses is less than that required for the section • the user has defined load addresses which overlap.
UBO	Undefined BO File

WARNING MESSAGES

<u>Message</u>	<u>Explanation</u>
MDS- <symbol >	Multiply Defined Symbol - the Loader has encountered another definition for the previously defined global <symbol>. Only the first definition will be valid.

UDS - <symbol> Undefined Symbol - the <symbol> was not defined during Pass I. A load address of zero will be assumed.

FATAL I/O ERRORS

If the Loader detects an error while attempting to read or write from disc, the following message will be printed.

DK xx ST yy f_name

where xx is the disc unit, yy is the I/O error, and f_name is the name of the file being referenced. If an I/O error is detected while creating an intermediate file, the Loader shall suspend the IF creation. In this event, the user should reinitialize the Loader.

I/O Errors

Explanation

3	Only one output file may be opened at any time
4	Device not ready
5	Invalid device (Loader error)
6	Duplicate file name
7	Named file does not exist
8	File not opened
9	Unexpected end-of-file
C	Directory or disc space full
E	Checksum error on object record

APPENDIX C

EXAMPLES OF LOAD OPERATION

This appendix serves to illustrate the major features provided by the M6800 Linking Loader. Figures C-1, C-2 and C-3 show three programs which have been assembled by the M6800 Macro Assembler. The relocatable object modules created by assembling these programs are used as input modules to the Loader in Figures C-4, C-5 and C-6. Figure C-4 illustrates the use of the Loader without an intermediate file. In Figure C-5, an intermediate file is created and an example of user defined starting addresses is shown. An illustration of library files is provided in Figure C-6. The library file PG120 was created by merging files PG10 and PG20.

```

00001                                     NAM     P01
00002                                     OPT     REL, DREF, MDG, LLEN=100
00003                                     TTL     PROGRAM TO PRINT OUT MESSAGES (MAIN)
00004                                     TENT    MESSAGE PROGRAM 1
00005                                     *
00006                                     * COMMON MESSAGE AREA
00007                                     * (UNNAMED COMMON "BCOMM" IN BSCT)
00008                                     *
00009 BCOMM COMM BSCT
00010 P MSG01 F01 MSG01 PTR TO MESSAGE 1 (IN PSCT)
00011 D MSG02 F02 MSG02 PTR TO MESSAGE 2 (IN DSCT)
00012 A MSG03 F03 MSG03 PTR TO MESSAGE 3 (XREF IN BSCT)
00013 A MSG04 F04 MSG04 PTR TO MESSAGE 4 (XREF IN DSCT)

00015                                     *
00016                                     * MESSAGES 1 AND 2
00017                                     * (NEW NAMED COMMON "BCOMM2" IN BSCT)
00018                                     *
00019 BCOMM2 COMM BSCT
00020 A COMS01 F01 1 COMMON MESSAGE COUNT
00021 A COMS02 F02 20 COMMON MESSAGE

00023 DSCT BSCT BLANK COMMON SECTION
00024 A COMS03 F01 $10 RESERVE 16 BYTES

00026 DSCT DATA SECTION
00027 A MSG2 F01 MESSAGE 2/
00028 A F02 4 DELINEATE END OF MESSAGE

00030 DSCT PROGRAM SECTION
00031 A MSG1 F01 MESSAGE 1/
00032 A F02 4

00034                                     *
00035                                     * EXTERNAL REFERENCES
00036                                     *
00037 XREF ATEST
00038 XREF BSCT.MSG3, DSCT.MSG4, ANY STACK, EXBENT, PGM2

00040                                     *
00041                                     * EXTERNAL DEFINITIONS
00042                                     *
00043 XDEF MSG2, MSG1, EXBPRT, START, PGM1E

00045 F024 A EXBPRT EQ: #F024 ELBUG PRINT ROUTINE

```

FIGURE C-1
MESSAGE PROGRAM 1

PAGE 003 PG1 PROGRAM TO PRINT OUT MESSAGES (MAIN)

```
R      ATEST 00037*00089
NB     BCOMM 00009*
NB     BCOMM2 00019*
NB 0001 MSG 00021*00071
NB 0000 MSGCT 00020*00073
P      EXCENT 00038*
D  F024 EXEPT 00043 00045*00055 00061 00063 00065
P 0040 FRMPRT 00072 00075 00078 00091*
P 0024 LOOP1 00075*00084
DP 0000 MSG1 00010 00031*00043
NB 0000 MSG1F 00010*00054
DD 0000 MSG2 00011 00027*00043
NB 0002 MSG2F 00011*
RB     MSG3 00012 00038*00060
NB 0004 MSG3F 00012*00062
RD     MSG4 00013 00038*00064
NB 0006 MSG4F 00013*
C 0000 MSG5ST 00024*00069
DP 0015 PGINE 00043 00060*
R      FPM2 00038*00056
R      STACT 00039*00053
LP 0006 START 00043 00053*
P 004E TOFNTR 00070 00079 00082 00092*
```

FIGURE C-1

MESSAGE PROGRAM 1 (continued)

```

00001          NAM      PG2
00002          OPT      CREF,REL,NOG,LLEN=100
00003          TTL      PROGRAM TO PRINT OUT MESSAGES (SUBPROGRAM)
00004          *
00005          * MESSAGE POINTER AREA (BCOMM)
00006          *
00007N 0000          BCOMM  COMM  BSCT
00008N 0000          0002  A  MSG1PT  RMB  2
00009N 0002          0002  A  MSG2PT  RMB  2
00010N 0004          0002  A  MSG3PT  RMB  2
00011N 0006          0002  A  MSG4PT  RMB  2

00013N 0000          BCOMM2  COMM  BSCT
00014N 0000          14    A  MSGGCT  FCB  MSGG-MSGG
00015N 0001          43    A  MSGG    FCC  /COMMON TEST PROGRAM/
00016N 0014          04    A          FCB  4
00017          0015  N  MSGGE    EQU  *      END OF MESSAGE

00019          *
00020          * MESSAGES 3 AND 4
00021          *
00022B 0000          BSCT
00023B 0000          4D    A  MSG3    FCC  /MESSAGE 3/
00024B 0009          04    A          FCB  4

00026D 0000          DSCT
00027D 0000          4D    A  MSG4    FCC  /MESSAGE 4/
00028D 0009          04    A          FCB  4

00030          *
00031          * START OF PROGRAM 2
00032          *
00033P 0000          PSCT
00034P 0000  DE 00    N  PGM2  LDX  MSG1PT  PRINT MESSAGE 1
00035P 0002  BD 0000  A          JSR  EXBPRT
00036          *
00037          * PRINT MESSAGE 2
00038          *
00039P 0005  CE 0000  A          LDX  MSG2    PRINT MESSAGE 2
00040P 0008  BD 0000  A          JSR  EXBPRT
00041P 0008  DE 02    N          LDX  MSG2PT  PRINT MESSAGE 2 AGAIN
00042P 0000  BD 0000  A          JSR  EXBPRT
00043P 0010  TE 0000  A          JMP  PBLNE  RETURN TO PROGRAM ONE
00044          *
00045          * XDEFS AND XREFS
00046          *
00047          XDEF  MSG3,MSG4,STACK,EXIBNT,PGM2
00048          XREF  EXBPRT,PBLNE,MSG1,MSG2

```

FIGURE C-2
MESSAGE PROGRAM 2

PAGE 002 PG2 PROGRAM TO PRINT OUT MESSAGES (SUBPROGRAM)

00050D	000A			DSC1		DATA SECTION
00051D	000A	0014	A	RMB	20	
00052D	001E	0001	A	STACK	RMB	1
						STACK STORAGE AREA
00054		F564	A	EXBENT	EQU	#F564

00056
TOTAL ERRORS 00000

END

NB BCOMP1 00007*
NB BCOMP2 00013*
NB 0001 CMSG 00014 00015*
NB 0000 CMSGCT 00014*
NB 0015 CMSGE 00014 00017*
D F564 EXBENT 00047 00054*
R EXBPRT 00035 00040 00042 00048*
R MSG1 00048*
NB 0000 MSG1PT 00008*00034
R MSG2 00039 00048*
NB 0002 MSG2PT 00009*00041
DB 0000 MSG3 00023*00047
NB 0004 MSG3PT 00010*
DB 0000 MSG4 00027*00047
NB 0006 MSG4PT 00011*
R PG1NE 00043 00048*
DP 0000 PG1Z 00034*00047
DD 001E STACK 00047 00052*

FIGURE C-2

MESSAGE PROGRAM 2 (continued)

00001 NAM MSG
 00002 TEL *****PROGRAM TO ILLUSTRATE USE OF ASOT
 00003 OPT REL CRSE LENGTH

00005 * ELABOR COMMON

00007C 0000
 00009C 0000 0000 A MSG EMT 000

00010 YEFF ATEST
 00011 YBPT EXBENT

00013A 0000 DELT UNNECESSARY SINCE MSG CAUSES ASOT ENTRY

00014A 1006 000 0000

00015A 1006 DE 0000 1 ATEST LMP 00000 STAGE OF COMMON MESSAGE

00016A 1009 7E 1000 A LMP ATEST2

00018A 1000 000 0000

00019A 1000 PD 0000 A ATEST2 JCF EXBPT PRINT MESSAGE

00020A 1003 7E 0000 A LMP EXBENT GOTO EXBENT/PRINT STOP

00022 EMT

TOTAL ERRORS 00000

D 1006 ATEST 00010 00015*
 1000 ATEST2 00014 00019*
 C 0000 MSG 00009-00015
 R EXBENT 00011-00020
 R EXBPT 00011-00019

FIGURE C-3
 MESSAGE PROGRAM 3

M5800 LINKING LOADER REV 1.0

?LOAD=PG10,PG20

?OI=PG30:LOAD

?BO=BOTST

?RBCP

?LOAD=PG10,PG20

?OI=PG30:LOAD

?MAPF

NO UNDEFINED SYMBOLS

MAP

S	SIZE	STR	END	COMM
A	0006	1000	1005	
A	0006	1006	100B	
B	0027	0020	0046	001D
C	0030	0050	007F	0030
D	0029	009B	00C3	0000
F	0063	00E6	0148	0000

MODULE	NAME	BST	DECT	PST
PG1		0020	009B	00E6
PG2		0020	00A5	0136
PG3		002A	00C4	0148

COMMON

NAME S STR

BCOMM B 0008 002A

BCOMM2 B 0015 003F

DEFINED SYMBOLS

NAME	S	STR	NAME	S	STR	NAME	S	STR	NAME	S	STR
RTST	A	1006	EXBERT	A	0024	MSG1	P	00E6	MSG2	D	009B
MSG3	B	0020	MSG4	D	00A5	PG1NE	P	00FB	PG2E	P	0136
STACT	P	00FA							STACT	D	00C3
EXIT											

RETURN TO DISC OPERATING SYSTEM

!LOAD, BOTST

EXBUG 1.2 MAID

*FOIG

MESSAGE 1

MESSAGE 1

MESSAGE 2

MESSAGE 2

MESSAGE 3

MESSAGE 3

MESSAGE 4

COMMON TEST PROGRAM

EXBUG 1.2

FIGURE C-4

EXAMPLE OF LOADER WITHOUT INTERMEDIATE FILE

M6800 LINKING LOADER REV 1.0

?IF=F1

?STRT=0500 : IADR=0400

?OADR=0100

?MAP:

S	SIZE	STR	END	COMM
B	0000	FFFF	0000	0000
C	0000	FFFF	0000	0000
D	0000	0400	0000	0000
F	0000	0500	0000	0000

?LOAD=PG10,PG20,PG30

?EO=B1:ABSP

S	SIZE	STR	END	COMM
A	0005	1000	1005	
A	0005	1005	1008	
B	0027	0020	0046	0010
C	0030	0050	007F	0030
D	0029	0400	0428	0000
F	0200	0500	05FF	0000

?MAP:

NO UNDEFINED SYMBOLS

MAP:

S	SIZE	STR	END	COMM
A	0005	1000	1005	
A	0005	1005	1008	
B	0027	0020	0046	0010
C	0030	0050	007F	0030
D	0029	0400	0428	0000
F	0200	0500	05FF	0000

MODULE NAME	EO	IA	OA	ST
PG1		0020	0400	0500
PG2		0020	0400	0500
PG3		0029	0429	0700

COMMON

NAME	S	SIZE	STR
BCOMM	B	0005	002A
BCOMM2	B	0015	002F

DEFINED SYMBOLS:

NAME	S	STR	NAME	S	STR
ATEST	A	1005	EXBENT	A	0564
MSG3	B	0020	MSG4	D	040A
START	F	050A			
?EXIT					

?LOAD=B1

EXBUG 1.2 MAIN

*50AIG

MESSAGE 1

MESSAGE 1

MESSAGE 2

MESSAGE 2

MESSAGE 3

MESSAGE 3

MESSAGE 4

COMMON TEST PROGRAM

EXBUG 1.2

CREATE AN INTERMEDIATE FILE - F1

ASSIGN STARTING ADDRESS TO PG1,PG2

START PG1 MODULE ON ADDRESS: MODULO 100+HEX

PRINT OVER ASSIGN VALUE:

LOAD FILE: PG10,PG20,PG30

ASSIGN AB: OBJECT FILE - B1

PRINT FULL MAP

RETURN TO DDC OPERATING SYSTEM

FIGURE C-5

EXAMPLE OF LOADER WITH INTERMEDIATE FILE

M5800 LINKING LOADER REV 1.0

?IDON
?IF=F3
?LOAD=PG10
PG1 MESSAGE PROGRAM 1

?IFOF
?MAPU:IFON
ATEST EXBENT MSG3 MSG4
0006 UNDEFINED SYMBOLS
?

?LIB=PG120:1
PG1 MESSAGE PROGRAM 1
PG2

?IFOF
?MAPU:IFON
ATEST
0001 UNDEFINED SYMBOLS

?LOAD=PG30
PG3
?BO=B3:IDOF:ABSF
?MAPF

NO UNDEFINED SYMBOLS
MAP

S	SIZE	STR	END	COMM
A	0006	1000	1005	
A	0006	1006	100B	
B	0027	0020	0046	0010
C	0030	0050	007F	0030
D	0029	009B	00C3	0000
P	0063	00E6	0148	0000

MODULE NAME	B\$CT	D\$CT	P\$CT
PG1	0020	009B	00E6
PG2	0020	00A5	0136
PG3	002A	00C4	0149

COMMON

NAME	S	SIZE	STR
BCOMM	B	000A	002A
BCOMM2	B	0015	0032

DEFINED SYMBOLS

NAME	S	STR	NAME	S	STR	NAME	S	STR	NAME	S	STR
ATEST	A	1006	EXBENT	A	F564	EXBPRT	A	F024	MSG1	P	00E6
MSG3	B	0020	MSG4	D	00A5	PGINE	P	00FB	MSG2	D	009B
START	P	00F0				PGM2	P	0136	STACK	D	00C3
?EXIT											

PRINT MODULE INFORMATION
CREATE INTERMEDIATE FILE - F3
LOAD FILE PG10

TURN IF OFF
PRINT UNDEFINED SYMBOLS, TURN IF ON
PGM2 STACK

FILE PG120 CONTAINS MODULES PG1 AND PG2
LIBRARY SEARCH OF FILE PG120 ON DRIVE 1

ONLY MODULE PG2 WAS LOADED, TURN IF OFF
LIST UNDEFINED SYMBOLS, TURN IF ON

LOAD MODULE PG3

DEFINE OBJECT FILE 80, START PAGE 11
FULL MAP

RETURN TO DISC OPERATING SYSTEM

FIGURE C-6

EXAMPLE OF LIBRARY FILES