

INSTRUCTION MANUAL
MODEL 172B
PROGRAMMABLE
SIGNAL SOURCE

WAVETEK

WAVETEK SAN DIEGO, INC.

9045 Balboa Ave., San Diego, CA 92123

INSTRUCTION MANUAL
MODEL 172B
PROGRAMMABLE
SIGNAL SOURCE

© - 1981 - Wavetek

THIS DOCUMENT CONTAINS INFORMATION PROPRIETARY TO WAVETEK AND IS SOLELY FOR INSTRUMENT OPERATION AND MAINTENANCE. THE INFORMATION IN THIS DOCUMENT MAY NOT BE DUPLICATED IN ANY MANNER WITHOUT THE PRIOR APPROVAL IN WRITING OF WAVETEK.

WAVETEK®

SAN DIEGO, INC.

9045 Balboa Ave., San Diego, CA 92123
P.O. Box 85265, San Diego, Calif. 92138
Tel 619/279-2200 TWX 910-335-2007

Manual Revision 4/84
Instrument Release M

WARRANTY

Wavetek warrants that all products of its own manufacture conform to Wavetek specifications and are free from defects in material and workmanship when used under normal operating conditions and within the service conditions for which they were furnished.

The obligation of Wavetek hereunder shall expire one (1) year after delivery and is limited to repairing, or at its option, replacing without charge, any such product which in Wavetek's sole opinion proves to be defective within the scope of this Warranty. In the event Wavetek is not able to repair or replace defective products or components within a reasonable time after receipt thereof, Buyer shall be credited for their value at the original purchase price.

Wavetek must be notified in writing of the defect or nonconformity within the warranty period and the affected product returned to Wavetek's factory or to an authorized service center within thirty (30) days after discovery of such defect or nonconformity. Shipment shall not be made without prior authorization by Wavetek.

This is Wavetek's sole warranty with respect to the products delivered hereunder. No statement, representation, agreement or understanding, oral or written, made by an agent, distributor, representative or employee of Wavetek, which is not contained in this warranty, will be binding upon Wavetek, unless made in writing and executed by an authorized Wavetek employee. **Wavetek makes no other warranty of any kind whatsoever, expressed or implied, and all implied warranties of merchantability and fitness for a particular use which exceed the aforestated obligation are hereby disclaimed by Wavetek and excluded from this agreement.** Under no circumstances shall Wavetek be liable to Buyer, in contract or in tort, for any special, indirect, incidental or consequential damages, expenses, losses or delays however caused.

CONTENTS

SECTION 1 GENERAL DESCRIPTION

| | |
|-------------------------------------|-----|
| 1.1 THE MODEL 172B AND OPTIONS..... | 1-1 |
| 1.1.1 Standard Model..... | 1-1 |
| 1.1.2 Front Panel Option..... | 1-1 |
| 1.1.3 Synthesizer Option..... | 1-1 |
| 1.2 SPECIFICATIONS..... | 1-1 |
| 1.2.1 Versatility..... | 1-1 |
| 1.2.2 Frequency Precision..... | 1-2 |
| 1.2.3 Amplitude Precision..... | 1-3 |
| 1.2.4 Waveform Characteristics..... | 1-3 |
| 1.2.5 General..... | 1-4 |
| 1.2.6 Options..... | 1-4 |

SECTION 2 INSTALLATION AND INTERFACE

| | |
|--|-----|
| 2.1 MECHANICAL INSTALLATION..... | 2-1 |
| 2.2 ELECTRICAL INSTALLATION..... | 2-1 |
| 2.2.1 Power Connection..... | 2-1 |
| 2.2.2 Signal Connections..... | 2-1 |
| 2.2.3 GPIB Connections..... | 2-1 |
| 2.2.4 GPIB Card Address..... | 2-2 |
| 2.2.5 Initial Checkout and Operation Verification..... | 2-3 |

SECTION 3 OPERATION

| | |
|--|------|
| 3.1 DATA ENTRY..... | 3-1 |
| 3.2 POWER..... | 3-1 |
| 3.3 BASIC COMMAND STRUCTURE..... | 3-2 |
| 3.3.1 Frequency..... | 3-5 |
| 3.3.2 Amplitude..... | 3-5 |
| 3.3.2.1 Amplitude Definition..... | 3-5 |
| 3.3.2.2 All Waveforms..... | 3-5 |
| 3.3.2.3 Pulses..... | 3-5 |
| 3.3.3 Offset and DC Voltage..... | 3-5 |
| 3.3.4 Function..... | 3-7 |
| 3.3.5 Mode..... | 3-7 |
| 3.3.6 Load and Output..... | 3-7 |
| 3.3.7 Symmetry..... | 3-7 |
| 3.3.8 Executing the Program..... | 3-9 |
| 3.3.9 GPIB Address..... | 3-9 |
| 3.3.10 Trigger..... | 3-9 |
| 3.3.11 Command Recall..... | 3-9 |
| 3.3.12 Errors..... | 3-9 |
| 3.4 OPERATING MODES..... | 3-9 |
| 3.4.1 Initial Conditions..... | 3-9 |
| 3.4.2 Operating as a Basic Waveform Generator..... | 3-9 |
| 3.4.3 Operating as a Triggered or Gated Generator..... | 3-9 |
| 3.4.4 Operating as a Voltage Controlled or Frequency Modulated Generator..... | 3-10 |

CONTENTS (Continued)

| | | |
|---------|---|------|
| 3.4.5 | Operating as a Frequency Synthesizer (an Option)..... | 3-10 |
| 3.4.6 | Operating as a DC Voltage Source..... | 3-11 |
| 3.4.7 | Operating as a Phase Lock Generator..... | 3-11 |
| 3.5 | FRONT PANEL OPTION..... | 3-11 |
| 3.5.1 | Keyboard and Display..... | 3-11 |
| 3.5.2 | Display..... | 3-11 |
| 3.6 | GPIB INTERFACE..... | 3-12 |
| 3.6.1 | Bus Lines Defined..... | 3-13 |
| 3.6.2 | GPIB Commands..... | 3-14 |
| 3.6.2.1 | Listen Addresses..... | 3-14 |
| 3.6.2.2 | Talk Addresses..... | 3-14 |
| 3.6.2.3 | Secondary Addresses..... | 3-14 |
| 3.6.2.4 | Universal Commands..... | 3-14 |
| 3.6.2.5 | Addressed Commands..... | 3-14 |
| 3.6.3 | GPIB Data Transfers..... | 3-15 |
| 3.6.4 | Talker..... | 3-15 |
| 3.6.5 | Service Request Enable..... | 3-16 |
| 3.6.6 | End of String or Terminator Specification..... | 3-16 |
| 3.6.7 | GET Mode..... | 3-16 |
| 3.6.8 | LOCAL Key..... | 3-16 |
| 3.7 | STORED PROGRAMS..... | 3-16 |
| 3.7.1 | Storing Programs..... | 3-17 |
| 3.7.2 | Recalling Programs..... | 3-17 |
| 3.7.3 | Recalling Stored Settings for External Storage..... | 3-17 |
| 3.7.4 | Deleting Programs..... | 3-17 |
| 3.7.5 | High Speed Recall..... | 3-17 |

SECTION 4 CIRCUIT DESCRIPTION

| | | |
|--------|--|------|
| 4.1 | INTRODUCTION..... | 4-1 |
| 4.2 | VCG AND SYMMETRY..... | 4-4 |
| 4.3 | TRIANGLE GENERATOR BOARD..... | 4-4 |
| 4.4 | FUNCTION/PREAMP..... | 4-8 |
| 4.5 | THREE-DIGIT ATTENUATOR..... | 4-8 |
| 4.6 | POWER AMPLIFIER/DC OFFSET..... | 4-9 |
| 4.7 | SYNTHESIZER (An Option)..... | 4-10 |
| 4.8 | FRONT PANEL OPTION..... | 4-18 |
| 4.8.1 | Keyboard..... | 4-18 |
| 4.8.2 | Display..... | 4-18 |
| 4.9 | MICROPROCESSOR (Microprocessor and Memory RAM Boards)..... | 4-18 |
| 4.9.1 | Microprocessor Board..... | 4-18 |
| 4.9.2 | Memory RAM Board..... | 4-19 |
| 4.9.3 | Data Format..... | 4-20 |
| 4.10 | GPIB/MICROPROCESSOR INTERFACE..... | 4-22 |
| 4.10.1 | Data Ready..... | 4-24 |
| 4.10.2 | GPIB Busy..... | 4-24 |
| 4.10.3 | End..... | 4-24 |
| 4.10.4 | Remote..... | 4-24 |
| 4.10.5 | Talk..... | 4-24 |
| 4.10.6 | Listen..... | 4-24 |
| 4.10.7 | Service Request..... | 4-24 |
| 4.11 | POWER SUPPLY..... | 4-24 |

CONTENTS (Continued)

SECTION 5 TROUBLESHOOTING

| | | |
|-----|-------------------------|-----|
| 5.1 | INTRODUCTION..... | 5-1 |
| 5.2 | POWER SUPPLY..... | 5-1 |
| 5.3 | FUNCTION GENERATOR..... | 5-1 |
| 5.4 | INTERNAL DATA BUS..... | 5-5 |
| 5.5 | SYNTHESIZER..... | 5-5 |
| 5.6 | MICROPROCESSOR..... | 5-7 |
| 5.7 | GPIB INTERFACE..... | 5-7 |
| 5.8 | FRONT PANEL..... | 5-7 |

SECTION 6 CALIBRATION

| | | |
|-----|-------------------------------------|-----|
| 6.1 | INTRODUCTION..... | 6-1 |
| 6.2 | POWER SUPPLY CALIBRATION..... | 6-1 |
| 6.3 | FUNCTION GENERATOR CALIBRATION..... | 6-1 |
| 6.4 | SYNTHESIZER CALIBRATION..... | 6-1 |
| 6.5 | FRONT PANEL CALIBRATION..... | 6-1 |

SECTION 7 PARTS AND SCHEMATICS

| | | |
|-----|---------------------|-----|
| 7.1 | DRAWINGS..... | 7-1 |
| 7.2 | ORDERING PARTS..... | 7-1 |
| 7.3 | ADDENDA..... | 7-1 |

APPENDICES

| | | |
|------------|---|-----|
| APPENDIX A | American Standard Code for Information Interchange (ASCII)..... | A-1 |
| APPENDIX B | Programming Command Summary..... | B-1 |
| APPENDIX C | 172B Programming Examples..... | C-1 |

LIST OF FIGURES

| | | |
|--------------|--|------|
| Figure i. | Model 172B Programmable Signal Source | x |
| Figure 1-1. | Waveforms | 1-1 |
| Figure 2-1. | Voltage Selector and Fuse | 2-1 |
| Figure 2-2. | GPIB Panel | 2-2 |
| Figure 3-1. | Instrument Processing Flow Diagram | 3-3 |
| Figure 3-2. | Hardware Diagram of Amplitude and Offset Generation | 3-6 |
| Figure 3-3. | Waveforms for Each Mode | 3-8 |
| Figure 3-4. | VCG (FM) Nomograph | 3-10 |
| Figure 3-5. | VCG Range Limits | 3-11 |
| Figure 3-6. | Status Formats | 3-15 |
| Figure 4-1. | Overall Block Diagram | 4-1 |
| Figure 4-2. | Circuit Board Location | 4-2 |
| Figure 4-3. | Board Interconnection Block Diagram | 4-3 |
| Figure 4-4. | VCG and Symmetry Block Diagram | 4-5 |
| Figure 4-5. | Triangle Generator Block Diagram | 4-6 |
| Figure 4-6. | Function/Preamp Block Diagram | 4-8 |
| Figure 4-7. | Three-Digit Attenuator and Power Amplifier/DC Offset Block Diagram | 4-9 |
| Figure 4-8. | Simple Phase Lock Loop Block Diagram | 4-10 |
| Figure 4-9. | Digit 1 PLL (Part of Digit 1/Mixer Board) Block Diagram | 4-11 |
| Figure 4-10. | PLL With Mixer Block Diagram | 4-11 |
| Figure 4-11. | Digits 4 and 5 PLL (Part of Digits 4 and 5/Reference Board) Block Diagram | 4-12 |
| Figure 4-12. | Digits 2 and 3 PLL (Part of Digits 2 and 3 Board) Block Diagram | 4-13 |
| Figure 4-13. | Translation Loop (Part of Digits 2 and 3 Board) Block Diagram | 4-14 |
| Figure 4-14. | Synthesizer Block Diagram | 4-15 |
| Figure 4-15. | Reference Subsystem (Part of Digits 4 and 5/Reference Board) Block Diagram | 4-16 |
| Figure 4-16. | Digit 1/Mixer Block Diagram | 4-16 |
| Figure 4-17. | Digits 2 and 3 Block Diagram | 4-17 |
| Figure 4-18. | Digits 4 and 5/Reference Block Diagram | 4-17 |
| Figure 4-19. | Microprocessor Board Block Diagram | 4-19 |
| Figure 4-20. | RAM (Random Access Memory) Writable and Readable for Data Storage Block Diagram | 4-20 |
| Figure 4-21. | GPIB/Microprocessor Interface Block Diagram | 4-23 |
| Figure 4-22. | Power Supply Block Diagram | 4-25 |

LIST OF TABLES



| | | |
|------------|--|------|
| Table 2-1. | GPIB Data In/Out | 2-2 |
| Table 2-2. | GPIB Address Codes | 2-2 |
| Table 2-3. | Equipment Required for Incoming Inspection and Operation Verification | 2-3 |
| Table 2-4. | Operation Verification | 2-3 |
| Table 2-5. | Acceptance Test Record | 2-6 |
| Table 3-1. | Example of Front Panel Data Entry | 3-1 |
| Table 3-2. | Alphabetic Characters Used in Model 172B | 3-3 |
| Table 3-3. | Numeric Characters Used | 3-4 |
| Table 3-4. | Examples of Value Programming | 3-4 |
| Table 3-5. | Codes | 3-4 |
| Table 3-6. | Round Offs | 3-5 |
| Table 3-7. | Key and Readout | 3-12 |
| Table 3-8. | GPIB Lines and Commands | 3-13 |
| Table 4-1. | Scratch Pad Memory Format | 4-21 |
| Table 5-1. | Assembly Guide | 5-1 |
| Table 5-2. | Power Distribution | 5-2 |
| Table 5-3. | Function Generator Troubleshooting | 5-2 |
| Table 5-4. | Internal Data Bus Location | 5-5 |
| Table 5-5. | Synthesizer Troubleshooting | 5-6 |
| Table 5-6. | Microprocessor Troubleshooting | 5-7 |
| Table 5-7. | GPIB Interface Troubleshooting | 5-7 |
| Table 5-8. | Front Panel Troubleshooting | 5-8 |
| Table 6-1. | Function Generator Calibration Procedures | 6-2 |
| Table 6-2. | Synthesizer Calibration | 6-4 |
| Table A-1. | American Standard Code for Information Interchange (ASCII) | A-1 |
| Table B-1. | Programming Command Summary | B-1 |
| Table C-1. | 172B Programming Examples | C-1 |

SAFETY

This instrument is wired for earth grounding via the facility power wiring. Do not bypass earth grounding with two wire extension cords, plug adapters, etc.


BEFORE PLUGGING IN the instrument, comply with installation instructions.

MAINTENANCE may require power on with the instrument covers removed. This should be done only by qualified personnel aware of the electrical hazards.

The instrument power receptacle is connected to the instrument safety earth terminal with a green/yellow wire. Do not alter this connection. (Reference:  or  stamped inside the rear panel near the safety earth terminal.)

WARNING notes call attention to possible injury or death hazards in subsequent operations.

CAUTION notes call attention to possible equipment damage in subsequent operations.

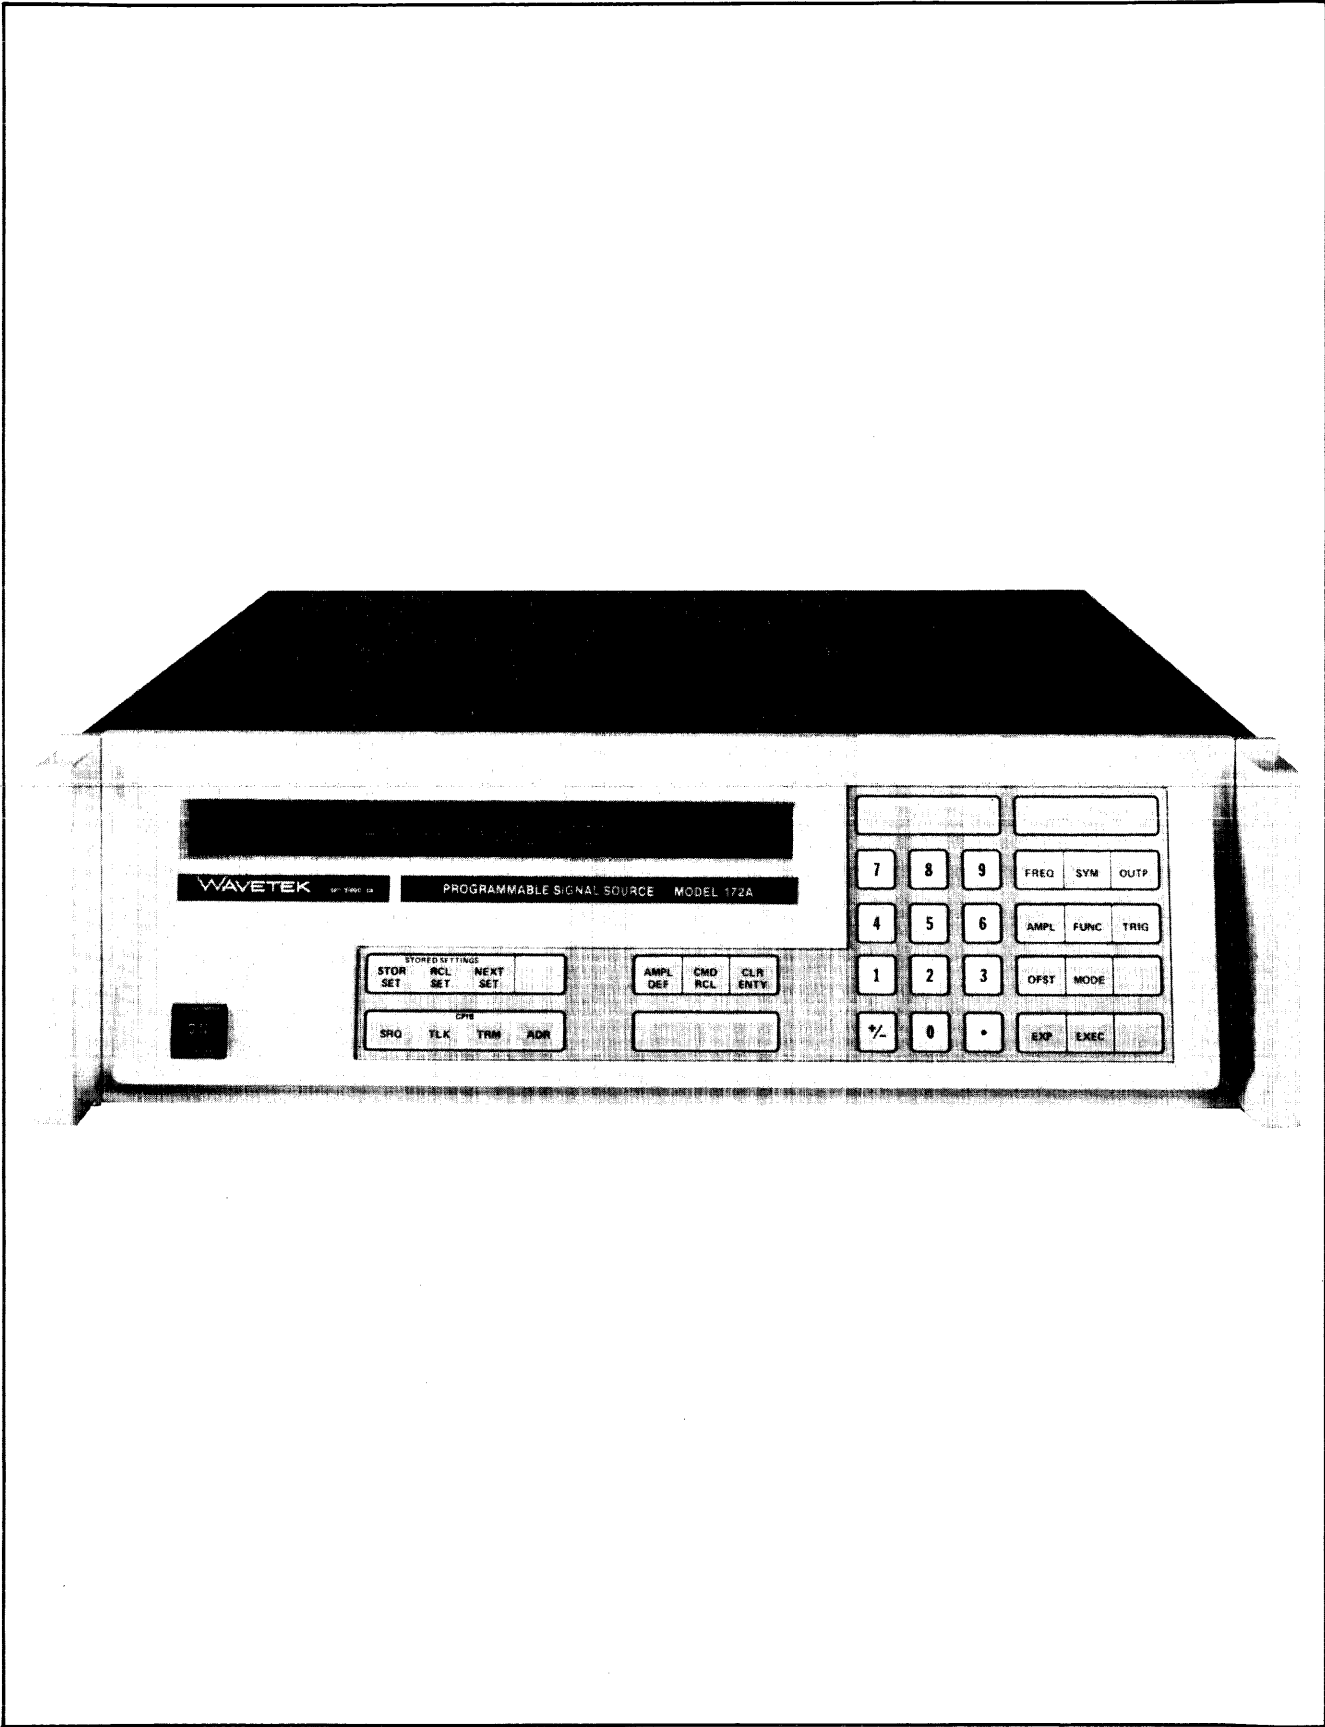

Model 172B Programmable Signal Source

1

SECTION

GENERAL DESCRIPTION

1.1 THE MODEL 172B AND OPTIONS

1.1.1 Standard Model

The standard Model 172B is a remote controlled 0.1 MHz to 13 MHz function generator whose functions are sine, square, triangle, pulse, ramps, haversine, havertriangle (see figure 1-1) and dc with 3 digit frequency, amplitude and dc offset amplitude resolution. Frequency, amplitude, function, function symmetry, dc offset, mode, 50Ω load in/out and output on/off are programmable. The frequency may also be controlled by a remote ac or dc voltage for sweep, FM and frequency shift keying operations. The output frequency of the generator may be phase locked to a supplied reference signal for a phase coherent output signal. The generator output may be continuous, triggered for one cycle (by external signal keyboard or program) or gated for a burst of cycles by an external signal. The output signal may be offset by a dc voltage or inverted 180 degrees. The waveform symmetry may be varied from 10 to 90% in 10% steps for variable duty cycle pulses, sawtooth ramps and non-symmetrical sine waves. A TTL level signal at generator frequency is output for synchronizing purposes. Standard programming is by a General Purpose Interface Bus (GPIB) conforming to IEEE Standard 488-1975, which utilizes an asynchronous handshake scheme to transmit an 8-bit parallel, byte serial ASCII language data stream. A stored program feature allows temporary storage of up to 240 instrument settings by use of Random Access Memory (RAM). Rapid setting recall allows frequency sweeps. An amplitude conversion feature allows sine wave amplitude programming in convenient dBm and rms values, as well as volts peak-to-peak into a 50Ω load.

1.1.2 Front Panel Option

The front panel option, an instrument mounted keyboard and 40 character display, gives local control of the instrument. The display shows the values being programmed and the status of the instrument parameters when in either local or remote control.


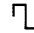

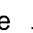
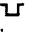



1.1.3 Synthesizer Option

The synthesizer option provides 5½ digit frequency resolution with 0.0005% accuracy, low phase noise and low spurious content. The internal 10 MHz reference is also output as a TTL pulse for synchronous operation. An external 10 MHz reference may be substituted for the internal reference.

1.2 SPECIFICATIONS

1.2.1 Versatility

Waveforms

Sine , square , triangle , pulse , , ramps , haversine , havertriangle  and dc.

Operational Modes

Synthesizer: A closed loop mode locking the generator to a synthesizer for frequency accuracy and stability. See Option 002.

Phase Lock: Generator locks to an external 10 Hz to 13 MHz signal when programmed within 2% of the external frequency.

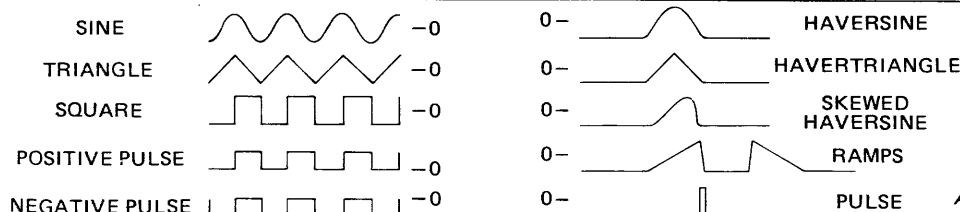


Figure 1-1. Waveforms

NOTE:
All these waveforms
may be inverted.

NOTE

The following modes are open loop; frequency of generator is not locked to a reference signal. Generator frequency is controlled by external VCG or FM voltage as well as programming.

Continuous: Generator runs continuously.

Triggered: Generator is quiescent until triggered by an external signal or manual trigger, then generates one cycle at selected frequency.

Gated: As triggered mode, except generator oscillates for the duration of the gate signal plus the remainder of the waveform in progress.

Triggered Haverwave: As triggered mode, except output is a sine or triangle waveform starting at -90° (or $+90^\circ$).

Gated Haverwave: As gated mode, except output is a sine or triangle waveform starting at -90° (or $+90^\circ$).




Frequency Range

0.0001 Hz to 12.99 MHz.

Resolution

3 digit resolution standard. Also see Option 002.

Main Output

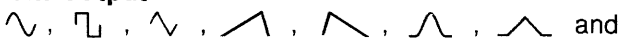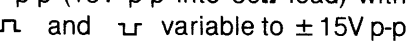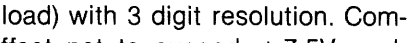 and dc variable to 30V p-p (15V p-p into 50Ω load) with 3 digit resolution.  and  variable to $\pm 15V$ p-p (7.5V p-p into 50Ω load) with 3 digit resolution. Composite waveform/offset not to exceed $\pm 7.5V$ peak into 50Ω load. 50Ω source impedance with selectable internal 50Ω load.

Amplitude Output Conversion

Permits programming of the sine wave output amplitude in units of volts - root mean square (Vrms) and decibels relative to one milliwatt (dBm) into 50Ω load in addition to the standard units of volts peak-to-peak.

Vrms Range: 1 mV to 5.30V.

dBm Range: -56 to $+27.4$ dBm.

DC Offset and DC Voltage Output

0 to ± 7.5 Vdc into 50Ω. 3 digit resolution. DC offset is attenuated by amplitude range attenuator.

Auxiliary Output

TTL pulse at generator frequency.

Phase Lock Input

Input: TTL level.

Range: 10 Hz to 13 MHz.

VCG - Voltage Controlled Generator

In open loop modes the frequency can be controlled by an external voltage for sweeping or for frequency modulation (FM). A 5V signal will change the frequency over the entire control range of 1000:1, three full decades. On ranges below 10 Hz, control is limited to 10:1.

Input Signal Bandwidth:

50 kHz for small signal ($\Delta V = 0.5V$).

Input Impedance: 5 kΩ.

Symmetry Control

Waveform symmetry variable from 10 to 90% in 10% steps (50% is symmetrical). Varying symmetry provides variable duty cycle pulses, sawtooth ramps and unsymmetrical sine waves. Symmetry control is available for frequencies to 999,990 Hz.

Trigger Input

In triggered, gated, triggered haverwave and gated haverwave modes, a TTL (low true) compatible pulse will trigger or gate the generator.


Data Entry

Bit parallel, byte serial, ASCII character remote programming and optional front panel keyboard/display (see Option 001).

1.2.2 Frequency Precision

Open Loop Accuracy


(For synthesizer accuracy, see Option 002.)

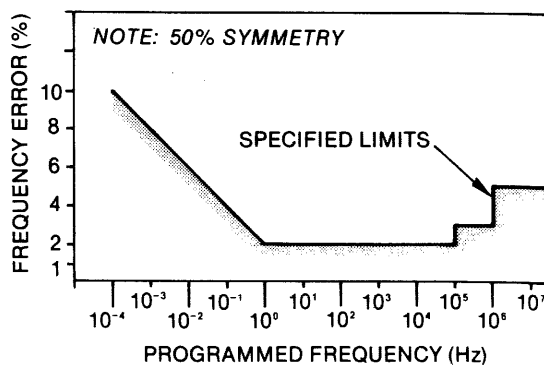


1.2.3 Amplitude Precision

Accuracy

Specified for 1 kHz sine wave or dc voltage output with internal 50Ω load and greater than 1 MΩ external impedance.

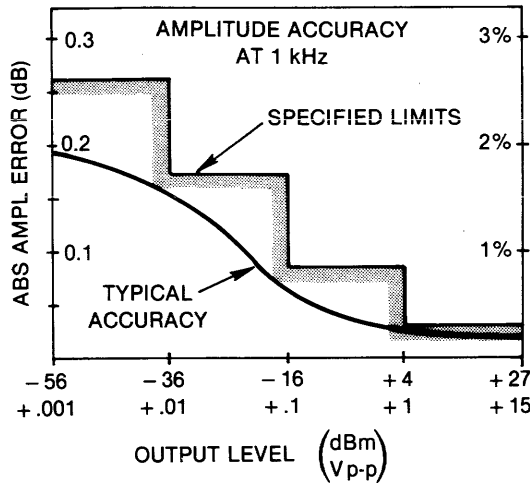

Frequency Response (sine wave, relative to 1 kHz signal)

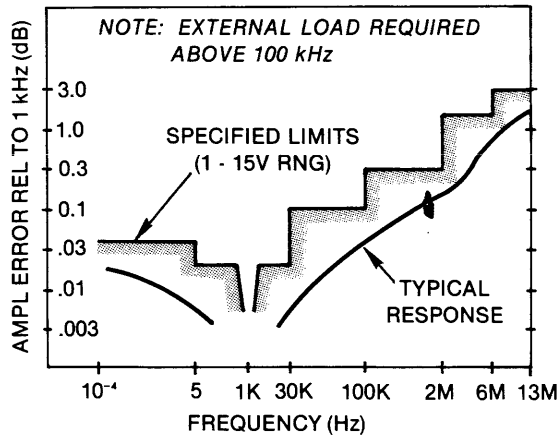

NOTE
 \square and \wedge accuracy are within 0.2 dB of sine wave accuracy.

Amplitude Resolution

| Range | Resolution |
|-----------------|------------|
| 10.00 to 14.99V | 10 mV |
| 1.00 to 9.99V | 10 mV |
| 100 to 999 mV | 1 mV |
| 10.0 to 99.9 mV | 0.1 mV |
| 1.00 to 9.99 mV | 10 μV |

1.2.4 Waveform Characteristics

Sine Distortion

(continuous mode, 2.82V p-p test level)


Total harmonics referenced to carrier are -46 dB to 30 kHz. Each harmonic reference to carrier is less than:

- 40 dB to 1 MHz
- 30 dB to 13 MHz

Square Wave Rise and Fall Time

Less than 20 ns (typically 15 ns).

Waveform Timing

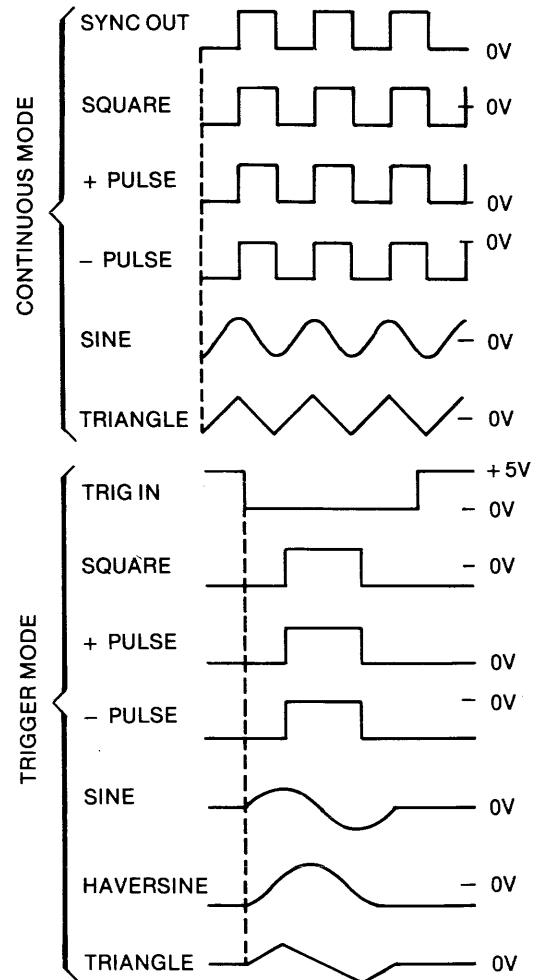

NOTE

Minus amplitude shifts all signals except sync by 180° and shifts baseline to opposite polarity.

GPIB Programming

General Purpose Interface Bus (GPIB) programming fully compatible with the IEEE Standard 488-1975 allows the 172B to be directly connected to the GPIB. The interface is isolated from the generator with optical couplers. The interface provides listener (AH1 and L4), talker (SH1 and T6), service request (SR1), remote/local (RL1), device clear (DC1) and device trigger (DT1) capabilities. Response time for setting and executing all parameters is 55 ms (18 settings per second); for setting and executing amplitude, frequency and dc offset, 39 ms (26 settings per second). A stored setting (all parameters) may be called by number and executed in 9 ms (111 settings per second); when using the GET command to sweep stored settings, response time is 2 ms (500 settings per second). The following table may be used to determine particular programming response times. Measurements were made with a 172B and an HP9825 controller. Data rates will follow the slowest listener on the bus and vary with different controllers.

| Parameter | Time |
|----------------------------|-------------|
| Command Handshake | 2 μ S |
| Data Handshake | 220 μ S |
| Frequency Setting | 10 ms |
| Amplitude Setting | 13 ms |
| DC Offset Setting | 13 ms |
| Mode | 4 ms |
| Function | 4 ms |
| Symmetry | 4 ms |
| Output | 4 ms |
| Recall Setting (by number) | 6 ms* |
| Next or Last Setting | 4 ms* |
| Execute | 3 ms* |
| GET | 1.6 ms |

*2 ms when via GET.

Stored Settings and Sweep

Up to 240 complete instrument settings can be stored and recalled by number from volatile (RAM) memory. Settings may be modified or deleted. The setting number recalled may also be incremented or decremented and executed by the GET command, when in a special GET mode. This sweep stepping time requires 2 ms per setting.

1.2.5 General

Stability (measured at 25 \pm 1°C)

Amplitude and DC Offset

Short Term: 0.025 dB for 15 minutes.

Long Term: 0.05 dB for 6 months.

Frequency

Short Term: 0.3% for 15 minutes.

Long Term: 1.0% for 8 hours (to 1 MHz).

See Option 002 for synthesizer stability.

Environmental

Specifications apply for 25 \pm 10°C after 1 hour unless otherwise noted. Instrument will operate from 0 to 45°C to 10,000 foot altitude at 95% relative humidity.

Dimensions

Fits standard 48.3 cm (19 in.) rack. 43.2 cm (17 in.) wide; 13.3 cm (5¼ in.) high; 58.4 cm (23 in.) deep. Supplied with rack mount adapters.

Weight

26.3 kg (58 lb) net; 30.8 kg (68 lb) shipping.

Power

90 to 105V, 108 to 126V, 198 to 231V or 216 to 252V; 48 to 67 Hz; less than 200 watts.

1.2.6 Options

001: Display and Control Front Panel

This option includes a keyboard entry front panel and a 40 character alphanumeric display. The keyboard allows you to manually control all instrument parameters. The alphanumeric display indicates the values being programmed and also shows the status of the instrument when in the remote mode.

002: 5½ Digit Synthesizer

Provides synthesizer accuracy for any waveform selected. The following specifications apply.

Frequency

10 Hz to 12.9999 MHz.

Frequency Resolution

| Range | Resolution |
|-------------------|------------|
| 10 to 99.999 Hz | 1 mHz |
| 100 to 999.99 Hz | 10 mHz |
| 1 to 9.9999 kHz | 0.1 Hz |
| 10 to 99.999 kHz | 1 Hz |
| 100 to 999.99 kHz | 10 Hz |
| 1 to 9.9999 MHz | 100 Hz |
| 10 to 12.9999 MHz | 100 Hz |

Settling Time

Frequency reaches full accuracy 2 ms and 50 cycles after execution.

Accuracy

Better than 0.0005% of program setting (0.005% on 10-99 Hz range).

Frequency Stability

Short Term: $\pm 1 \times 10^{-7}$ of frequency per day.

Long Term: $\pm 1 \times 10^{-6}$ of frequency per month.

Temperature: 1.2×10^{-7} per °C.

Signal To Phase-Noise

Greater than 40 dB in a 30 kHz band centered on carrier but excluding a ± 1 Hz band around the carrier.

Spurious

For spurious signals in the range of 400 Hz to 110 MHz, spurious levels are:

| 172B Frequency Range | Max Spurious Signals (greater value applies) |
|---------------------------------|---|
| 10 Hz to 999.99 kHz | - 60 dB or 40 μ V |
| 1 kHz to 4.9999 MHz | - 55 dB or 40 μ V |
| 5 to 12.9999 MHz | - 50 dB or 40 μ V |

Internal Reference Output

10 MHz TTL compatible signal.

External Reference Input

An external sine or square wave within ± 3 ppm of 10.0 MHz, 1 to 10V rms and 50 \pm 8% duty cycle will automatically replace the internal reference.

SECTION 2

INSTALLATION AND INTERFACE

2.1 MECHANICAL INSTALLATION

After unpacking the instrument, visually inspect all external parts for possible damage to connectors, surface areas, etc. If damage is discovered, file a claim with the carrier who transported the unit. The shipping container and packing material should be saved in case reshipment is required.

CAUTION

Do not mount this instrument by front panel alone. Slides or tray support is necessary to prevent instrument damage.

The generator can be used as a bench instrument or rack mounted. In either use, ensure that there is no impedance to air flow at any surface of the instrument. Before rack mounting, it may be desirable to perform the initial checkout (paragraph 2.2.5) to verify operation of all functions.

2.2 ELECTRICAL INSTALLATION

2.2.1 Power Connection

NOTE

Unless otherwise specified at the time of purchase, this instrument was shipped from the factory with the power transformer connected for operation on a 120 Vac line supply and with a 3 amp fuse.

Conversion to other input voltages requires a change in rear panel fuse holder voltage card position and fuse (figure 2-1) according to the following procedure.

1. Disconnect the power cord at the instrument, open fuse holder cover door and rotate fuse-pull to left to remove the fuse.
2. Remove the small printed circuit board and select operating voltage by orienting the printed circuit board to position the desired voltage to the top left side. Push the board firmly into its module slot.

3. Rotate the fuse-pull back into the normal position and insert the correct fuse into the fuse holder. Close the cover door.
4. Connect the ac line cord to the mating connector at the rear of the unit and the power source.

| Card Position | Input Vac | Fuse |
|---------------|------------|---------|
| 100 | 90 to 105 | 3 amp |
| 120 | 108 to 126 | 3 amp |
| 220 | 198 to 231 | 1.5 amp |
| 240 | 216 to 252 | 1.5 amp |

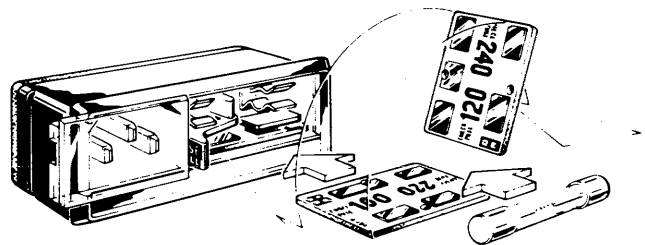


Figure 2-1. Voltage Selector and Fuse

2.2.2 Signal Connections

Use RG58U 50Ω coaxial cables equipped with BNC connectors to distribute signals when connecting this instrument to associated equipment.

2.2.3 GPIB Connections

The GPIB I/O rear panel connection is shown in figure 2-2; pin connections and signal names are given in table 2-1. The panel connector is an Amphenol 57-10240 or equivalent and connects to a GPIB bus cable connector (available from Wavetek in 1 and 2 meter lengths). The GPIB interface is optically isolated from the instrument.

Table 2-1. GPIB Data In/Out

| Pin | Signal | |
|-----|------------|----------------|
| 1 | DIO1 | True When Low |
| 2 | DIO2 | |
| 3 | DIO3 | |
| 4 | DIO4 | |
| 5 | EOI | True When High |
| 6 | DAV | |
| 7 | NRFD | |
| 8 | NDAC | |
| 9 | IFC | True When Low |
| 10 | SRQ | |
| 11 | ATN | |
| 12 | Safety Gnd | |
| 13 | DIO5 | True When Low |
| 14 | DIO6 | |
| 15 | DIO7 | |
| 16 | DIO8 | |
| 17 | REN | Signal Gnd |
| 18 | | |
| 19 | | |
| 20 | | |
| 21 | | |
| 22 | | |
| 23 | | |
| 24 | | |

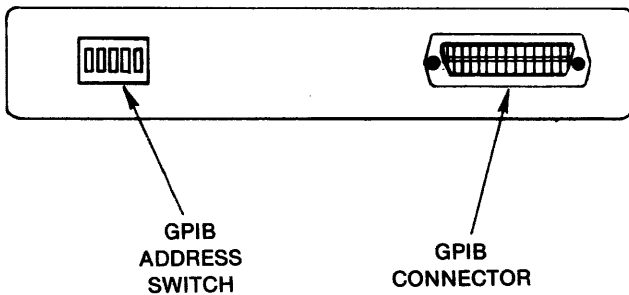


Figure 2-2. GPIB Panel

2.2.4 GPIB Card Address

For instruments on the General Purpose Interface Bus (GPIB), ensure that the GPIB address is correct. The GPIB address can be changed by the switch on the rear of the instrument (see figure 2-2) by simply setting the multiple section switch located on the rear panel according to table 2-2. The switch sections are labeled

from 1 thru 5 and their open position noted (OPEN = Binary "0" in table 2-2). To verify the address, press ADR on the front panel. The device number (decimal) will be displayed as: "GPIB = (0, 1–30)".

Table 2-2. GPIB Address Codes

| Device | Address | | | | | | | | |
|--------|---------|------|---------|---|---|--------------|---|--------|------|
| | ASCII | | Binary* | | | Hexa-decimal | | | |
| | Listen | Talk | 5 | 4 | 3 | 2 | 1 | Listen | Talk |
| 0 | (space) | @ | 0 | 0 | 0 | 0 | 0 | 20 | 40 |
| 1 | ! | A | 0 | 0 | 0 | 0 | 1 | 21 | 41 |
| 2 | " | B | 0 | 0 | 0 | 1 | 0 | 22 | 42 |
| 3 | # | C | 0 | 0 | 0 | 1 | 1 | 23 | 43 |
| 4 | \$ | D | 0 | 0 | 1 | 0 | 0 | 24 | 44 |
| 5 | % | E | 0 | 0 | 1 | 0 | 1 | 25 | 45 |
| 6 | & | F | 0 | 0 | 1 | 1 | 0 | 26 | 46 |
| 7 | ' | G | 0 | 0 | 1 | 1 | 1 | 27 | 47 |
| 8 | (| H | 0 | 1 | 0 | 0 | 0 | 28 | 48 |
| 9 |) | I | 0 | 1 | 0 | 0 | 1 | 29 | 49 |
| 10 | * | J | 0 | 1 | 0 | 1 | 0 | 2A | 4A |
| 11 | + | K | 0 | 1 | 0 | 1 | 1 | 2B | 4B |
| 12 | , | L | 0 | 1 | 1 | 0 | 0 | 2C | 4C |
| 13 | — | M | 0 | 1 | 1 | 0 | 1 | 2D | 4D |
| 14 | • | N | 0 | 1 | 1 | 1 | 0 | 2E | 4E |
| 15 | / | O | 0 | 1 | 1 | 1 | 1 | 2F | 4F |
| 16 | 0 | P | 1 | 0 | 0 | 0 | 0 | 30 | 50 |
| 17 | 1 | Q | 1 | 0 | 0 | 0 | 1 | 31 | 51 |
| 18 | 2 | R | 1 | 0 | 0 | 1 | 0 | 32 | 52 |
| 19 | 3 | S | 1 | 0 | 0 | 1 | 1 | 33 | 53 |
| 20 | 4 | T | 1 | 0 | 1 | 0 | 0 | 34 | 54 |
| 21 | 5 | U | 1 | 0 | 1 | 0 | 1 | 35 | 55 |
| 22 | 6 | V | 1 | 0 | 1 | 1 | 0 | 36 | 56 |
| 23 | 7 | W | 1 | 0 | 1 | 1 | 1 | 37 | 57 |
| 24 | 8 | X | 1 | 1 | 0 | 0 | 0 | 38 | 58 |
| 25 | 9 | Y | 1 | 1 | 0 | 0 | 1 | 39 | 59 |
| 26 | : | Z | 1 | 1 | 0 | 1 | 0 | 3A | 5A |
| 27 | ; | [| 1 | 1 | 0 | 1 | 1 | 3B | 5B |
| 28 | < | \ | 1 | 1 | 1 | 0 | 0 | 3C | 5C |
| 29 | = |] | 1 | 1 | 1 | 0 | 1 | 3D | 5D |
| 30 | > | ! | 1 | 1 | 1 | 1 | 0 | 3E | 5E |

Switch Settings
0 = Open

*The 6th and 7th bits which define the ASCII codes are used to specify whether a listen or talk address is being sent. Bits 1 thru 5 are matched against the rear panel address switch.

NOTE

Address 31 is not allowed.

2.2.5 Initial Checkout and Operation Verification

The equipment and procedures in tables 2-3 and 2-4 are recommended for incoming inspection and for testing the instrument after repair. However, additional after repair tests or calibration (Section 6) may be necessary for certain circuits.

Operation verification includes the following procedures.

1. Self Test: Verifies the operation of ROM, RAM and microprocessor circuits. This test occurs automatically each time power is turned on.
2. Open Loop Test: Sine wave output is visually checked for correct frequency and visible irregularities.
3. Functional Test: Verifies triangle and square waveforms.
4. Sync Out Test: Verifies presence of sync signal.
5. Amplitude Accuracy Test: Verifies amplitude accuracy for dc and ac operation.
6. Frequency Accuracy Test: Verifies frequency accuracy.
7. Harmonic Distortion Test: Verifies that harmonic distortion is within specification.
8. Spurious Test: Verifies that spurious are within specification.
9. Interface Test: Verifies remote programming capabilities.

Before making an initial checkout, review power and signal connection requirements (paragraphs 2.2.1 and 2.2.2) and ensure the availability of test equipment equivalent to that listed in table 2-3. An acceptance test record sheet (table 2.5) may be reproduced for recording checkout test results.

Table 2-3. Equipment Required for Incoming Inspection and Operation Verification

| Instrument | Critical Specifications | Model Recommended |
|---------------------|---|------------------------------|
| Oscilloscope | 100 MHz vertical bandwidth | Tektronix 465 |
| Voltmeter | 0.1 to 10V ranges 6 digit resolution ± 0.1% accuracy | Dana 5900 |
| Frequency Counter | 20 MHz capability 8 digit resolution ± 2 count resolution | Dana 8015B |
| Distortion Analyzer | Fundamental frequencies to 10k Harmonics to 3 MHz 50 µV sensitivity | HP331A |
| Spectrum Analyzer | 1 to 80 MHz range ± 0.5 dB amplitude accuracy Noise > 70 dB below reference | HP141T, HP8552B, and HP8553B |
| Calculator | IEEE 488-1975 compatible | HP9825 |

Table 2-4. Operation Verification

| Step | Test | Tester and Setup | Program | Desired Results |
|------|-----------|--|---|--|
| 1 | Self Test | None. | Power ON | 172B displays "SELF TEST"; then in < 5s, "WAVETEK 172B". |
| 2 | Open Loop | Oscilloscope. Connect to 172B 50Ω OUT with a 50Ω load at the scope input. Set for 2V/div, horizontal 0.1 µs/div. | FREQ 10E6 AMPL DEF 0 AMPL 10 FUNC 0 MODE 0 OUTP 0 SYM 0 OFST 0 EXEC | 1 cycle/div sine wave, 10V p-p. |

Table 2-4. Operation Verification (Continued)

| Step | Test | Tester and Setup | Program | Desired Results | |
|------|------------|---|--|---|---|
| 3 | Functional | | FUNC 1 FREQ 5E6 EXEC | 1 cycle/2 div triangle wave, 10V p-p. | |
| 4 | | | FUNC 2 EXEC | 1 cycle/2 div square wave, 10V p-p. | |
| 5 | | | FUNC 4 OFST 2 EXEC | 2 Vdc with no waveform. | |
| 6 | | | Oscilloscope. Set horizontal to 2 μ s/div. | FREQ 99.9E3 OFST 0 AMPL 5 SYM 2 FUNC 2 EXEC | + 2.5V for 2 μ s; - 2.5V for 8 μ s. |
| 7 | | | | SYM 8 EXEC | + 2.5V for 8 μ s; - 2.5V for 2 μ s. |
| 8 | Sync Out | Oscilloscope. Connect to 172B SYNC OUT. | | Pulse at same frequency and symmetry as 50 Ω OUT signal. | |

NOTE: Allow 1 hour warm-up before performing the following tests.

| | | | | |
|----|--------------------|---|---|---|
| 9 | Amplitude Accuracy | Voltmeter. Set to Vrms. Connect to 172B 50 Ω OUT with no 50 Ω load. | FREQ 999 AMPL DEF 1 AMPL 5.29 OUTP 1 SYM 5 FUNC 0 OFST 0 MODE 0 EXEC | 5.283 to 5.316 Vrms. |
| 10 | | | AMPL 0.9 EXEC | 0.897 to 0.903 Vrms. |
| 11 | | Set voltmeter to dc. | FUNC 4 OFST 7.49 EXEC | 7.46 to 7.52 Vdc. |
| 12 | Frequency Accuracy | Frequency Counter. Connect to 172B 50 Ω OUT. | FREQ 12.9999E6 AMPL 1 OFST 0 FUNC 2 EXEC <i>Standard 172B:</i> MODE 0 EXEC <i>Option 002:</i> MODE 3 EXEC | Standard 172B: 12.6 to 13.4 MHz. Option 002: 12.9998 to 13.0000 MHz. |
| 13 | | | FREQ 1E6 EXEC | Standard 172B: 0.97 to 1.03 MHz. Option 002: 0.99999 to 1.00001 MHz. |
| 14 | | | FREQ 99.999E3 EXEC | Standard 172B: 96.9 to 103 kHz. Option 002: 99.998 to 100.000 kHz. |

Table 2-4. Operation Verification (Continued)

| Step | Test | Tester and Setup | Program | Desired Results |
|------|---------------------|---|--|--|
| 15 | Harmonic Distortion | Distortion Analyzer. Connect to 172B 50Ω OUT. Set distortion meter to null, then to % distortion. | FREQ 3000 AMPL 5.29 FUNC 0 OUTP 1 EXEC | Total harmonic distortion under 0.5% (-46 dB). |
| 16 | Spurious | Spectrum Analyzer. Sweep from 0 to 100 MHz; video filter set to 10 kHz. | FREQ 10 AMPL 1 OUTP 0 EXEC | All discrete spurious -50 dBm or less. |
| 17 | Interface | Calculator. Connect to 172B GPIB connector. Set 172B rear panel address switch to 00001. Press 172B ADR key and verify GPIB address "1" on the display. | Calculator: 0: dim A\$[100] 1: red 701,A\$ 2: rem 7 3: clr 701 4: rds(701)-r1 5: stp | 172B displays: "172B CLEARED R". |
| 18 | | | Calculator: 6: wrt 701,"...F10E3A 5D0P1I" 7: stp | 172B displays: "FR 10E3 AM 5 OFS 0 - RL". |
| 19 | | | 172B: CMD RCL key | 172B displays: "...F10E3A5D0P1IMJR RL" in last 22 characters. |
| 20 | | | Calculator: 8: wrt 701,"F1E9T1I" 9: stp | 172B displays: "FR 10E3 AM 5 OFS 0 QRL". |
| 21 | | | Calculator: 10: red 701,A\$ 11: dsp A\$ 12: stp | Calculator displays: "E 1 F" setting error, frequency. 172B displays: "FR 10E3 AM 5 OFS 0 QRT". |
| 22 | | | Calculator: 13: wrt 701,"T2" 14: red 701,A\$ 15: dsp A\$ 16: stp | Calculator displays: "P E" (error poll). 172B displays: "TALK RESPONSE 2 SELECTED RT". |
| 23 | | | Calculator: 17: rds(701)-r2 18: dsp char(r2) 19: wrt 701,""172B GPIB TEST COMPLETE"" 20: stp | 172B displays: "172B GPIB TEST COMPLETE RL". |

**Table 2-5. Acceptance Test Record
(for reproduction)**

Location _____

QA Inspector _____

Date _____

| | Acceptable (✓) |
|---|----------------|
| A Self Test and Functions (steps 1 through 8) | _____ |
| B Amplitude Accuracy | |
| (9) value _____ Vrms | _____ |
| (10) value _____ Vrms | _____ |
| (11) value _____ Vdc | _____ |
| C Frequency Accuracy | |
| (12) value _____ MHz | _____ |
| (13) value _____ MHz | _____ |
| (14) value _____ kHz | _____ |
| D Distortion | |
| (15) value _____ % | _____ |
| (16) | _____ |
| E Interface-GPIB Operation (steps 17 through 23) | _____ |

SECTION **3** OPERATION

3.1 DATA ENTRY

Using the Model 172B is quite straight forward and is best understood by trial and error method while the microprocessor "converses" with you during operation, informing you what was programmed, what is possible to program and when an error is made. The example of data entry given in table 3-1 will give you the feel of using the 172B. Appendix B gives a summary of programming commands.

The details of power on, command structure and programming are given in paragraphs 3.2 and 3.3. Operation in each mode is discussed in paragraph 3.4. Front panel keyboard and readout are discussed in paragraph 3.5. Program functions peculiar to the GPIB are discussed in paragraph 3.6. These functions are in strict accordance to ground rules set forth in

IEEE Standard 488-1975. The operation of the stored program facility is discussed in paragraph 3.7.

3.2 POWER

Power is turned on and off with a front panel push-button. When power is turned on, wait approximately 8 seconds before programming (for front panel option, wait until "WAVETEK MODEL 172B" is displayed). When the power is turned on, the generator automatically performs a self test routine. "SELF TEST" is displayed at this time. When testing is completed, "WAVETEK MODEL 172B" is displayed. At least two seconds must elapse between power OFF and power ON for proper reinitialization of logic. When the power comes on, the output is automatically disabled to allow loading of a program; line transients on the output are avoided. The generator must get an execute command to provide and output. (Refer to paragraph 3.3.8.)

Table 3-1. Example of Front Panel Data Entry

| Instruction | Front Panel Entry (Press Keys) | Front Panel Display | Equivalent Program Entry |
|------------------------------|-----------------------------------|---|--------------------------|
| 1. Power on. | OFF (becomes ON) | "SELF TEST", then within a few seconds, "WAVETEK MODEL 172B". | None |
| 2. Check instrument address. | ADR | The state of the GPIB address switches will be displayed: GPIB = 1, 2, 3, or . . . 30 (decimal address and ASCII listen and talk characters). (Refer to paragraph 2.2.4 to change addresses.) | G |
| 3. Check initial conditions: | | | |
| Output and load | OUTP | OUTPUT OFF, 50 OHM LOAD OUT (2) | P |
| Amplitude | AMPL | AMPLITUDE 1 VOLT P-P | A |
| Offset | OFST | OFFSET 0 VOLTS | D |
| Frequency | FREQ | FREQUENCY 1 KILOHERTZ | F |
| Symmetry | SYM | SYMMETRY 50% (0) | S |

Table 3-1. Example of Front Panel Data Entry (Continued)

| Instruction | Front Panel Entry (Press Keys) | Front Panel Display | Equivalent Program Entry |
|---|-----------------------------------|--|--------------------------|
| Function | FUNC | FUNCTION IS SINE (0) | C |
| Mode | MODE | MODE IS CONTINUOUS (0) | B |
| 4. Look at this signal by connecting the output to an oscilloscope with a 50Ω cable. | OUTP 1 | LOAD 1 | P1 |
| 5. Display a more descriptive readout of programming (for display only, not necessary in the programming sequence). | OUTP | OUTPUT ON, 50 OHM LOAD IN (1) | P |
| 6. Execute the programming (it will now be available to the oscilloscope). | EXEC | FR 1E3 AM 1 OFS ϕ (this FR_AM_OFS_ format always comes on with EXEC; in this case, frequency of 1 kHz, amplitude of 1V p-p and offset of 0V is output). | I |
| 7. Look at the equivalent program character string. | CMD RCL | GPADFSCBP1IR (these are the equivalent program entries; see the last column in this table). | R |
| 8. Reprogram the instrument: | | | |
| Ramp waveform | FUNC 1 | FUNCTION 1 | C1 |
| | SYM 2 | SYMMETRY | S2 |
| 5.1 kHz | FREQ 5 • 1 EXP 3 | FREQUENCY 5.1E3 | F5.1E3 |
| 14.9V p-p | AMPL 1 4 • 9 | AMPLITUDE 14.9 | A14.9 |
| Offset – 1.2 Vdc | OFST – 1 • 2 | OFFSET – 1.2 | D – 1.2 |
| 9. Initiate these new settings: | EXEC | WARNING: CLIPPING OR SYNTHESIZER ERROR (with the amplitude of 14.9V p-p and offset of – 1.2 Vdc, peaks are 6.25V and – 8.65V. Maximum allowable are $\pm 7.5V$; the negative peak will be clipped at – 7.5V). | I |
| 10. Change amplitude to 12.6V p-p. | AMPL 1 2 • 6 | AMPLITUDE 12.6 | A12.6 |
| 11. Initiate these settings. | EXEC | FR 5.1E3 AM 12.6 OFS – 1.2 (no clipping occurs). | I |

Refer to paragraph 3.5 for complete front panel data.

3.3 BASIC COMMAND STRUCTURE

The Model 172B is programmed by sending ASCII coded characters (refer to Appendix A) to the microprocessor via one of the two possible input ports (keyboard or GPIB) shown in figure 3-1. If input characters are present on more than one input port, they are read first from the GPIB and then from the

keyboard. Thus, if the GPIB port is continuously supplied with characters, then no characters will ever be read from the keyboard.

Characters used to program the 172B are divided into classes:

1. Alphabetic characters — the characters A thru Z, except E.

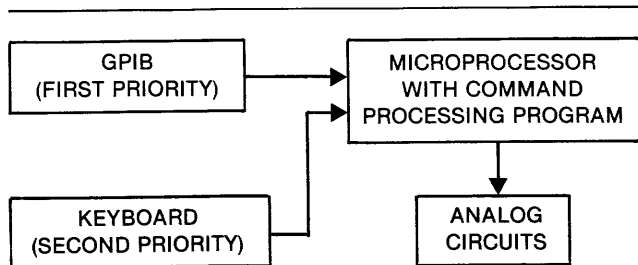


Figure 3-1. Instrument Processing Flow Diagram

2. Numeric characters — the characters 0 thru 9, E, —, decimal point (.).
3. Special character — Quote (').
4. Terminator character — initially the ASCII line feed character (LF). This can be changed by programming.
5. Nonprogramming characters — any character not in one of the above classes.

The alphabetic characters are used to select *actions* or *settings*. An action is a sequence of events which happens immediately when the character which selects it is read by the microprocessor. A setting is a numeric value which may be changed by programming. Table 3-2 lists the alphabetic characters and table 3-3 lists the numeric characters used.

To program an action, simply program the proper alphabetic character from either enabled port. The action will then take place, but only if the instrument is in the *enabled* state at the moment when that character is read by the microprocessor. (Refer to REN, paragraph 3.6.1.)

To examine the current value of a setting, simply program the proper alphabetic character from either input port. The current value will then be displayed on the front panel. This occurs whether or not the instrument is enabled. If the character programmed does not correspond to a legal setting in the instrument, nothing happens.

The numeric characters are used to program new setting values. To change a setting to a new value, first program the alphabetic character which selects the desired setting (F = frequency, etc.). The instrument must be enabled at this time, or it will not allow the new value to be entered. Next, program the new value using numeric characters; the instrument must be

Table 3-2. Alphabetic Characters Used in Model 172B*

| ASCII Character | Key-board Key | Action (A) or Setting (S) | Comments |
|-----------------|---------------|---------------------------|---|
| A | AMPL | S | Amplitude |
| B | MODE | S | Mode |
| C | FUNC | S | Function |
| D | OFST | S | Offset and dc voltage |
| F | FREQ | S | Frequency |
| G | ADR | A | Display GPIB address |
| I | EXEC | A | Execute |
| J | TRIG | A | Trigger |
| M | STOR | S | Memorize program (refer to paragraph 3.7.1) |
| O | GET | A | GET mode |
| P | OUTP | S | 50Ω load and output on/off |
| Q | SRQ | S | SRQ enable (refer to paragraph 3.6.5) |
| R | CMD RCL | A | Display last 37 programming input characters |
| S | SYM | S | Symmetry |
| T | TLK | S | Talk message specify (refer to paragraph 3.6.4) |
| U | LAST | A | Steps to previous numbered stored setting |
| V | AMPL DEF | S | Specify amplitude units (refer to paragraph 3.3.2.1) |
| W | NEXT | A | Steps to next higher numbered stored setting |
| X | TRM | S | Specify terminator character (refer to paragraph 3.6.6) |
| Y | RCL | S | Recall stored program (refer to paragraph 3.7.2) |
| Z | — | S | Same as Y** |

*Characters not listed are not used.

**For compatibility with previous instruments.

enabled for these as well. Any sequence of characters (called the argument of the setting) which gives the new value is acceptable. For example, all of the sequences in table 3-4 will cause the value 100 to be programmed.

The numbers to the left of the "E" are the mantissa; the digits to the right (only two are allowed) are the exponent. The result value is the mantissa times 10 to the exponent power.

Only one decimal point and one "E" (keyboard EXP) are allowed per number; additional ones are ignored. The sign toggle character may appear any number of times. It causes the sign of the mantissa (if "E" has not been programmed) or the exponent (if "E" has been programmed) to be reversed (if negative, then positive, and vice versa) each time it appears. Any number of nonprogramming characters may be interspersed with the numeric characters, as they have no effect. If an undesired value is entered, the CLR key can be used to erase it.

Table 3-3. Numeric Characters Used

| ASCII Character | Keyboard Key | Function |
|-----------------|--------------|--|
| 0 | 0 | Numeric digit |
| 1 | 1 | Numeric digit |
| 2 | 2 | Numeric digit |
| 3 | 3 | Numeric digit |
| 4 | 4 | Numeric digit |
| 5 | 5 | Numeric digit |
| 6 | 6 | Numeric digit |
| 7 | 7 | Numeric digit |
| 8 | 8 | Numeric digit |
| 9 | 9 | Numeric digit |
| . | . | Decimal point |
| - | +/- | Toggle sign |
| E | EXP | Indicates multiplication by 10 raised to a power |

Several parameters require codes for specific selections; for example, the function codes of 0 thru 7 to select sine, triangle or square waves, etc. Refer to table 3-5 for parameter codes.

Since the number input format is so general, the microprocessor must be told when the last numeric character has been entered so it can evaluate the number. This is done by programming either an alphabetic, special or terminator character. When this is done, the new value is first tested to see if it is a legal value for the setting being changed. If it is not legal, an error message is displayed on the front panel, and the setting value is not changed. If it is legal, the new value is entered into the instrument's memory; however, it is not sent to the analog circuits. That can be done only by programming the "I" action (EXEC key on the front panel) or the Group Execute Trigger (GET).

When a new value is entered into the instrument memory, it is rounded to the number of significant digits specified by the setting being changed, as specified by table 3-6. Review table 3-1 for examples of command structure.

Table 3-4. Examples of Value Programming

| ASCII | Keyboard | Standard Notation |
|---------|-----------------|--|
| 100 | 100 | 100 |
| 0100 | 0100 | 100 (leading zeros are ignored) |
| 1E2 | 1 EXP 2 | 1×10^2 |
| .01E4 | .01 EXP 4 | $.01 \times 10^4$ |
| .01E304 | .01 EXP 304 | $.01 \times 10^4$ (last two exponent digits only are used) |
| 1000E-1 | 1000 EXP +/- 1 | 1000×10^{-1} |
| 1E-2- | 1 EXP +/- 2 +/- | 1×10^2 (two minus signs cancel) |
| 1E.2 | 1 EXP .2 | 1×10^2 (decimal points in exponent are ignored) |

Table 3-5. Codes

| Function (C) Codes | | Symmetry (S) Codes | |
|------------------------------|---|---|--------------|
| Sine | 0 | 50% | 0,5 or 50 |
| Triangle | 1 | 10% - 90% | 1-9 or 10-90 |
| Square | 2 | | |
| DC | 4 | Ampl (V) Codes | |
| + Pulse | 6 | V p-p into 50Ω | 0 |
| - Pulse | 7 | Vrms | 1 |
| Mode (B) Codes | | dBm | 2 |
| Continuous | 0 | Talk (T) Codes | |
| Triggered | 1 | Status | 0 |
| Gated | 2 | Error Status | 1 |
| Synthesized (option) | 3 | Service Request Status | 2 |
| Triggered Haverwave | 4 | Value of Setting | 4 |
| Gated Haverwave | 5 | GET (O) Codes | |
| External Phase Lock | 6 | Select Previous Numbered Stored Setting and Trigger | -1 |
| Output Load (P) Codes | | Trigger on GET | 0 |
| Load Out, Output On | 0 | Select Next Numbered Stored Setting and Trigger | 1 |
| Load In, Output On | 1 | | |
| Load Out, Output Off | 2 | | |
| Load In, Output Off | 3 | | |

Table 3-6. Round Offs

| Letter | Setting Name | Number of Digits |
|--------------------|--------------|---|
| A | Amplitude | 3 if setting is less than 10 4 if setting is greater than or equal to 10 <i>For example:</i> <i>1.5 (not rounded, has only 2 digits)</i> <i>1.853 (1.85)</i> <i>96.56E-1 (9.66)</i> <i>14.997 (15.00), illegal ampl</i> |
| O | Offset | 3 |
| F | Frequency | If synthesizer is installed: 5 if setting is less than 10 MHz 6 if setting is greater than or equal to 10 MHz If synthesizer option is not installed: 3 if setting is less than 10 MHz 4 if setting is greater than or equal to 10 MHz |
| S | Symmetry | 1 |
| All other settings | | Nearest integer |

3.3.1 Frequency

“F” followed by its argument denotes frequency in hertz. The argument value may be between 1.000×10^{-4} and 1.29999×10^7 , fixed or floating. Refer to table 3-6 for round offs. In addition, the special argument value of zero is permitted. When this is programmed, the frequency magnitude is set to zero, but the range is left at its previously programmed value. This facility allows calibration and wide ranging analog voltage controlled frequency sweeps.

3.3.2 Amplitude

3.3.2.1 Amplitude Definition

“V” followed by its argument selects the amplitude programming mode. The argument may be 0, 1 or 2. Round off is to one digit.

- 0 Selects volts peak-to-peak into 50Ω
- 1 Selects Vrms
- 2 Selects dBm

3.3.2.2 All Waveforms

“A” followed by its argument denotes amplitude (in volts peak-to-peak into 50Ω, in Vrms or in dBm, depending on the amplitude mode code (refer to paragraph 3.3.2.1). The argument value may be between 1.00×10^{-3} and 1.499×10^1 (1 mVrms to 5.3 Vrms, -56 to 27.4 dBm), fixed or floating. Round off is to 3 digits to 10V p-p and to 4 digits from 10 to 15V p-p. A minus sign in the mantissa will invert the waveform.

NOTE

When offset is used, three digit resolution of offset or amplitude may be reduced in some cases. (Refer to paragraph 3.3.3.)

3.3.2.3 Pulses

The positive and negative pulses are special cases of the offset square wave. The pulses are square waves that the microprocessor automatically offsets, so that the negative peak in + pulse mode and the positive peak in the - pulse mode are always at zero volts, regardless of the amplitude programmed. With this in mind, the rules and notation used in paragraphs 3.3.2.2 and 3.3.3 are applicable to the pulses.

3.3.3 Offset and DC Voltage

“D” followed by its argument denotes offset (or, with no waveform, dc voltage) value in volts. (Offset is in volts regardless of amplitude mode.) The argument may be between -7.49 and 7.49 and may be a fixed or floating point. Round off is to 3 digits. The combined waveform and offset cannot exceed $\pm 7.5V$ peak. As offset is increased, it is usually necessary to decrease the waveform peak-to-peak amplitude to stay within the peak limit; otherwise, waveform clipping will result.

The amplitude and offset are not completely independent of one another, because they share a common output amplifier and attenuator (see figure 3-2). In certain cases it may be necessary to decrease the number of digits of resolution of amplitude or offset in order to prevent clipping in the output amplifier or to make the programmed value of offset (or amplitude) appear at the output despite an unfavorable attenuator setting necessitated by a larger value of amplitude (or offset).

The sum of amplitude and offset control the output amplifier and attenuator. The output amplifier is limited

to ± 7.5 volts peak and a 3 digit input (X.XX), and the attenuator can operate at only one value, $\times 10^0$, $\times 10^{-1}$, $\times 10^{-2}$ or $\times 10^{-3}$.

If the *absolute peak value* at the amplifier is ever 7.50 or greater, logic decreases the amplifier input (amplitude + offset) by a factor of 10 and, to maintain the same value, decreases attenuation by a factor of 10 also.

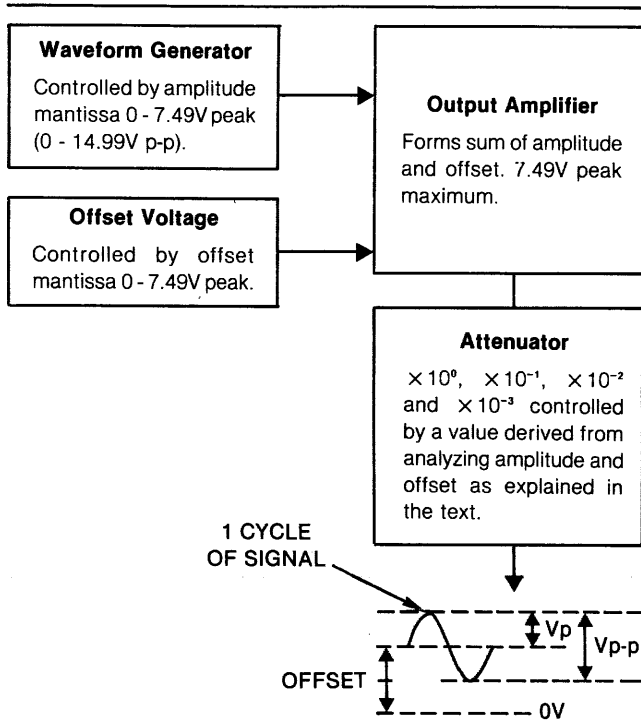


Figure 3-2. Hardware Diagram of Amplitude and Offset Generation

To determine if there is clipping or loss of resolution, perform the following calculation (amplitude in volts peak-to-peak).

1. Add the absolute value of the desired offset value to $\frac{1}{2}$ the absolute value of the desired amplitude. If the sum exceeds 7.49, clipping will occur. If not, go on to step 2 to determine if loss of resolution will occur.
2. Write the larger of the absolute amplitude or absolute offset in the form $N.NN \times 10^x$, where $N.NN$ is between 1.00 and 9.99.
3. Take the sum of amplitude and offset computed in step 1 and write it in the form $MM.MM \times 10^x$, where x is the exponent computed in step 2. If $MM.MM$ is greater than 7.49, then one digit of resolution must be lost from both amplitude and offset in order to prevent the output amplifier from clipping.

4. Perform this step, if step 3 did not result in a loss of resolution. Write the amplitude or offset, whichever is smaller in absolute value, in the form $YY.YZZZ \times 10^x$, where x is the exponent computed in step 2. If any of the digits in ZZZ are nonzero, then resolution is lost, because only $YY.YY$ can be used to program the waveform generator circuits.

Example A

Ampl = -3.43
Offset = 4.25

Step 1 $4.25 + 1.72 = 5.97$. There is no clipping.

Step 2 Absolute offset is larger.
 $4.25 = 4.25 \times 10^0$. Therefore, $x = 0$.

Step 3 $5.97 = 5.97 \times 10^0$. Therefore, there is no loss of resolution in either parameter.

Step 4 Absolute amplitude is smaller.
 $-3.43 = 3.43000 \times 10^0$. Therefore, there is no loss of resolution anywhere.

Example B

Ampl = .0964
Offset = .720

Step 1 $.720 + .0482 = .7682$. There is no clipping.

Step 2 $.720 = 7.20 \times 10^{-1}$. $x = -1$.

Step 3 $.7682 = 7.682 \times 10^{-1}$. Since 7.682 exceeds 7.49, there will be a loss of one digit of resolution in both amplitude and offset. This means that the offset will be .720 and the amplitude will be .096 (not .0964).

Step 4 Not required.

Example C

Ampl = 2.58
Offset = .123

Step 1 $.123 + 1.29 = 1.413$. There is no clipping.

Step 2 Absolute amplitude is larger.
 $2.58 = 2.58 \times 10^0$. Therefore, $x = 0$.

Step 3 $1.413 = 1.413 \times 10^0$. No loss of resolution so far.

Step 4 Absolute offset is smaller.
 $.123 = 0.12300 \times 10^0$. $YY.YY = 00.12$, $ZZZ = 300$. Therefore, one digit is lost in the offset, which will be .120, not .123.

3.3.4 Function

“C” followed by its argument denotes waveform selection. The argument may be one of the following. Round off is to nearest integer.

- 0 Selects sine wave
- 1 Selects triangle wave
- 2 Selects square wave
- 4 Selects dc voltage
- 6 + pulse
- 7 – pulse

3.3.5 Mode

“B” followed by its argument selects instrument mode. The argument may be 0 to 6. Round off is to one digit. The following modes are illustrated in figure 3-3.

- 0 Selects continuous. The generator runs continuously with parameters as programmed.
- 1 Selects triggered. The generator is quiescent until a negative going TTL pulse is fed to the TRIG IN BNC, the TRIG key is pressed, a “J” is programmed or a GET is programmed, which causes one cycle of the selected waveform to be generated.
- 2 Selects gated. The generator is quiescent until a negative going TTL pulse is fed to the TRIG IN BNC, which causes the generator to run for the duration of the pulse.
- 3 Selects synthesized (an option). The generator is phase locked to a frequency synthesizer for 5½ digit frequency resolution. (Refer to paragraph 1.2 for signal accuracy and purity.)
- 4 Selects triggered haverwave. As for triggered except the quiescent level is at the negative peak voltage (can be offset or inverted for desired level).
- 5 Selects gated haverwave. As for triggered haverwave except the generator runs continuously for the duration of the TTL level pulse fed to the TRIG IN BNC.

- 6 Selects external phase lock. When programmed within 2% of the TTL-level 10 Hz to 13 MHz signal present at the ϕ LOCK IN BNC, the generator phase locks to that reference signal.

Figure 3-3 shows the waveforms and their phase relationship relative to the sync output and two controlling input signals: trigger and phase reference. The waveforms are sine, triangle and square plus their inverted forms. In the continuous mode, a trigger input has no effect, and in trigger and gated modes, phase reference input has no effect.

In triggered and gated modes, notice that square waveforms do not change state immediately upon being triggered. Trigger duration has no effect on triggered output, but does on gated output. The cycle count on the gated sine wave shows that when the gate signal ends in the shaded area; that is, between the positive peak of cycle 2 and positive peak of cycle 3, cycle 3 will be completed. In the haverwave modes, waveforms start at a peak value; all other waveforms are normally symmetrical about signal ground. Notice the symmetry control effects shown in one series of waveforms. Symmetry may be set at any multiple of 10% from 10 to 90%. Fifty percent is normal symmetry.

3.3.6 Load and Output


“P” followed by its argument selects the output and internal 50 Ω load status. The argument may be 0 to 3. Round off is one digit.

- 0 Disconnects the internal load and connects the generator directly to the outside circuit.
- 1 Connects the internal load and connects the generator to the outside circuit.
- 2 Disconnects generator output and disconnects internal load.
- 3 Disconnects generator output and connects internal load to the outside circuit.

3.3.7 Symmetry

“S” followed by its argument controls the percent of on, or active, time of the total time for the selected signal. Symmetry operates on frequencies up to 999,990 Hz. Round off is to one digit.

The argument may be 0 to 9 or 10 to 90. Round off one digit. The effect of symmetry control is illustrated in figure 3-1.

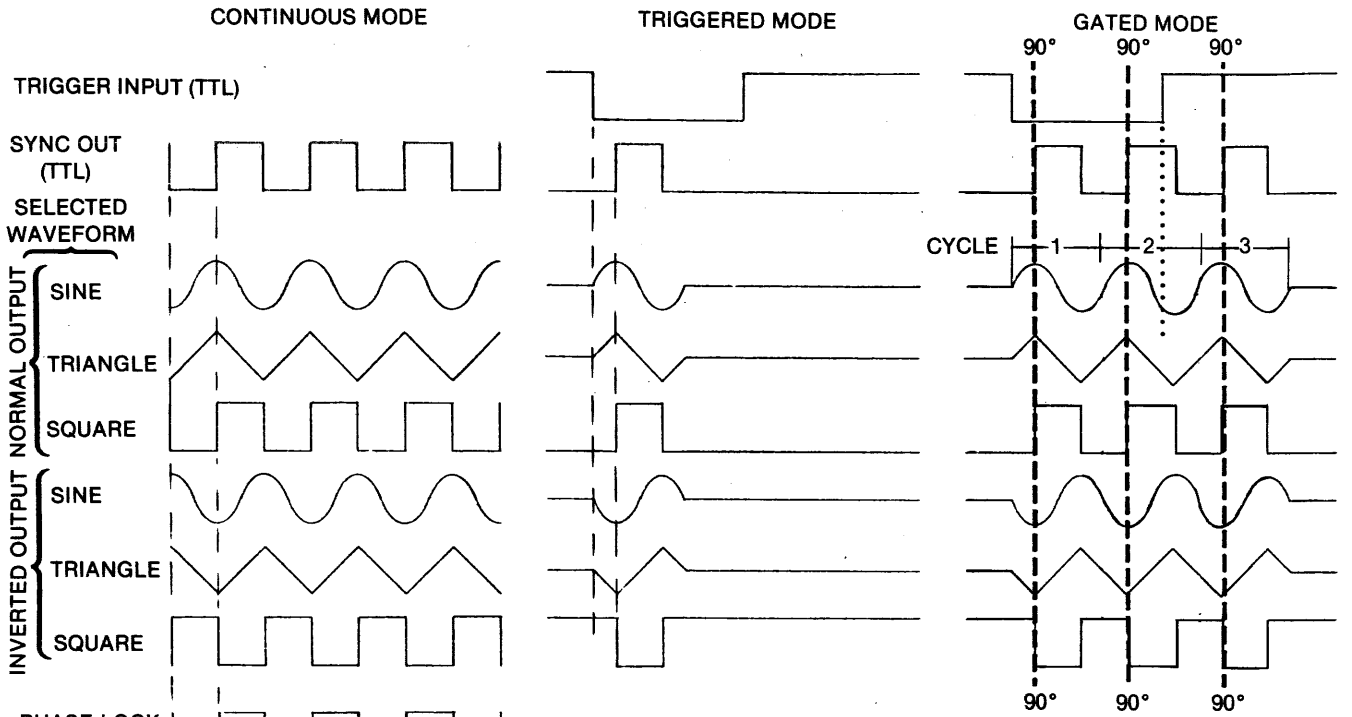

NOTE: All gated cycles started are completed. In addition, if the gate signal (TRIGGER INPUT) rises any time after 90° of a cycle, the cycle is completed plus an additional cycle is generated. As shown, the gate signal rises after 90° of cycle 2, therefore, cycle 3 is generated.

TRIGGERED HAVERWAVE MODE

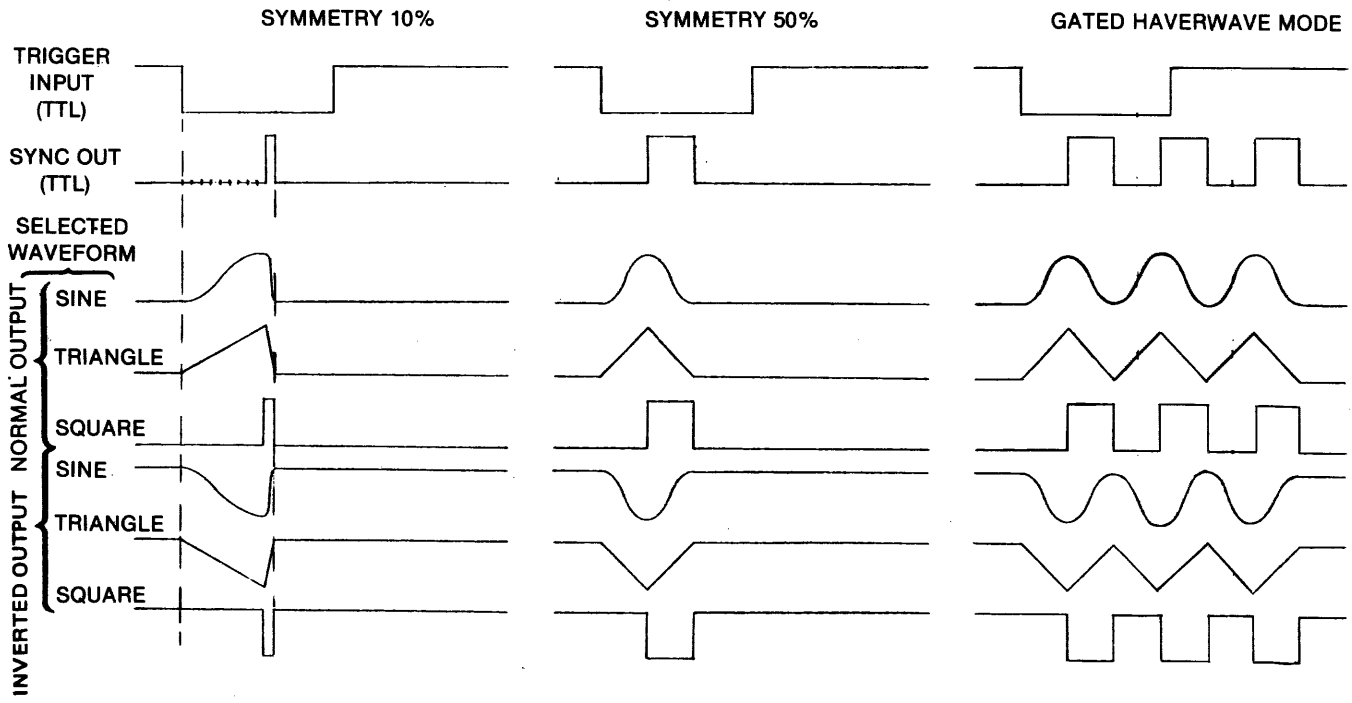


Figure 3-3. Waveforms for Each Mode

0, 5 or 50 selects 50%

1 or 10 selects 10%

2 or 20 selects 20%

↓ ↓
9 or 90 selects 90%

3.3.8 Executing the Program

“I” without an argument transfers the programmed values to the waveform generator circuits; that is, executes the program. No waveform changes can be made except with this command. This action also checks the following groups of parameters for consistency.

1. Amplitude and offset — an error is signalled if their combined values are so high that clipping occurs in the output amplifier.
2. Frequency and mode — an error is signalled if the mode is synthesized and the frequency is below 10 Hz.

NOTE

Individually valid programmed setting values are sent to the waveform generator circuits whether or not a consistency error is found.

Execution of a program can also be commanded with the GPIB Group Execute Trigger (GET) command. In this case no error checking is done.

3.3.9 GPIB Address

“G” without an argument causes the address to be displayed. The address (0 to 30) is set by a set of switches on the rear panel.

3.3.10 Trigger

“J” without an argument causes a trigger pulse to be sent to the analog circuits when in triggered or triggered haverwave mode. This has the same effect as applying a trigger pulse to the TRIG BNC, pressing the keyboard TRIG or programming a GET.

3.3.11 Command Recall

“R” without an argument will display the last 37 characters sent to the instrument. These characters are not returned to the controller over the GPIB. The

display uses a 64 character subset of the full 128 character ASCII code: character codes 20₁₆ thru 5F₁₆. The other characters are displayed as the first set of 64; they are mapped into the first set by their six least significant digits. This function is used for troubleshooting. This character has additional stored program functions. (Refer to paragraph 3.7.2.)

3.3.12 Errors

When a nonlegitimate argument is programmed, an error message is generated. If an error occurs in a programmed setting, the previous value is retained. If the error was caused by programming from the front panel, an error display will appear on the front panel display. If the error was caused via the GPIB, a service request will be made if service request is enabled (refer to paragraph 3.6.5).

3.4 OPERATING MODES

3.4.1 Initial Conditions

At power on, the instrument is set as follows: 1 kHz, 1V p-p, continuous, symmetrical sine wave with the output off and the internal 50Ω load not in the circuit.

3.4.2 Operating as a Basic Waveform Generator

When operating as a basic waveform generator, the generator runs continuously with parameters as programmed.

1. Make rear panel 50Ω OUT and SYNC OUT connections for signal and sync, as required.
2. Refer to paragraph 3.6 if programming remotely.
3. The output must be programmed on (P0 or P1). (Refer to paragraph 3.3.6.) The mode must be continuous (B0). (Refer to paragraph 3.3.5.)
4. Program the desired waveform, symmetry, frequency, amplitude and offset. (Refer to paragraphs 3.3.1 through 3.3.4 and 3.3.7.)
5. Execute the program. (Refer to paragraph 3.3.8.)

3.4.3 Operating as a Triggered or Gated Generator

See figure 3-3 for mode and waveform illustrations.

Triggered The generator is quiescent until a negative going TTL pulse is fed to the TRIG IN

- Triggered (Cont) BNC, the TRIG key is pressed or a "J" or GET is programmed, which causes one cycle of the selected waveform to be output.
- Gated As for triggered, except the generator runs continuously for the duration of the TTL level pulse fed to the TRIG IN BNC.
- Triggered Haverwave As for triggered except the quiescent level is at the negative peak voltage (can be offset or inverted for desired level).
- Gated Haverwave As for triggered haverwave except the generator runs continuously for the duration of the TTL level pulse fed to the TRIG IN BNC.

1. Make rear panel 50Ω OUT and SYNC OUT connections for signal and sync, as required.
2. Refer to paragraph 3.6 if programming remotely.
3. The output must be programmed on (P0 or P1). (Refer to paragraph 3.3.6.) The mode must be triggered (B1), triggered haverwave (B4), gated (B2) or gated haverwave (B5). (Refer to paragraph 3.3.5.)
4. Program the desired waveform, symmetry, frequency, amplitude and offset. (Refer to paragraphs 3.3.1 through 3.3.4 and 3.3.7.)
5. Execute the program. (Refer to paragraph 3.3.8.) The generator has no output until a trigger signal is applied.
6. If triggering with a TTL signal at the TRIG IN BNC or gating, apply a TTL low at the TRIG IN BNC for one cycle of waveform (triggered or triggered haverwave mode) or a burst of waveform for the duration of the TTL low (gated or gated haverwave mode). If triggering at the front panel, press TRIG. If triggering on the bus, program a "J" or a GET.

3.4.4 Operating as a Voltage Controlled or Frequency Modulated Generator

VCG operation is the same as the basic waveform operation (refer to paragraph 3.4.2) plus the connection of a VCG voltage source to the VCG (FM) IN connector. Input impedance is 5 kΩ. Input is disabled when mode is synthesized or external phase lock.

The VCG input, either dc or ac, can be used to externally control the frequency of the 50Ω OUT signal. A

positive voltage applied to the VCG IN connector will increase the generator frequency, and a negative voltage will decrease the frequency within the range of operation.

Figure 3-4 illustrates the voltage required to change the programmed frequency to a desired output frequency. For example, if 500 Hz is programmed frequency, a 2.5 volt VCG input will change the frequency to 1 kHz. Frequency can only be changed within a range and is limited in each range according to figure 3-5. Range is defined as an exponent of the $\times 10$ multiplier (see figure 3-5).

For wide range sweeping with a zero to a positive sweep voltage, use the special zero-frequency capability. Set frequency mantissa to zero (F0I) to set a frequency under the lower defined limits of figure 3-5. The range remains as the last frequency range set.

3.4.5 Operating as a Frequency Synthesizer (an Option)

The generator with synthesizer option is phase locked to a frequency synthesizer for 5½ digit frequency resolution. (Refer to paragraph 1.2 for signal accuracy and purity.)

1. Make 50Ω OUT, SYNC OUT, REF IN and REF OUT connections for signal and sync, as required.


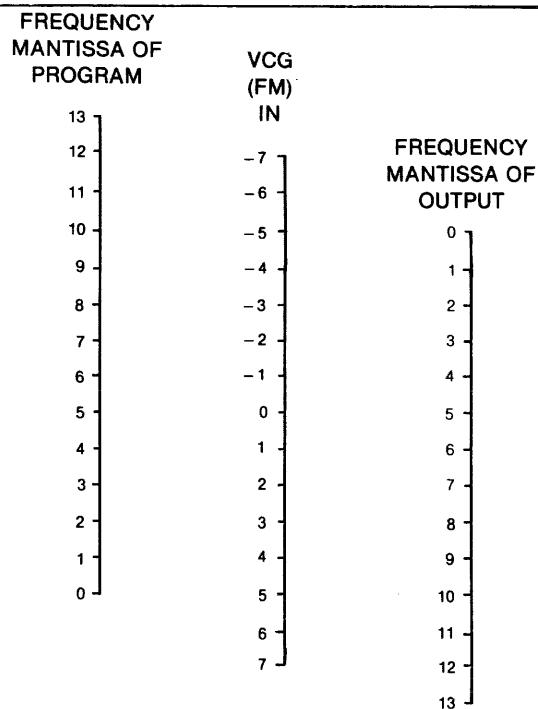


Figure 3-4. VCG (FM) Nomograph

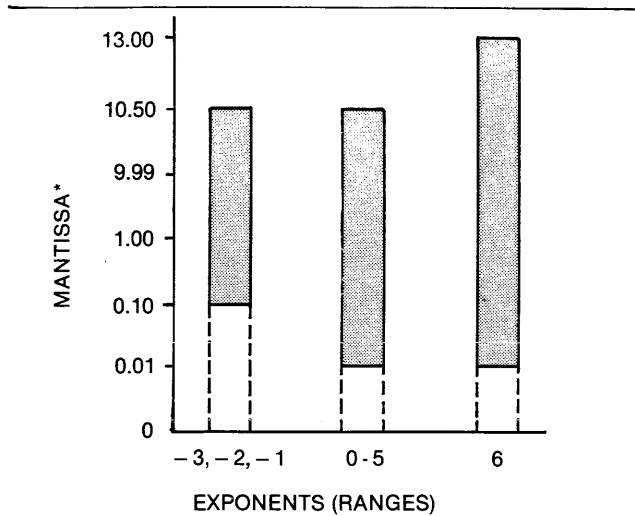

*When program is stated with one digit to the left of the decimal (or two digits to the left of the decimal for values ≥ 10 in the 10^6 range).

Figure 3-5. VCG Range Limits

2. If an external 10 MHz reference is to be used, apply the signal to REF IN. (This signal is then available at REF OUT.) To use an external reference signal, apply a sine or square wave within ± 3 ppm of 10.0 MHz, 1 to 10 Vrms and $50 \pm 8\%$ duty cycle to the REF IN BNC.
3. Refer to paragraph 3.6 if programming remotely.
4. The output must be programmed on (P0 or P1). (Refer to paragraph 3.3.6.) The mode must be synthesized (B3). (Refer to paragraph 3.3.5.)
5. Program the desired waveform, symmetry, frequency, amplitude and offset. (Refer to paragraphs 3.3.1 through 3.3.4 and 3.3.7.)
6. Execute the program. (Refer to paragraph 3.3.8.)

3.4.6 Operating as a DC Voltage Source

DC voltage output amplitude is programmed as offset. Attenuation can be programmed directly in this mode.

1. Refer to paragraph 3.6 if programming remotely.
2. The output must be programmed on (P0 or P1). (Refer to paragraph 3.3.6.) The function must be DC (C4). (Refer to paragraph 3.3.4.)
3. Program offset for the desired dc amplitude. (Refer to paragraph 3.3.3.)

4. Execute the program. (Refer to paragraph 3.3.8.)

3.4.7 Operating as a Phase Lock Generator

When programmed within 2% of the TTL level 10 Hz to 13 MHz signal present at the ϕ LOCK IN BNC, the generator phase locks to that reference signal.

1. Refer to paragraph 3.6 if programming remotely.
2. The output must be programmed on (P0 or P1). (Refer to paragraph 3.3.6.) The mode must be external phase lock (B6). (Refer to paragraph 3.3.5.) Program the frequency to within 2% of the external reference frequency.
3. Program the desired waveform, symmetry, amplitude and offset. (Refer to paragraphs 3.3.1 through 3.3.4 and 3.3.7.)
4. Apply the 10 Hz to 13 MHz reference signal to the ϕ LOCK IN BNC.
5. Execute the program. (Refer to paragraph 3.3.8.)

3.5 FRONT PANEL OPTION

3.5.1 Keyboard and Display

Keyboard controls are listed in tables 3-2 and 3-3. Readout for the key functions are listed in table 3-7. Readout is literal and in two slightly different modes; for example, for frequency, amplitude and offset. When **FREQ**, **AMPL** or **OFST** keys are pressed, as for an inquiry as to status, the words **MICROHERTZ**, **MILLIVOLTS**, etc., are used, whereas when the operator starts keying in the parameter argument, no unit of measure is displayed. Coded parameters, such as symmetry, function, mode and output, show their programmed argument in parentheses.

3.5.2 Display

The single quote character (') is used to cause a string of characters to be displayed on the front panel self-scan display. This is accomplished by first programming a single quote, then the characters to be displayed, followed either by another single quote or by the terminator character. When the second quote or the terminator is programmed, the first 37 characters programmed after the first quote are displayed on the front panel. If fewer than 37 characters are programmed, then blanks are added to fill the display.

Examples (^ indicates a blank character):

Table 3-7. Key and Readout

| Key | Readout (lower case words added for understanding only) | Key | Readout (lower case words added for understanding only) |
|----------|--|----------|--|
| ADR | GPIB = (Decimal Address, ASCII listen character and ASCII talk character) | EXEC | FR (frequency) AM (amplitude) OFS (offset) |
| AMPL DEF | AMPLITUDE IN VOLTS PEAK-TO-PEAK (0) or AMPLITUDE IN VRMS (1) or AMPLITUDE IN DBM (2) | TRIG | 172 TRIGGERED |
| CMD RCL | Lists last 37 characters programmed (refer to tables 3-2 and 3-3) | CLR ENTY | Clears any unexecuted setting of the last parameter entered |
| OUTP | OUTPUT ON, 50 OHM LOAD OUT (0) or OUTPUT ON, 50 OHM LOAD IN (1) or OUTPUT OFF, 50 OHM LOAD OUT (2) or OUTPUT OFF, 50 OHM LOAD IN (3) | SRQ | SRQ ENABLED or SRQ NOT ENABLED |
| FREQ | FREQUENCY _____ MICROHERTZ or _____ MILLIHERTZ or _____ HERTZ or _____ KILOHERTZ or _____ MEGAHERTZ | TLK | TALK RESPONSE (0, 1, 2 or 4) selected |
| AMPL | AMPLITUDE _____ MILLIVOLTS or _____ VOLTS | TRM | TERMINATOR IS: (ASCII character) (decimal value) |
| OFST | OFFSET _____ MILLIVOLTS or _____ VOLTS | + / - | " - " or blank (implies " + ") |
| SYM | _____ % SYMMETRY (0, 1, 2, - - - or 9) | GET | PREVIOUS STORED SETTING ON GET (- 1) or EXECUTE AND TRIGGER ON GET (0) or NEXT STORED SETTING ON GET (1) |
| FUNC | FUNCTION IS SINE (0) or TRIANGLE (1) or SQUARE (2) or DC (4) or + PULSE (6) or - PULSE (7) | STOR | SETTING _____ STORED or SETTING _____ DELETED (1 through 240) |
| MODE | MODE IS CONTINUOUS (0) or TRIGGERED (1) or GATED (2) or SYNTHESIZED (3) or TRIGGERED HAVERWAVE (4) or GATED HAVERWAVE (5) or EXTERNAL PHASE LOCK (6) | RCL | } SETTING _____ RECALLED |
| | | NEXT | |
| | | LAST | |

NOTE: The three right-most characters of the display will show the status of the GPIB interface: a "Q" after an error has occurred, an "R" when in remote control, and a "T" for Talk or an "L" for Listen.

Three Programmed Inputs

1. 'THIS IS A 29 CHARACTER STRING'
2. 'THIS STRING IS TOO LONG TO DISPLAY ENTIRELY'
3. '' (no character in string)

The Resulting Displays

1. THIS IS A 29 CHARACTER STRING
2. THIS STRING IS TOO LONG TO DISPLAY EN
3. (blank display)

3.6 GPIB INTERFACE

The GPIB interface is an implementation of IEEE Standard 488-1975. It supports the following interface

functions: Source Handshake (SH1), Acceptor Handshake (AH1), Talker (T6), Listener (L4), Service Request (SR1), Remote Local (RL1), Device Clear (DC1) and Device Trigger (DT1). Devices connected to the GPIB can have one or more of the three capabilities: talk, listen and control. The talk capability allows a device to send data (such as voltmeter or counter readings) out over the bus. The listen capability allows a device to receive data (such as device programming information or a printer receiving data to be printed) from the bus. The control capability allows a device to control the flow of data over the bus. Although there may be more than one device connected to the GPIB with control capability, only one device at a time may exercise that capability on the bus. One device's control capability must be active at all times; this device is called the controller.

Programming examples are given in Appendix C.

Table 3-8. GPIB Lines and Commands

| Bus Lines | |
|----------------------|------------------------|
| DIO1 - DIO8 | Data In/Out Lines |
| ATN | Attention |
| DAV | Data Available |
| NRFD | Not Ready For Data |
| NDAC | Not Data Accepted |
| EOI | End Or Identify |
| REN | Remote Enable |
| SRQ | Service Request |
| IFC | Interface Clear |
| GPIB Commands | |
| Listen Address | |
| Talk Address | |
| Secondary Address | |
| Universal Commands | |
| DCL | Device Clear |
| SPE | Serial Poll Enable |
| SPD | Serial Poll Disable |
| Addressed Commands | |
| GTL | Go To Local |
| SDC | Selective Device Clear |
| GET | Group Execute Trigger |

3.6.1 Bus Lines Defined

The GPIB consists of 16 signal lines, as shown in table 3-9. Their functions are:

DIO1-DIO8 These eight lines (Data In/Out) are used to send commands and data encoded as 8 bit binary numbers (bytes).

ATN This line (Attention) is operated only by the controller. It specifies whether the information on lines DIO1-DIO8 is data (false) or a command (true). Whenever ATN is set true, no activity is allowed on the bus except for controller-originated messages; additionally, every device connected to the bus is required to receive and process every command sent by the controller.

DAV, NRFD, NDAC These are the "handshake" lines (Data Valid, Not Ready For Data and Not Data Accepted) which regulate the transmission of information over the lines DIO1-DIO8. For each command or data byte transferred, a complete handshake cycle

must occur. This handshake is designed to hold up the bus until the slowest device has accepted the information.

EOI When ATN is false, this line (End Or Identify) indicates that the data on lines DIO1-DIO8 is (true) or is not (false) the last byte of a data message. When the 172B receives a data byte with EOI true, it automatically supplies a terminator character (refer to paragraph 3.6.6) following the data byte. When the 172B transmits the last byte of a message (which is always a terminator character), it also sets EOI true.

REN This line (Remote Enable) is used to control whether devices on the GPIB are in local or remote mode. In local mode, devices respond to front panel commands and do not respond to GPIB originated commands. In remote mode, the situation is reversed: GPIB originated commands are obeyed, while front panel commands are ignored. A device enters the remote state whenever it receives its listen address (refer to paragraph 3.6.2.1) at the same time as REN is in the remote state. The device then stays in the remote mode until either the REN line is put in the local state or the device receives a Go-To-Local (GTL) command or the LOCAL front panel key is pressed while the interface is not in the local lockout state (refer to paragraph 3.6.2.4d).

SRQ This line (Service Request) is used by the devices on the bus to signal the controller that they need attention. (Refer to paragraph 3.6.5 for 172B Service Request Enable.) Since the SRQ line is common to all devices, additional tests must be made to determine which devices are signalling. The Serial Poll capability is usually employed to accomplish this.

IFC This line (Interface Clear) is used by the controller to reset the interface logic in all devices connected to the bus to a known initial state.

3.6.2 GPIB Commands

Commands are sent over lines DIO1 - DIO8 with ATN true. They are divided into five classes.

3.6.2.1 Listen Addresses

Listen addresses are used to command a device to read any data bytes transmitted over lines DIO1 - DIO8. There are 31 different available addresses (hexadecimal codes 20 thru 3E, ASCII codes "SP" thru ">"). A 32nd address, called unlisten (hexadecimal 3F, ASCII "?"), is used to command all devices not to read data bytes. The 172B listen address is selected by the rear panel DIP switch, which specifies the lower 5 bits of the address. (Refer to table 2-2.)

3.6.2.2 Talk Addresses

Talk addresses are used to command a device to transmit data over lines DIO1 - DIO8 whenever ATN is false. There are 31 different available addresses (hexadecimal codes 40 thru 5E, ASCII codes "@" thru "t"). A 32nd address, called untalk (hexadecimal 5F, ASCII "—") is used to command all devices to cease talking. The lower 5 bits of the 172B talk address are selected by the same rear panel DIP switch used to select the listen address. Thus, if the 172B listen address is hexadecimal 21 (ASCII "!"), the talk address is hexadecimal 41 (ASCII "A").

3.6.2.3 Secondary Addresses

Secondary addresses are used following a talk or listen address to provide the ability to address more than the 31 devices provided for by simple talk or listen addresses. Secondary addresses are ignored by the 172B.

3.6.2.4 Universal Commands

Universal commands are used to command a device to perform designated actions. Universal commands are recognized at all times. Universal commands performed by the 172B are:

1. Device Clear (DCL) — resets the following settings to the power on state.

| | |
|-----------|------------|
| AMPLITUDE | 1 VOLT |
| OFFSET | 0 VOLTS |
| FREQUENCY | 1 kHz |
| MODE | CONTINUOUS |
| FUNCTION | SINE |

| | |
|----------|----------------------|
| LOAD | OUTPUT OFF, LOAD OUT |
| SYMMETRY | 50% |

This information is also set into the waveform generating circuitry.

2. Serial Poll Enable (SPE) — causes the instrument to engage in a serial poll by responding with the serial poll status byte when addressed as a talker. Data line DIO7 will be on, if service is being requested on the SRQ line (in particular, the status byte will be an "E", if service is being requested, zero, if not). When the status byte is read, it is reset to zero, and the SRQ line is released (of course, it may still be held down by other devices). The status byte is also available by reading the 172B talk message number 2. When this message is read, the status byte is reset to 0 and SRQ released as for the serial poll.
3. Serial Poll Disable (SPD) — removes the instrument from the serial poll mode activated by the SPE command.
4. Local Lockout (LLO) — causes the GPIB interface to enter a state where the front panel LOCAL key is inoperative. Once in this state, the only way to take the interface out of it is to put the REN line in the local state (refer to paragraph 3.6.1). Local lockout must be sent to the 172B to totally disable front panel modification of the state of the instrument.

3.6.2.5 Addressed Commands

Address commands are used to command a device to perform designated actions. Addressed commands are recognized only when the instrument is addressed as a listener. Addressed commands performed by the 172B are:

1. Go To Local (GTL) — commands the 172B to go to the local mode (refer to paragraph 3.6.1 for explanation of REN line).
2. Selective Device Clear (SDC) — causes the same action as for Device Clear (DCL) command (refer to paragraph 3.6.2.4).
3. Group Execute Trigger (GET) — causes the same actions as specified by the GET mode ("O") argument (refer to paragraph 3.6.7). If the 172B's microprocessor is idle (i.e., not processing a previously sent programming string), a GET command will be completed within 2 ms of receipt. Otherwise, it will not be done until current programming is processed.

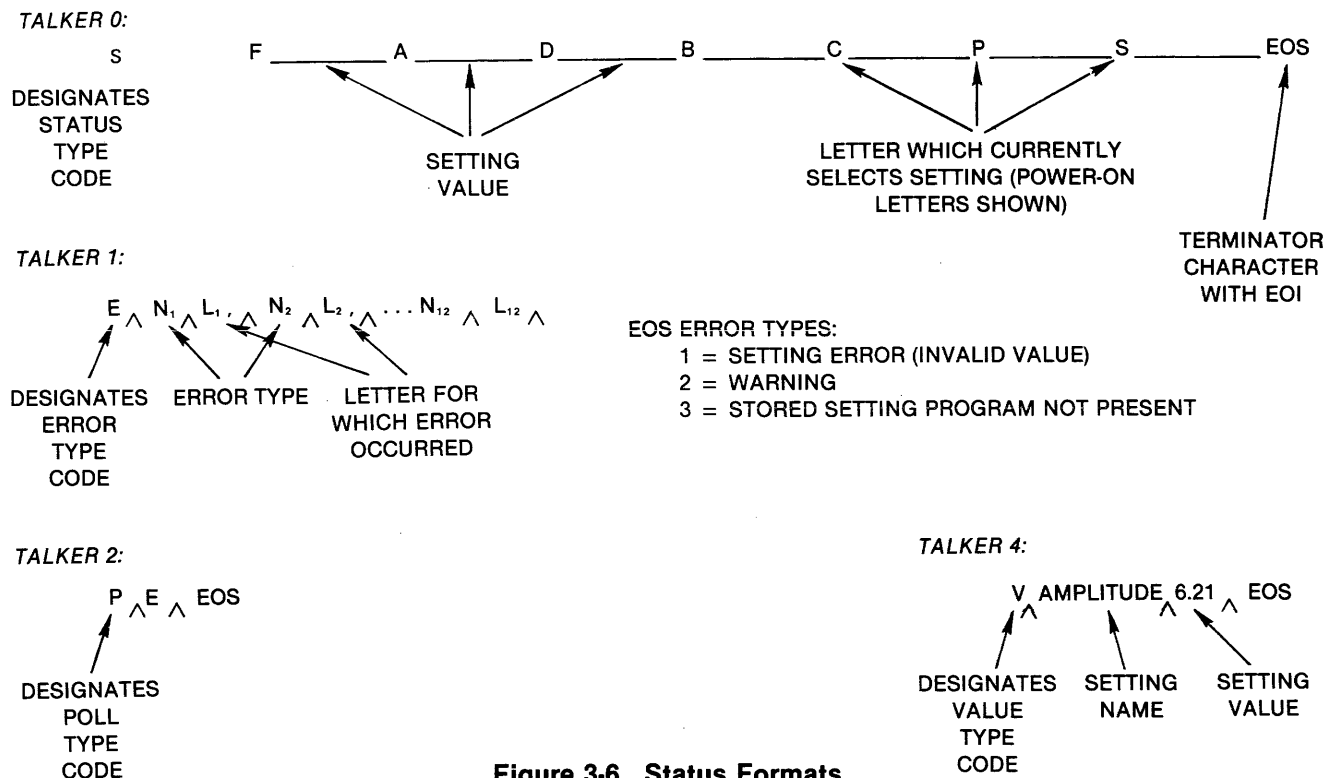


Figure 3-6. Status Formats

3.6.3 GPIB Data Transfers

The 172B will both accept programming characters and transmit status information over the bus. To program the instrument, first send the listen address (with ATN on), followed by the programming data (in ASCII, with ATN off). The instrument microprocessor accepts the data as fast as possible, until either 64 characters are received or there is a pause during the transfer of data. At that time, the entire string of received characters is scanned by the microprocessor, which carries out the programming instructions contained in it. While this is happening, the instrument can accept an additional 64 characters of data over the bus; if more are sent, the bus will hang until the microprocessor completes a scan and accepts the next 64 character string. Whenever the microprocessor finishes scanning a string, it puts a display on the front panel which reflects the state of input processing at that point. If the EOI line is asserted while sending a character to the 172B, the currently programmed terminator character will be put into the input string following the character with the EOI.

To read a message from the 172B, first send the talk address (with ATN on) over the bus. The instrument will then send the message currently selected by the Talk Message Select (T) setting. The last character of

this message will be the currently programmed terminator character with the EOI line asserted.

3.6.4 Talker

“T” followed by its argument sets the particular type of status message sent by the 172B when asked to talk on the GPIB (see Appendix C, example 2). The argument may be 0 thru 4, except 3. Round off is to one digit. The argument codes are:

- 0 Status message will give currently programmed waveform setting values. These will be the same as the values controlling the analog circuits if no new values were programmed since the last execute action. If this message is sent back to the 172B as programming input at a later time, it will restore the frequency, amplitude, offset, mode, function, output and symmetry settings to the values they had when the message was read from the 172B. (See figure 3-6.)
- 1 Status message will give a list of the first 12 errors since the last time this message was read from the instrument. After this message is read, the list of errors is cleared to blanks, so that a subsequent read will get only “E” until another error happens.

- 2 Status message contains the status byte which describes why the instrument is requesting service on the GPIB. It is the same byte which is read by a serial poll. Reading this message also turns off the service request if it was on. In the standard instrument, the only value defined for this byte is E for error.
- 4 Status message gives the current value (if any) of the setting selected by the last alphabetic character sent to the 172B. If that character selects an action or a nonexistent setting, the response is a blank character.

3.6.5 Service Request Enable

“Q” followed by its argument suppresses or enables service requests. The argument may be 0 or 1. Round off is to one digit. The argument code is:

- 0 Suppresses all service requests.
- 1 Enables all service requests.

3.6.6 End of String or Terminator Specification

“X” followed by its argument designates a new End Of String (EOS), or terminator, character. The argument is the decimal value of the ASCII character that is to be the new terminator: an EOS character recognized by the 172B. Any ASCII character is accepted.

The terminator character has two uses. During output, it is appended to the end of every response to a talk request on the GPIB. During input, it signals the end of a group of programming characters. Since it is always recognized, even in a quoted string, it can be used to insure that the instrument is in a known state, so that following programming characters will be interpreted correctly.

At power on time, the EOS character is the line feed control character, ASCII character (LF) 10₁₀. When the 172B issues a talk message, the EOS character is the last byte sent. In addition, the End Or Identify (EOI) line is pulled low (END message) during the EOS character transmission. If the GPIB controller does not look for the END message (EOI line low), and it does not recognize the Line Feed (LF) as a string terminator, a new EOS character will be needed. For example, to change the EOS character from an LF to a Carriage Return (CR), program an “X13”.

3.6.7 GET Mode

“O” followed by its argument selects what actions occur when a Group Execute Trigger (GET) command is sent to the 172B. The argument may be 0, 1, or -1.

- 0 Upon receipt of GET, the programmed waveform values are transferred to the waveform generator circuits, and then the microprocessor sends a trigger pulse if the mode is triggered or triggered haverwave. This is the same sequence of events that would occur if an Execute, then a Trigger action (“IJ”) were programmed, except that no error checking is done.
- 1 Upon receipt of GET, the stored setting next in sequence after the last stored setting accessed is recalled if it exists (refer to paragraph 3.7.2). Then the actions described above for code 0 are performed. This is the same sequence of events that would occur if a Next Setting, an Execute and a Trigger action (“WIJ”) were programmed, except that no error checking is done.
- 1 Upon receipt of GET, the stored setting previous in sequence before the last stored setting accessed is recalled if it exists (refer to paragraph 3.7.2). Then the actions described for code 0 are performed. This is the same sequence of events that would occur if a Previous Setting, an Execute and a Trigger action (“UIJ”) were programmed, except that no error checking is done.

3.6.8 LOCAL Key

Pressing the front panel LOCAL key switches the GPIB interface to the local mode if it is not in the local lockout mode. The “R” (remote) character on the right side of the display will go off when this key is pressed. This allows manual intervention in sequences of GPIB programming. If it is desired to totally prevent front panel alteration of the instrument’s state, the GPIB interface must be put into the local lockout mode (refer to paragraph 3.6.2.4, item 4.).

3.7 STORED PROGRAMS

Up to 240 different states of the instrument can be stored in and recalled from Random Access Memory (RAM). The programs (groups of seven settings) stored in RAM are lost if instrument power is turned off. Each program contains information specifying instrument frequency, amplitude, offset, mode, function, symmetry and load; all other instrument settings are unaffected.

3.7.1 Storing Programs

Programs may be stored by keyboard or a command received over the GPIB interface. To store a program, first program the seven settings (frequency, amplitude, etc.) which are remembered in a program to the desired value, if not already programmed. Then press the STOR key or program the letter "M", followed by a number between 1 and 240, which identifies the particular program. The previous program with that number assigned, if there was one, is erased by the entry of the new settings. In any case, the current values of the frequency, amplitude, mode, function, symmetry and load settings are stored into the selected program. When a program is stored, the settings are tested for consistency in the same manner as with an Execute command (refer to paragraph 3.3.8). The program is always stored whether or not errors were detected.

3.7.2 Recalling Programs

The information stored in a program may be recovered either from the front panel or by a command over the GPIB. To recall from the front panel, press the RCL key, followed by the number of the desired program. When the next nonnumeric key is pressed, the seven settings stored in the selected program are transferred to the display memory and the analog scratch pad memory. Then data is available to be sent to the analog circuitry of the instrument, or, if desired, it may be examined and possibly altered by use of the front panel keys. Recalling a program over the GPIB is a similar process. First, a "Y" character is programmed, followed by the number of the desired program. When the number is terminated, the program information is transferred to the display and analog scratch pad memories, as above. To preserve compatibility with previous models, the CMD RCL key ("R") and "Z" also access stored programs, acting like the letter "Y".

The identifying numbers of programs in RAM range from 1 through 240. If the number of a program which does not exist or an illegal identifying number is programmed, an error will result.

Pressing the NEXT key or programming "W" causes the program next in sequence after the last program

program accessed to be recalled. This provides an automatic way to recall a sequence of programs. However, the programs need not be numbered consecutively. If there is no program following the last program accessed, an error occurs.

Pressing the LAST key or programming "U" causes the program previous in sequence before the last program accessed to be recalled. This action works like the NEXT ("W") action previously described, except that programs are recalled in descending numeric order.

3.7.3 Recalling Stored Settings for External Storage

To save existing stored instrument settings, the settings stored at each address must be recalled to the analog scratch pad memory and placed on the GPIB as a status talk message, where they may be recorded on magnetic tape or whatever.

Program a status talk message (T0). Program a recall of the first stored settings (YX where X is 1 - - - 240). Place the scratch pad memory contents on the GPIB by sending the 172B talk address with ATN on. Thereafter, program "W" to call up the next stored settings. Continue the process until all settings are transmitted. (Refer to Appendix C, example 3.)

3.7.4 Deleting Programs

To delete a program, program the letter "M" followed by a *minus* sign and the number of the program to be removed. When the number is terminated, the program is removed from storage; there is no other effect.

3.7.5 High Speed Recall

When the GET mode ("O") setting is set to either 1 or -1, a sequence of programs may be recalled in either ascending or descending order at high speed by sending Group Execute Trigger (GET) commands to the instrument (refer to paragraph 3.6.7). In this mode of operation, the next (or previous) program is recalled and executed, and the waveform circuits are triggered, all within 2 ms of receiving the GET command. (Refer to Appendix C, example 4.)

SECTION 4

CIRCUIT DESCRIPTION

4.1 INTRODUCTION

The major components of the Model 172B are shown in figures 4-1, 4-2 and 4-3. The blocks in figure 4-3 correspond to actual assemblies. Each circuit board is shown as a block diagram in subsequent figures.

The analog portion of the 172B consists of a function generator (VCG, Triangle Generator and Function/Preamp boards), output amplifier with offset and attenuator (Attenuation board) and an optional frequency synthesizer (1st Digit/Mixer, 2nd and 3rd Digit and 4th and 5th Digit/Reference boards). The synthesizer is controlled by logic to produce some multiple of the desired output frequency; its output is within the 1 to 13 MHz range. In synthesizer mode, this fre-

quency is divided down to the desired frequency, by logic control, at the function generator. The function generator is then phase locked to it. In function generator mode, the frequency may be controlled by VCG voltage as well as logic, and, in external phase lock mode, phase lock occurs when the 172B frequency remains within 2% of the external signal frequency.

The digital portion of the 172B consists of the bus and front panel inputs to the microprocessor (Microprocessor and Memory RAM boards) and its output to the analog portion of the 172B. The GPIB input is interfaced to the microprocessor by the GPIB board. The microprocessor also controls the front panel readout and sends status and error messages on the GPIB.



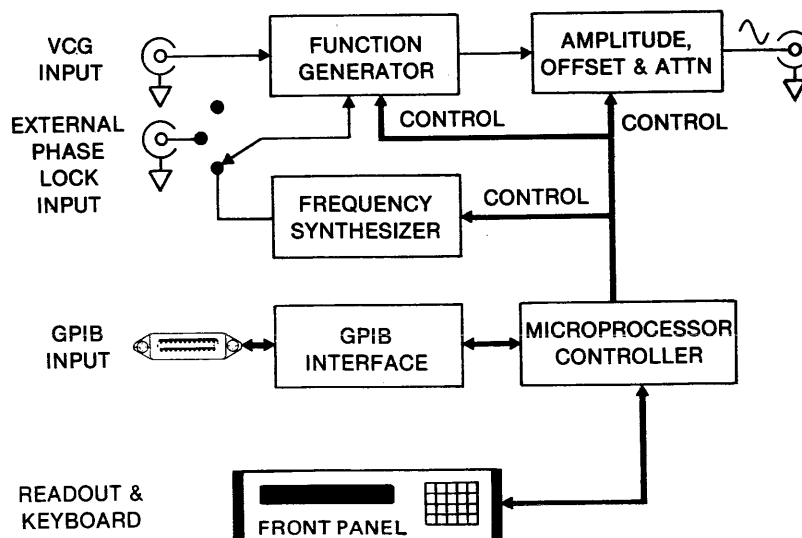


Figure 4-1. Overall Block Diagram

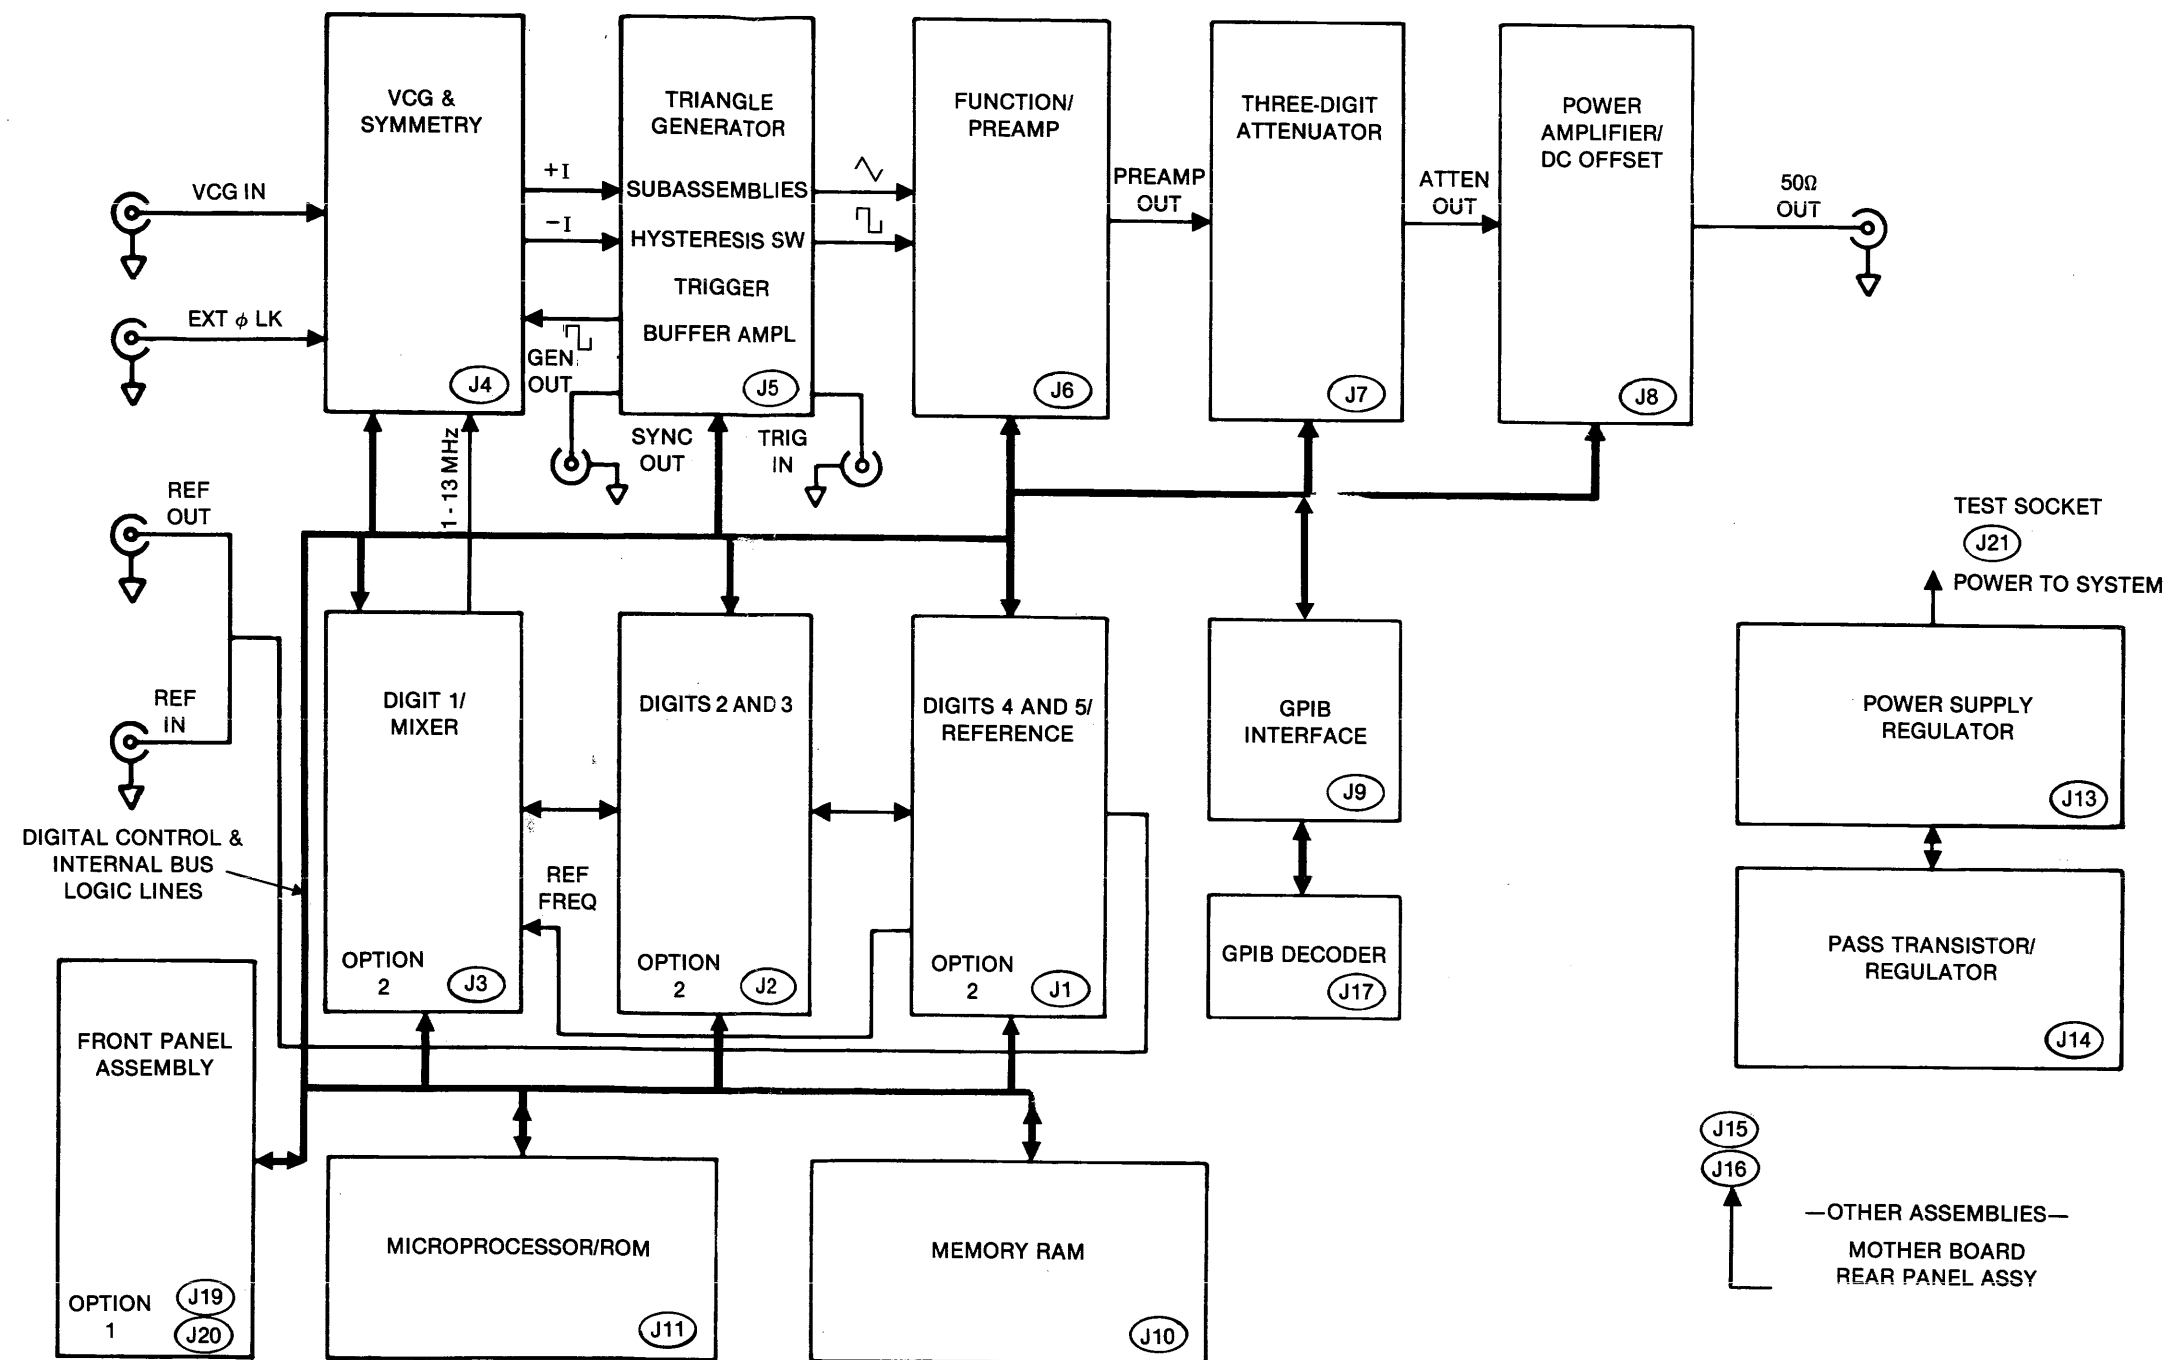

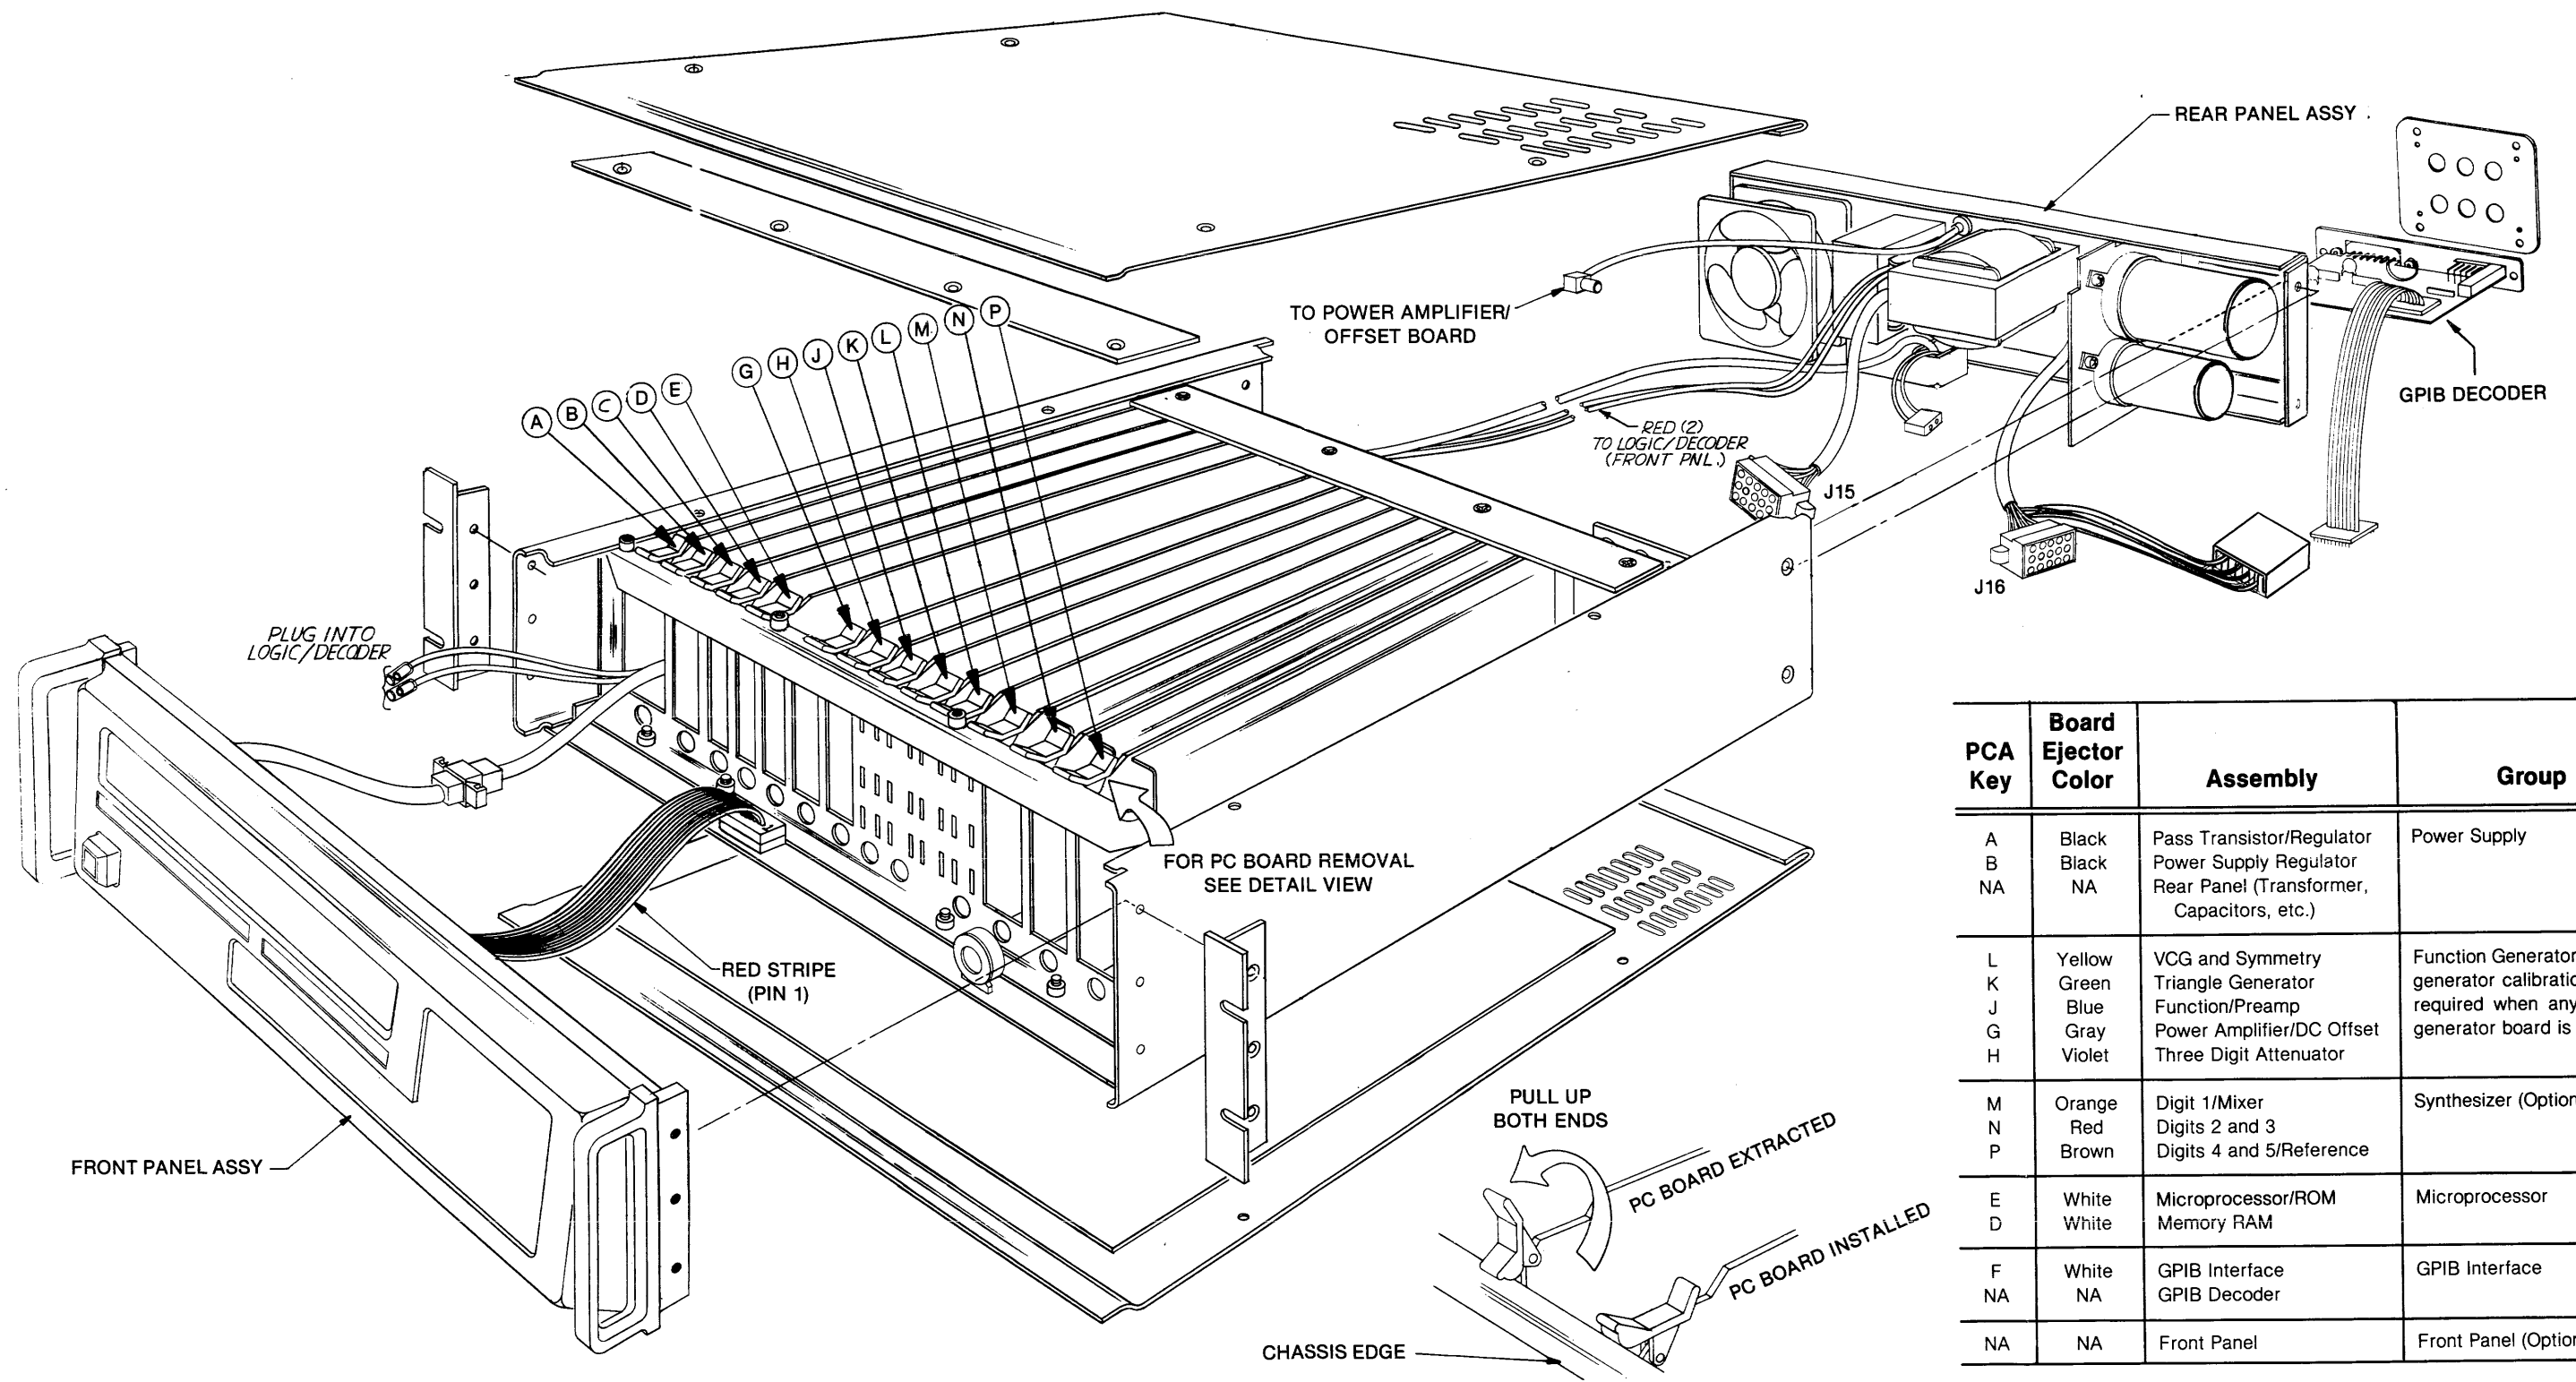

| PCA Key | Board Ejector Color | Assembly | Group |
|---------|---------------------|--|--|
| A | Black | Pass Transistor/Regulator | Power Supply |
| B | Black | Power Supply Regulator | |
| NA | NA | Rear Panel (Transformer, Capacitors, etc.) | |
| L | Yellow | VCG and Symmetry | Function Generator (function generator calibration usually required when any function generator board is replaced) |
| K | Green | Triangle Generator | |
| J | Blue | Function/Preamp | |
| G | Gray | Power Amplifier/DC Offset | |
| H | Violet | Three Digit Attenuator | |
| M | Orange | Digit 1/Mixer | Synthesizer (Option 002) |
| N | Red | Digits 2 and 3 | |
| P | Brown | Digits 4 and 5/Reference | |
| E | White | Microprocessor/ROM | Microprocessor |
| D | White | Memory RAM | |
| F | White | GPIB Interface | GPIB Interface |
| NA | NA | GPIB Decoder | |
| NA | NA | Front Panel | Front Panel (Option 001) |

Figure 4-2. Circuit Board Location

4.2 VCG AND SYMMETRY

The purpose of the VCG and Symmetry board (see figures 4-3 and 4-4) is to provide positive and negative currents to the Triangle Generator board that are proportional in amplitude to the desired three digits of frequency; and then proportional, positive current to negative current, according to the desired waveform symmetry.

The input to the VCG and Symmetry board is internal bus logic, VCG (Voltage Controlled Generator) voltage from the VCG (FM) BNC and the synthesizer signal which may be from 1 to 13 MHz, which is some power of ten multiple of the programmed frequency. The logic is controlled by programmed mode, frequency range and the three-digit frequency value.

The frequency of the generator is determined by the rate of charge and discharge of the "range" capacitance on the Triangle Generator board (see figure 4-5) by the positive and negative currents. The entire range of frequencies from 0.1 MHz to 13 MHz is achieved by selecting a capacitance, then varying the current from low to high. When near maximum current is reached, a smaller capacitance is selected and the current increased from low to high again. Each set of capacitance determines a frequency range. This scheme is used until 1 MHz is reached. From 1 through 13 MHz, an additional boost in current is used in lieu of a change in capacitance. (Symmetry control is inhibited on this range.) This boost is logic controlled (see figure 4-4), as is switching in individual alignment resistors for each range. See frequency range blocks on the diagram. Internal bus control logic from the microprocessor also selects three digits of frequency within a range and determines whether or not external voltage (VCG) will be allowed to share in the control of the frequency of the generator. If in synthesizer or phase lock mode, VCG is not allowed. The input VCG voltage, if allowed, is combined with the other voltages at the digital to analog amplifier to drive the current generators.

Programming the symmetry selects the resistances which control the balance between the positive and negative current generators.

In phase lock or synthesizer mode, the analog voltage that controls the current generators is supplemented with the error voltage required to maintain phase lock with an external signal or phase lock with the synthesizer circuits. This error voltage is generated by phase detecting the difference between the square

wave from the triangle generator hysteresis switch and the external signal or the synthesizer signal, whichever was selected by mode logic. The generator square wave will be in phase with the external input and the sine wave 90° out of phase when external phase lock is selected. The external signal and the generator signal must be within 2% of frequency for phase lock to occur. The compared synthesizer frequency is always within 2% of the generator frequency. The synthesizer itself has a range of only 1 to 12.999 MHz; hence, the divide by N circuit prior to the phase detector.


If the generator frequency is in the 10⁶ range, no division is required; however, for each lower range a division must occur prior to phase detection and phase locking of the generator to the synthesizer:

| Range | N |
|-----------------|-----------------|
| 10 ⁶ | 1 |
| 10 ⁵ | 10 ¹ |
| 10 ⁴ | 10 ² |
| | etc. |

The purpose of the Triangle Generator board (see figures 4-3 and 4-5) is to produce both the triangle and square waveforms at the frequency determined by the currents from the VCG and Symmetry board. The generator will free run or will turn on and off in response to a trigger or gate voltage, depending on the mode selected.

Input to the board is trigger voltage applied at the TRIG IN BNC, internal bus control logic and positive and negative currents proportional to the programmed frequency and symmetry from the VCG and Symmetry board. Output is the triangle and square waveforms to the Function/Preamp board and a sync signal based on the square wave to the SYNC OUT BNC. Triggered output starts at the normal 0° waveform phase or, when in haverwave modes, -90° phase.

The diode switch, which is controlled by the hysteresis switch, is used to switch the positive or negative current to the timing capacitor selected by the frequency range logic. When the positive current is switched into the timing capacitor, the voltage across the capacitor will rise linearly to generate the triangle rise transition. When the current is negative, the voltage across the timing capacitor will fall linearly to produce the fall transition of the triangle.

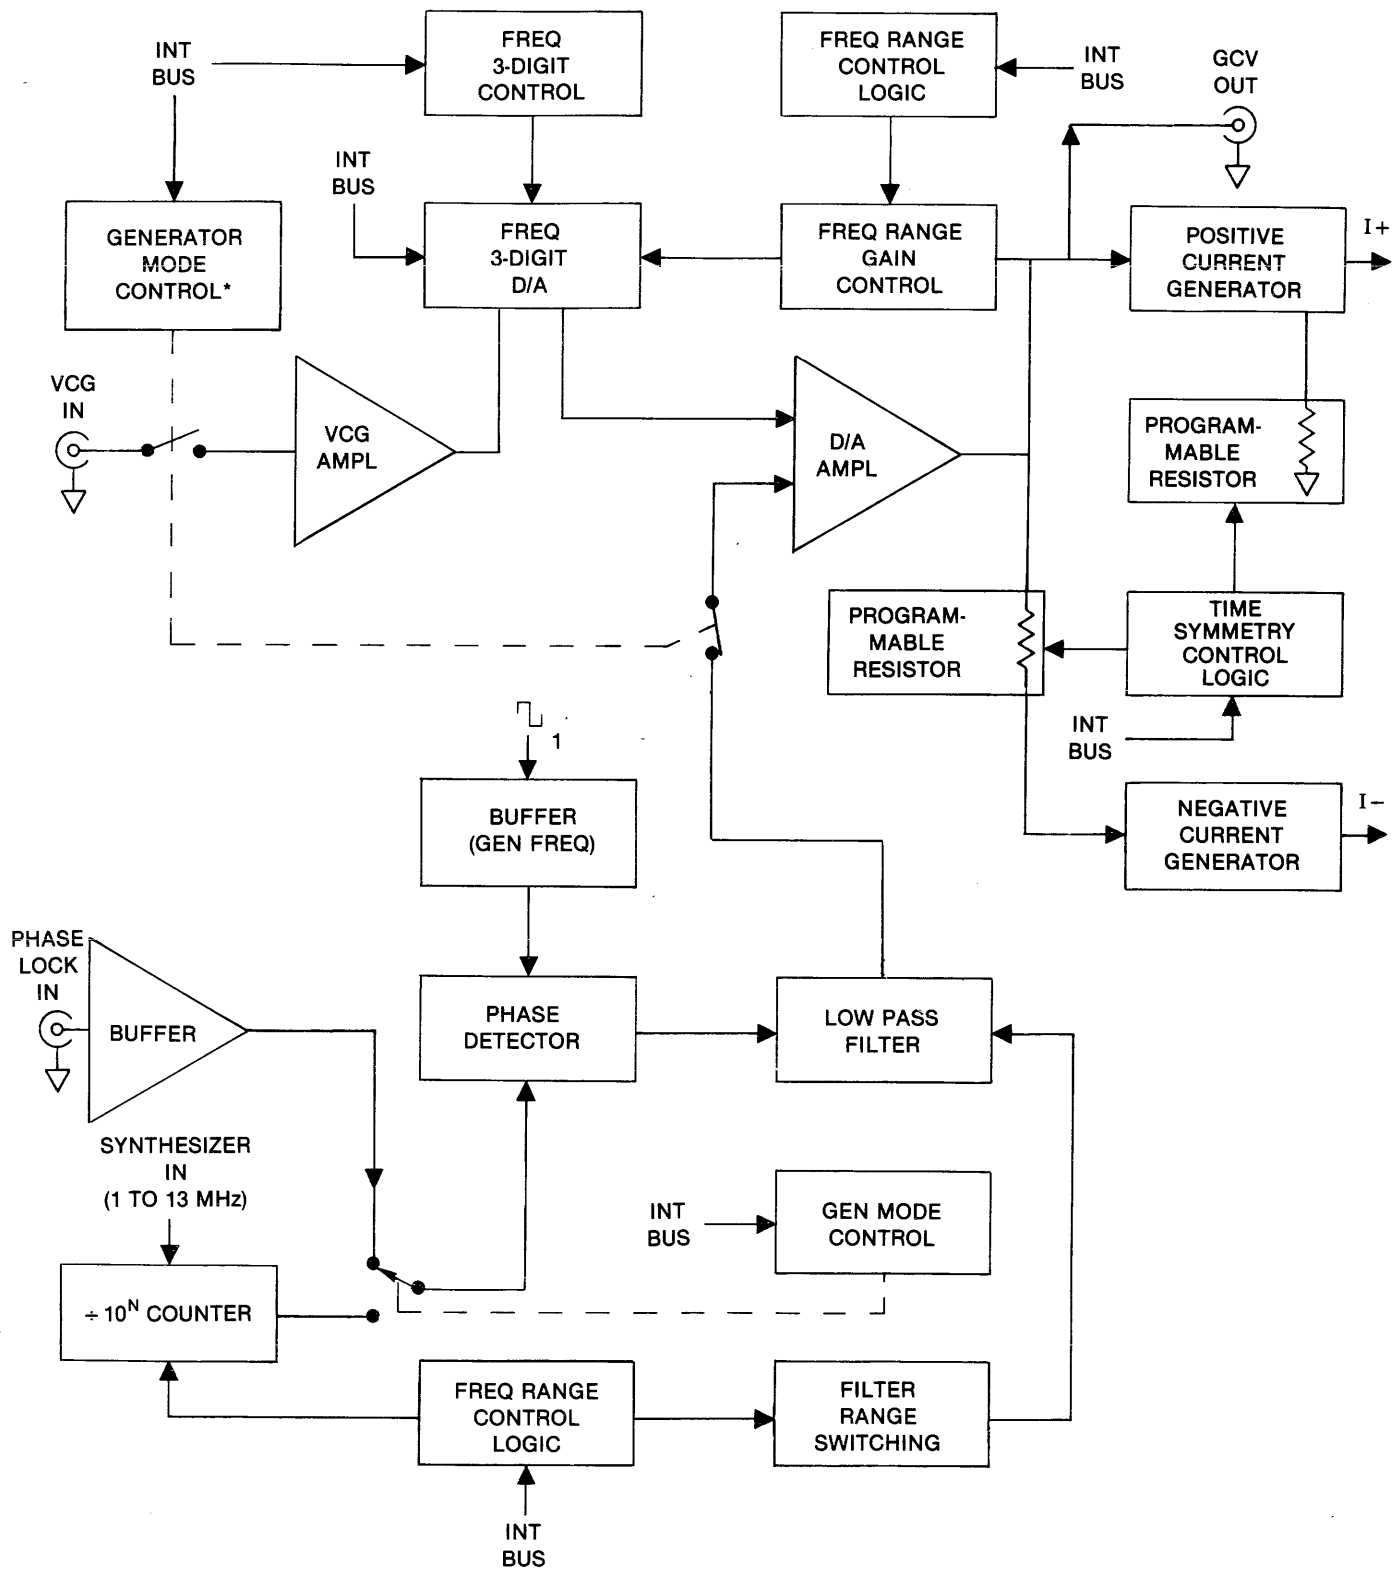

*Selects Phase Lock, Synthesizer or VCG

Figure 4-4. VCG and Symmetry Block Diagram

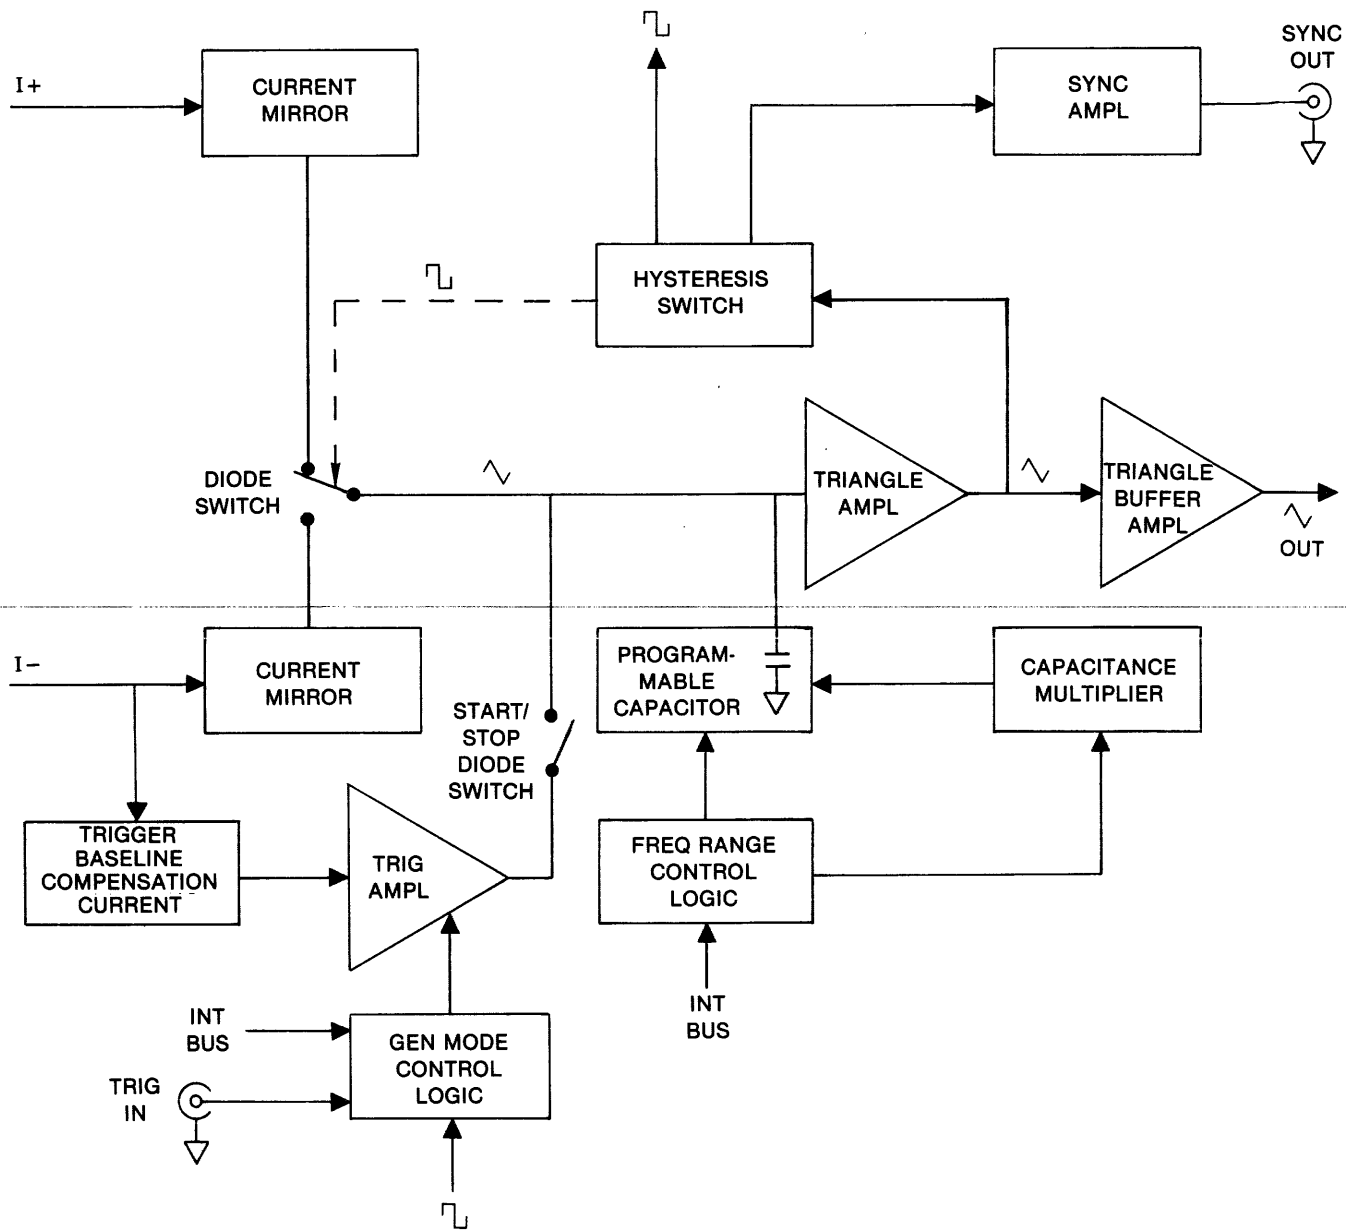


Figure 4-5. Triangle Generator Block Diagram

The triangle amplifier output is fed to the hysteresis switch and to the \wedge buffer amplifier. The \wedge buffer is fed to the Function/Preamp board (see figure 4-6). The hysteresis switch has two voltage limit points (+ 1.25 and - 1.25) at its input.

During the time the output voltage of the triangle amplifier is rising, the output voltage of the hysteresis switch is positive, but when the output voltage of the triangle amplifier reaches +1.25V, it triggers the hysteresis switch, causing the hysteresis switch output to switch negative. Once the control voltage into the diode gate becomes negative, it switches the positive current out and the negative current in to the timing capacitor, so that the direction in the voltage change across the capacitor reverses, starting a linear decrease of the waveform. When the decreasing voltage reaches -1.25V, the hysteresis switch output switches back to positive, reversing the process. This action generates the triangle waveform. Since the hysteresis switch output is a square wave, the result is simultaneous generation of a square wave and a triangle wave at the same frequency.

The frequency is range controlled by selecting various capacitance and finely controlled by the charging currents. Symmetry of the waveforms is controlled by the degree of imbalance between positive and negative currents. To avoid the use of very large capacitors for the low frequency ranges, a capacitance multiplier circuit simulates a larger capacitor by a proportional decrease in charging current.

The enabling of generator operation is controlled by allowing or preventing the selected timing capacitor to charge. For continuous operation, the trigger amplifier maintains a positive level above the positive peak developed by the charging capacitors. This reverse biases (turns off) the start/stop diode switch, preventing the trigger amplifier from affecting continuous operation.

When in trigger mode, the trigger amplifier outputs some level below the positive peak charging level, the

diode switch is forward biased (turned on) holding the charging level constant and preventing the capacitor from charging to the positive peak. This stops operation and holds the output at a dc level called the trigger baseline, the level from which a waveform cycle starts and where it will stop. Normally, this is midway between the peaks. In the haverswave mode and for square and pulse functions, it is at the negative peak level.

When the charging level is being held, the negative current generator still varies its output with corresponding frequency control inputs. These varying currents must be taken up through the diode switch to keep the timing capacitors from varying their charge, and thus the trigger baseline. The baseline compensation circuit monitors the output from the negative current generator to control the trigger amplifier, and thus the necessary compensating current through the diode switch.

The generator mode control circuit determines whether the trigger control logic is to be "fired" for just one cycle, or is to be held on for the duration of the trigger input during gated mode or is to be held on continuously during continuous mode. When in gated mode, the trigger signal is directly coupled for controlling the trigger control logic. In the trigger mode, the trigger signal is capacitively coupled to provide a leading edge spike to "fire" the trigger control logic. The trigger control logic determines that after a waveform starts, it always stops at a complete cycle at the same phase at which it started. The trigger control logic latches the trigger amplifier for an enabling output from the time the cycle starts to when the negative peak of the last cycle is reached (just one cycle in the trigger mode). Upon reaching the negative peak, the timing capacitor wants to continue charging positive again as usual, but stops upon reaching the trigger baseline. A square wave from the hysteresis switch synchronizes the last negative peak time for unlatching the trigger amplifier.

4.4 FUNCTION/PREAMP

The Function/Preamp board (see figure 4-3 and 4-6) creates a sine waveform and selects the output function as one of the following:

- Sine wave
- Triangle wave
- Square wave
- Inverted (with respect to sync) sine wave
- Inverted (with respect to sync) triangle wave
- Inverted (with respect to sync) square wave
- No signal

The input to the Function/Preamp board is the buffered triangle wave and square waveform from the Triangle Generator board and the internal bus logic. Output is the selected function or dc, which goes to the Three-Digit Attenuator board (see figure 4-7).

The triangle wave is processed by nonlinear diode networks to produce a sine wave, and the square wave is precisely clipped. All three waveforms, triangle, sine and square, are present for function selection by logic. The selected waveform, or no waveform, is amplified and presented in both normal and inverted form for final logic selection.

4.5 THREE-DIGIT ATTENUATOR

The Three-Digit Attenuator board (see figures 4-3 and 4-7) accurately controls the amplitude of the output signals from the Function/Preamp board and within the particular range setting.

The input is the internal bus logic and the signal selected by the Function/Preamp board. The output is the attenuated signal sent to the Power Amplifier/DC Offset board. The logic sets the attenuation network to accurately produce an amplitude expressed as XX.X.

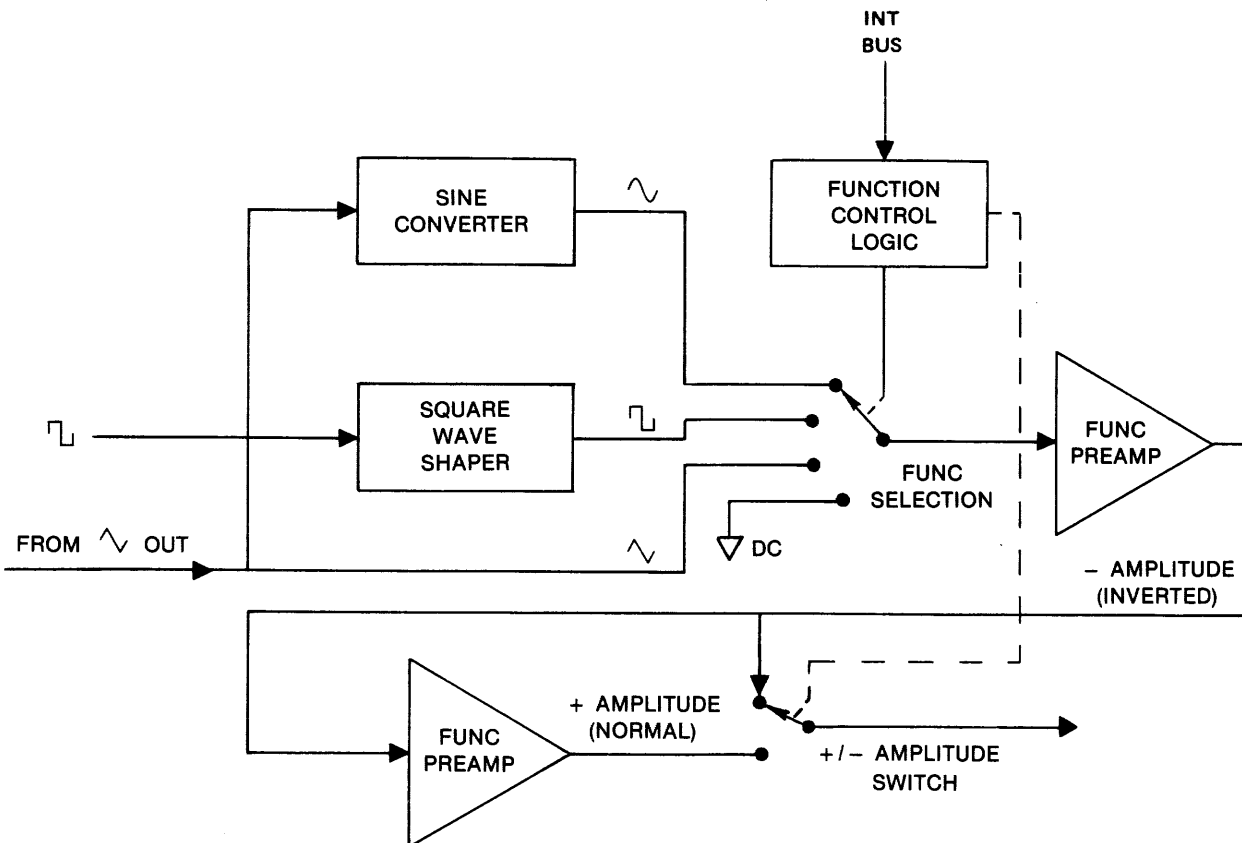


Figure 4-6. Function/Preamp Block Diagram

4.6 POWER AMPLIFIER/DC OFFSET

As controlled by logic, the Power Amplifier/DC Offset board (see figures 4-3 and 4-7) amplifies the three-digit attenuated signal by the amount corresponding to the amplitude range value; dc offsets the signal, connects or disconnects the signal from the output BNC and connects or disconnects an internal load termination. The input to the board is the three-digit accurate signal (X.XX) from the Three-Digit Attenuator board and internal bus logic. The output is the finally processed signal to the output BNC connector.

The three-digit signal is amplified and offset (if required) at the power amplifier circuit. The three-digit value of offset (X.XX) is logic controlled as is the positive or negative direction of offset. The sum of offset and signal amplitude is amplified to 15 volts peak (30V p-p), then attenuated to the logic controlled range value. The range value is logic selected to be the greater of amplitude or offset programmed range. The output signal is then output and loaded according to control logic.

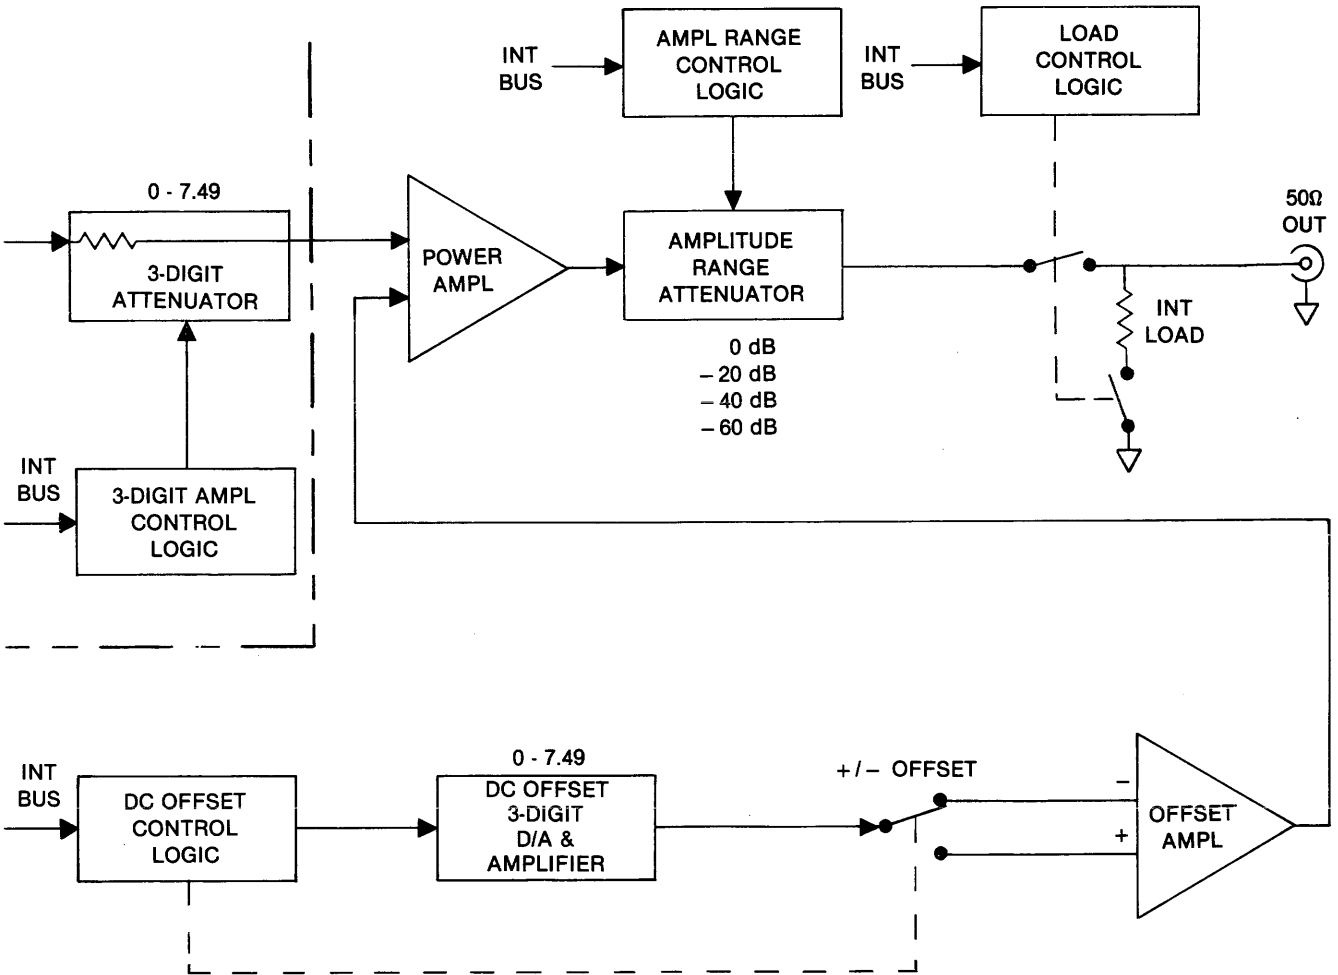


Figure 4-7. Three-Digit Attenuator and Power Amplifier/DC Offset Block Diagram

4.7 SYNTHESIZER (An Option)

The synthesizer (see figure 4-3: Digit 1/Mixer, Digits 2 and 3, Digits 4 and 5/Reference boards) provides 1 to 12.999 MHz with five-digit accuracy. The function generator circuit is phase locked to multiples of the synthesizer output for waveform functions with five-digit frequency accuracy. Four phase locked loops (PLL's) are connected together along with a mixing system and a reference section of the required fixed frequencies to make up the synthesizer. These sections are packaged as Digit 1/Mixer board, Digits 2 and 3 board and Digits 4 and 5/Reference board.

Figure 4-8 is the block diagram of a simple PLL. The output frequency is to be exactly some multiple of the reference frequency (f_r). The output frequency of the voltage controlled Variable Frequency Oscillator (VCO) is divided by a digital counter circuit. The output frequency of the divide by N ($\div N$) is compared with the reference frequency (f_r) by a frequency phase detector. If the frequency and/or phase of the two signals differ, an error voltage is generated which causes the VCO to change its frequency, moving in the proper direction to correct for the error. There is an integrator/Low Pass Filter (LPF) between the phase detector output and the VCO to eliminate high fre-

quencies out of the detector and to insure loop stability. The output frequency is the reference frequency multiplied by the $\div N$ ratio.

Figure 4-9 is a block diagram of the digit 1 PLL of the five-digit synthesizer. The output of this loop goes from 35 to 47 MHz, as the most significant digit of the synthesizer output frequency is varied from 0 to 12 MHz. This block diagram is different from figure 4-8 in that there is a fixed $\div 2$ ahead of the programmable divider. This makes the total $\div N$ ratio twice that of the programmable divider alone. If the total synthesizer output is required to be 10,000 MHz, then the digit 1 loop output will be 45 MHz. The number 10 will be loaded into the programmable divider in Binary Coded Decimal (BCD) form by the logic interface portion of the 172B. The programmable divider translates this number 10 into the divider ratio 45 with a PROM look-up table. The programmable divider ratio 45, together with the fixed divide by 2, gives a total $\div N$ of 90. The 500 kHz reference frequency multiplied by 90 gives an output frequency of 45 MHz. The programmable divider alone, and a 1 MHz reference frequency, would give the same results; the $\div 2$ is used to allow a lower maximum operating frequency for the programmable divider.


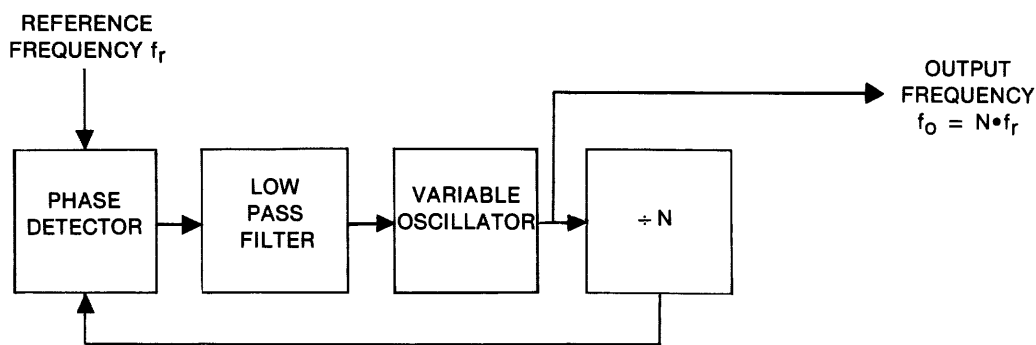


Figure 4-8. Simple Phase Lock Loop Block Diagram

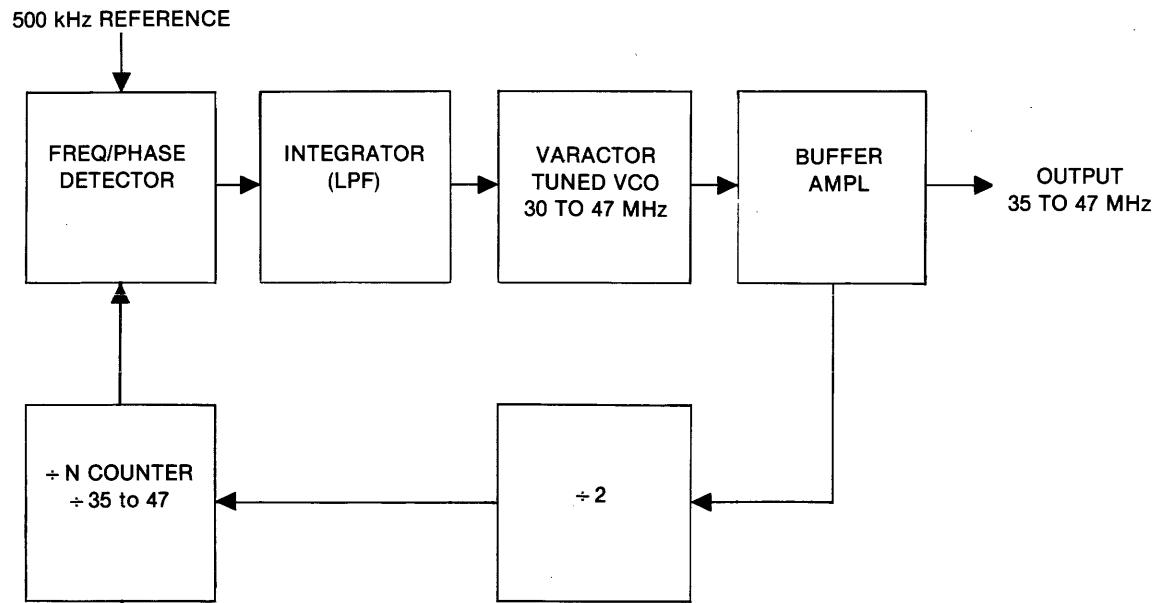

NOTE

- | | |
|-------------------------------|-------------------|
| 1. Programmed Frequency Digit | XX.XXXX 1 2345 |
| 2. 1st Digit | 0 1 2....12 |
| Divider (+ N) | 35 36 37....47 |
| Output (MHz) | 35 36 37....47 |

Figure 4-9. Digit 1 PLL (Part of Digit 1/Mixer Board) Block Diagram

Figure 4-10 shows a slightly more complex PLL. In this loop, the VCO output is translated to a different frequency range before being divided by the + N counter. A bandpass filter follows a mixer to select either the resulting sum or difference frequency. This form of loop causes the VCO output to be different from N times the reference frequency by a fixed offset. Mathematically expressed, $f_o = Nf_r \pm f_m$.

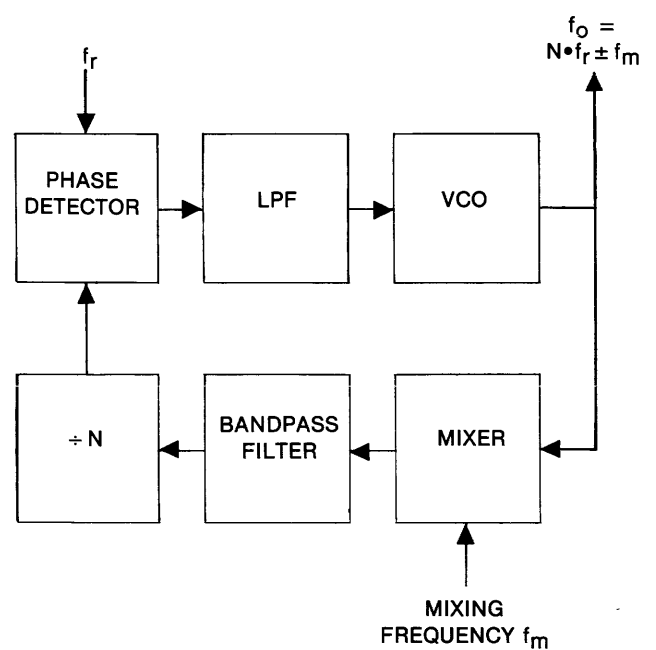


Figure 4-10. PLL With Mixer Block Diagram

Figure 4-11 shows the block diagram for digits 4 and 5 PLL. A fixed frequency of 60.0 MHz from the reference subsection is mixed with the 40 to 50 MHz VCO. The difference frequency (10 to 20 MHz) is passed through a 30 MHz low pass filter into a buffer amplifier. The amplified signal drives the divide by N counter, which divides the input frequency by a number ranging from 100 to 199, depending on the frequency setting of digits 4 and 5. The $\div N$ output is compared with a 100 kHz signal from the reference board in the phase detector. If there is a phase error, the phase detector will output a voltage pulse to the integrator which will change its output in the proper direction to reduce the VCO frequency error towards zero. The 4.01 to 50 MHz

VCO output is divided by 100 to provide the desired 401 to 500 kHz output. The final 401 to 500 kHz output varies in 1 kHz steps as the $\div N$ ratio varies from 100 to 199. To obtain 500 kHz out, the required VCO frequency is 50 MHz. This mixes with the 60.0 MHz reference to produce a 10.0 MHz difference frequency. Digits 4 and 5 will both be zero in the case of a 500 kHz output, so the $\div N$ ratio will be 100. Dividing 10 MHz difference frequency by 100 will produce 100 kHz to compare with the 100 kHz reference. If digits 4 and 5 are set to 99, the $\div N$ becomes 199, and the VCO will be forced to 40.1 MHz, which will mix with 60 MHz to produce a 19.9 MHz difference frequency. The 40.1 MHz VCO will be divided by 100 to form the 401 kHz output.

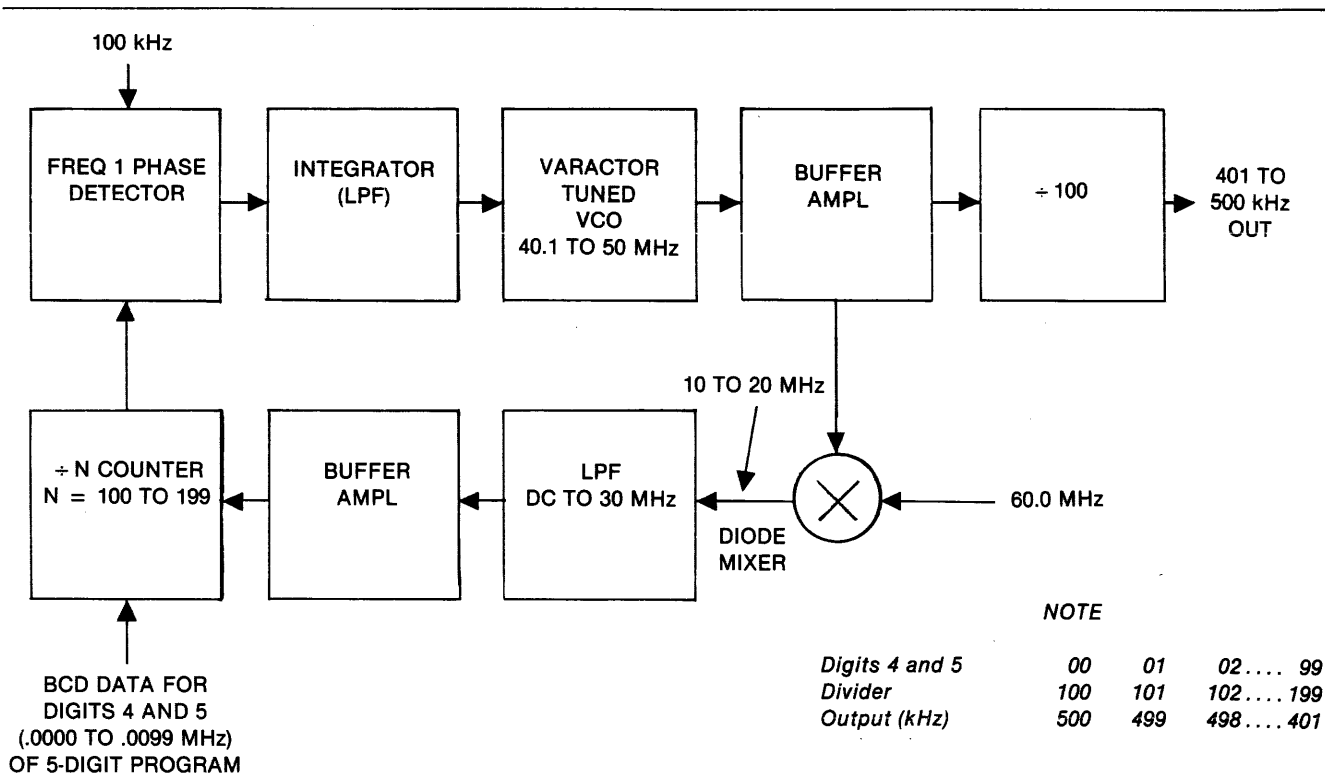


Figure 4-11. Digits 4 and 5 PLL (Part of Digits 4 and 5/Reference Board) Block Diagram

Figure 4-12 shows the digits 2 and 3 PLL. This loop is almost identical to the digits 4 and 5 PLL. The offset frequency is 60.401 to 60.500 MHz instead of 60.0 MHz and the $\div N$ counter ratio varies between 105 to 204 instead of 100 to 199. The VCO output is divided by 10 instead of 100, to form a 4 to 5 MHz output. If digits 4 and 5 are 00, the translation loop output to this loop will be 60.500 MHz. If digits 2 and 3 are 00, the $\div N$ ratio is 105. Under these conditions, the required VCO frequency is 50.0 MHz. This mixes with 60.5 MHz to produce a 10.5 MHz difference, which is divided by 105 in the $\div N$ to give a 100 kHz signal for the phase

detector. Thus, the final output, after division, will be 5.0000 MHz. If digits 4 and 5 are set to 99, the translation loop output is 60.401 MHz. In this case, the VCO output has to be 49.901 MHz to satisfy the loop conditions, and the final output will be 4.9901 MHz. If digits 2 and 3 are also set for 99, the $\div N$ ratio will be 204, and a 40.001 MHz signal will be required from the VCO to mix with the 60.401 MHz to produce the 20.400 MHz difference frequency into the $\div N$. In this case, the final output will be 4.0001. Thus, the output of this loop is seen to track changes in digits 4 and 5, as well as digits 2 and 3, which control the loop directly.

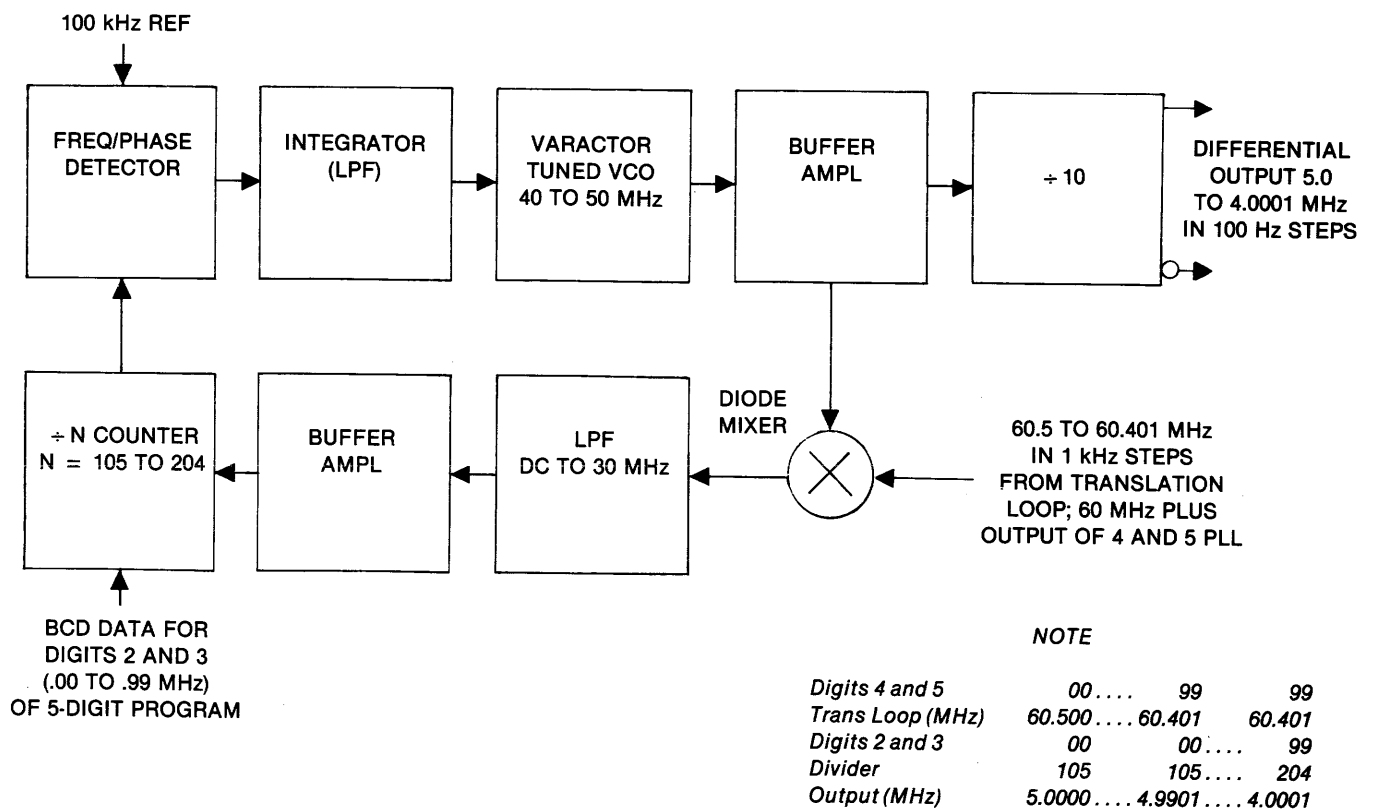


Figure 4-12. Digits 2 and 3 PLL (Part of Digits 2 and 3 Board) Block Diagram

Figure 4-13 is a block diagram of the translation loop. Its function is to produce a signal 60 MHz higher than the 401 to 500 kHz signal from digits 4 and 5 PLL (i.e., 60.401 to 60.500 MHz). In this loop there is no divide by N. The VCO output is mixed with a 60.0 MHz reference frequency and the difference frequency is selected by a low pass filter, buffered and applied directly to the frequency phase detector for comparison with the digits 4 and 5 output. The phase detector output drives the integrator to a voltage which sets the VCO to the proper frequency.

Figure 4-14 shows the mixer subsection and how the different loops connect together. As previously described, the digits 4 and 5 loop output is shifted upward to 60.401 to 60.500 MHz to drive the digits 2 and 3 loop. The output of the 2 and 3 loop varies from 4.0001 to 5.0000 MHz as a function of digits 2, 3, 4 and 5. This output is mixed with a 30.0 MHz signal in a double balanced modulator, and the sum of the two signals is selected by a 34 to 35 MHz bandpass filter. The output of this filter is mixed with the digit 1 loop output, 35 to 47 MHz, in a diode mixer and the difference frequency selected by a low pass filter. Take a frequency of 12.3456 MHz as an example. Digits 4 and 5 are set to 5 and 6, respectively. The output of the digits 4 and 5 PLL will be 444 kHz, and the translation loop will shift this up to 60.444 MHz. Digits 2 and 3 are set to 3 and 4; therefore, the output of the digits 2 and 3 PLL will be 4.6544 MHz, and, after mixing with 30.0 MHz, this will be 34.6544 MHz. Digit 1 is 12, so the output of the digit 1 PLL will be 47 MHz. This

47 MHz is mixed with 34.6544 and the difference is taken to form a 12.3456 MHz signal. This is the synthesizer section output which is then passed to the function generator. If the generator is set to the 1 to 13 MHz range, the function generator is phase locked directly to this signal. If the generator is on a lower range, the synthesizer output is divided by some power of 10 before the generator is locked to it.

Figure 4-15 is the block diagram of the reference subsystem. All reference frequencies are derived from a single, high stability, 10 MHz crystal controlled oscillator. This signal is multiplied by 3 to produce the 30 MHz reference, and this is then multiplied by 2 to form the 60 MHz reference. The 10 MHz is also divided by 20 to form a 500 kHz digital signal and this is divided by 5 to form a 100 kHz reference. If it is necessary to lock the synthesizer to an external 10 MHz system clock, the external clock is fed to a level detector/buffer amplifier. The output of the buffer amplifier and the internal 10 MHz oscillator are both fed to a phase detector, which in turn is fed to an integrator/low pass filter. If the external clock input is greater than 1 volt, a relay is closed automatically, connecting the integrator output to a variable capacitor for fine tuning the crystal oscillator. This locks the internal oscillator to the external system clock.

The block diagrams of figures 4-16 through 4-18 are printed circuit board oriented, showing which functions are related to what boards.

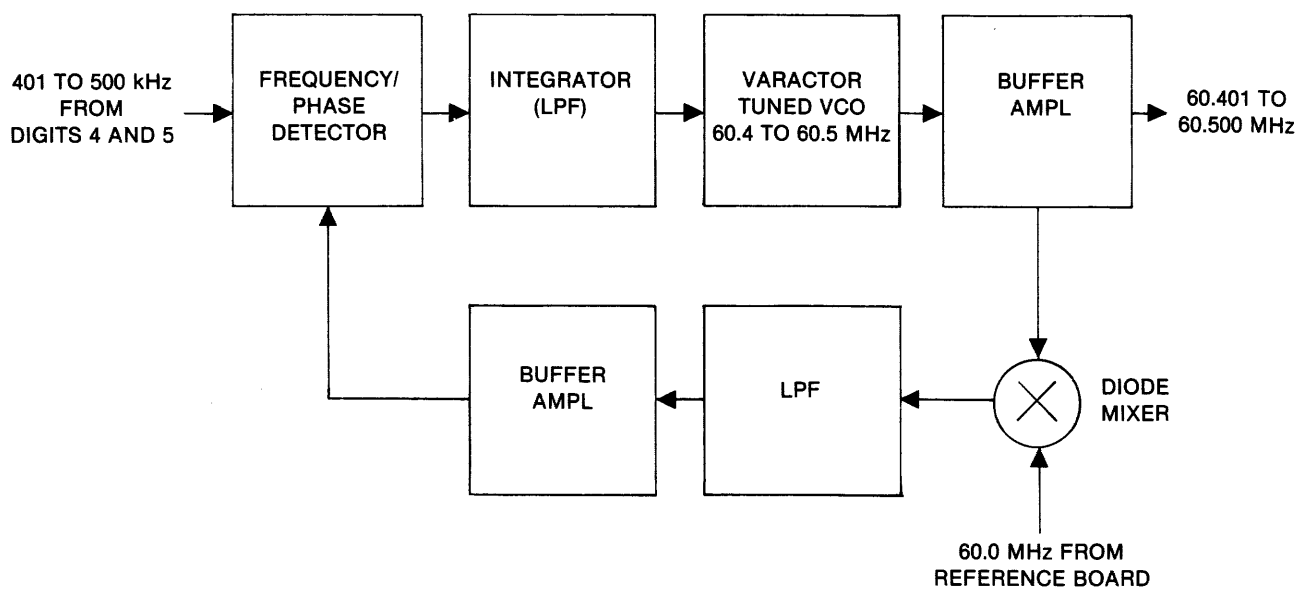


Figure 4-13. Translation Loop (Part of Digits 2 and 3 Board) Block Diagram

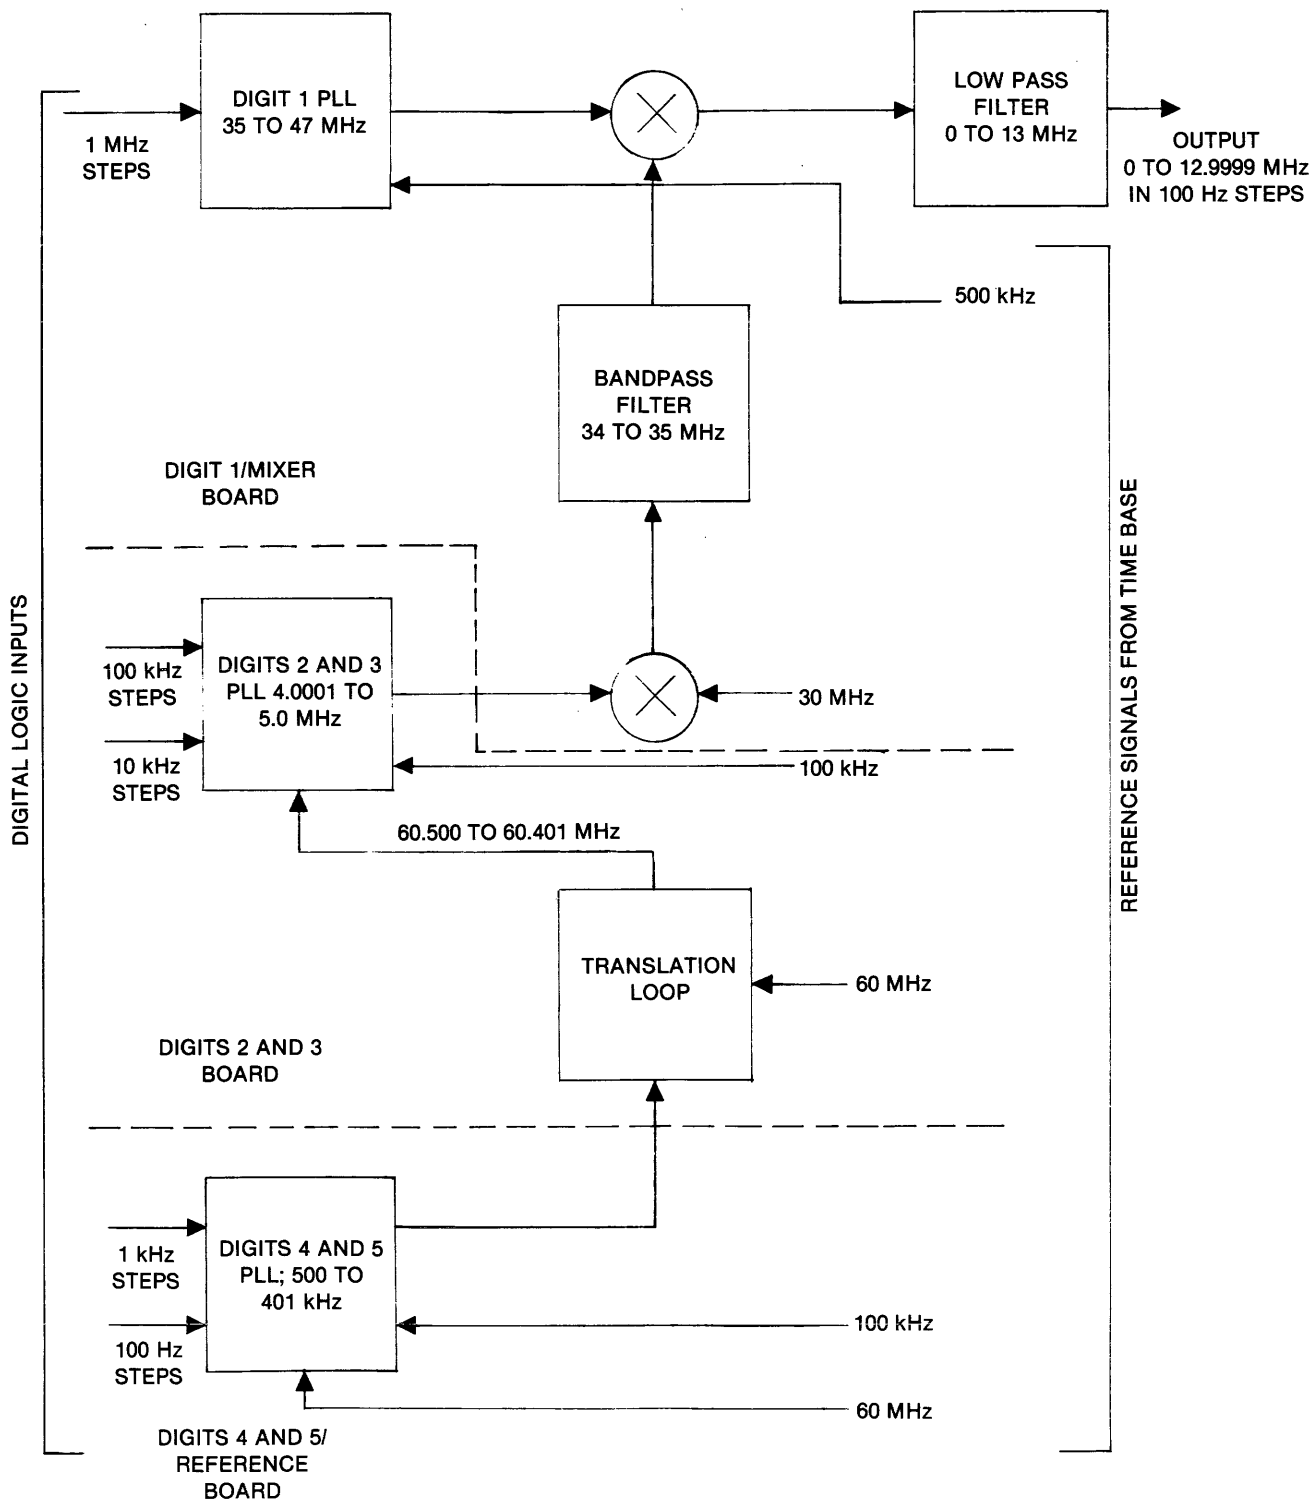


Figure 4-14. Synthesizer Block Diagram

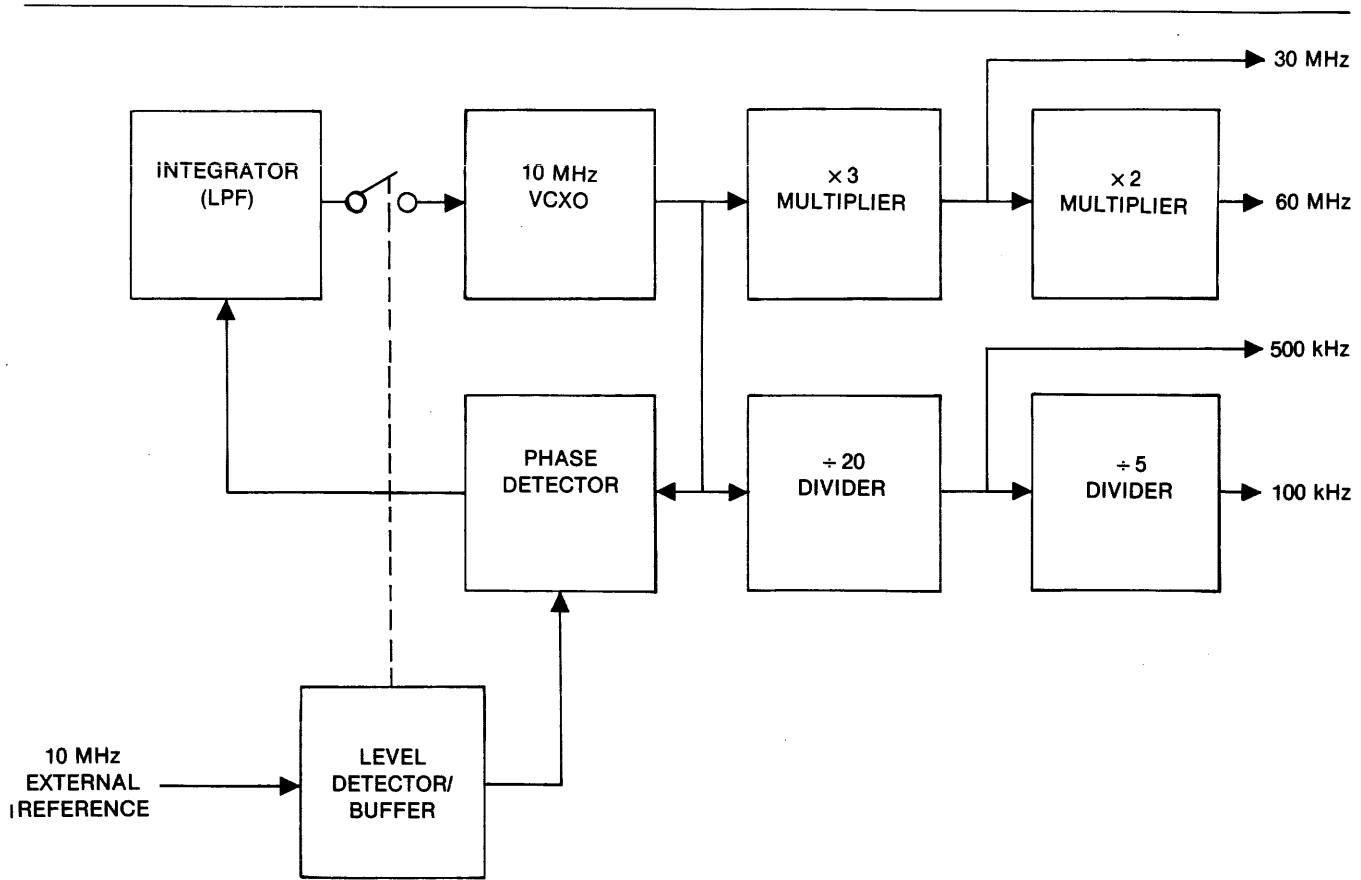


Figure 4-15. Reference Subsystem (Part of Digits 4 and 5/Reference Board) Block Diagram

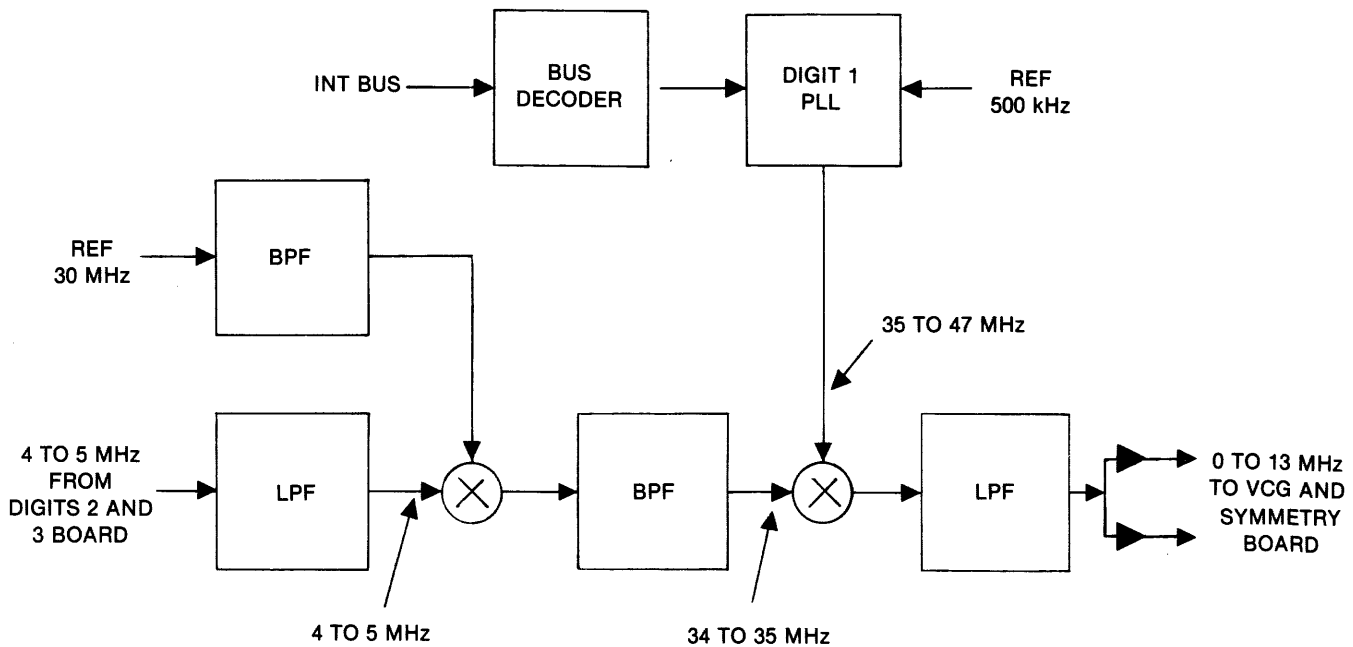


Figure 4-16. Digit 1/Mixer Block Diagram

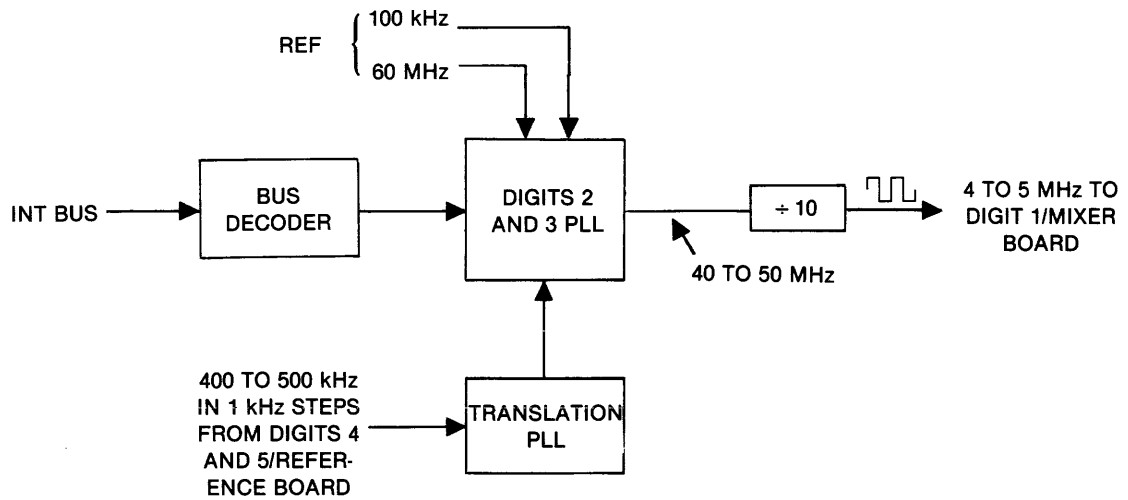


Figure 4-17. Digits 2 and 3 Block Diagram

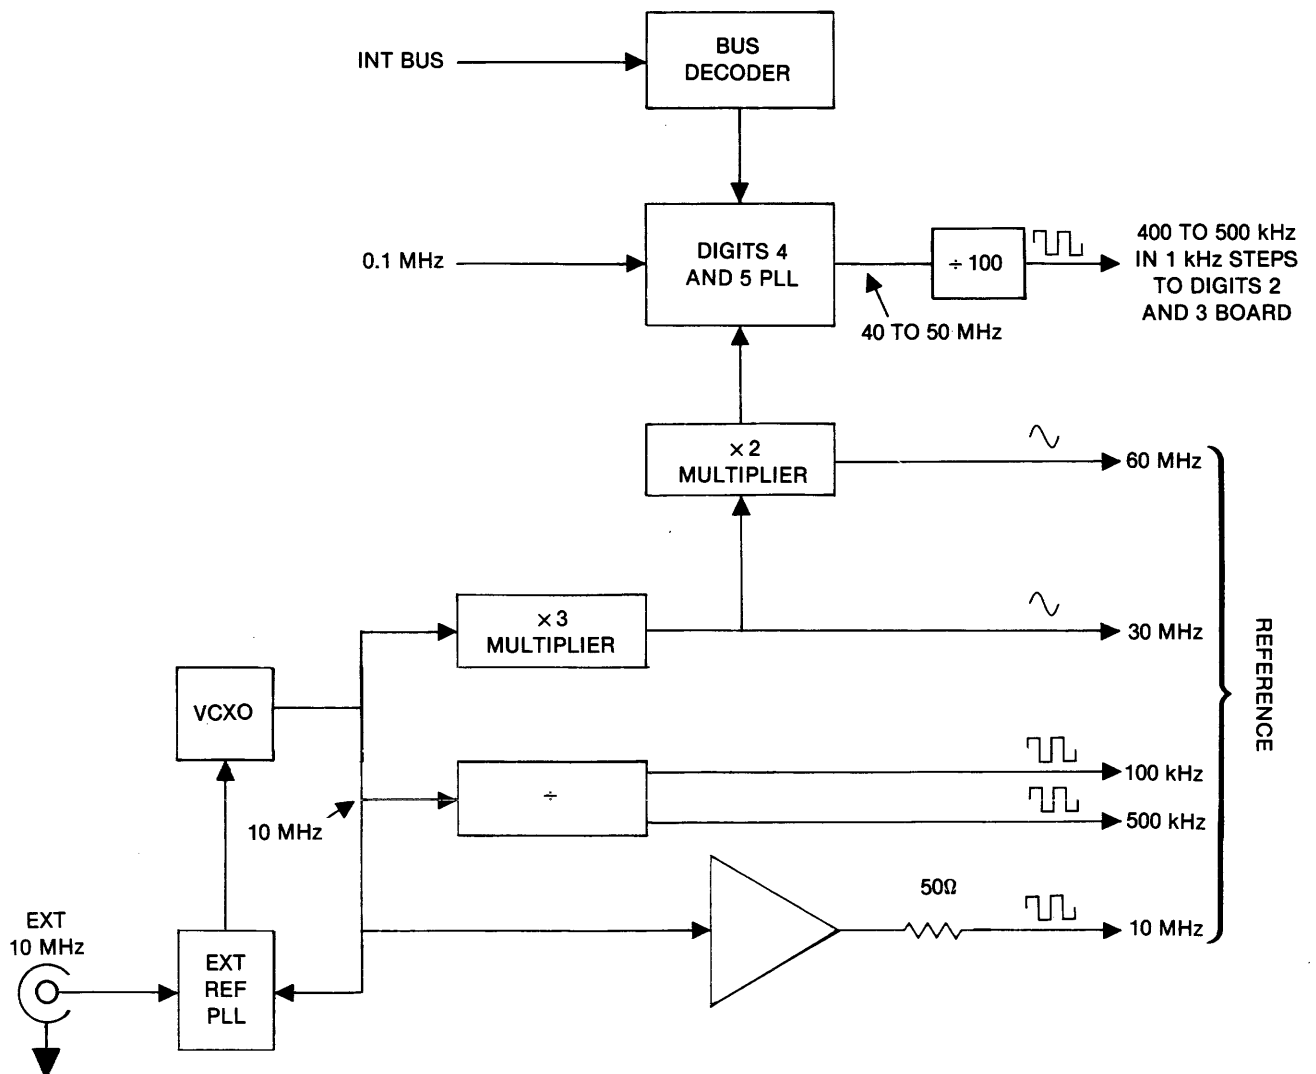


Figure 4-18. Digits 4 and 5/Reference Block Diagram

4.8 FRONT PANEL OPTION

The front panel (Option 001) contains a 46 key keyboard and a 40 character alphanumeric display to allow the user to manually program the 172B and to learn its status under both manual and remote programming. The front panel also contains the power on/off switch. The front panel assembly is connected electrically by two cables. One cable is on the power switch and can be disconnected near the front panel. The other cable carries the keyboard and display signals and is plugged into the mother board at connector J20. The front panel assembly consists of three subassemblies: the keyboard, the self-scan display and a PC board which interfaces to the microprocessor in the 172B. The microprocessor accesses the keyboard and display just as if they were read and write memory locations.

4.8.1 Keyboard

The keyboard itself consists of 46 printed circuit switches arranged in a 6×8 crosspoint array. The keyboard matrix is scanned by a keyboard encoder chip. When a contact closure is detected, the encoder stops scanning, provides a delay for contact bounce, latches a binary code onto its data output lines and provides a data ready strobe pulse. The output data is a binary number between 0 and 63 corresponding to the key depressed. When the keyboard contact closure is released, the encoder resumes scanning for the next closure. Periodically, the microprocessor, under program control, reads the encoder data output lines. The keyboard address is decoded on the microprocessor board and brought to the front panel as the keyboard out line. When this line is true, the encoder output is gated onto the 172B data bus lines, to be read by the microprocessor. The data ready strobe also triggers a 100 ms, 3 kHz audible tone each time a key is depressed.

4.8.2 Display

The display is a gas discharge device consisting of seven rows common to all character spaces, and 283 columns which are enabled consecutively, to display 40 characters on a 5×7 dot matrix, with two blank columns between characters. The display consists of a display panel and a driver board.

The information displayed on the front panel is stored in a Random Access Memory (RAM) located on the front panel PC board. Each character location on the display has a separate memory address into which the microprocessor can write. The six lower order ad-

dress lines from the 172B address bus are used by the RAM as the display space addresses 0 through 39; the higher order address bits are decoded on the microprocessor board and brought to the front panel as the display enable line. When this line is true, the word appearing on the data lines 0 through 5 is written into RAM at the address appearing on corresponding address lines. Whenever the RAM is not being written into, its contents are being read to the display. The display requires a 20 kHz clock signal, valid data inputs for each particular character space, as that space is being scanned, and scan disable and reset signals to start each scan of the panel.

4.9 MICROPROCESSOR (Microprocessor and Memory RAM Boards)

The microprocessor (see figure 4-19) acts as the central processing unit, receiving information from the GPIB, the keyboard and the 172B subsystems and acting on these inputs as dictated by the software. Software directs the processor to address the subsystems and issue commands and data which direct the 172B to output the desired signals.

Software refers to a sequence of commands executed by the internal microprocessor. This sequence of instructions stored in ROM commands the microprocessor to perform according to the 172B specification. The microprocessor is powerless without a program to run; therefore, the software is one of the most vital elements of the digital section. All information transfer takes place under the control or supervision of the software. Programs are composed of machine language instructions, messages and tables that provide sequencing information.

Program data from the ROM temporary data from the RAM and input data from the keyboard or GPIB are hooked up to the microprocessor through an interconnection bus on the mother board. Data from the microprocessor software is sent to the rest of the instrument via a scratch pad memory. Table 4-1 indicates the format of the contents of the scratch pad.

The two boards of the microprocessor section (microprocessor and memory RAM) may be installed in locations C, D or E (see figure 4-1). The cards receive and drive a 43 wire data bus terminated on the mother board.

4.9.1 Microprocessor Board

This board contains an eight bit processor, software in ROM, buffers, decoders and two I/O ports. Figure 4-19

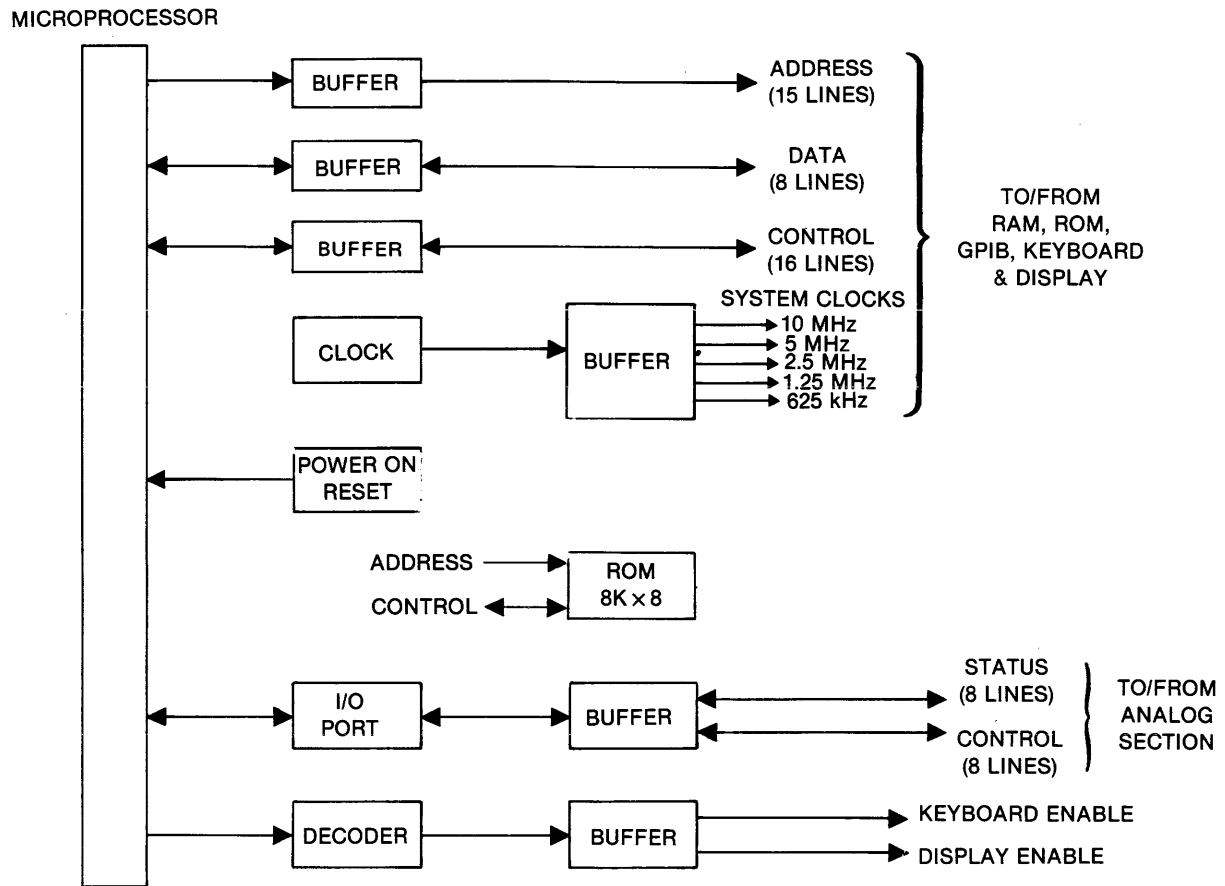


Figure 4-19. Microprocessor Board Block Diagram

shows the basic blocks of the microprocessor. Address lines are buffered to the mother board. Eight bi-directional data lines are received and driven to the mother board. Control signals necessary to describe the transaction are buffered to the mother board. Ten megahertz clock pulses are generated and buffered to the mother board. Clocks are available down to 625 kHz for other processor cards. All these signals are common to the processor section, but are not carried to the analog sections of the instrument (function generator and synthesizer).

Integrated circuit memories on ROM support the basic program in the 172B.

An I/O port generates eight control lines sent to the analog section of the instrument. These control lines are used to provide the microprocessor a facility to trigger the instrument or provide other control functions as options.

Eight status lines are sent to the microprocessor to indicate that a synthesizer has been installed and if the synthesizer is phase locked.

4.9.2 Memory RAM Board

The memory RAM board (see figure 4-20) contains 4096 eight bit bytes of volatile storage composed of eight 4K x 1 dynamic RAM chips. Refresh logic is located on this board with the logic necessary to arbitrate between a refresh cycle and a microprocessor cycle. In addition, the RAM board contains a 16 byte read/write scratch pad memory that transmits all data to the analog section of the instrument in 5 μ s.

The RAM address is set to 6000₁₆ through 6FFF₁₆. A read or write is initiated by the microprocessor by using an operation request within the address space 6000₁₆ to 6FFF₁₆. If a refresh cycle is not in progress, data are accepted or presented depending upon the transaction requested on the data bus and an operation acknowledge is asserted. Data are latched until accepted and the microprocessor has removed the operation request signal.

The RAM stores up to 240 complete instrument settings. The contents of the RAM are lost whenever power is shut down.

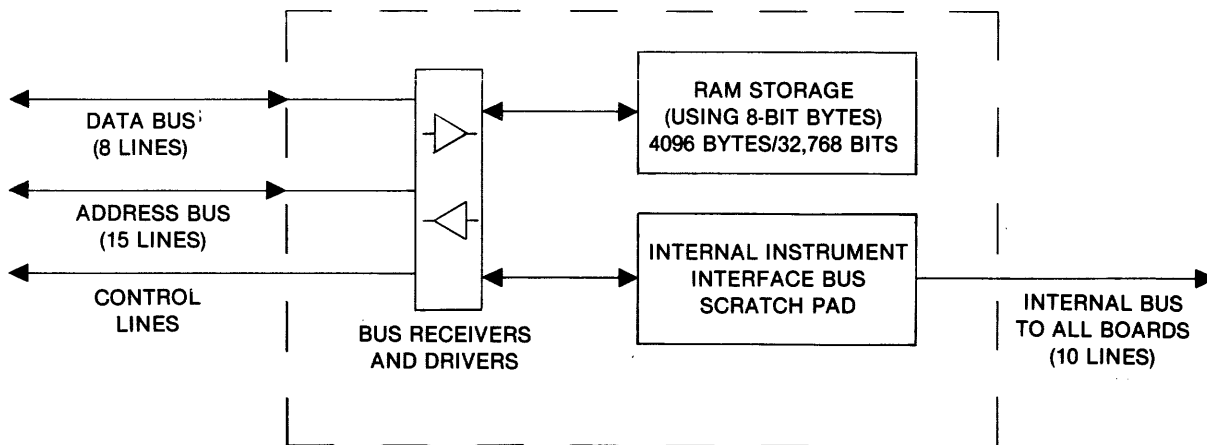


Figure 4-20. RAM (Random Access Memory) Writable and Readable for Data Storage Block Diagram

The RAM card includes a 16 byte scratch pad memory containing the data to be sent to the analog sections of the instrument. Data are transferred at a rate of four BCD characters per microsecond along with four address lines to all analog modules. Each line is terminated on the mother board. Scratch pad locations are accessed by the microprocessor and filled with properly formulated data for each analog module. Table 4-1 indicates the location of the data transferred to analog modules. All data are coded in four bit BCD digits. There is frequency and amplitude overranging in the most significant digits, as indicated by 12_{10} and 14_{10} , respectively, in table 4-1.

These values may differ from those transmitted to the instrument from a controller. The microprocessor selects its method of getting the output, then fills the scratch pad with properly formatted data. Data are sent to analog modules only when an execute command or GET is received.

4.9.3 Data Format

The internal data format for control parameters is as follows.

1. Offset — Three digits of offset are transferred with an allowable value in the range of 0 ± 7.49 . The amplitude range digit will determine the actual voltage range selected.

2. Frequency — Five digits of frequency plus one range digit and sign are transferred within $2 \mu\text{s}$. The function generator receives three digits from scratch pad locations 4 and 5 and one range digit plus sign bit. The synthesizer receives all five digits, but does not store the range digit. The most significant digit may be overranged to 12 on the 10^6 range for a maximum frequency of 12.9999 MHz. The range digit is the power-of-ten multiplier required (the decimal point follows the most significant digit).
3. Amplitude — Three digits of amplitude are transferred to the attenuator module and one digit to the power amplifier attenuator. Sign bits for amplitude and range digits are also transferred.

The MSD of amplitude may be overranged to a value of 14.99 by transferring a 14 in the most significant digit on the top range (10^0). Therefore, the amplitude value can extend from 0 to 999 and be overranged to 14.99. All digits are BCD coded, sign-magnitude fashion (3 digits). An asserted sign bit indicates a negative value. The value is not complemented if the sign bit is set.

4. Symmetry — A one digit value from 0 to 9 selects the symmetry required. Zero and five select 50%, while digits 1 through 9 select symmetries at 10% intervals.

Table 4-1. Scratch Pad Memory Format

| Data Sending Sequence | Address | | | | Sign Bit | | Data Byte | | | | | | | | | | | |
|-----------------------|----------------|----|------|----|----------|-------------|-----------|--------------------------------|----|----|-------------|--|---|----|----|----|---|--|
| | Group | | Byte | | S | Description | Data Byte | | | | Description | Description | | | | | | |
| | A3 | A2 | A1 | A0 | | | D7 | D6 | D5 | D4 | | | D3 | D2 | D1 | D0 | | |
| 0 | OFFSET (00) | 0 | 0 | 0 | 0 | 0 | + | 0 | 0 | 0 | 0 | DC OFFSET MSD 0 - 7 ₁₀ | 0 | 0 | 0 | 0 | DC OFFSET MD 0 - 9 ₁₀ | |
| 1 | | 0 | 0 | 0 | 1 | | | | | | | NOT USED | 0 | 0 | 0 | 0 | DC OFFSET LSD 0 - 9 ₁₀ | |
| 2 | | 0 | 0 | 1 | 0 | | | | | | | | NOT USED | | | | | NOT USED |
| 3 | | 0 | 0 | 1 | 1 | | | | | | | | NOT USED | | | | | NOT USED |
| 4 | FREQUENCY (01) | 0 | 1 | 0 | 0 | | | 0 | 0 | 0 | 0 | FREQUENCY MSD (5) 0 - 12 ₁₀ | 0 | 0 | 0 | 0 | FREQUENCY DIGIT (4) 0 - 9 ₁₀ | |
| 5 | | 0 | 1 | 0 | 1 | 0 | 1 | FREQ MULT + FREQ MULT - | 0 | 0 | 0 | 0 | FREQUENCY DIGIT (3) 0 - 9 ₁₀ | 0 | 0 | 0 | 0 | FREQ MULT 10 ⁻⁴ → 10 ⁰ → 10 ⁺⁶ |
| 6 | | 0 | 1 | 1 | 0 | | | | 0 | 0 | 0 | 0 | FREQUENCY DIGIT (2) 0 - 9 ₁₀ | 0 | 0 | 0 | 0 | FREQUENCY DIGIT (1) 0 - 9 ₁₀ |
| 7 | | 0 | 1 | 1 | 1 | | | | | | | | NOT USED | | | | | NOT USED |
| 8 | AMPLITUDE (10) | 1 | 0 | 0 | 0 | 0 | 1 | NORMAL INVERTED (OUTPUT) | 0 | 0 | 0 | 0 | AMPLITUDE MSD 0 - 14 ₁₀ | 0 | 0 | 0 | 0 | AMPLITUDE MD 0 - 9 |
| 9 | | 1 | 0 | 0 | 1 | 0 | | AMPL MULT + AMPL MULT - | 0 | 0 | 0 | 0 | AMPLITUDE LSD 0 - 9 ₁₀ | 0 | 0 | 0 | 0 | AMPL MULT 10 ⁰ → 10 ⁻³ 0 dB → -60 dB |
| A | | 1 | 0 | 1 | 0 | | | | | | | | NOT USED | | | | | NOT USED |
| B | | 1 | 0 | 1 | 1 | | | | | | | | NOT USED | | | | | NOT USED |
| C | MODE (11) | 1 | 1 | 0 | 0 | | | | 0 | 0 | 0 | 0 | Function SINE TRIANGLE SQUARE DC | 0 | 0 | 0 | 0 | Mode CONTINUOUS GATED TRIGGERED GATED HVRSN TRIG HVRSN SYNTHESIZE* EXT LOCK |

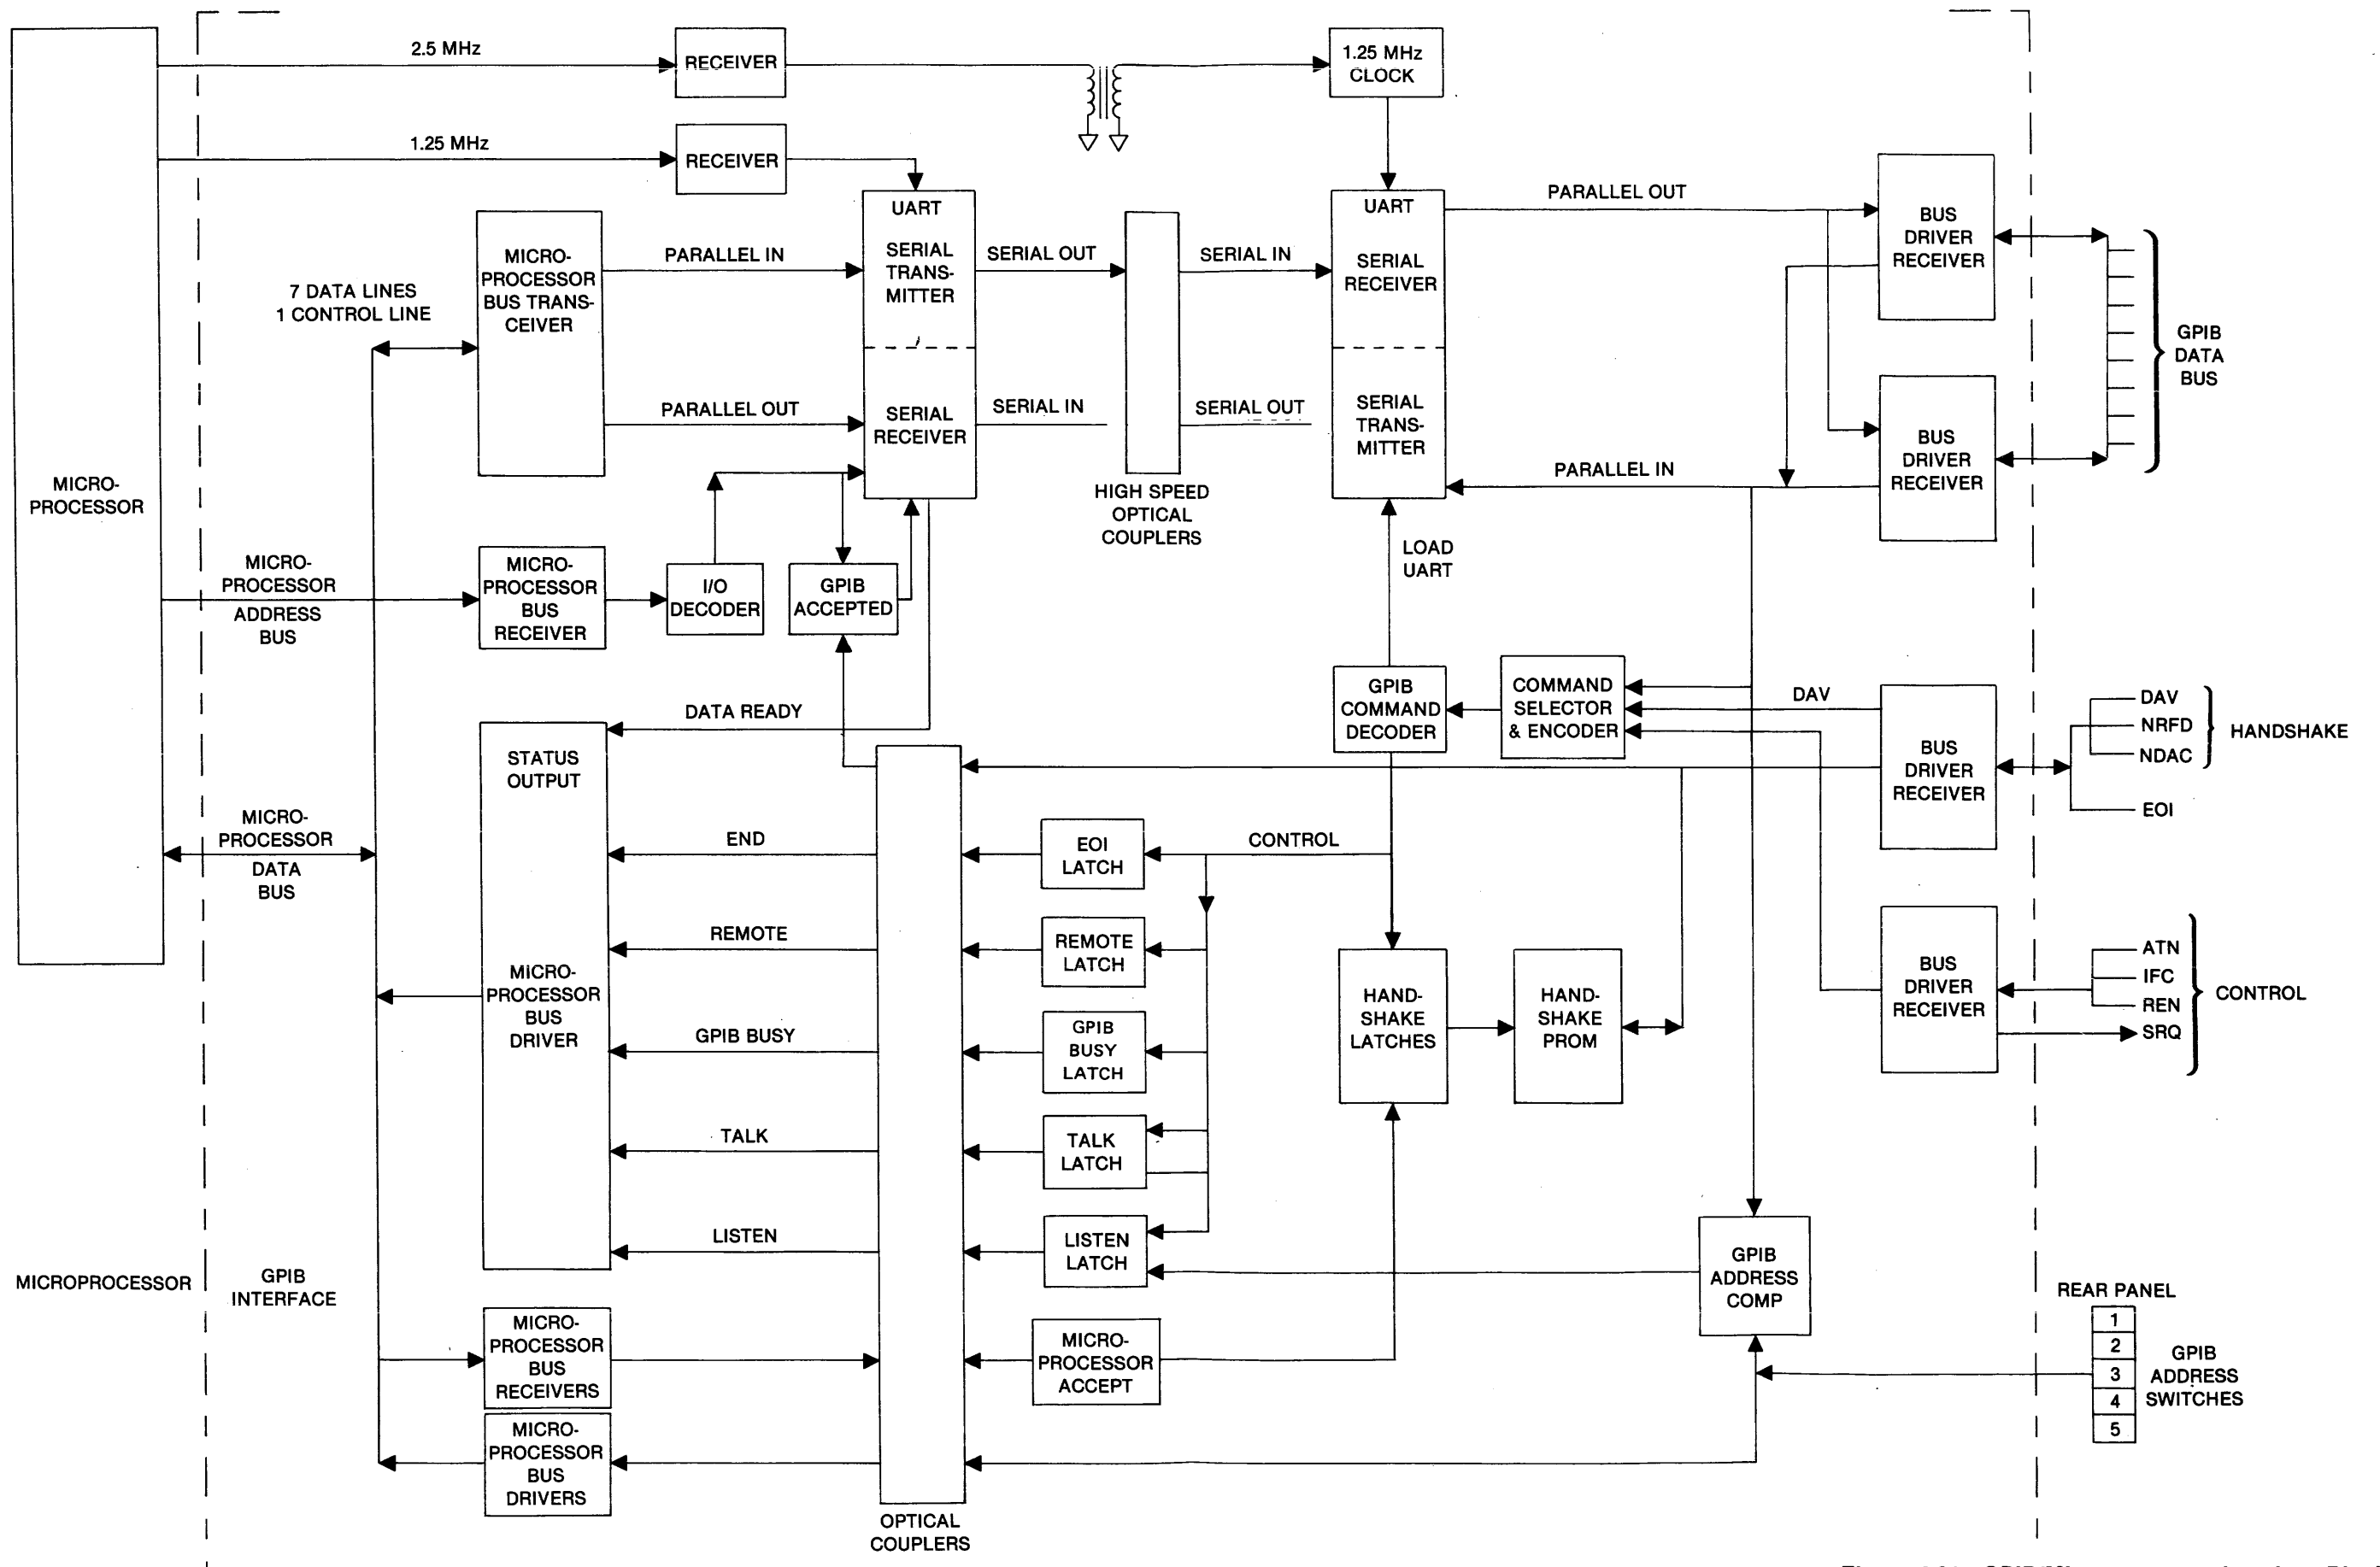


Figure 4-21. GPIB/Microprocessor Interface Block Diagram

and transmitter, and both of them may operate simultaneously. The UARTs are primarily used to convert parallel information into serial and serial information into parallel. The receiver receives its information in serial and converts it into an 8 bit parallel byte, whereas the transmitter converts an 8 bit parallel byte into bit serial output. The transfer rate of the serial output is determined by the clock frequency of the UART. Here the UART clock frequency is set at 1.25 MHz.

The interface completely insulates the microprocessor from GPIB and hence the microprocessor is relieved from the GPIB transactions. The microprocessor constantly monitors the status outputs from the interface and takes actions according to that. There are six status bits tied to the microprocessor data bus: Data Ready, GPIB Busy, End, Remote, Talk and Listen.

4.10.1 Data Ready

The Data Ready bit informs the microprocessor that the UART has received valid data from the GPIB. Only when this bit is true will the microprocessor read the byte from the UART.

4.10.2 GPIB Busy

The GPIB Busy bit is used during the talk mode to find out whether GPIB has accepted the data byte sent through the UART. Any time the microprocessor wants to send a byte via GPIB, first it checks that the Talk status bit is true and then it checks that GPIB Busy status bit is false. If the GPIB Busy status is false, then the microprocessor will load a byte into the UART and cause the GPIB Busy signal to go high (true). This prevents the microprocessor from loading any more bytes into the UART. The byte loaded into the UART is transmitted serially across the optocoupler to the GPIB side of the UART. When all the 8 bits of the byte are present, the data valid (DAV) line is set low. When the listener on the GPIB senses the DAV line is low, he accepts the byte by raising the data accepted (NDAC) signal high. The NDAC signal is received and causes the GPIB Busy signal to go low (false). Once the GPIB Busy signal goes low, the microprocessor can transmit another byte in the same manner.

4.10.3 End

The End bit is monitored by the microprocessor any time it reads a byte from the UART. If this bit is true, then the microprocessor assumes that it has received

the last byte of the message sequence and treats it as a terminating character.

4.10.4 Remote

The Remote bit indicates to the microprocessor whether the 172B is in remote control or local control.

4.10.5 Talk

The Talk bit will be set any time the 172B receives its assigned talk address. When the microprocessor senses this bit as true, it sends the appropriate talk message.

4.10.6 Listen

The Listen bit will be sent any time the 172B receives its assigned listen address. When the microprocessor senses this bit as true, it prepares to receive the data bytes through the UART.

4.10.7 Service Request

Service Request (SRQ) is a bit sent by the microprocessor to the GPIB when it wants to talk. The controller will eventually cause a talk status bit to be generated and allow the microprocessor to place a talk byte on the interface.

4.11 POWER SUPPLY

The power supply consists of the Pass Transistor board, the Power Supply Regulator board and the rear panel mounted transformer. The pass transistor board contains power transistors plus three IC regulators for the power supplies, while rectifier, regulator, reference and sensing circuits are on the regulator board.

The +24 volt voltage reference is a zener diode, and the -24 volt supply, in turn, uses the +24 volts as reference. (See figure 4-22.) The regulator sections are current limiting stages, which limit the power supply current under supply overload conditions. The + and -15 volt supplies (not shown in figure 4-22) operate in the same manner.

The +12, -5 and isolated +5 volt supplies (not shown in figure 4-22) use IC regulators located on the pass transistor board. The ground reference for the isolated +5 volt supply is isolated from common ground. System ground, isolated +5 volt ground and chassis ground are isolated from one another.

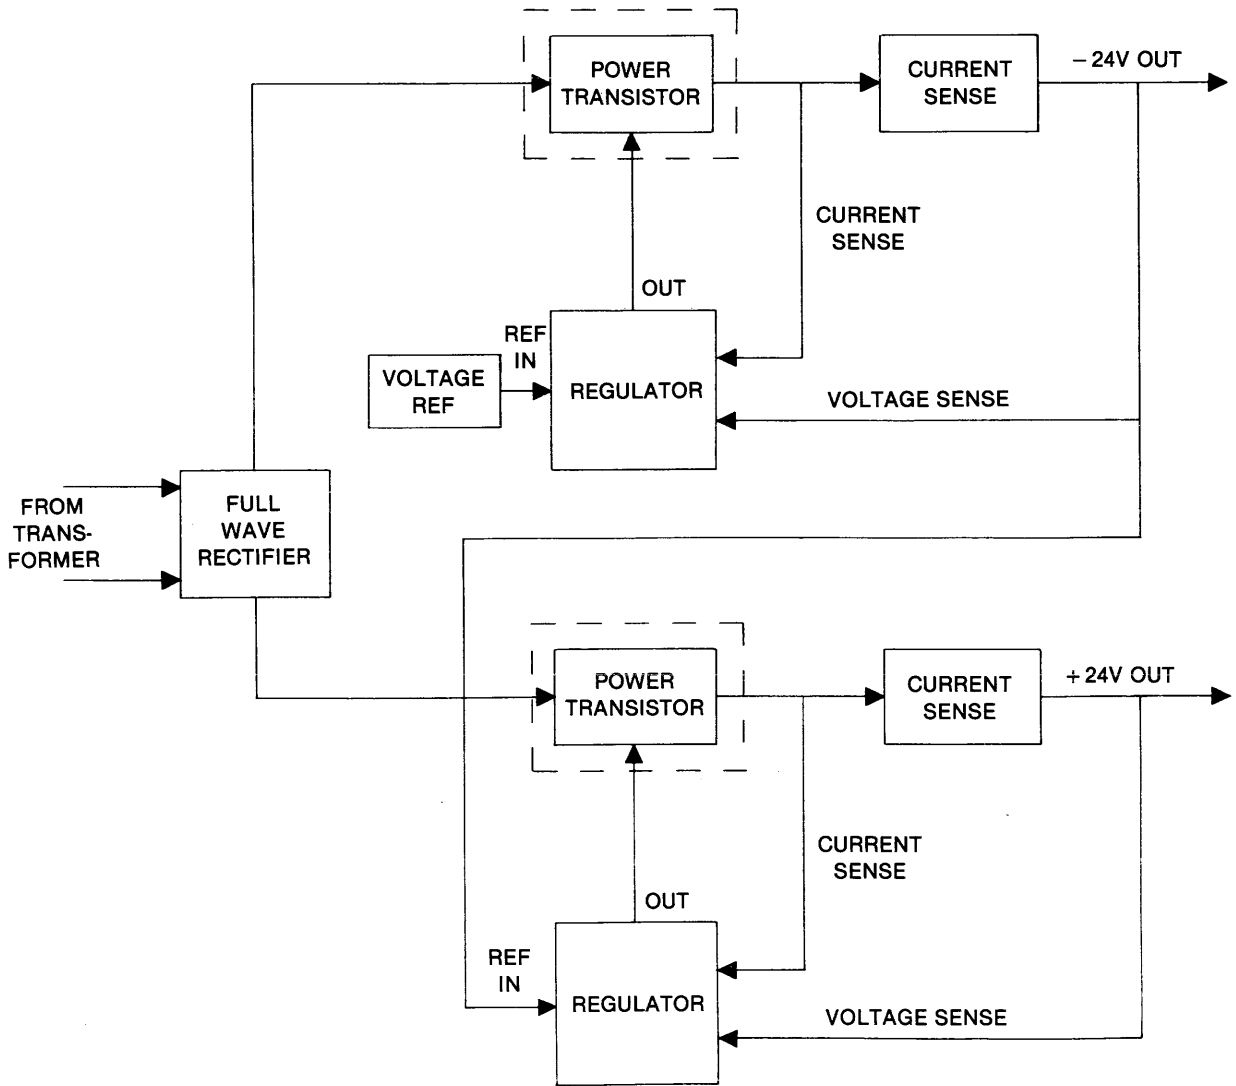


Figure 4-22. Power Supply Block Diagram

SECTION 5

TROUBLESHOOTING

5.1 INTRODUCTION

Faults may be isolated to circuit board, power supply or front panel. Familiarize yourself with the 172B by reviewing the operating procedures in this manual as well as the circuit descriptions. Successful fault isolation depends upon a thorough knowledge of the correct instrument operation.

Major groups of the various assemblies are shown in table 5-1. Fault isolation is discussed in the following paragraphs in terms of these groups. The locations of boards and assemblies called out in table 5-1 are shown in figure 4-1.

Table 5-1. Assembly Guide

| Board Ejector Color | Assembly | Group |
|---|--|--|
| Black Black NA | Pass Transistor/Regulator Power Supply Regulator Rear Panel (Transformer, Capacitors, etc.) | Power Supply |
| Yellow Green Blue Gray Violet | VCG and Symmetry Triangle Generator Function/Preamp Power Amplifier/DC Offset Three Digit Attenuator | Function Generator (function generator calibration usually required when any function generator board is replaced) |
| Orange Red Brown | Digit 1/Mixer Digits 2 and 3 Digits 4 and 5/Reference | Synthesizer (Option 002) |
| White White | Microprocessor Memory RAM | Microprocessor |
| White NA | GPIB Interface GPIB Decoder | GPIB Interface |
| NA | Front Panel | Front Panel (Option 001) |

5.2 POWER SUPPLY

In case the generator is malfunctioning, power supply voltage is always the first thing to be checked. Test points for all power supplies are on top edge of the power supply and regulator board. Table 5-2 shows the supply distribution to each PC board.

If the power supply voltage is found to be lower than normal, it indicates there is an overloaded or short circuit condition in the system. Turn off the generator immediately to avoid further damage. Remove all PC boards that use the overloaded supply. Use an ohmmeter to find the board having a short circuit condition by measuring the impedance between the ground and the supply line. If this is not successful, do the following. (This procedure is not recommended for the +5V supply.)

1. Monitor the supply voltage with a voltmeter at the Power Supply Regulator board.
2. From table 5-2, locate all the PC boards related to the overloaded supply.
3. Remove one of the boards and turn on the generator just long enough to make a voltage reading from the voltmeter.
4. If the supply voltage was back to normal, the removed board was the defective board.
5. If supply voltage is not back to normal after all the PC boards have been tested, possibly the regulator board itself is defective.

5.3 FUNCTION GENERATOR

If the generator is malfunctioning, first check the power supply voltages (refer to paragraph 5.2). Because some problems are due to the system being out of calibration, calibrate the function generator before troubleshooting (refer to paragraph 6.3). Troubleshoot using table 5-3.

Table 5-2. Power Distribution

| Board Ejector Color | Assembly | Power at Assembly Pin Number | | | | | | | | | | | | |
|---------------------|-------------------------------|------------------------------|----------------------|-------|-----------|------------|-----|---------------|-------|-------------------------------|-------|-------|-------|-------|
| | | +5 | +,-5 +,-12 COM | -5 | +5 ISO | GND ISO | +12 | -12 | +15 | +,-15 +,-24 -250 COM | -15 | +24 | -24 | -250 |
| Yellow | VCG and Symmetry | 19,20 | 22-24 | | | | | | 33,34 | 26-28 | 30,31 | 43 | 41 | |
| Green | Triangle Generator | 19,20 | 22-24 | | | | | | 33,34 | 26-28 | 30,31 | | | |
| Blue | Function/Preamp | 19,20 | 22-24 | | | | | | 33,34 | 26-28 | 30,31 | | | |
| Gray | Power Amplifier/ DC Offset | 19,20 | 22-24 | | | | | | 33,34 | 26-28 | 30,31 | 39,40 | 36,37 | |
| Violet | Three Digit Attenuator | 19,20 | 22-24 | | | | | | | | | | | |
| Orange | Digit 1/Mixer | 19,20 | 22-24 | 50 | | | | | 33,34 | 26-28 | 30,31 | | | |
| Red | Digits 2 and 3 | 19,20 | 22-24 | 50 | | | | | 33,34 | 26-28 | 30,31 | | | |
| Brown | Digits 4 and 5/ Reference | 19,20 | 22-24 | 50 | | | | | 33,34 | 26-28 | 30,31 | | | |
| White | Microprocessor | 49-52 | 1,2,99, 100 | | | | | | | | | | | |
| White | Memory RAM | 49-52 | 1,2,99, 100 | 53 | | | 3 | | | | | | | |
| White | GPIB Interface | 49-52 | 1,2,99, 100 | 63,78 | 62,77 | | | | | | | | | |
| NA | GPIB Decoder | | | | P17-20 | P17-19 | | | | | | | | |
| NA | Front Panel | J1-23 J2-1,2 | J1-21 J2-3,4 | | | | | J1-7 J2-24 | | | | | | J1-26 |

Table 5-3. Function Generator Troubleshooting

NOTE: This information is for frequency problems apparent while the generator is in open loop, continuous mode.

| Symptom | Further Observation | Probable Cause | Cure |
|--|--|---|--|
| 1. Frequency accuracy out of spec. Problem has to do with the three digit setting. | 1. Problem always happens at the same setting(s), between 1.00 and 9.99 of every frequency decade. | 1. Frequency D/A converter. 2. Frequency data latch. 3. Internal bus. | Replace VCG board. |
| | 2. All frequencies too high or too low. Waveform time symmetry normal. | 1. VCG gain control. 2. Triangle peak voltage too high or too low. | Replace VCG board or Triangle Generator board. |
| | 3. Waveform time symmetry also out of spec. | Current generator. | Replace VCG board. |
| | 4. Problem happens only at 1 to 13 MHz, or 100 kHz to 1 MHz. Also refer to Symptom 5. | Frequency compensation components. | Replace Triangle Generator board. |
| | 5. Triangle waveform also distorted. | 1. Frequency range switch. 2. Component connected to the triangle amplifier input. | Replace Triangle Generator board. |

Table 5-3. Function Generator Troubleshooting (Continued)

NOTE: This information is for frequency problems apparent while the generator is in open loop, continuous mode.

| Symptom | Further Observation | Probable Cause | Cure |
|---|---|--|---|
| 2. Frequency accuracy out of spec. Problem has to do with the range multiplier. | 1. Out of spec at one particular frequency decade, but greater than 0.999 Hz. | 1. Frequency range switches or capacitors. 2. Frequency range data latch or decoder. | Replace Triangle Generator board. |
| | 2. Less than 0.999 Hz. | 1. Capacitance multiplier. 2. Frequency range data latch or decoder. | Replace Triangle Generator board. |
| 3. Time symmetry out of spec. | 1. Triangle waveform also nonlinear. | 1. Frequency range switches. 2. Component connected to the triangle amplifier input. | Replace Triangle Generator board. |
| | 2. Triangle waveform linear. | 1. Current generator. 2. Current mirror circuit. | Replace Triangle Generator board. |
| | 3. Time symmetry problem only at frequency 0.999 Hz or less. | Capacitance multiplier circuit. | Replace Triangle Generator board. |
| 4. Low frequency (<100 kHz) sine distortion out of spec. | 1. Time symmetry also out of spec. | Refer to Symptom 3 for time symmetry problem. | Replace Triangle Generator board. |
| | 2. Nonlinear triangle waveform. | Refer to Symptom 1(5). | Replace Triangle Generator board. |
| | 3. Triangle waveform appears to be good. | Sine converter circuit. | Replace Function/Preamp board. |
| | 4. All waveforms are badly distorted. | Preamp or power amplifier. | Replace Function/Preamp board or Power Ampl/Offset board. |
| 5. High frequency (>100 kHz) sine distortion out of spec. | 1. Frequency accuracy out of spec at frequency >1 MHz. | 1. Current generator is saturated. 2. Current mirror circuit is saturated. 3. Refer to Symptom 1(4). | Replace VCG board or Triangle Generator board. |
| | 2. Square wave has excess overshoot or slow rise time. | Preamp or power amplifier. | Replace Function/Preamp board or Power Ampl/Offset board. |
| | 3. Square wave ok, but badly distorted triangle. | Triangle amplifier No. 1 or No. 2. | Replace Triangle Generator board. |
| | 4. Otherwise. | Sine converter. | Replace Function/Preamp board. |

Table 5-3. Function Generator Troubleshooting (Continued)

NOTE: This information is for frequency problems apparent while the generator is in open loop, continuous mode.

| Symptom | Further Observation | Probable Cause | Cure |
|--|--|---|--|
| 6. Amplitude accuracy out of spec at 1 kHz. | 1. All waveform amplitudes out of spec between 1V p-p and 15V p-p. | 1. Three digit attenuator. 2. Internal bus. | Replace Attenuator board. |
| | 2. Ratio is not correct when amplitude is ranging from 9.99, 0.999, 0.0999 to 0.00999V p-p. | 1. Output attenuator. 2. Attenuator control logic. 3. Internal bus. | Replace Power Ampl/ Offset board. |
| | 3. Inverting output (" - " amplitude) ok, but not normal output (" + " amplitude). | 1. Noninverting amplifier. 2. Relay. | Replace Function/ Preamp board. |
| | 4. Square wave amplitude out of spec. | Square wave shaper circuit. | Replace Function/ Preamp board. |
| | 5. Triangle wave amplitude out of spec. | Gain control resistors. | Replace Function/ Preamp board. |
| | 6. Excess amplitude roll off at high frequency. | 1. Frequency compensation components. 2. Frequency compensation components in power amplifier. | Replace Function/ Preamp board. Replace Power Ampl/ Offset board. |
| 7. DC offset problem. | | 1. DC offset circuit. 2. Offset control logic. 3. Internal bus. | Replace Power Ampl/ Offset board. |
| 8. Trigger and gate problem. | | Trigger logic and trigger amplifier. | Replace Triangle Generator board. |
| 9. No waveform output at 50Ω OUT. | 1. Voltage at 50Ω OUT is saturated to maximum positive or negative. SYNC OUT is normal. | 1. Power amplifier. 2. Function/preamp. | Replace Power Ampl/ Offset board. Replace Function/ Preamp board. |
| | 2. SYNC OUT is normal and dc voltage at 50Ω OUT is normal when dc voltage is selected. | Waveform switching relay and control logic. | Replace Function/ Preamp board. |
| | 3. No SYNC OUT when continuous mode is selected. | 1. Triangle generator loop. 2. Current mirror circuit. 3. Current generator. | Replace Triangle Generator board. Replace VCG board. |
| | 4. Generator runs if diode CR15 in Hysteresis Switch subassy of Triangle Generator board is removed. | 1. Trigger circuit. 2. GEN MODE control logic. | Replace Triangle Generator board. |
| 10. Output waveform is not the waveform programmed. | No other programming error. | 1. Function selecting relay. 2. Function control logic. 3. Internal bus. | Replace Function/ Preamp board. |
| 11. Generator frequency does not lock to external frequency. | 1. Phase not locked at all frequencies. | 1. Generator frequency is not within ± 2% of external frequency. 2. Phase detector or filter. 3. Input circuit. | Change the generator frequency. Replace VCG board. |
| | 2. No phase lock at a frequency range. | Loop filter selection circuit. | Replace VCG board. |

5.4 INTERNAL DATA BUS

All the internal programming data sent to the function generator and the frequency synthesizer sections are sent in multiplex fashion through the 14 internal bus lines. It takes only one defective bus receiver, 74LS139 or 74LS175, to hang up an entire line. A

Table 5-4. Internal Data Bus Location

| Description | Bus Line | Pin No.* |
|-------------|----------|----------|
| Strobe | STRB | 1 |
| | A3 | 2 |
| Data Group | A2 | 3 |
| | A1 | 4 |
| Sign | A0 | 5 |
| | S | 6 |
| | D7 | 7 |
| | D6 | 8 |
| Data Byte | D5 | 9 |
| | D4 | 10 |
| | D3 | 11 |
| | D2 | 12 |
| | D1 | 13 |
| | D0 | 14 |

NOTE

Table 4-2 describes the data content of each line on the internal data bus.

*PC-to-Mother board connector (Function Generator or Synthesizer boards).

defective receiver can cause incorrect generator responses everywhere.

When the bus is not sending data, no EXECUTE command, the voltage at each bus is biased to approximately +3 volts. If the bus voltage is greater than +4 volts, or less than +2 volts, there is a defective bus receiver or driver on the line. The defective component can be located by removing one board at a time. The bus voltage will be back to normal when the defective board is removed. Table 5-4 gives the bus location.

5.5 SYNTHESIZER

When the 172B output frequency is incorrect in the synthesizer mode, the problem may be on one of the three synthesizer boards, or, it may be in the function generator section. The following checks in table 5-5 can be made external to the 172B with a frequency counter.

NOTE

Tests in the synthesizer mode are done on the 1 to 13 MHz range for two reasons. The natural output of the synthesizer is 1 to 13 MHz, so there is less chance of confusion; and the frequency counter will give high resolution readings with minimum gate time on this range.

Table 5-5. Synthesizer Troubleshooting

| Symptom | Discussion |
|---|--|
| <p>1. The function generator output frequency is correct on the 1 to 12.9999 MHz range, but is not correct on one or more lower ranges.</p> | <p>1. This indicates the synthesizer subassembly is functioning properly, and the problem is on the VCG board where the main function generator is phase locked to the synthesizer output.</p> <p>2. When a particular range and all lower ranges do not work, and all higher ranges do work, the problem is in the decade digital divider string on the VCG board.</p> |
| <p>2. The output frequency is wrong on the 1 to 12.9999 MHz range, but one or more of the lower ranges works.</p> | <p>Check the open loop frequency (continuous mode, B0). If this frequency is greater than 4% from the programmed frequency, the function generator frequency may be outside the capture range of the function generator phase lock loop (PPL). (Refer to paragraph 5.3.)</p> |
| <p>3. There is no change in frequency switching between continuous (B0) and synthesized (B3) modes.</p> | <p>The VCG board is not receiving the digital command to switch into the synthesized mode. Check the front panel to make sure the display is not indicating a programming error. If there is no programming error, refer to Internal Data Bus, paragraph 5.4. Frequency must be greater than 10 Hz.</p> |
| <p>4. The 172B does not operate properly in synthesized mode, but does in external phase lock (B6) mode (with the proper external signal provided).</p> | <p>The main generator phase lock circuitry is operating properly and the problem is likely to be in the synthesizer section. Refer to Symptom 6. A good frequency source for the external phase lock check is the 10 MHz reference output available on the rear panel of the 172B. A different frequency such as 1 MHz may be available from the frequency counter used for testing.</p> |
| <p>5. The synthesized frequency is off by a small, constant percentage error at all frequencies.</p> | <p>The error is in the synthesizer time base, which is an adjustment located on the Digits 4 and 5/Reference PC board; adjust or replace the board.</p> |
| <p>6. There is a failure within the synthesizer.</p> | <p>1. An indication of the specific failure location can be obtained by a careful study of the actual output frequencies for a range of input frequencies. For example: Programmed frequencies from 1.0000 MHz to 1.0067 MHz work properly. Programmed frequencies from 1.0068 MHz to 1.0099 MHz give an output frequency of 1.0067. This pattern then repeats: 1.0100 thru 1.0167 work properly and 1.0168 thru 1.0199 give an output of 1.0167 MHz. This pattern also repeats at any other frequency: the first three digits work properly and the fourth and fifth digit work properly when programmed between 00 and 67. Armed with these data, and a knowledge of the synthesizer structure (refer to the synthesizer block diagrams in Section 4), you may deduce the problem lines within the digits 4 and 5 PLL located on the Digits 4 and 5/Reference PC board, or the translation loop located on the Digits 2 and 3 Translation Loop PC board. With these particular symptoms, it is likely the Voltage Controlled Oscillator (VCO) frequency has shifted in the translation loop or digits 4 and 5 loop, and can be corrected with a simple calibration adjustment. Determining which of these two possible loops are bad requires going inside the 172B and measuring the actual output of digits 4 and 5.</p> <p>If spare boards are available, substitution will reveal which of the two is defective faster than making on board measurements.</p> <p>2. Another example: All programmed frequencies from 1.0000 thru 1.0099 MHz measure 1.0154 MHz; all programmed frequencies from 1.0100 thru 1.0199 measure 1.0254 MHz; all programmed frequencies from 1.0200 thru 1.0299 MHz measure 1.0354 MHz, etc. Again, the indications are that the digit 2, 3 loop and all following stages are operating correctly because the synthesizer follows each 10 kHz change in programmed frequency even though the output frequency is not correct. The digit 4, 5 loop or the translation loop is functioning incorrectly and outputting a single frequency instead of following the programming changes. Again with these symptoms, one of the two loops may have a defective component or the oscillator natural frequency may have shifted more than the loop can correct for, and repair consists of a simple calibration adjustment. Refer to the synthesizer calibration procedure.</p> |

5.6 MICROPROCESSOR

When microprocessor problems are suspected, always check the +5, -5 and +12V power supplies (refer to paragraph 5.2). If all voltages are present, use table 5-6 to troubleshoot. Replace board assemblies one at a time, until the problem is eliminated.

5.7 GPIB INTERFACE

Because the 172B has more than one programming channel (GPIB and front panel), it is relatively easy to isolate interface problems. (Refer to table 5-7.)

5.8 FRONT PANEL

The front panel assembly contains circuitry for two distinct functions; display and keyboard, both communicating with the microprocessor through the data and address busses. Because of the intimate relationship of the front panel and microprocessor, it can be difficult to isolate a problem to a particular area. (Refer to table 5-8 for troubleshooting hints.)

Table 5-6. Microprocessor Troubleshooting

| Symptom | Possible Cure |
|--|---|
| 1. 172B will not power up. | 1. Replace RAM board. 2. Replace Microprocessor board. |
| 2. 172B powers up, but gives ERROR when key is pressed. | 1. Replace RAM board. 2. Replace Microprocessor board. |
| 3. 172B powers up with ERROR in left margin. | 1. Replace Microprocessor board. 2. Replace RAM board. |
| 4. 172B powers up and reads different GPIB address other than the setting. | 1. Check the isolated +5V (refer to paragraph 5.2). 2. Replace GPIB Interface board. |
| 5. 172B will not talk or listen on GPIB. | 1. Correct the listen address setting on rear panel. 2. Check the isolated +5V (refer to paragraph 5.2). 3. Replace GPIB Interface board. |
| 6. While running, 172B resets itself and displays "WAVETEK MODEL 172B". | 1. Replace Microprocessor board. 2. Replace RAM board. |

Table 5-7. GPIB Interface Troubleshooting

| Symptom | Discussion |
|---|--|
| 1. When addressed as a listener or talker, the 172B does not display an L or T on the right-hand corner of the display. | Find the GPIB listen and talk addresses by pushing the ADR key. They will be displayed. Program the controller to send the listen address. (The HP 9825 controller message is wrt 7xx, where xx is the 172B address.) L, or RL, should appear on the right-hand corner of the display; if not, the malfunction is in the GPIB Interface board. The talk address problem is similarly dealt with. |
| 2. Displayed parameter values differ from GPIB programmed values. | Use the CMD RCL key to display the programming received by the post-interface circuits. If this differs from GPIB programmed values, duplicate the programming by using the front panel controls. Correct display isolates the malfunction to the GPIB Interface board. |

Table 5-8. Front Panel Troubleshooting

CAUTION: There is high voltage (– 250 volts) present in the front panel.

| Symptom | Discussion |
|--|---|
| <p>1. When power is first turned on, the front panel readout displays "SELF TEST". After a short delay, the microprocessor commands the front panel to display "WAVETEK 172B". The message is not displayed.</p> | <p>If this message never appears, the problem can be on any of the digital boards. Most likely it is not a front panel problem. While a front panel failure could cause the front panel not to accept data, it is much more likely the microprocessor never reached the portion of the operating program that causes the initial display. Replace the Microprocessor and Memory RAM boards one at a time. Test the 172B with each replacement.</p> |
| <p>2. After the turn-on delay, the initial random characters are replaced by another meaningless display.</p> | <p>The microprocessor is reaching the front panel. Examine this message carefully for clues as to the possible problem; for example, "V@VDTDJ062B" instead of "WAVETEK 172B" would indicate the "1" bit of the data word was hung in a false condition. This could be occurring in the front panel bus receivers, memory or in the display component itself. Another type of failure mode might be "WAWATE1717" indicating a hung "2" bit on the address lines driving the memory IC. In any case, the malfunction is most likely in the front panel.</p> |
| <p>3. The display is missing portions of characters or characters are jittering in position.</p> | <p>The problem is most likely the display component, although the – 250V regulator could be causing the flicker. Replace the front panel.</p> |
| <p>4. The keyboard "beeps" normally when a key is depressed, but the processor ignores it (no response on the display).</p> | <p>The problem may be in the front panel or in the microprocessor. Command the 172B via the GPIB and check for proper operation. If the 172B cannot be commanded by any means, the problem is most likely not in the front panel. A front panel address or data bus driver or receiver could fail in a manner to permanently hang a bus line, preventing the microprocessor from operating properly. Unplug the front panel from the mother board (J20), with power off. Turn power back on and again try to command the 172B via GPIB. If the 172B runs properly, the problem is in the front panel.</p> |
| <p>5. The keyboard fails to "beep", but commands the 172B properly.</p> | <p>The problem is in the circuitry associated with the audio sounder. Replace the front panel.</p> |
| <p>6. The keyboard neither beeps or commands the 172B, but 172B works properly with the GPIB interface.</p> | <p>The problem is with the keyboard encoder, or the keyboard membrane switch itself. Replace the front panel.</p> |

SECTION 6

CALIBRATION

6.1 INTRODUCTION

The following four calibration procedures may be used to totally align the 172B periodically, or they may be used individually to calibrate the functional group to which they apply. Individual procedures would be used in the case of a circuit board replacement or for out-of-spec operation of a particular functional group.

The completion of these calibration procedures returns the instrument to correct calibration. All limits and tolerances given in these procedures are calibration guides and should not be interpreted as instrument specifications. Instrument specifications are given in section 1 of this manual.

The functional groups are shown in table 5-1 with a listing and location of individual assemblies within the groups. The microprocessor group and the GPIB group require no calibration. The calibration procedures included herein are:

| | |
|------------------------------|---------------|
| Power Supply | paragraph 6.2 |
| Function Generator | paragraph 6.3 |
| Synthesizer | paragraph 6.4 |
| Front Panel | paragraph 6.5 |

Periodic calibration of all groups is needed because of component aging, which depends on the instrument on-time and environment. Use three months as an initial calibration period. If possible, keep records of parameter values and increase the time between calibrations as the records indicate.

In any case, the power supplies should be verified or adjusted before attempting any other calibration procedure or fault isolation.

The air inlet for the instrument cooling fan contains a filtering screen that must be cleaned periodically. To clean, remove the screen retainer and screen (at the rear of the instrument). Vacuum or wash and dry the screen as necessary or annually.

6.2 POWER SUPPLY CALIBRATION/ VERIFICATION

Verify that line selector (refer to paragraph 2.2.1) matches the line voltage. Use a Dana 5900 DVM or equivalent to perform the procedures given in table 6-1.

6.3 FUNCTION GENERATOR CALIBRATION

Use the test equipment listed here, or equivalent, to perform the procedures given in table 6-2.

1. Frequency Counter: Dana Model 8110
2. DVM: Dana 5900
3. Distortion Analyzer: HP Model 334A
4. Oscilloscope: Tektronix Model 7904 with
 - a. Dual Trace Amplifier 7A26
 - b. Dual Time Base 7B92
 - c. Differential Comparator 7A13
5. 50 Ohm 5W Termination: Tektronix 011-0099-00
6. Scope Probe: Tektronix P6101
7. Probe Tip BNC Adapter: Tektronix 013-0034-02

6.4 SYNTHESIZER CALIBRATION/VERIFICATION

Use the test equipment listed here, or equivalent, to perform the procedures given in table 6-3. If the verification portion of table 6-3 indicates that the synthesizer does not require calibration, only items No. 1 and No. 4 will be required as test equipment.

1. Frequency Counter: Dana 8110
2. RF Millivoltmeter: Boonton 92C
3. DVM: Dana 5900
4. 172B Extender Board: Wavetek

6.5 FRONT PANEL CALIBRATION

1. Repeatedly press any front panel switch to obtain an audio tone.
2. Adjust R15 on the front panel PC board for the greatest volume.

CAUTION

There are exposed high voltage points (250 volts) in the display section.

Table 6-1. Power Supply Calibration/Verification Procedures

| Step | Check | Tester | Cal Points | Program | Adjust | Desired Results | Remarks | |
|------|--------------|----------------|--------------------|-----------------------------|------------------------|------------------------|---|-----------------------|
| 1 | + 15V | DVM in dc mode | TP7 (gnd) TP6 | Power ON (initial setup) | R24 | + 15.0 Vdc ± 20 mV | All test points and adjustments are located on power supply regulator bd. | |
| 2 | - 15V | | TP8 | | | - 15.0 Vdc ± 100 mV | | Verify. |
| 3 | + 12V | | TP10 | | | + 12.0 Vdc ± 350 mV | | |
| 4 | - 5V | | TP11 | | | - 5.0 Vdc ± 100 mV | | |
| 5 | + 5V (iso) | | TP14 (gnd) TP13 | | | + 5.0 Vdc ± 200 mV | | |
| 6 | + 24V | | TP3 (gnd) TP5 | | R10 | + 24.0 Vdc ± 200 mV | | |
| 7 | - 24V | | TP4 | | - 24.0 Vdc ± 200 mV | Verify. | | |
| 8 | + 5V (logic) | | TP15 (gnd) TP12 | | R58 | | | + 5.0 Vdc ± 100 mV |

Table 6-2. Function Generator Calibration Procedures

| Step | Check | Tester | Cal Points | Program | Adjust | Desired Results | Remarks |
|------|----------------------|----------------|---------------------------------|---|---------------------------------|-----------------|---|
| 1 | Trigger Baseline | DVM in dc mode | TP1 (function/ preamp bd) | FREQ: 9.99E2 FUNC: 4 OUTP: 1 MODE: 1 AMPL: - 10 EXEC | R54 (triangle gen bd) | 0V ± 10 mVdc | 999 Hz, inverted, 10V p-p, dc, trig mode. Allow 1 hour warm-up. |
| 2 | Symmetry Zero | | TP2 (triangle gen bd) | | R124 (triangle gen bd) | 0V ± 1 mVdc | |
| 3 | Inverted Zero | | TP3 (function/ preamp bd) | | R53 (function/ preamp bd) | 0V ± 2 mVdc | |
| 4 | Standard Zero | | TP2 (function/ preamp bd) | | R79 (function/ preamp bd) | | |
| 5 | Offset Inverted Zero | | TP4 (pwr ampl/ offset bd) | | R75 (pwr ampl/ offset bd) | 0V ± 5 mVdc | |
| 6 | Offset Standard Zero | | TP2 (pwr ampl/ offset bd) | | R72 (pwr ampl/ offset bd) | | |

Table 6-2. Function Generator Calibration Procedures (Continued)

| Step | Check | Tester | Cal Points | Program | Adjust | Desired Results | Remarks |
|------|-------------------------|-------------------------------|--------------------------|--|--------------------------|--|--|
| 7 | Power Amplifier Zero | | 50Ω OUT (rear panel) | | R53 (pwr ampl/offset bd) | 0V ± 1 mVdc | |
| 8 | Positive Triangle Peak | Scope with comparator | TP1 (function/preamp bd) | FUNC: 2 MODE: 0 EXEC | R79 (triangle gen bd) | + 2V ± 10 mVp | cont mode. |
| 9 | Negative Triangle Peak | | | | R76 (triangle gen bd) | - 2V ± 10 mVp | |
| 10 | 1000:1 Symmetry | 2 channel scope with 50Ω load | 50Ω OUT (rear panel) | OUTP: 0 FREQ: 1E4 EXEC FREQ: 0 EXEC R28 (VCG bd): ccw | R58, R75 (VCG bd) | 5 ± 0.5 ms on each ½ cycle (100 ± 10 Hz) (use scope with 1 ms/div sweep) | , no internal load (load at scope). 10 kHz range, 0 Hz; R58 and R75 settings must be done in sequence. |
| 11 | Bottom Symmetry | | | FREQ: 1E2 EXEC | R33 (VCG bd) | Symmetry ± 0.1% (10 μs) | |
| 12 | Top Symmetry | | | FREQ: 9.99E2 EXEC | R67 (VCG bd) | Symmetry ± 0.1% (1 μs) | |
| 13 | High Frequency Symmetry | | | FREQ: 1E5 EXEC | R72 (VCG bd) | Symmetry ± 0.3% (30 ms) | |
| 14 | Bottom Frequency | Counter | | FREQ: 1E2 EXEC | R28 (VCG bd) | 100 ± 1 Hz | |
| 15 | Top Frequency | | | FREQ: 9.99E2 EXEC | R21 (VCG bd) | 999 ± 5 Hz | Repeat steps 14 and 15 until all settings are in tolerance. |
| 16 | Frequency | | 50Ω OUT (rear panel) | FREQ: 12.99E6 EXEC | C41 (triangle gen bd) | 12.99 MHz ± 50 kHz | Check over 1 - 12.99 range and distribute the error. Verify 1E6 (± 5%) and 1E7 (± 4%). |
| 17 | | | | FREQ: 9.99E5 EXEC | R22 (VCG bd) | 999 ± 5 kHz | |
| 18 | | | | FREQ: 9.99E4 EXEC | C44 (triangle gen bd) | 99.9 kHz ± 500 Hz | |
| 19 | | | | FREQ: 9.99E3 EXEC | R20 (VCG bd) | 9.99 kHz ± 50 Hz | |
| 20 | | | | FREQ: 9.99E1 EXEC | R18 (VCG bd) | 0.01001s ± 50 μs (50 μs) | |
| 21 | | | | FREQ: 9.99 EXEC | R17 (VCG bd) | 0.1001s ± 0.5 ms (0.5 ms) | |
| 22 | | | | FREQ: 9.99E-1 EXEC | R120 (triangle gen bd) | 1.001s ± 5 ms (5 ms) | |

Table 6-2. Function Generator Calibration Procedures (Continued)

| Step | Check | Tester | Cal Points | Program | Adjust | Desired Results | Remarks | |
|------|--------------------------------|---|---------------------------------|--|----------------------------------|-------------------------------------|---|---|
| 23 | HF Aber- rations | 2 channel scope with 50Ω load | | FREQ: 1E6 EXEC | C12 (pwr ampl/ offset bd) | Best | < 5% overshoot | |
| 24 | Sine | Scope with com- parator & distortion analyzer; load re- moved | | FREQ: 9.99E2 FUNC: 0 OUTP: 1 EXEC | R11 (function/ preamp bd) | + 5V ± 20 mVdc at positive peak | Internal load, 999 Hz output. Center R45 on pwr ampl/offset bd. | |
| 25 | | | | | R9 (function/ preamp bd) | - 5V ± 20 mVdc at negative peak | | |
| 26 | | | | | R107 (function/ preamp bd) | Symmetrical residue | | Connect scope to distor- tion analyzer output. |
| 27 | | | | | R1 (function/ preamp bd) | Minimum distor- tion (0.15% typ) | | After this step, repeat steps 24 thru 26 once. |
| 28 | | | | | Negative Sine Unity Gain | DVM in ac mode | | |
| 29 | Positive Sine Unity Gain | | R95 (function/ preamp bd) | 3.535V ± 3 mVrms | | | | |
| 30 | Gain | | FUNC: 1 EXEC | R5 (function/ preamp bd) | 2.775V ± 3 mVrms | | With average responding DVM. Otherwise, use com- parator to set peaks to ± 5 Vp ± 20 mV. | |
| 31 | Posi- tive peak | DVM in dc mode | 50Ω OUT (rear panel) | FUNC: 2 FREQ: 0.1 EXEC | R36 (function/ preamp bd) | + 5 Vp ± 10 mV | Slow output, internal load. | |
| 32 | Nega- tive peak | | | | R43 (function/ preamp bd) | - 5 Vp ± 10 mV | | |
| 33 | + DC Offset Gain | | | | FUNC: 4 OFST: + 7.49 EXEC | R62 (pwr ampl/ offset bd) | + 7.49V ± 20 mVdc | + 7.49 Vdc output, internal load. |
| 34 | - DC Offset Gain | | | | | | - 7.49V ± 20 mVdc | Verify. |
| 35 | Haver Baseline | | | FUNC: 1 OFST: 0 AMPL: 10 MODE: 5 FREQ: 999 EXEC | R37 (triangle gen bd) | - 5V ± 50 mVdc | Gated havertriangle base- line output. | |

Table 6-3. Synthesizer Calibration/Verification

| Step | Check | Tester | Cal Points | Program | Adjust | Desired Results | Remarks |
|------|---------------------|---------|-------------------------|--|----------------------------|--|-----------------------|
| 1 | Time Base | Counter | REF OUT (rear panel) | Power ON (initial settings) | L2 (digits 4 & 5 bd) | 10.00000 MHz ± 50 Hz | Allow 1 hour warm-up. |
| 2 | Verify 12.9999E6 | | 50Ω OUT (rear panel) | FREQ: 12.9999E6 FUNC: 2 AMPL: 10 OUTP: 1 MODE: 3 EXEC | | 12.99990 MHz ± 65 Hz | Verify. |
| 3 | Verify 10.9999E6 | | | FREQ: 10.9999E6 EXEC | | 10.99990 MHz ± 55 Hz | |
| 4 | Verify 9.9999E6 | | | FREQ: 9.9999E6 EXEC | | 9.99990 MHz ± 50 Hz | |
| 5 | Verify 999 Hz | | | FREQ: 999 EXEC | | 999.000 Hz ± 5 mHz | |
| 6 | Verify 10 Hz | | | FREQ: 10 EXEC | | 10.00000 Hz ± 500 μHz | |

This completes the verification portion of this procedure. If negative results were obtained, complete the calibration procedure before attempting fault isolation.

| | | | | | | | |
|----|----------------------|--------------------|---|--------------------------------|--|-----------------|---|
| 7 | 30 MHz Multiplier | RF milli-voltmeter | TP3 (digits 4 & 5 bd) | Power ON (initial settings) | L3 (digits 4 & 5 bd 30 MHz MULT) | Maximum reading | Place digits 4 & 5 bd on the extender bd. Remove shield. Connect probe gnd lead to board common as near TP3 as possible. |
| 8 | 60 MHz Multiplier | | TP4 | | L4 (digits 4 & 5 bd) | Maximum reading | <i>Note: Turn instrument power OFF while removing or replacing boards.</i> |
| 9 | Digits 4 & 5 VCO | DVM | Junction CR1/C3 | FREQ: 10.9999E6 EXEC | L1 (digits 4 & 5 bd 40 MHz VCO) | 1.70 Vdc | Connect DVM ground to board common. |
| 10 | Translation Loop VCO | | Terminal VC on 60.4 MHz Module | | C1 | 1.30 Vdc | Replace digits 4 & 5 bd and place digits 2 & 3 bd on the extender bd (2 if possible). Connect DVM ground to 60.4 MHz module common. C1 is the trimmer capacitor protruding from the underside of the 60.4 MHz module. |
| 11 | Digits 2 & 3 VCO | | Terminal VC on 40 MHz module (digits 2 & 3 bd) | | L1 | 3.50 Vdc | Connect DVM gnd to 40 MHz module case. L1 is accessible thru a hole in top of the 40 MHz module. |

Table 6-1. Power Supply Calibration/Verification Procedures (Continued)

| Step | Check | Tester | Cal Points | Program | Adjust | Desired Results | Remarks |
|-------------|--------------|----------------|--|------------------------|----------------------------|------------------------|--|
| 12 | Digit 1 VCO | | Pin VC on 35 MHz module A1 (digit 1/mixer) | FREQ: 1.0000E6 EXEC | | 3.46 Vdc | Replace digits 2 & 3 bd and place digit 1/mixer on the extender bd. L1 is accessible thru a hole in top of the 35 MHz module. After this step, reinstall digit 1/mixer board. |
| 13 | Output Mixer | RF milli-meter | TP2 | FREQ: 5.8500E6 EXEC | L7 (30 MHz BPF) | Maximum reading | |
| 14 | | | TP3 | | L11, L12 (input mixer) | | |
| 15 | | | TP4 | | L13, L14 (34.5 MHz BPF) | | |

SECTION 7

PARTS AND SCHEMATICS

7.1 DRAWINGS

The following assembly drawings, parts lists and schematics are in the arrangement shown below.

7.2 ORDERING PARTS

When ordering spare parts, please specify part number, circuit reference, board, serial number of unit and the function performed.

The part numbers for printed circuit boards are etched on the boards just as the circuits are. When the boards are loaded with components the boards are considered **assemblies** and stamped with **assembly**

numbers. These same numbers are found in the parts lists. Each printed circuit **assembly** has its own parts list; the parts list number is the **assembly** number. The printed circuit board will appear as a component in the parts list.

7.3 ADDENDA





Under Wavetek's product improvement program, the latest designs are incorporated into each instrument as quickly as development and testing permit. Because of the time needed to prepare manuals, it is not always possible to include the most recent changes. Whenever this occurs, addendum pages are prepared and inserted.

| Drawing | Drawing No. | Drawing | Drawing No. |
|--|--------------|--|--------------|
| Chassis Assembly | 0102-00-0726 | Memory RAM Schematic | 0103-00-0708 |
| Chassis Parts List | 1101-00-0726 | Memory RAM Assembly | 0101-00-0708 |
| Front Panel Assembly | 0102-00-0968 | Memory RAM Parts List | 1100-00-0708 |
| Front Panel Parts List | 1101-00-0968 | Microprocessor Schematic | 0103-00-0699 |
| Front Panel Logic Schematic | 0103-00-0938 | Microprocessor Assembly | 0101-00-0699 |
| Front Panel Logic Assembly | 0101-00-0938 | Microprocessor Parts List | 1100-00-0699 |
| Front Panel Logic Parts List | 1100-00-0938 | GPIB Interface Schematic | 0103-00-0685 |
| Rear Panel Schematic | 0104-00-0792 | GPIB Interface Assembly | 0101-00-0685 |
| Rear Panel Assembly | 0102-00-0792 | GPIB Interface Parts List | 1100-00-0685 |
| Rear Panel Parts List | 1101-00-0792 | Power Amplifier/DC Offset Schematic | 0103-00-0710 |
| GPIB Decoder Schematic | 0103-00-0554 | Power Amplifier/DC Offset Assembly | 0101-00-0710 |
| GPIB Decoder Assembly | 0101-00-0554 | Power Amplifier/DC Offset Parts List | 1100-00-0710 |
| GPIB Decoder Parts List | 1100-00-0554 | Power Amplifier Subassembly | |
| Mother Board Assembly | 0101-00-0717 | No. 1 Assembly | 0101-00-0591 |
| Mother Board Parts List | 1100-00-0717 | Power Amplifier Subassembly | |
| Signal Routing on Mother Board | — | No. 1 Parts List | 1208-00-0591 |
| Pass Transistor/Regulator Schematic | 0103-00-0713 | Power Amplifier Subassembly | |
| Pass Transistor/Regulator Assembly | 0101-00-0713 | No. 2 Assembly | 0101-00-0592 |
| Pass Transistor/Regulator Parts List | 1100-00-0713 | Power Amplifier Subassembly | |
| Power Supply Regulator Schematic | 0103-00-0712 | No. 2 Parts List | 1208-00-0592 |
| Power Supply Regulator Assembly | 0101-00-0712 | Power Amplifier Subassembly | |
| Power Supply Regulator Parts List | 1100-00-0712 | No. 3 Assembly | 0101-00-0593 |
| | | Power Amplifier Subassembly | |
| | | No. 3 Parts List | 1208-00-0593 |


| Drawing | Drawing No. | Drawing | Drawing No. |
|---|--------------------|---|--------------------|
| 3 Digit Attenuator Schematic | 0103-00-0715 | Digit 1/Mixer Schematic | 0103-00-0706 |
| 3 Digit Attenuator Assembly | 0101-00-0715 | Digit 1/Mixer Assembly | 0101-00-0706 |
| 3 Digit Attenuator Parts List | 1100-00-0715 | Digit 1/Mixer Parts List | 1100-00-0706 |
| Function/Preamp Schematic | 0103-00-0707 | 35/40 MHz VCO Module, Digit 1/Mixer Schematic | 0104-00-0519 |
| Function/Preamp Assembly | 0101-00-0707 | 35/40 MHz VCO Module, Digit 1/Mixer Assembly | 0102-00-0519 |
| Function/Preamp Parts List | 1100-00-0707 | 35/40 MHz VCO Module, Digit 1/Mixer Parts List | 1206-00-0519 |
| Triangle Generator Schematic | 0103-00-0714 | Digits 2 & 3 Schematic | 0103-00-0704 |
| Triangle Generator Assembly | 0101-00-0714 | Digits 2 & 3 Assembly | 0101-00-0704 |
| Triangle Generator Parts List | 1100-00-0714 | Digits 2 & 3 Parts List | 1100-00-0704 |
| Hysteresis Switch, Triangle Generator Assembly | 0101-00-0558 | 60.4 MHz VCO Module, Digits 2 & 3 Schematic | 0103-00-0520 |
| Hysteresis Switch, Triangle Generator Parts List | 1208-00-0558 | 60.4 MHz VCO Module, Digits 2 & 3 Assembly | 0102-00-0520 |
| Trigger, Triangle Generator Assembly | 0101-00-0559 | 60.4 MHz VCO Module, Digits 2 & 3 Parts List | 1206-00-0520 |
| Trigger, Triangle Generator Parts List | 1208-00-0559 | Digits 4 & 5/Reference Schematic | 0103-00-0705 |
| Buffer Amplifier, Triangle Generator Assembly | 0101-00-0560 | Digits 4 & 5/Reference Assembly | 0101-00-0705 |
| Buffer Amplifier, Triangle Generator Parts List | 1208-00-0560 | Digits 4 & 5/Reference Parts List | 1100-00-0705 |
| VCG and Symmetry Schematic | 0103-00-0711 | | |
| VCG and Symmetry Assembly | 0101-00-0711 | | |
| VCG and Symmetry Parts List | 1100-00-0711 | | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

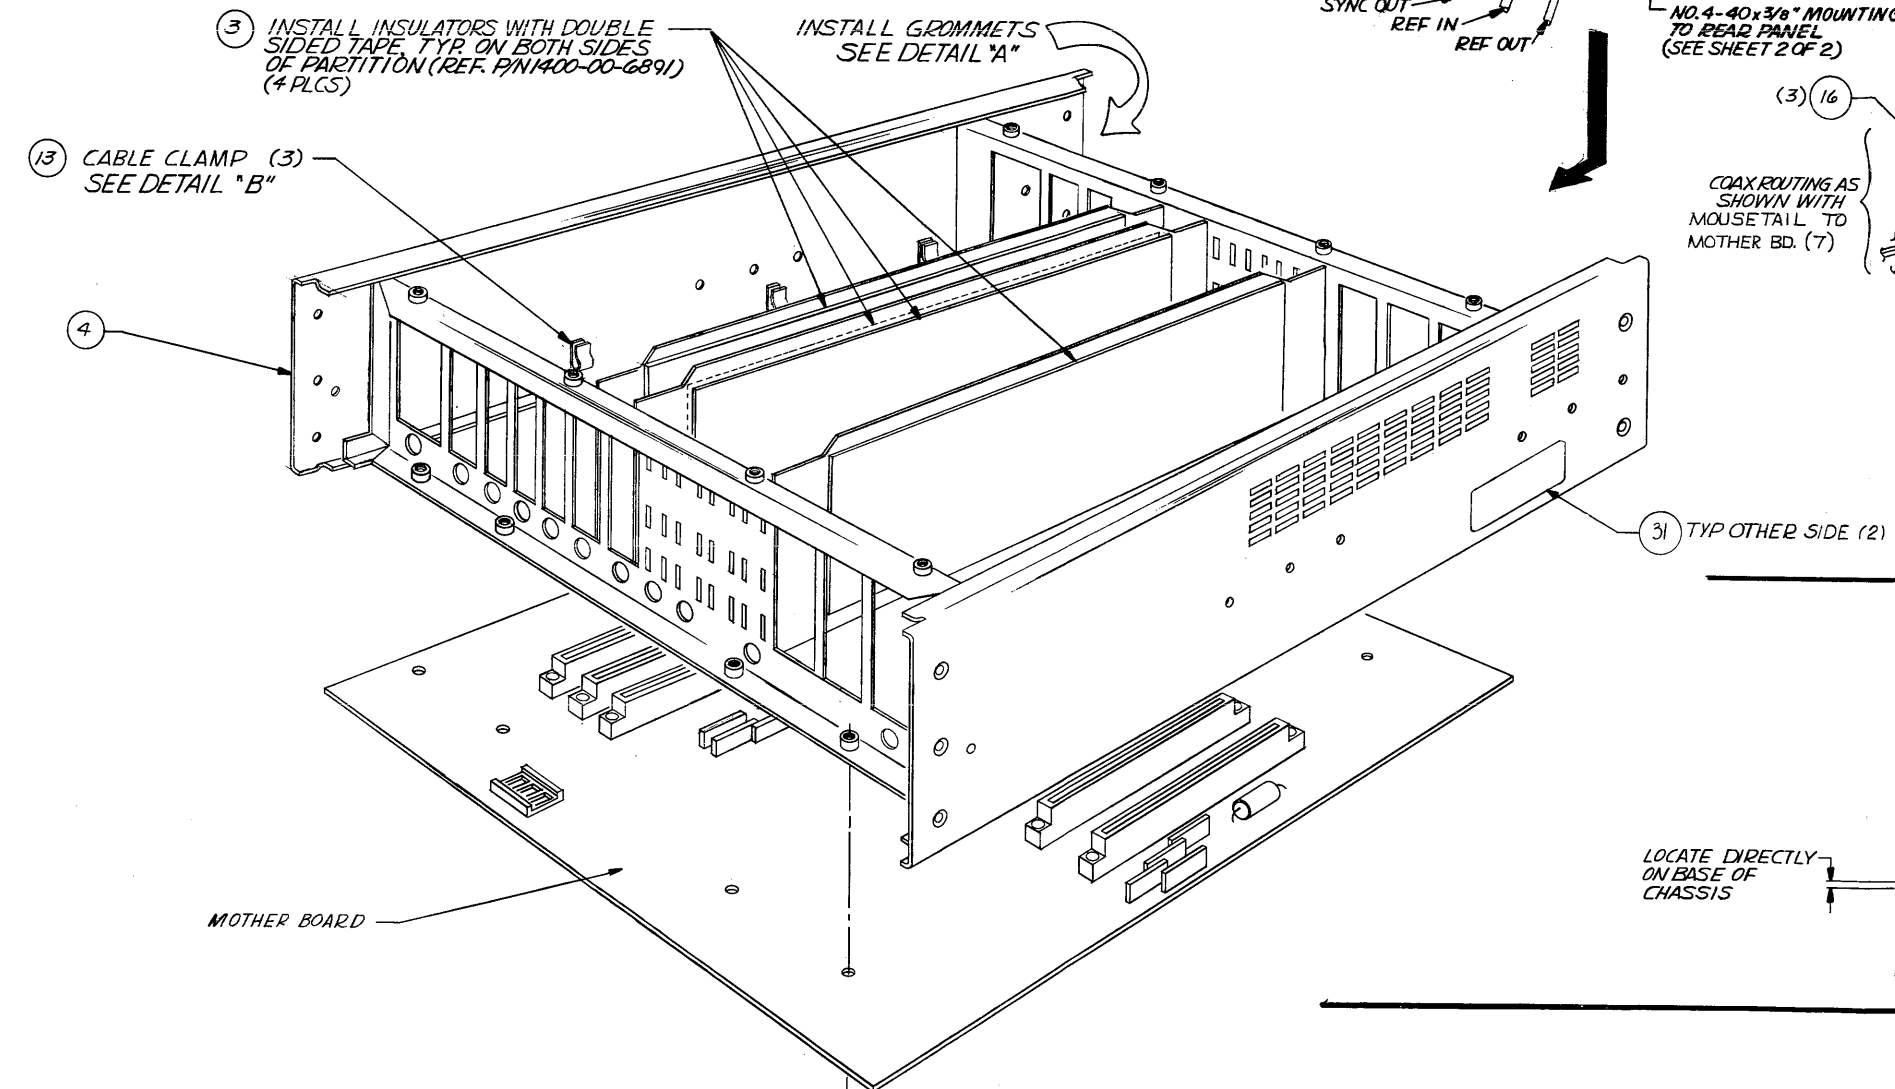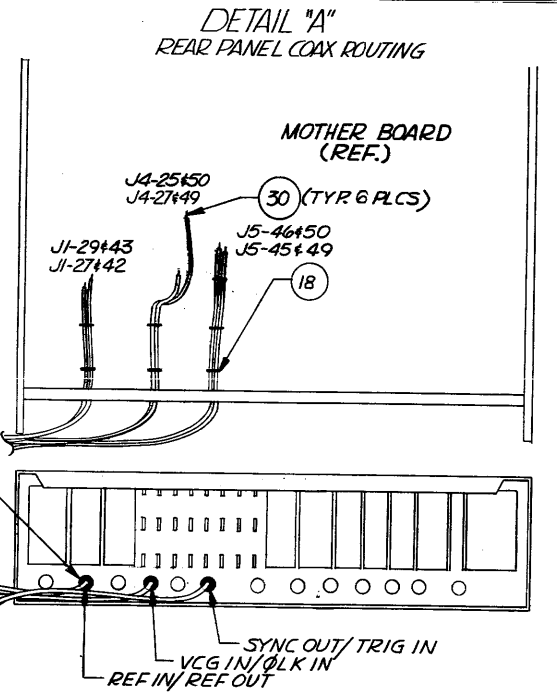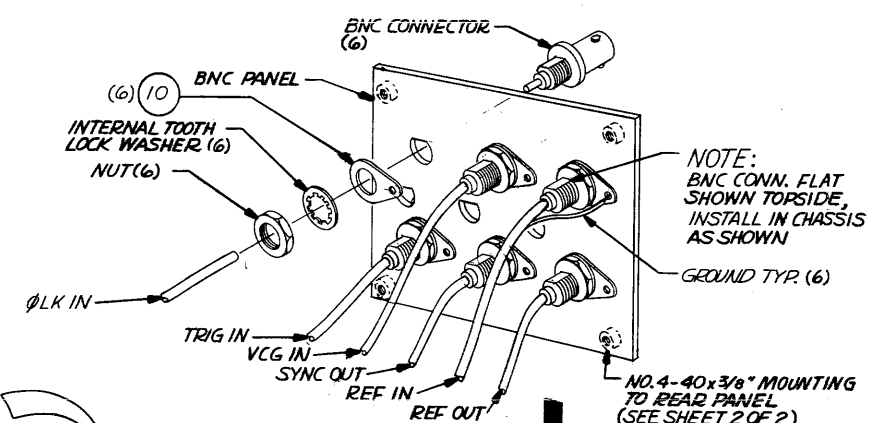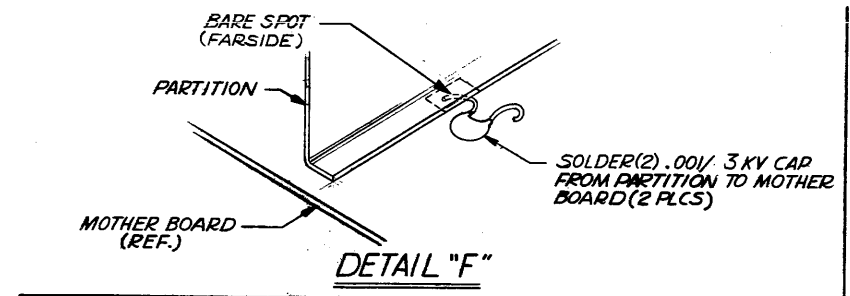

| FUNCTION | COAX | SHIELD | COLOR | LENGTH (IN) |
|----------|-------|--------|---------|-------------|
| REF. IN | J1-29 | J1-27 | GRN | 14" |
| REF. OUT | J1-43 | J1-42 | GRN/WHT | 13" |
| VCG IN | J4-25 | J4-27 | RED/WHT | 24" |
| OLK IN | J4-50 | J4-49 | BLK | 15 1/2" |
| SYNC OUT | J5-46 | J5-45 | BLU/WHT | 17" |
| TRIG IN | J5-50 | J5-49 | BLU | 17 1/2" |

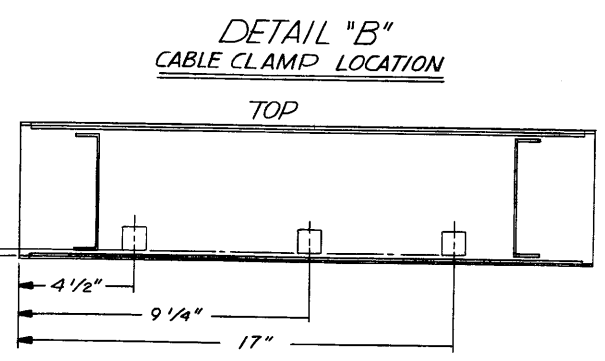

| REV | ECN | BY | DATE | APP |
|-----|----------------|-----|---------|-------------|
| G | 2785 | fra | 9/16/82 | [Signature] |
| H | 3553 | DC | 2-83 | [Signature] |
| | 3777 CLASS III | SC | 9-28-83 | [Signature] |

| | | | |
|---|------------|-------------|----------|
| F | ECN 21416 | D. COOPER | 10-20-80 |
| E | ECN #2131 | L. EARHART | 5-5-80 |
| D | # 1377 | [Signature] | 7-17-79 |
| C | ECN # 1941 | D. COOPER | 5-26-79 |
| B | ECN # 1897 | [Signature] | 2/28/79 |

| | | | |
|--|----------------------------|---|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 7-25-79 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR [Signature] | SCALE 2" | |
| FINISH WAVETEK PROCESS | RELEASE APPROV [Signature] | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 ANGLES 1° XX ±.030 | TITLE ASSEMBLY CHASSIS |
| | DO NOT SCALE DWG | MODEL NO. 172 | DWG NO. 0102-00-0726 |
| | SCALE | CODE IDENT 23338 | REV H |

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

NO. 6-32 x 3/8" FLAT HEAD CAD. PLATE SCREW (TOP AND BOTTOM COVERS 8 PLCS.)

NO. 4-40 x 3/8" FLAT HEAD SCREW (4 PLCS. EA. END)

JF2S RECEPTACLE TO PASS TRANSISTOR BOARD (REF. JF2P PLUG)

BNC PANEL MTG. 4-40 x 3/8" P.H.D. SCREW WITH INT. TOOTH LOCK WASHER (4)

REAR PANEL ASSY.

REF. 6-32 x 3/8 (4)

BNC PANEL INSTALLATION

1. REMOVE PLATE
2. DRESS BNC PANEL TO REAR SLOT (BNC FLAT TOPSIDE)
3. INSTALL BNC PANEL TO PLATE
4. INSTALL PLATE BACK ON REAR PANEL AND TIGHTEN

J15 (REF.) J16 (REF.) J49 (REF.)

NO. 6-32 x 3/8" FLAT HEAD SCREW (CAD. PLATE) (4 PLCS.)

- 1 BNC PANEL (REF.)
- 6 (6)
- 15 (4)

34 (2) SEE DETAIL "C"
PLACE BLOCK INSIDE CHASSIS AND POSITION "UNDER" MOTHER BD. FOR SUPPORT, AS SHOWN.

MOTHER BD. (REF.)

FOR P.C. BOARD REMOVAL SEE DETAIL VIEW "D"

SEE DETAIL VIEW "E"

RED STRIPE (PIN 1)

NO. 4-40 x 3/8" FLAT HEAD SCREW WITH SPLIT LOCK WASHER AND NUT (2 PLCS. EA. SIDE)

NO. 6-32 x 1/2" FLAT HEAD SCREW (6 PLCS.)

CAUTION: FIT SHIELD IN BOTTOM COVER WITH DOUBLE SIDED TAPE IN SAME POSITION AS MOTHER BD.

PULL-UP TYP. BOTH ENDS

P.C. BD. EXTRACTED

P.C. BD. INSTALLED

MOTHER BOARD (REF.)

TAPE SCOTCH 27; GLASS CLOTH ELECTRICAL TAPE, 3/4"

SUPPORT PAD

CHASSIS (REF.)

DETAIL "C"

APPLY INSULATION TAPE TO SUPPORT PAD ALLOWING FOR 1/16" OVERHANG ON 3 SIDES. PLACE PAD INSIDE CHASSIS AND POSITION "UNDER" MOTHER BD. FOR SUPPORT AS SHOWN.

DETAIL "E"
CONN HOLD DOWN

DETAIL "D"
TYP. P.C. BD. REMOVAL

| P.C. BOARD LEGEND | | | |
|---------------------------|---------|----------------------------|-------------------|
| BD. KEY AND TITLE | BD. NO. | EJECTOR AND RETAINER COLOR | RETAINER ITEM NO. |
| (A) PASS TRANSISTOR | | BLACK | (44) |
| (B) POWER SUPPLY REG. | | BLACK | (44) |
| (C) MICRO P. | | WHITE | (35) |
| (D) GPIB | | WHITE | (35) |
| (E) RAM | | WHITE | (35) |
| (G) POWER AMP / DC OFFSET | | GREY | (43) |
| (H) DIGIT 3 ATTENUATOR | | VIOLET | (42) |
| (J) FUNCTION PRE-AMP | | BLUE | (41) |
| (K) TRIANGLE GENERATOR | | GREEN | (40) |
| (L) VCG | | YELLOW | (39) |
| (M) DIGIT 1 / MIXER | | ORANGE | (38) |
| (N) DIGIT 2 AND 3 | | RED | (37) |
| (P) DIGIT 4 AND 5 / REF. | | BROWN | (36) |

| | | | |
|--|-------------------|---|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 7-25-77 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJECT Tom Salgo | SEPT 8 '77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XX.X - .010 ANGLES 1:1 XX - .030 | TITLE ASSEMBLY CHASSIS |
| SCALE | DO NOT SCALE DWG | MODEL NO. 172 | DWG NO. 0102-00-0726 |
| | | CODE IDENT 23338 | REV H |
| | | | SHEET 2 OF 2 |

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------------|------------------|-------|--------------|--------|
| NONE | ASSY DRWG. CHASSIS | 0102-00-0726 | WVTK | 0102-00-0726 | 1 |
| 1 | BNC BD | 1400-00-6021 | WVTK | 1400-00-6021 | 1 |
| 2 | MTG. BKT | 1400-00-6332 | WVTK | 1400-00-6332 | 2 |
| 3 | INSULATOR REF: 3200-03-0001 | 1400-00-6891 | WVTK | 1400-00-6891 | 4 |
| 4 | CHASSIS | 115-1575 | CALMK | 1400-00-7770 | 1 |
| 5 | INSULATOR, BOTT | 1400-00-7830 | WVTK | 1400-00-7830 | 1 |
| 34 | SUPPORT PAD | 1400-00-9173 | WVTK | 1400-00-9173 | 2 |
| 20 | RETAINER PLATE | 1400-00-9183 | WVTK | 1400-00-9183 | 1 |
| 19 | RETAINER PLATE | 1400-00-9240 | WVTK | 1400-00-9240 | 1 |
| 29 | LABEL, REAR SUPPORT | 1400-00-9780 | WVTK | 1400-00-9780 | 1 |
| 31 | LABEL, REAR SUPPORT | 1400-01-0010 | WVTK | 1400-01-0010 | 2 |
| 32 | COVER, TOP | 115-1575-94C | CALMK | 1400-01-1002 | 1 |
| 33 | COVER, BOTTOM | 115-1575-93C | CALMK | 1400-01-1012 | 1 |
| NONE | CAP. CER. .001MF, 3KV | DD30-102 | CRL | 1500-01-0205 | 2 |
| 6 | BNC CONN | U0657/U | AMPH | 2100-01-0003 | 6 |
| 9 | LOCK, SOCKET | CA-24-200-DL | CA | 2100-03-0046 | 2 |
| 10 | SOLDER LUG | 1497 | SMITH | 2100-04-0012 | 6 |

| | | | |
|---------------------------|------------------|---|----------|
| WAVETEK PARTS LIST | TITLE CHASSIS | ASSEMBLY NO. 1101-00-0726 PAGE: 1 | REV J |
|---------------------------|------------------|---|----------|

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--|------------------|-------|--------------|--------|
| 30 | CONN | 60598-8 | AMP | 2100-05-0017 | 6 |
| 35 | GUIDE, BOARD | 115-287 | CALMK | 2100-06-0004 | 6 |
| 36 | CARD GUIDE, BROWN | 115-287 BROWN | CALMK | 2100-06-0007 | 2 |
| 37 | CARD GUIDE, RED | 115-287 RED | CALMK | 2100-06-0008 | 2 |
| 38 | CARD GUIDE, ORANGE | 115-287 ORANGE | CALMK | 2100-06-0009 | 2 |
| 39 | CARD GUIDE, YELLOW | 115-287 YELLOW | CALMK | 2100-06-0010 | 2 |
| 40 | CARD GUIDE, GREEN | 115-287 GREEN | CALMK | 2100-06-0011 | 2 |
| 41 | CARD GUIDE, BLUE | 115-287 BLUE | CALMK | 2100-06-0012 | 2 |
| 42 | CARD GUIDE, VIOLET | 115-287 VIOLET | CALMK | 2100-06-0013 | 2 |
| 43 | CARD GUIDE, GREY | 115-287 GREY | CALMK | 2100-06-0014 | 2 |
| 44 | CARD GUIDE, BLACK | 115-287 BLACK | CALMK | 2100-06-0015 | 4 |
| 14 | TY-WRAP | TY-523H | TB | 2800-00-0006 | 4 |
| 13 | WIRE MOUNT, ADHESIVE | 6025-08-BLK | GRAHL | 2800-00-0024 | 3 |
| 15 | STANDOFF, SMAGE .125 H., .250 DIA 4-40, .093 MAT'L | 6911-2-3C | LYNTR | 2800-03-0003 | 4 |
| 16 | GROMMET, RUBBER | 91117 | SMITH | 2800-10-0004 | 3 |
| 18 | MOUSETAIL | 2829-75-2 | RUBTK | 2800-12-0005 | 7 |

| | | | |
|---------------------------|------------------|---|----------|
| WAVETEK PARTS LIST | TITLE CHASSIS | ASSEMBLY NO. 1101-00-0726 PAGE: 2 | REV J |
|---------------------------|------------------|---|----------|

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|---------------------|------------------|-------|--------------|--------|
| NONE | CABLE, 4 COND, 20GA | 8722 | BEIDN | 6001-70-0007 | 1 |


| | | | |
|---------------------------|------------------|---|----------|
| WAVETEK PARTS LIST | TITLE CHASSIS | ASSEMBLY NO. 1101-00-0726 PAGE: 3 | REV J |
|---------------------------|------------------|---|----------|

| | | | |
|--|---|------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR | | |
| | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES .1 XX - .030 | | |
| | DO NOT SCALE DWG | MODEL NO. | PARTS LIST CHASSIS |
| SCALE | | 172B | |
| | | DWG NO. | 1101-00-0726 |
| | | REV | J |
| | | CODE IDENT | 23338 |
| | | SHEET | 1 OF 1 |


NOTE UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


| PIN NO. | WIRE GA. | COLOR | DESTINATION |
|---------|----------|----------|-------------|
| 1 | 20 | GRN | SI-2 |
| 2 | 20 | BLK | SI-3 |
| 3 | 20 | RED | SI-1 |
| 4 | | NOT USED | |
| 5 | | NOT USED | |
| 6 | 20 | WHT | SI-4 |
| 7 | 20 | GRN/YEL | SHIELD |
| 8 | | NOT USED | |
| 9 | | NOT USED | |

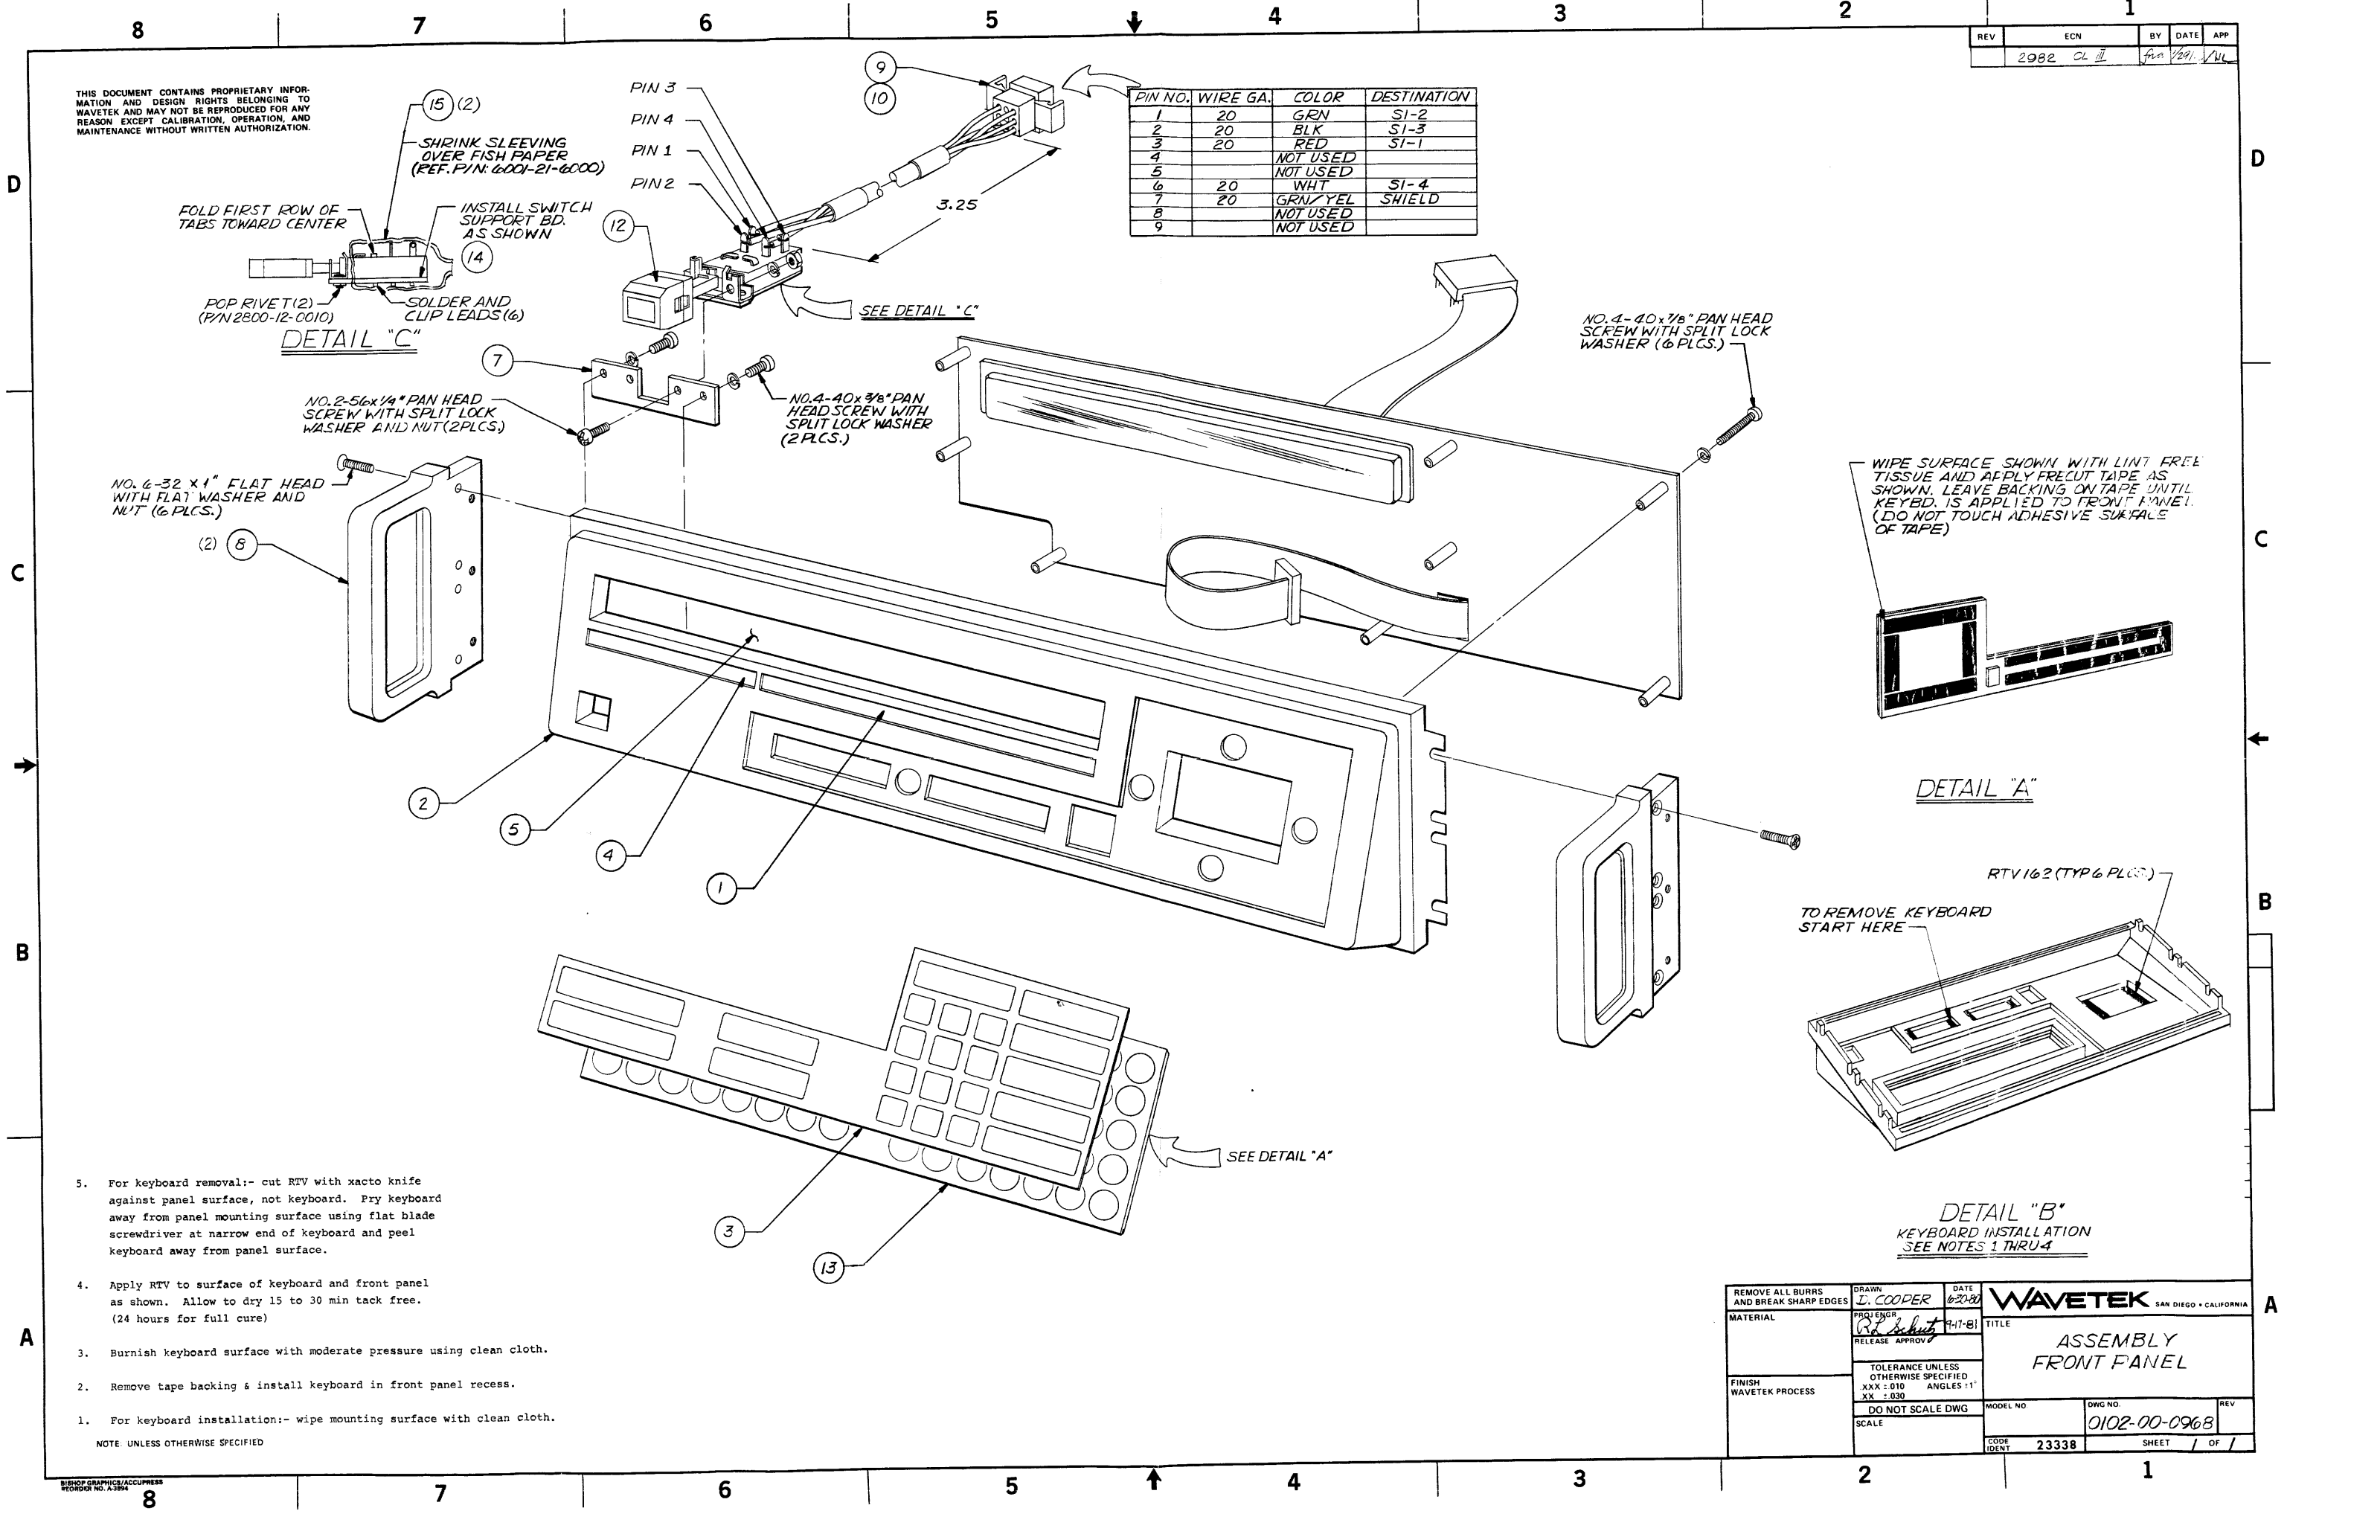

DETAIL "C"

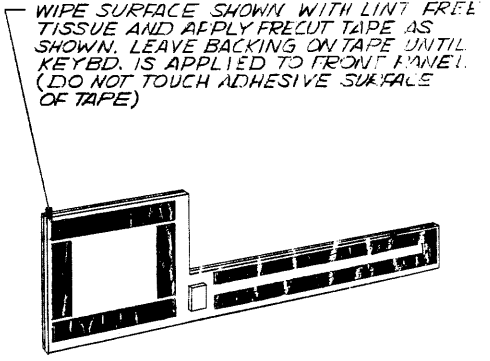

DETAIL "A"

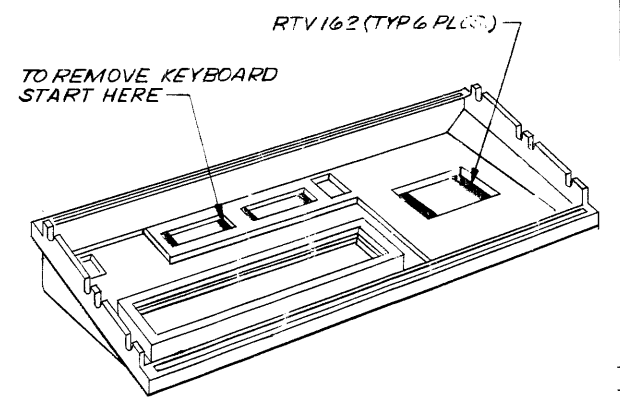

DETAIL "B"
KEYBOARD INSTALLATION
SEE NOTES 1 THRU 4

5. For keyboard removal:- cut RTV with xacto knife against panel surface, not keyboard. Pry keyboard away from panel mounting surface using flat blade screwdriver at narrow end of keyboard and peel keyboard away from panel surface.
 4. Apply RTV to surface of keyboard and front panel as shown. Allow to dry 15 to 30 min tack free. (24 hours for full cure)
 3. Burnish keyboard surface with moderate pressure using clean cloth.
 2. Remove tape backing & install keyboard in front panel recess.
 1. For keyboard installation:- wipe mounting surface with clean cloth.
- NOTE: UNLESS OTHERWISE SPECIFIED

| | | | | |
|--|---|-----------------|--------------------------------|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN L. COOPER | DATE 6-20-80 | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PRJ ENGR R. Schmitz | DATE 7-17-81 | TITLE ASSEMBLY FRONT PANEL | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XX ± .010 ANGLES : 1° XX ± .030 | | MODEL NO. | DWG NO. 0102-00-0968 |
| DO NOT SCALE DWG | | SCALE | CODE IDENT 23338 | REV SHEET / OF / |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG. FRONT PANEL | 0102-00-0968 | WVTK | 0102-00-0968 | 1 |
| 2 | FRONT PANEL FROM: 1400-00-7031 | 1400-00-7030 | WVTK | 1400-00-7030 | 1 |
| 5 | LENS, READOUT REF: 3200-03-0007 | 1400-00-7680 | WVTK | 1400-00-7680 | 1 |
| 7 | BRKT, SWITCH MTG. | 1400-00-7703 | WVTK | 1400-00-7703 | 1 |
| 4 | PLATE, NAME | 1400-00-8240 | WVTK | 1400-00-8240 | 1 |
| 15 | INSULATOR, PWR SWITCH REF: 1600-99-0001 | 1400-00-8370 | WVTK | 1400-00-8370 | 2 |
| 3 | OVERLAY, KEYBOARD | 1400-00-9790 | WVTK | 1400-00-9790 | 1 |
| 1 | I. D., INSTRUMENT | 1400-00-9800 | WVTK | 1400-00-9800 | 1 |
| 8 | HANDLE, WHITE FROM: 1400-00-6951 | 1400-01-3152 | WVTK | 1400-01-3152 | 2 |
| 14 | SWITCH SUPPORT BD | 1700-00-0750 | WVTK | 1700-00-0750 | 1 |
| 9 | PLUG, 9PIN | 03-06-2091 | MOLEX | 2100-02-0011 | 1 |
| 16 | SOLDER LUG | 1485-6 | SMITH | 2100-04-0025 | 1 |
| 10 | PIN, MALE | 02-06-2103 | MOLEX | 2100-05-0003 | 5 |
| 12 | SWITCH, POWER | 5102-00-0006 | WVTK | 5102-00-0006 | 1 |
| 13 | KEYBOARD | 25MD200P75079 | CRL | 5108-00-0003 | 1 |

| | | | |
|------------------------------|----------------------------|------------------------------|-----|
| WAVETEK PARTS LIST | TITLE ASSY, FRONT PANEL | ASSEMBLY NO. 1101-00-0968 | REV |
| PAGE: 1 | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|---------------------|-------------------|-------|--------------|--------|
| NONE | CABLE, 4 COND, 20GA | 8722 | BELDN | 6001-70-0007 | 1 |

| | | | |
|------------------------------|----------------------------|------------------------------|-----|
| WAVETEK PARTS LIST | TITLE ASSY, FRONT PANEL | ASSEMBLY NO. 1101-00-0968 | REV |
| PAGE: 2 | | | |

| | | | | |
|--|--|-------|---|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE PARTS LIST ASSY, FRONT PANEL | |
| | RELEASE APPROV | | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES - 1 XX - .030 | | MODEL NO. 172B | DWG NO. 1101-00-0968 |
| | DO NOT SCALE DWG | SCALE | REV | |
| | | | CODE IDENT 23338 | SHEET 1 OF 1 |

NOTE: UNLESS OTHERWISE SPECIFIED


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

CONNECTOR


J2-

- 1) +5V
- 2) DBUS 5/ (B6)
- 3) DBUS 3/ (B6)
- 4) DBUS 4/ (B6)
- 5) DBUS 1/ (B6)
- 6) DBUS 2/ (B6)
- 7) DBUS 0/ (B6)
- 8) -12V
- 9) N/C
- 10) N/C
- 11) N/C
- 12) N/C
- 13) N/C
- 14) N/C
- 15) N/C
- 16) N/C
- 17) N/C
- 18) N/C
- 19) N/C
- 20) N/C
- 21) N/C
- 22) N/C
- 23) N/C
- 24) N/C


BUSS INTERFACE CIRCUIT

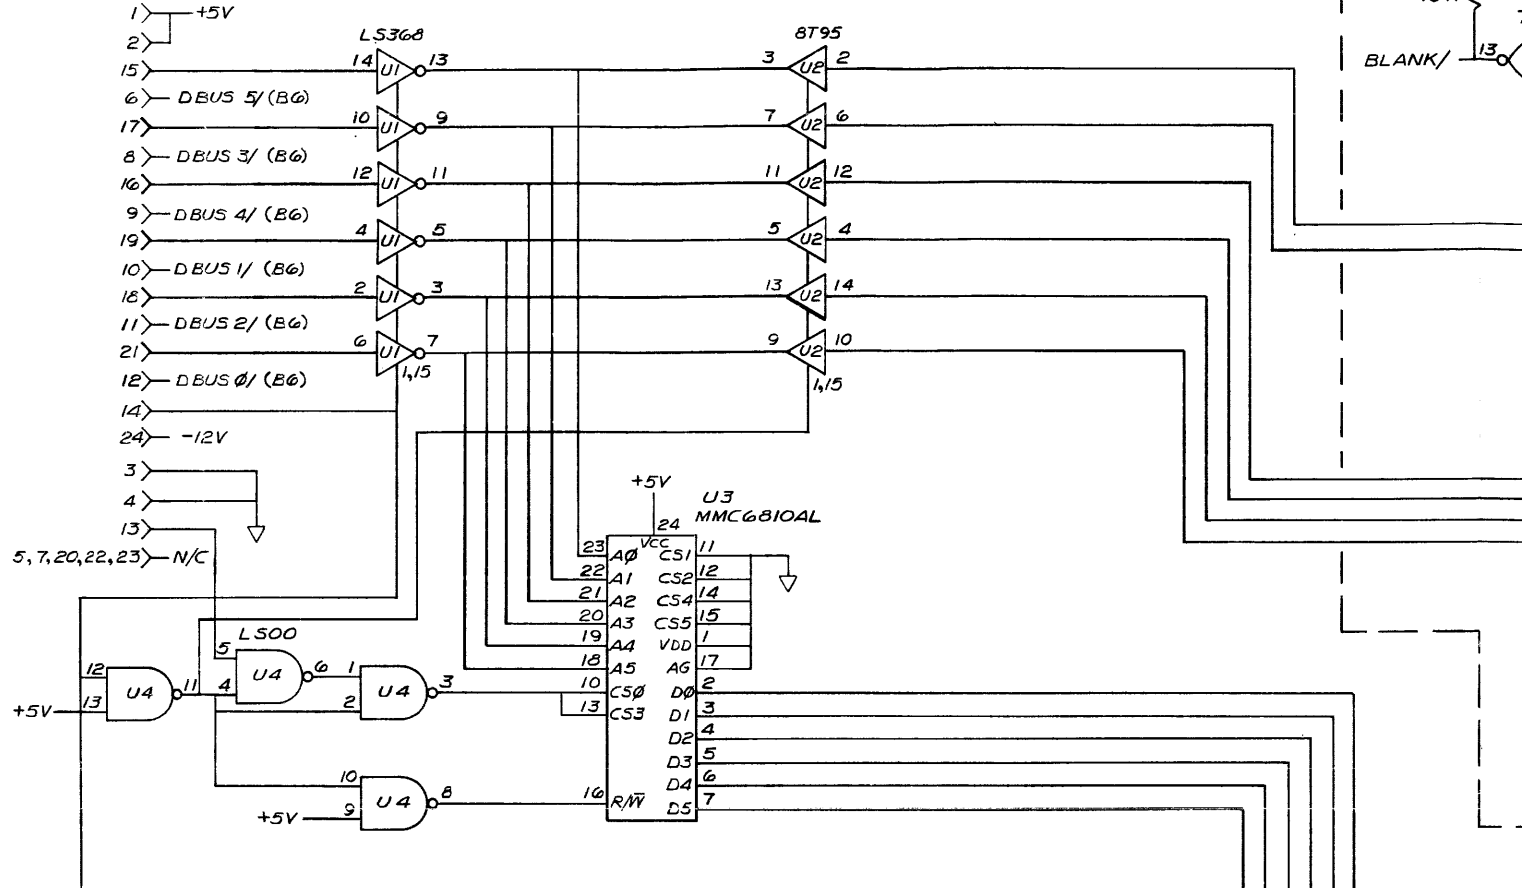


DISPLAY TIMING CIRCUIT

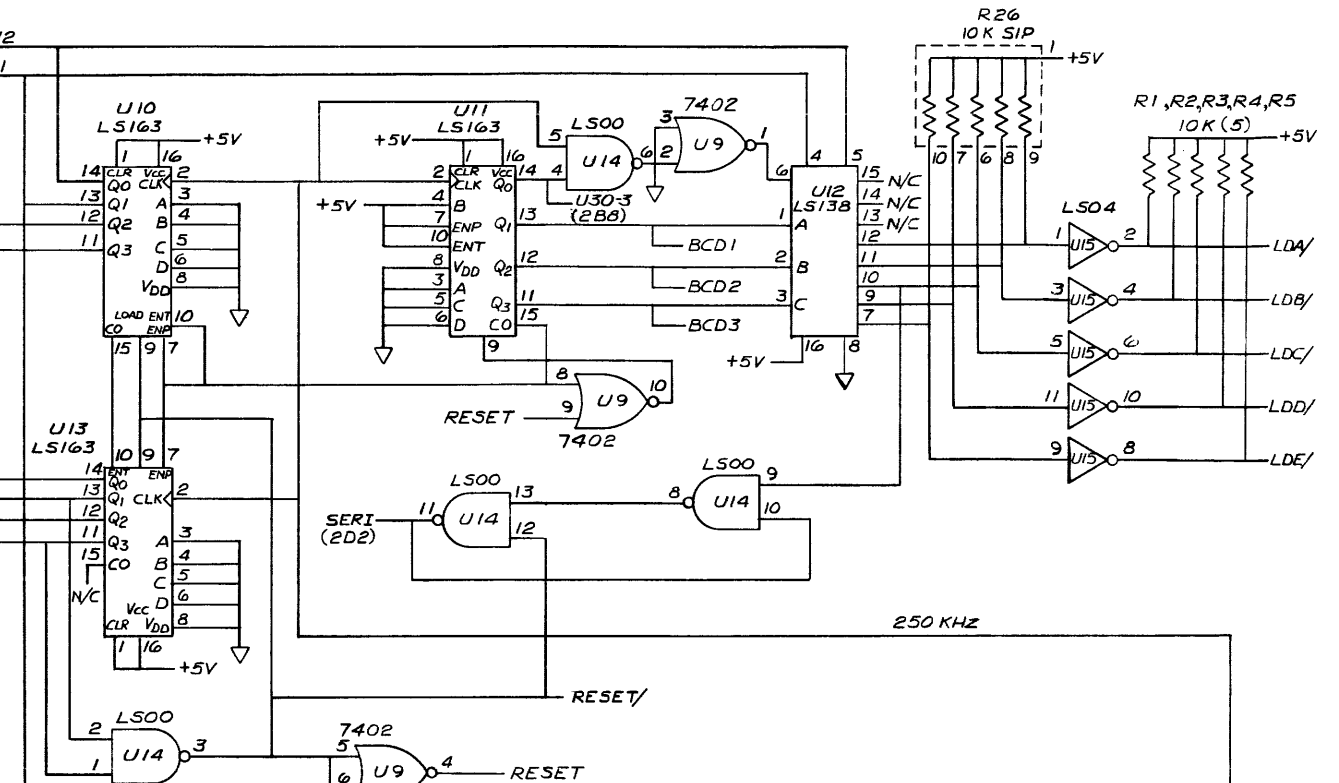

KEYBOARD ENCODER

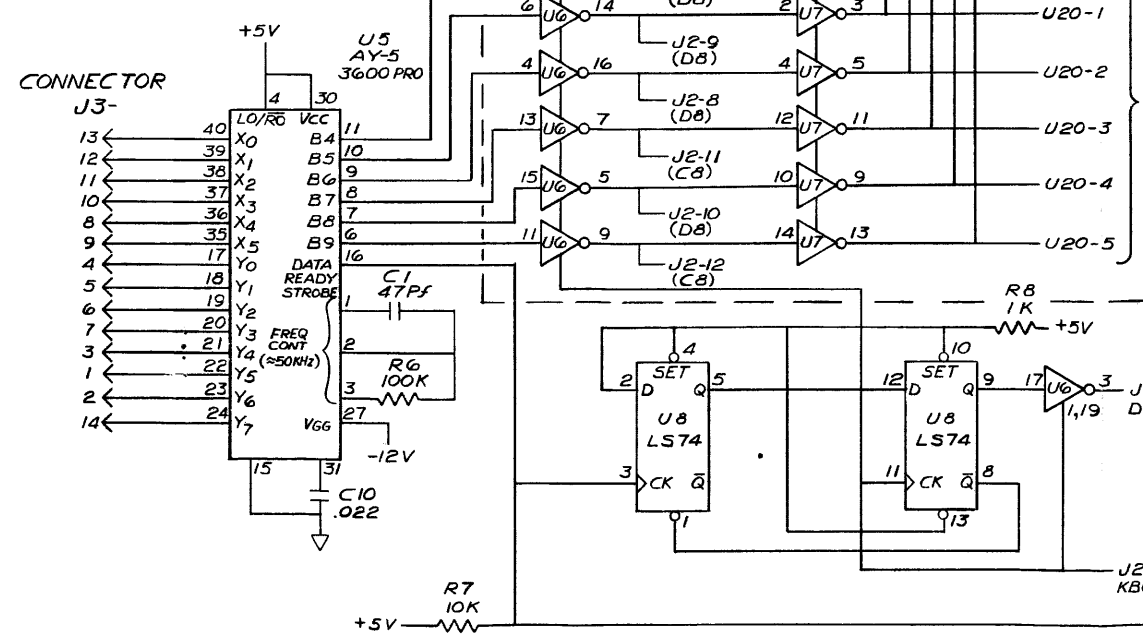

MASTER CLOCK

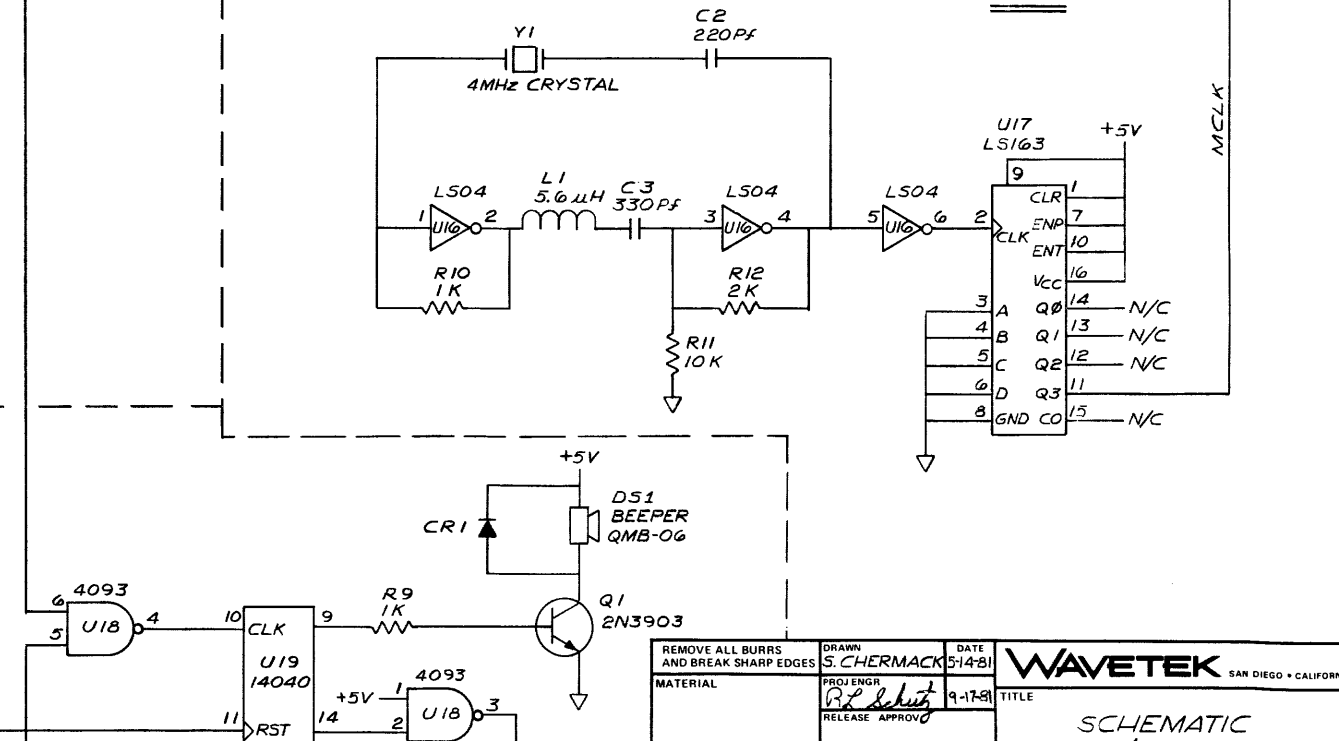

- 3. ALL DIODES ARE FD6666.
- 2. ALL RESISTORS ARE IN OHMS.
- 1. ALL CAPACITORS ARE IN MICROFARADS.




NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|--|-------------|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | | DATE | 5-14-81 |
| DRAWN | | S. CHERMACK | |
| PROJ ENGR | | R. J. ... | |
| RELEASE APPROV | | | |
| TOLERANCE UNLESS OTHERWISE SPECIFIED | | XXX : 010 | ANGLES : 1° |
| DO NOT SCALE DWG | | MODEL NO. | 172 B |
| SCALE | | DWG NO. | 0103-00-0938 |
| FINISH WAVETEK PROCESS | | REV | |
| CODE IDENT | | 23338 | SHEET 1 OF 2 |


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

DISPLAY DRIVER CIRCUIT

FLUORESCENT DISPLAY
V1 DC405A2

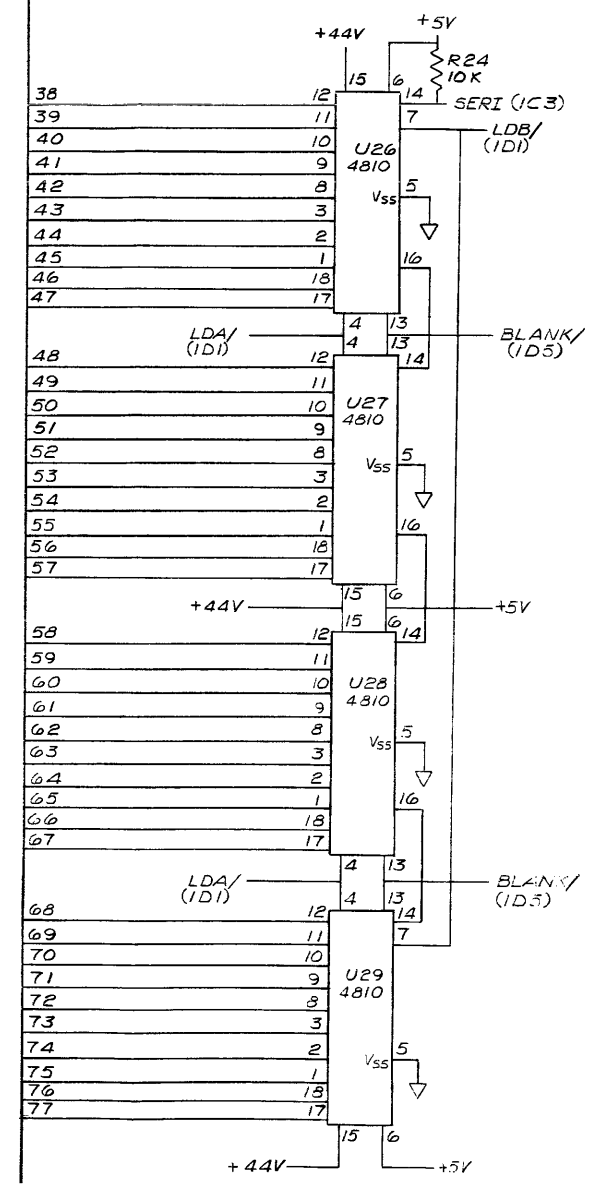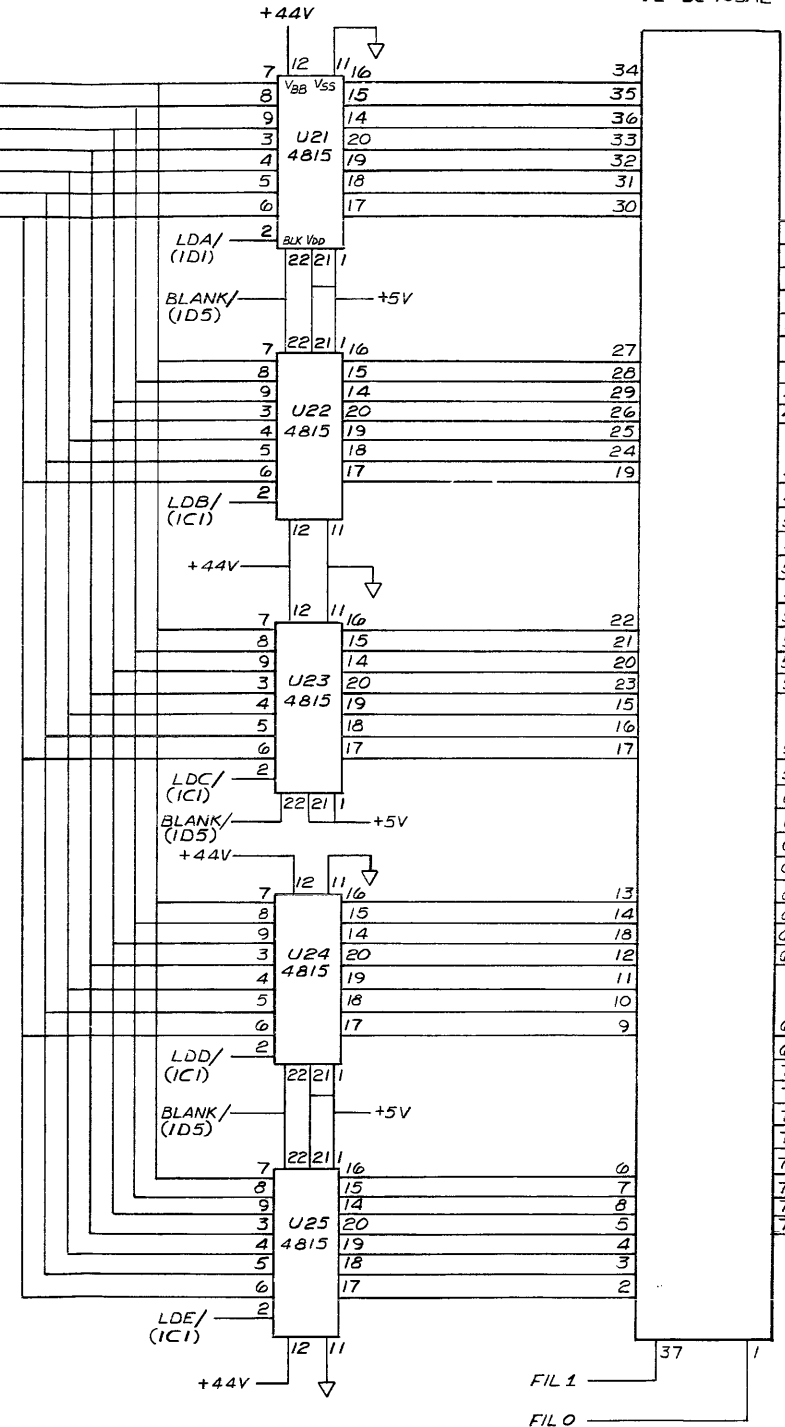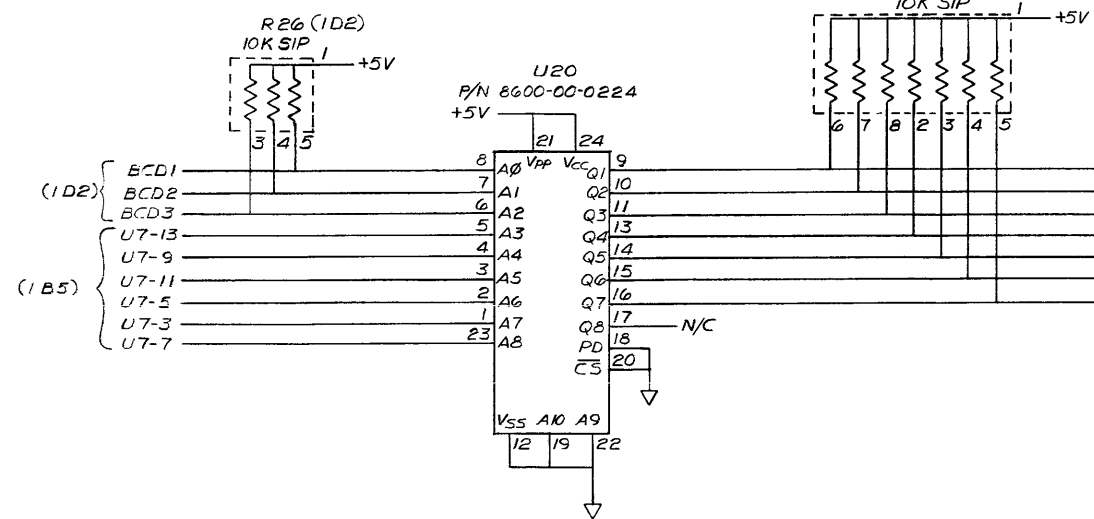


DISPLAY POWER SUPPLIES

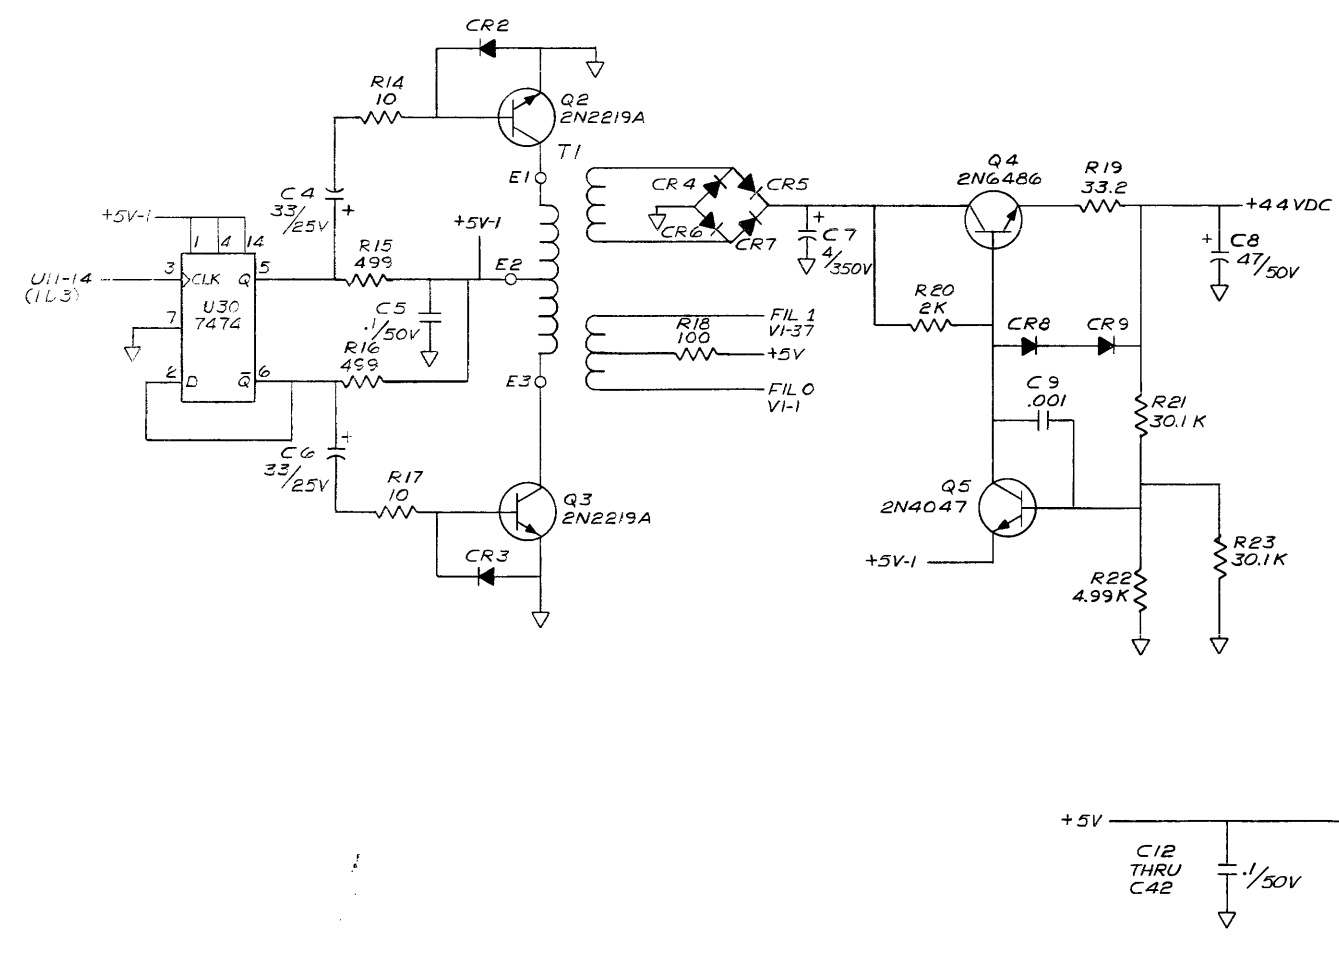

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|---------------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN S. CHERMACK | DATE 5-14-81 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR. R. L. Lehty | DATE 9-17-81 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES - 1° XX - .030 | TITLE SCHEMATIC LOGIC/DECODER 80 |
| | DO NOT SCALE DWG | SCALE | MODEL NO. 172B |
| | | | DWG NO. 0103-00-0933 |
| | | | REV 23338 |
| | | | SHEET 2 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

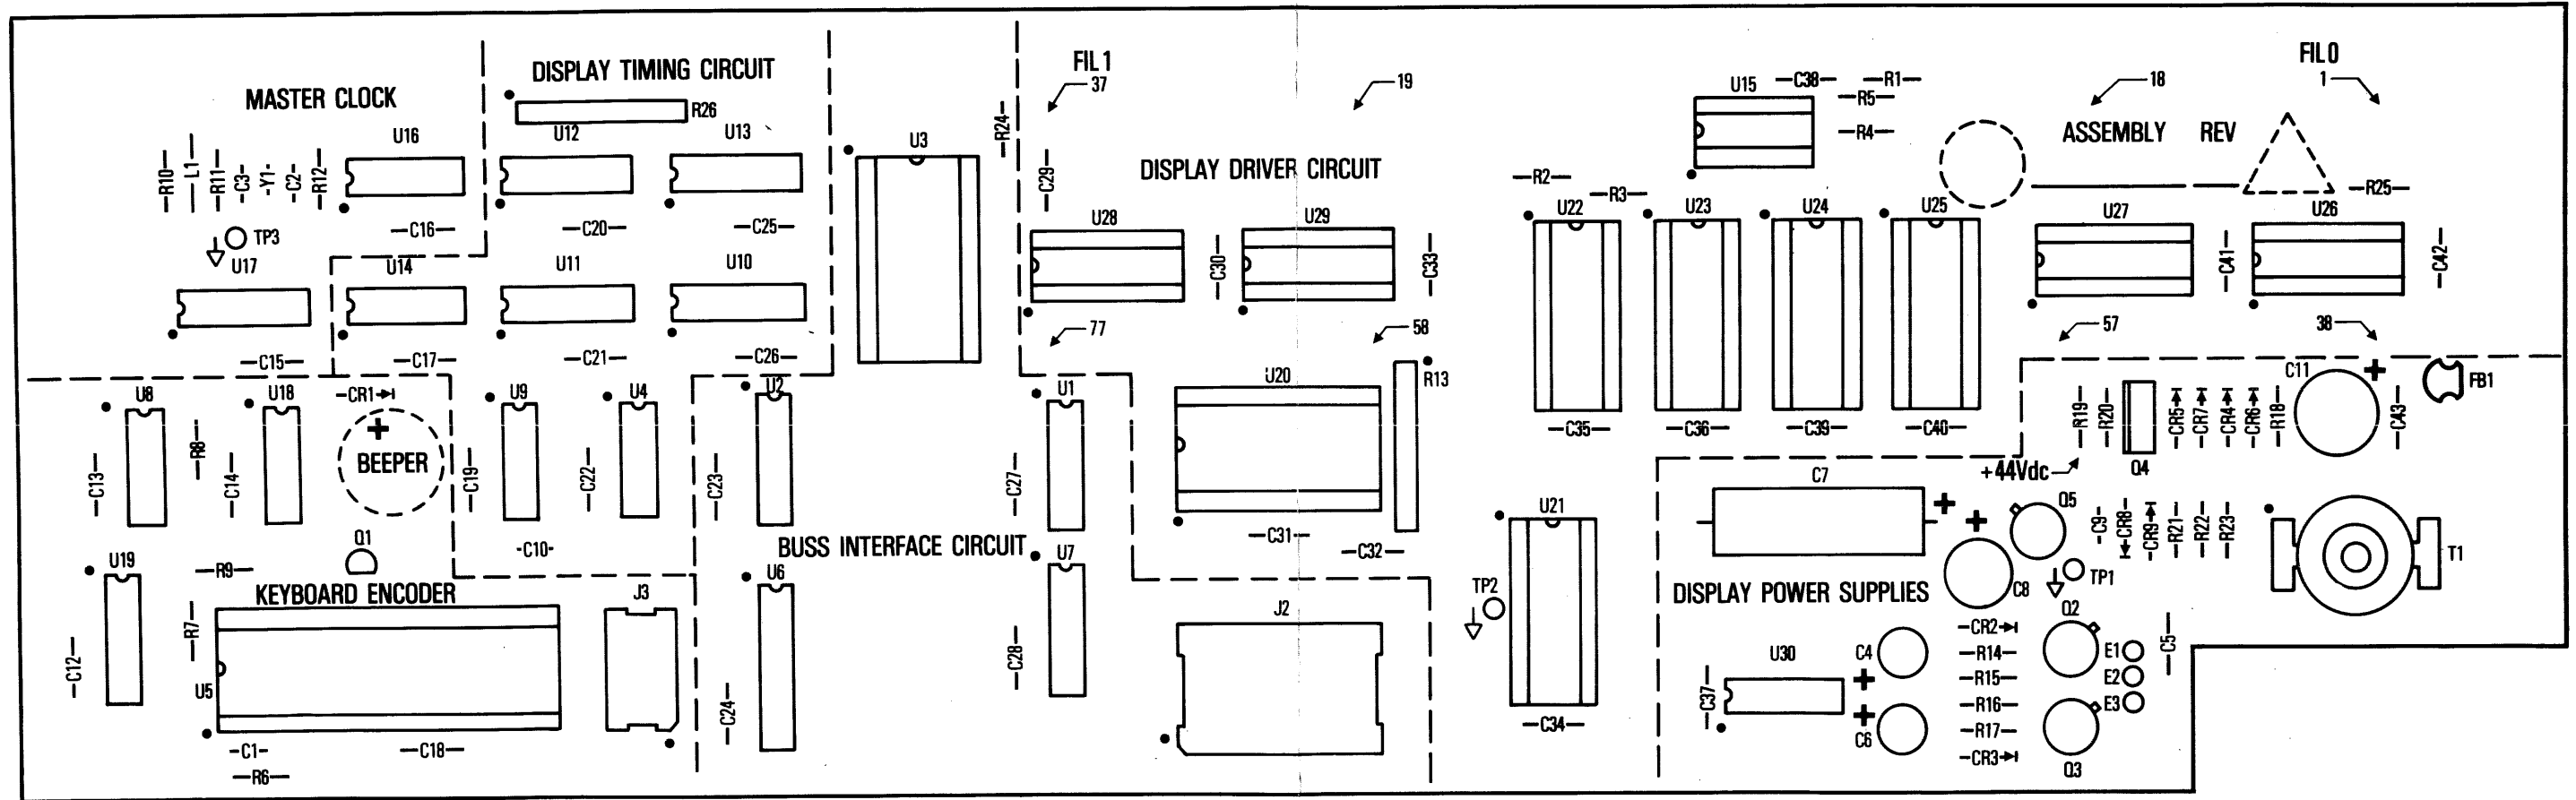

| | | | |
|--|--|-------|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TITLE PCA LOGIC/DECCDER |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ± .010 ANGLES .1 XX ± .030 | | MODEL NO 172 B |
| DO NOT SCALE DWG | | SCALE | DWG NO 0101-00-0938 |
| | | | REV |
| | | | CODE IDENT 23338 |
| | | | SHEET OF |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|--|--------------------|-------|--------------|---|----------------------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG. LOGIC/DECODER BOARD | 0101-00-0938 | WVTK | 0101-00-0938 | 1 | NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 3 |
| NONE | SCHEMATIC. LOGIC/DECODER BOARD | 0103-00-0938 | WVTK | 0103-00-0938 | 1 | DS1 | BEEPER | GMB-06 | STMIC | 3000-00-0085 | 1 |
| NONE | TRANSFORMER | 172B-0050 | WVTK | 1204-00-0090 | 1 | FB1 | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 1 |
| C9 | CAP. CER. .001MF, 1KV | DD-102 | CRL | 1500-01-0211 | 1 | R18 | RES. MF, 1/BW, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 1 |
| C12 C13 C14 C15 C16 C17 C18 C19 C20 C21 C22 C23 C24 C25 C26 C27 C28 C29 C30 C31 C32 C33 C34 C35 C36 C37 C38 C39 C40 C41 C42 C43 C5 | CAP. CER. MON. .1MF, 50V | CAC03Z5U104Z050A | CORNG | 1500-01-0405 | 33 | R10 R8 R9 | RES. MF, 1/BW, 1%, 1K | RN55D-1001F | TRW | 4701-03-1001 | 3 |
| C10 | CAP. CER. .022MF, 25V | HY-525 | SPRAG | 1500-02-2309 | 1 | R1 R11 R2 R24 R25 R3 R4 R5 R7 | RES. MF, 1/BW, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 9 |
| C3 | CAP. CER. 330PF, 1KV | DD-331 | CRL | 1500-03-3111 | 1 | R6 | RES. MF, 1/BW, 1%, 100K | RN55D-1003F | TRW | 4701-03-1003 | 1 |
| C1 | CAP. CER. 47PF, 1KV | DD-470 | CRL | 1500-04-7011 | 1 | R14 R17 | RES. MF, 1/BW, 1%, 10 | RN55D-1004F | TRW | 4701-03-1004 | 2 |
| C2 | CAP. MICA, 220PF, 500V | DM15-221J | ARCO | 1500-12-2100 | 1 | R12 R20 | RES. MF, 1/BW, 1%, 2K | RN55D-2001F | TRW | 4701-03-2001 | 2 |
| C7 | CAP. ELECT. 4MF, 350V | TVA-1601 | SPRAG | 1500-30-4005 | 1 | R21 R23 | RES. MF, 1/BW, 1%, 30.1K | RN55D-3012F | TRW | 4701-03-3012 | 2 |
| C11 | CAP. ELECT. 1000MF/16V RADIAL LEAD, SP .20 | CRE SERIES 1000/16 | CAPAR | 1500-31-0211 | 1 | R19 | RES. MF, 1/BW, 1%, 33.2 | RN55D-33R2F | TRW | 4701-03-3329 | 1 |
| C4 C6 | CAP. ELECT. 33MF, 25V RADIAL LEAD, SP .14 | CLE-L SERIES 33/25 | CAPAR | 1500-33-3002 | 2 | R15 R16 | RES. MF, 1/8, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 2 |
| C8 | CAP. ELECT. 47MF, 50V | CRE SERIES 47/50 | CAPAR | 1500-34-7003 | 1 | R22 | RES. MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 1 |
| WAVETEK PARTS LIST TITLE: PCA, LOGIC/DECODER BD ASSEMBLY NO. 1100-00-0938 PAGE: 1 | | | | | WAVETEK PARTS LIST TITLE: PCA, LOGIC/DECODER BD ASSEMBLY NO. 1100-00-0938 PAGE: 3 | | | | | | |


| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--|-------------------|-------|--------------|---|-----------------------|--------------------|---------------------|-------|---|--------|-----------------------|-------------------------------------|-------------------|------|--------------|--------|
| NONE | RADIAL LEAD, SP .20 | 1700-00-0938 | WVTK | 1700-00-0938 | 1 | G1 | TRANS | 2N3903 | NSC | 4901-03-9030 | 1 | U12 | IC | 74LS138 | TI | 8007-41-3810 | 1 |
| L1 | LOGIC/DECODER BOARD | 1537-30 | DELVN | 1800-00-0015 | 1 | G5 | TRANS | 2N4047 | FAIR | 4901-04-0470 | 1 | U10 U11 U13 U17 | IC | 74LS163 | SIQ | 8007-41-6310 | 4 |
| NONE | CHOKER, 5.6MH | D1LB-24P-108 | BURND | 2100-03-0029 | 2 | G4 | TRANS | 2N6486 | MDT | 4901-06-4860 | 1 | U6 | IC | 74LS240 | TI | 8007-42-4010 | 1 |
| NONE | SKT, IC, 24PIN | D1LB-40P-108 | BURND | 2100-03-0030 | 1 | J3 | CABLE ASSY | CA-D14IDSP-E-CD-005 | CA | 6002-00-0003 | 1 | U1 U7 | IC | 74LS368 | TI | 8007-43-6810 | 2 |
| NONE | SKT, IC, 40PIN | D1LB-40P-108 | BURND | 2100-03-0030 | 1 | J2 | CABLE ASSY | CA-D24IDPP-E-CD-012 | CA | 6002-00-0004 | 1 | U20 | IC, PROGRAMMED REF: 8000-27-1600 | 8600-00-0224 | WVTK | 8600-00-0224 | 1 |
| NONE | SOCKET, 14 PIN | C8814-01 | TI | 2100-03-0032 | 1 | U2 | IC | 8T95 | SIQ | 8000-08-9500 | 1 | | | | | | |
| NONE | SKT, IC, 22 PIN | D1LB-22P-108 | BURND | 2100-03-0035 | 5 | U18 | IC | CD4093BE | RCA | 8000-40-9300 | 1 | | | | | | |
| 1 | SKT, IC, 24 PIN | CA-24SPU-10SD | CA | 2100-03-0045 | 1 | U26 U27 U28 U29 | IC, DISPLAY DRIVER | UCN4810A | SPRAG | 8000-48-1000 | 4 | | | | | | |
| 2 | LOCK, SOCKET | CA-24-200-DL | CA | 2100-03-0046 | 1 | U21 U22 U23 U24 U25 | IC, DISPLAY DRIVER | UCN4815A | SPRAG | 8000-48-1500 | 5 | | | | | | |
| NONE | SOCKET, 18 PIN | D1BL-18P-108 | BURND | 2100-03-0050 | 4 | U3 | IC | MLM6810AL | MDT | 8000-68-1000 | 1 | | | | | | |
| TP1 TP2 TP3 | BUSS BAR STANDOFF | 2110-001 | ARTMR | 2100-05-0024 | 3 | U4 | IC | 74LS00 | TI | 8000-74-0010 | 2 | | | | | | |
| Y1 | CRYSTAL, 4MHZ | 180-502 | WVTK | 2300-99-0004 | 1 | U9 | IC | 7402 | TI | 8000-74-0200 | 1 | | | | | | |
| V1 | DISPLAY, FLOUR, (40 CHARACTER) | DC405A2 | ITRON | 2400-03-0010 | 1 | U15 U16 | IC | 74LS04 | TI | 8000-74-0410 | 2 | | | | | | |
| NONE | SPACER, SWAGE .500 H. .250 DIA .150DIA THRU. .062MTL | 6310-1/2-2-C | LYNTR | 2800-04-0015 | 4 | U30 | IC | 7474 | TI | 8000-74-7400 | 1 | | | | | | |
| NONE | SPACER, SWAGE .750 H. .250 DIA .150DIA THRU. .062MTL | 6310-3/4-2-C | LYNTR | 2800-04-0016 | 4 | U8 | IC | 74LS74 | TI | 8000-74-7410 | 1 | | | | | | |
| WAVETEK PARTS LIST TITLE: PCA, LOGIC/DECODER BD ASSEMBLY NO. 1100-00-0938 PAGE: 2 | | | | | WAVETEK PARTS LIST TITLE: PCA, LOGIC/DECODER BD ASSEMBLY NO. 1100-00-0938 PAGE: 4 | | | | | WAVETEK PARTS LIST TITLE: PCA, LOGIC/DECODER BD ASSEMBLY NO. 1100-00-0938 PAGE: 5 | | | | | | | |

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | | |
|--|--------------------------------------|--------------|---------------------------------------|-------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE | APPROV | PARTS LIST | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED | | PCA, LOGIC/DECODER BD | |
| FINISH WAVETEK PROCESS | .XXX .010 ANGLES .1 .XX .030 | | DO NOT SCALE DWG | SCALE |
| | MODEL NO | DWG NO | REV | |
| | 172B | 1100-00-0938 | | |
| | CODE IDENT | 23338 | SHEET 1 | OF 1 |

| REV | ECN | BY | DATE | APP |
|-----|----------|----|--------|-----|
| A | ECN 2785 | fr | 9/7/76 | DC |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

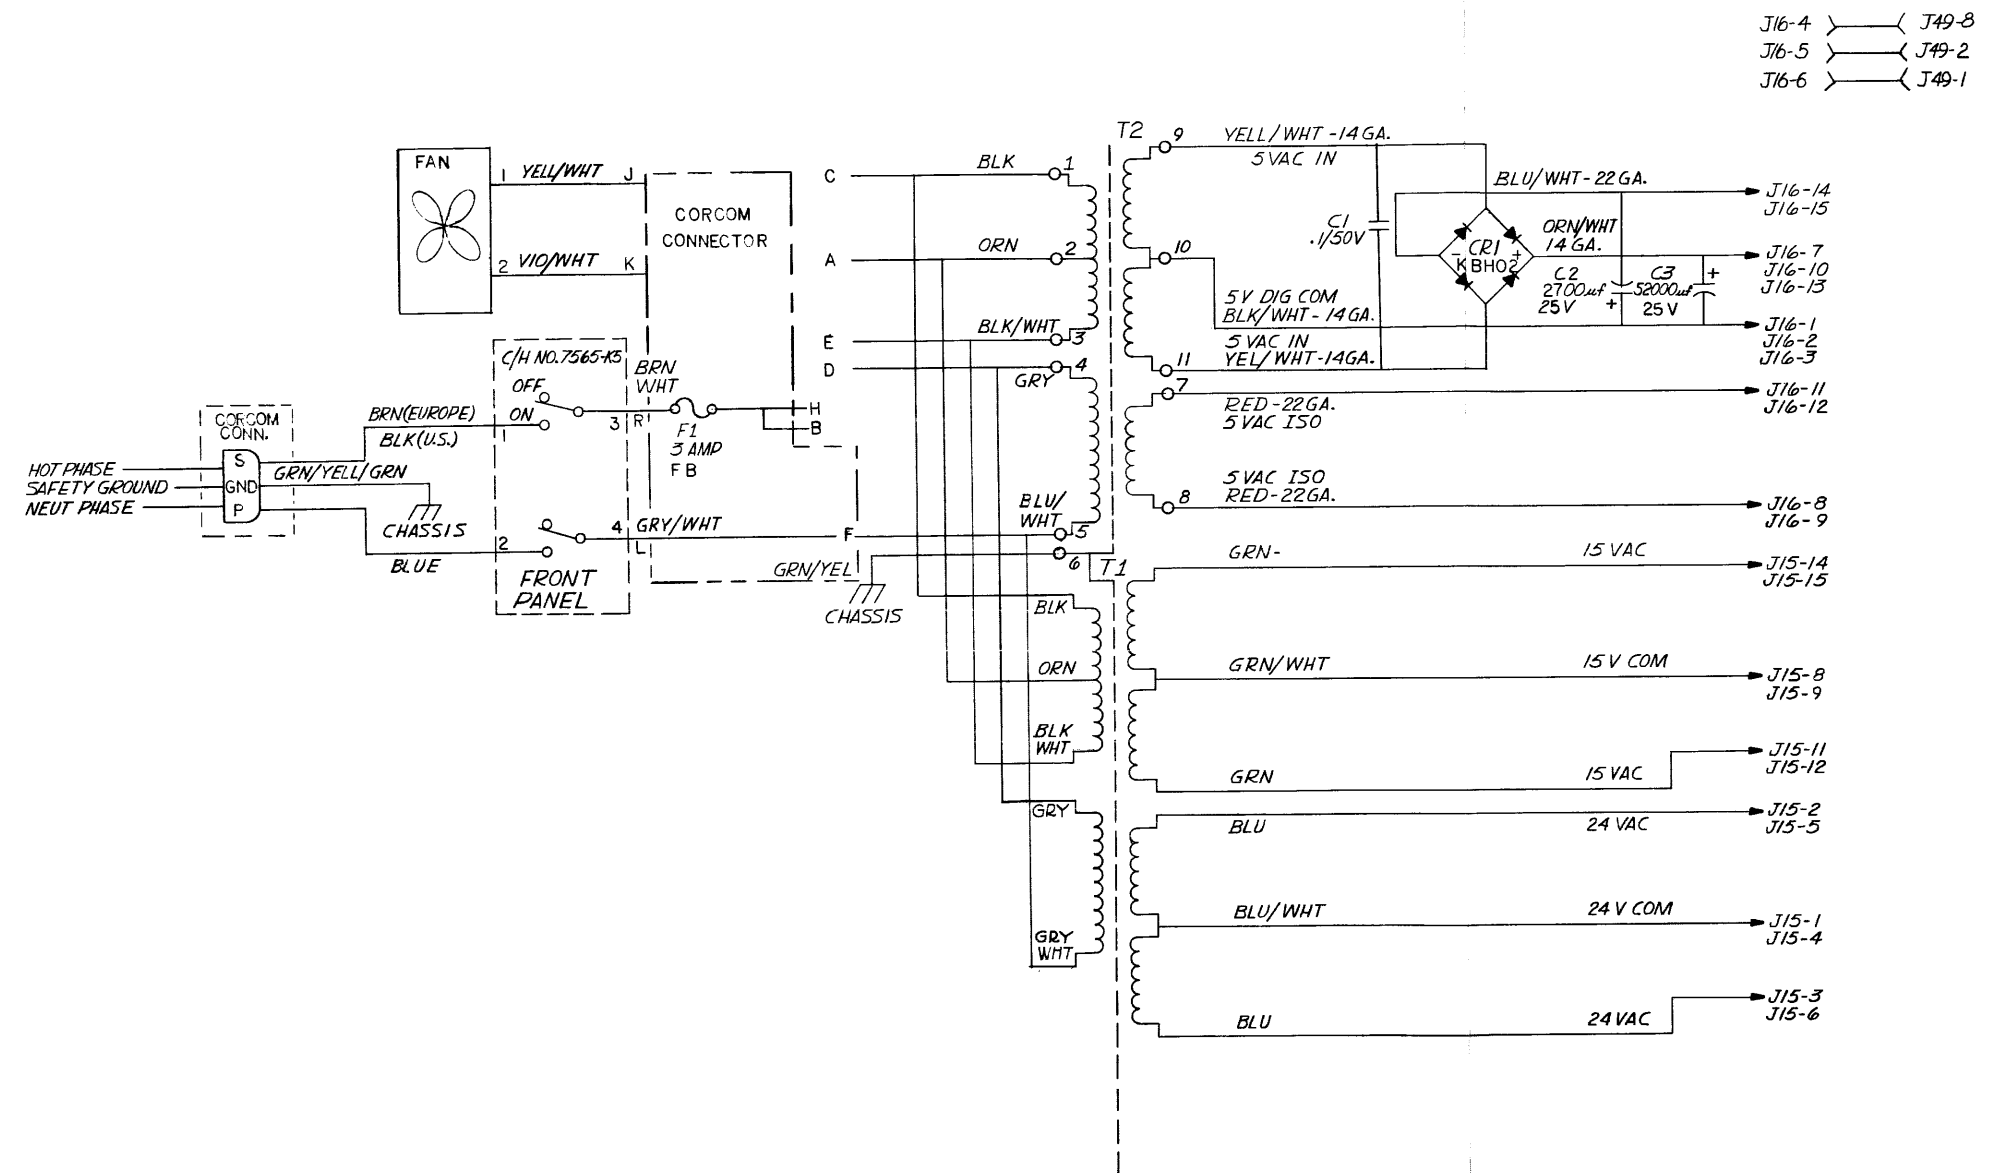


J16-4 } J49-8
 J16-5 } J49-2
 J16-6 } J49-1

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|--|-----------------------------|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 6-9-76 | WAVETEK <small>SAN DIEGO • CALIFORNIA</small> |
| MATERIAL | DESIGNED R. BROWN | RELEASE APPROV. R. BROWN | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES 1:1 XX ± .030 | | TITLE SCHEMATIC POWER SUPPLY AND REGULATOR REAR PANEL |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0104-OC-0792 |
| | | CODE IDENT | REV A |
| | | 23338 | SHEET / OF / |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|------------------|------|----------|-----|
| A | ECN # 2132 | LITE | 5-5-81 | |
| B | ECN # 2375 | DC | 10/20/81 | |
| C | ECN 2785 | fra | 9/17/81 | fra |
| D | ECN 2966 | fra | 1/16/82 | fra |
| | ECN 2977 (CL II) | fra | 3/4/82 | fra |
| | 3227 (CL II) | fra | 9/5/82 | fra |

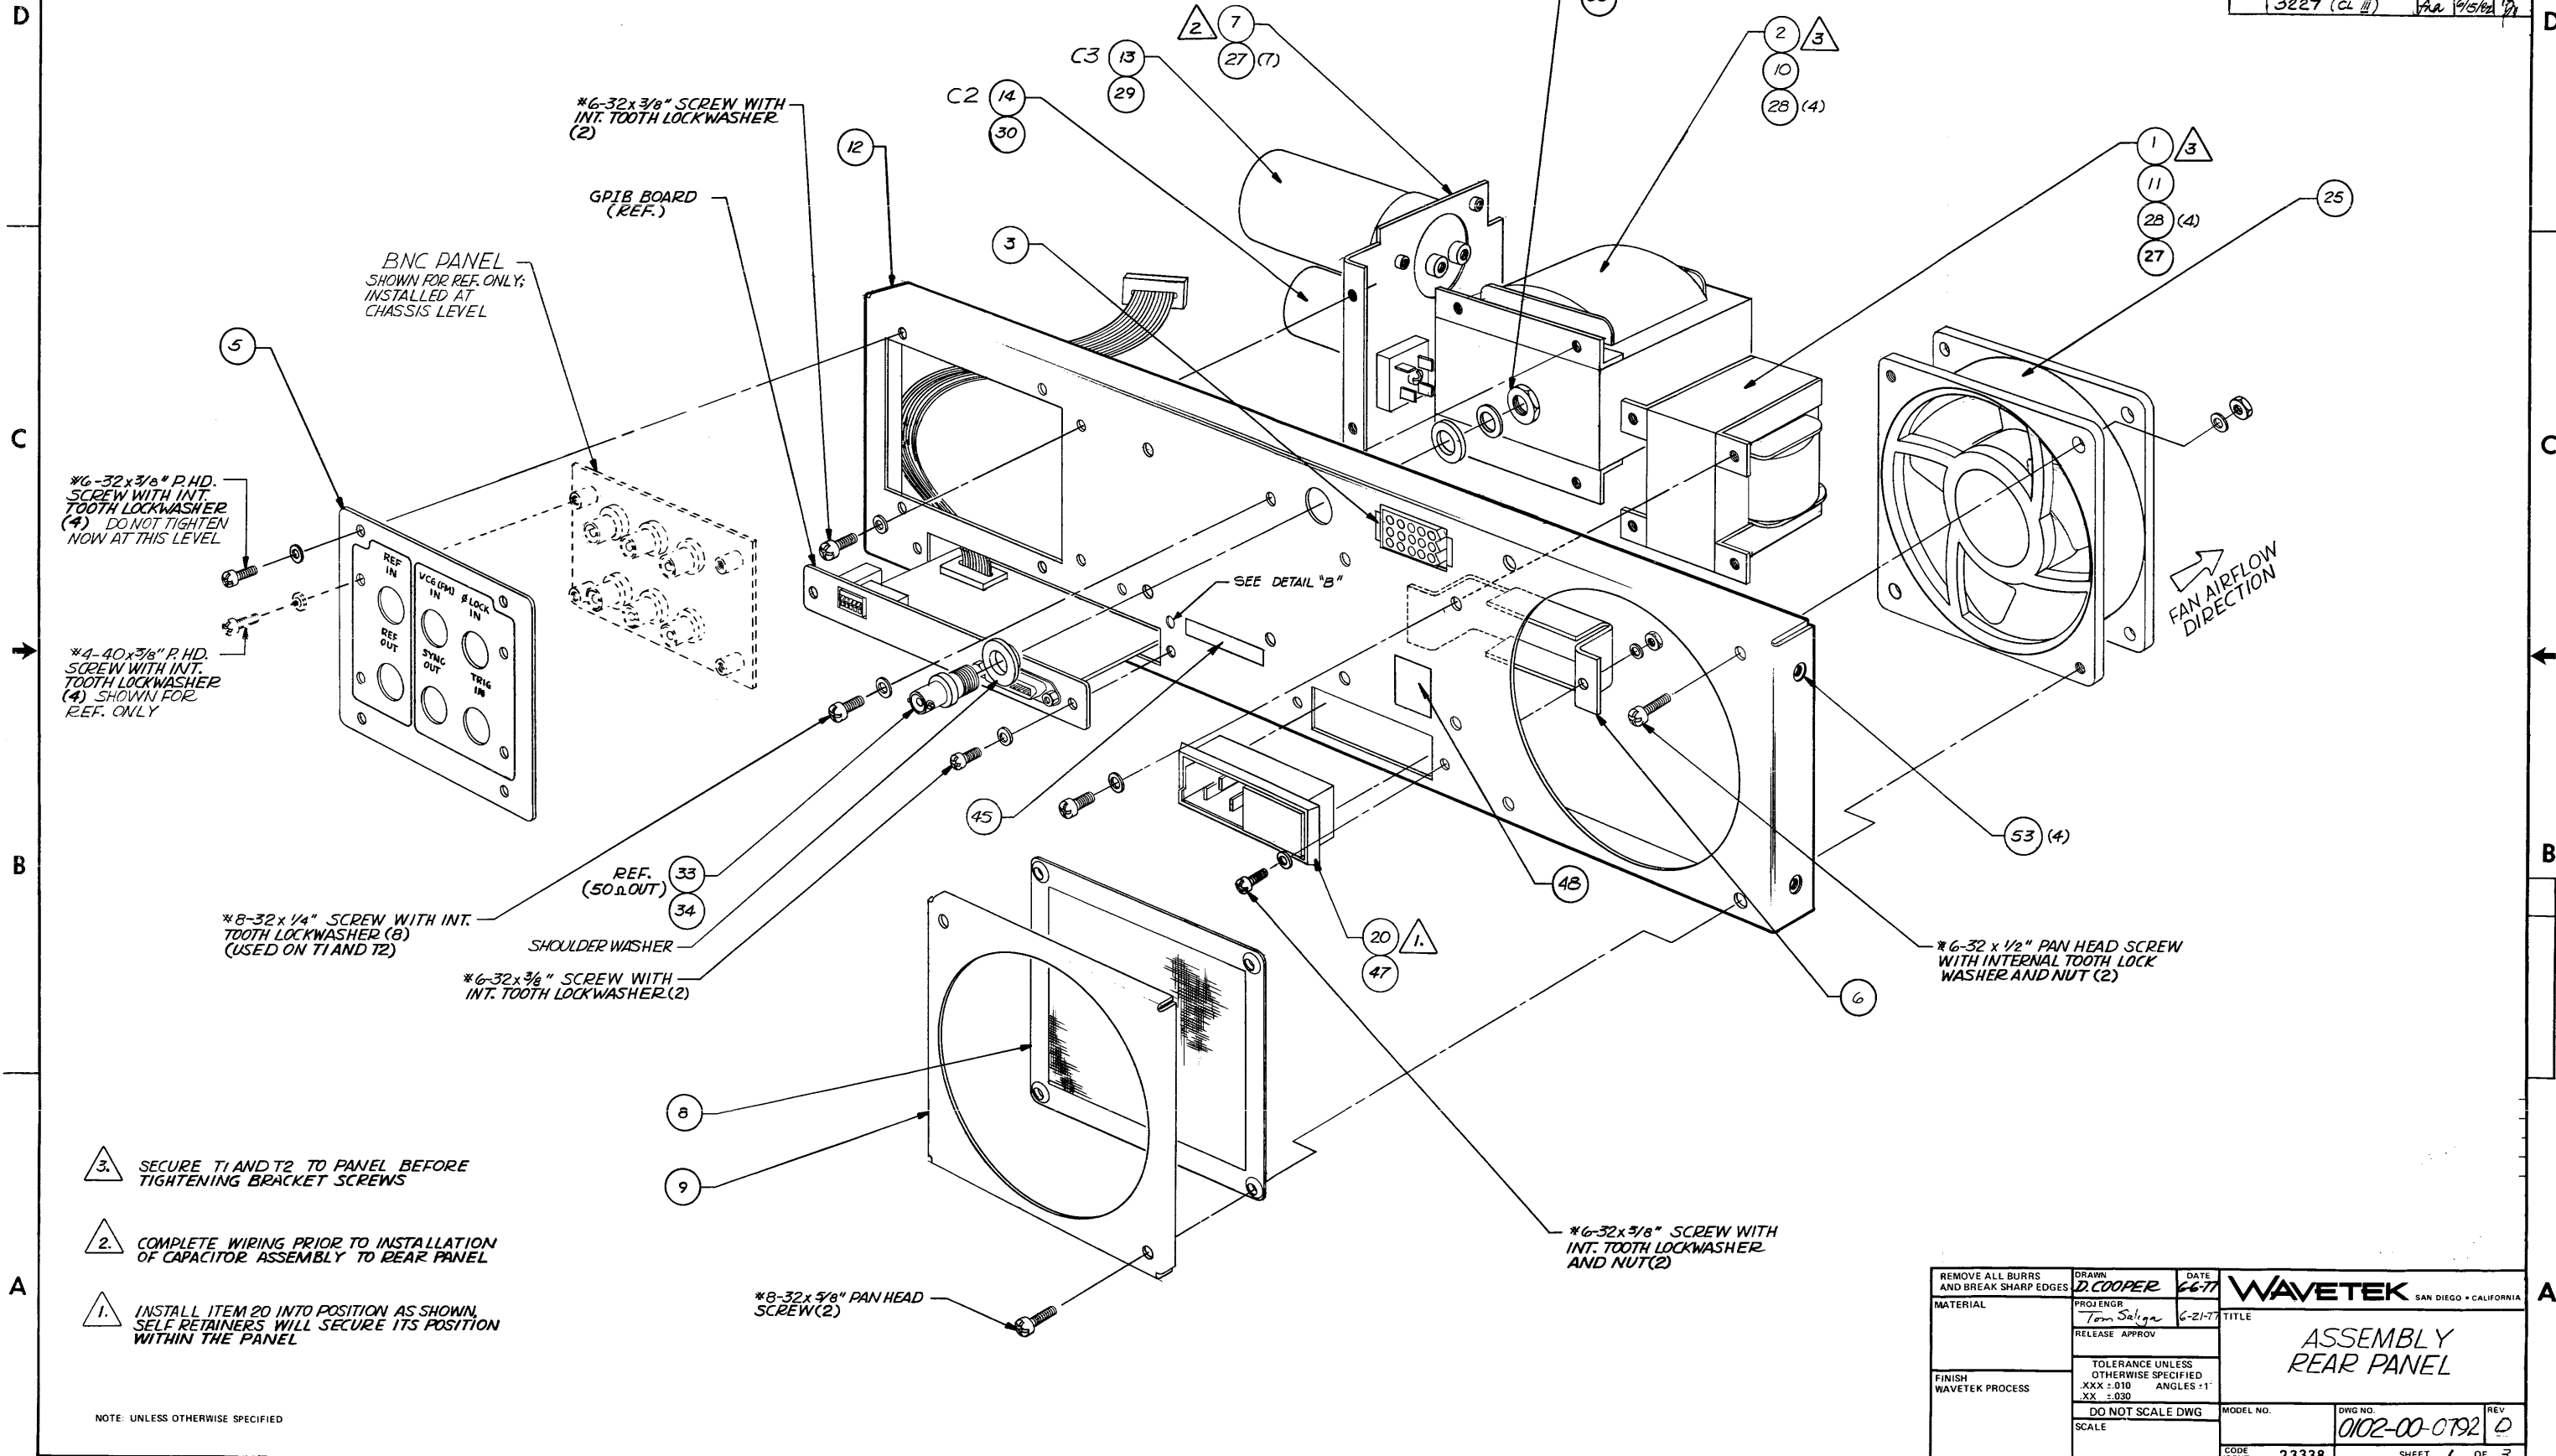


- 3. SECURE T1 AND T2 TO PANEL BEFORE TIGHTENING BRACKET SCREWS
- 2. COMPLETE WIRING PRIOR TO INSTALLATION OF CAPACITOR ASSEMBLY TO REAR PANEL
- 1. INSTALL ITEM 20 INTO POSITION AS SHOWN. SELF RETAINERS WILL SECURE ITS POSITION WITHIN THE PANEL

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|-------------------------------|--|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 6-6-77 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR <i>Tom Selig</i> | DATE 6-21-77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 ANGLES ±1° XX ±.030 | TITLE ASSEMBLY REAR PANEL |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0102-00-0792 |
| | | CODE IDENT 23338 | REV 0 |
| | | SHEET 1 OF 3 | |


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

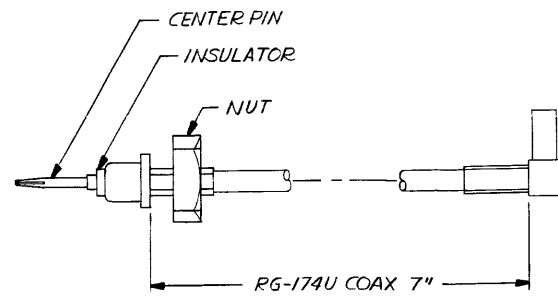

DETAIL "C"
COAX DETAIL



DETAIL "D"
TRANSFORMER
BRACKET

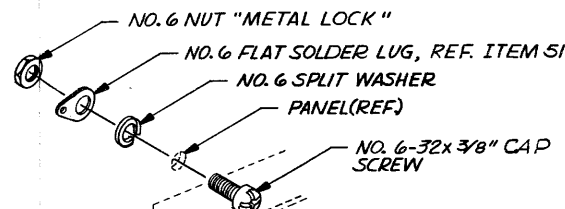

DETAIL "B"
TYP GROUND LUG
STACK-UP
(3 PLACES)

NOTE: ALL CONNECTORS TO BE MECHANICALLY SECURE TO CHASSIS PRIOR TO SOLDERING GROUND WIRES TO LUGS.

ADD SHRINK SLEEVING (1.5" LONG) TO TERMINALS (4 PLCS) USE NO. 10-32 x 5/8" P.H.D. SCREW WITH LOCK WASHERS UNDER AND ON TOP OF LUG (TYP. 4)

NOTE: ASSEMBLE CAPACITOR BRACKETS (2) COMPLETELY BEFORE MOUNTING TO REAR PANEL

* 6-32 x 3/8" SCREW WITH FLAT WASHER AND SPLIT LOCK WASHER (5)

* 8-32 x 5/8" P.H.D. SCREW WITH LOCKWASHER AND NUT (2)

CAUTION: THIS TAB MUST BE IN LOCATION SHOWN

.1/50V CAPACITOR (C1) ORN (31) (CR1, REF.)

INSTALL BRIDGE ASSY. WITH *6-32 x 5/8" SCREW WITH INT. TOOTH LOCKWASHER (USE HEATSINK COMPOUND)

WHT (2) - (1) 14 GA (1) 18 GA
BLU (3) - (1) 14 GA (2) 18 GA

FOR DETAIL WIRING OF J16 AND J49 SEE SHIT 3 of 3

NOTE: ADD NUMBER STICKERS TO J15 AND J16

49 JF2S RECEPTACLE

TO JF2P PLUG, HEAT SENSOR PASS TRANSISTOR BOARD. (INSTALL VINYL COATED SLEEVING #8)

DETAIL "A" POWER RECEPTACLE WIRING (CORCOM)

BRN/WHT PIN 7
WHT, PIN 6
BLK, PIN 2
RED, PIN 3
GRN, PIN 1

SEE DETAIL "D"

GRND LUG 2 ON R/PANEL

GRN/YEL TO GRN LUG #1 (REAR PANEL)

TO 9 PIN MOLEX (22 GA. TYP.)

GRY/WHT
BLK/WHT
GRY
BLK
ORN

FROM T2

YEL/WHT AND VIO/WHT TO FAN

#4 SLEEVING

T1

YEL/WHT [11]
WHT [10]
YEL/WHT [9]
RED [7][8]

#8 SLEEVING

#4 SLEEVING

18

46

SEE DETAIL "C"

SEE DETAIL "A" (CORCOM WIRING)

- [1] BLK, BLK, YEL/WHT
- [2] ORN, ORN
- [3] VIO/WHT, BLK/WHT, BLK/WHT
- [4] GRY, GRY
- [5] GRY/WHT, GRY/WHT
- [6] GRN/YEL TO T1
- [6] GRN/YEL TO GRND LUG #2

| PIN NO. | WIRE COLOR | GA. |
|---------|------------|-----|
| 1 | BLU/WHT | 22 |
| 2 | BLU | |
| 3 | BLU | |
| 4 | BLU/WHT | |
| 5 | BLU | |
| 6 | NOT USED | |
| 7 | WHT/GRN | |
| 8 | WHT/GRN | |
| 9 | NOT USED | |
| 10 | GRN | |
| 11 | GRN | |
| 12 | NOT USED | |
| 13 | GRN | |
| 14 | GRN | |
| 15 | GRN | |

JUMPERS REQ'D.
PIN 1 TO 4 BLU/WHT
2 5 BLU
3 6 BLU
8 9 WHT/GRN
11 12 GRN
PIN 14 TO 15 GRN

J49 (54) (55) (6)

J16 (17) (24) (10)


(12) (24) (17) J15

▲ = APPLY #200 LOCTITE, ALL 8 SCREWS THRU BOTH TRANSFORMERS AS SHOWN.

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|-------------------------|---|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 6-6-77 | |
| MATERIAL | PROJ ENGR Tom Seeger | DATE 6-21-77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ± .010 ANGLES : 1 XX ± .030 | MODEL NO. |
| SCALE | DO NOT SCALE DWG | DO NOT SCALE DWG | DWG NO. 0102-00-0792 |
| | SCALE | | REV D |
| | CODE IDENT 23338 | | SHEET 2 OF 3 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

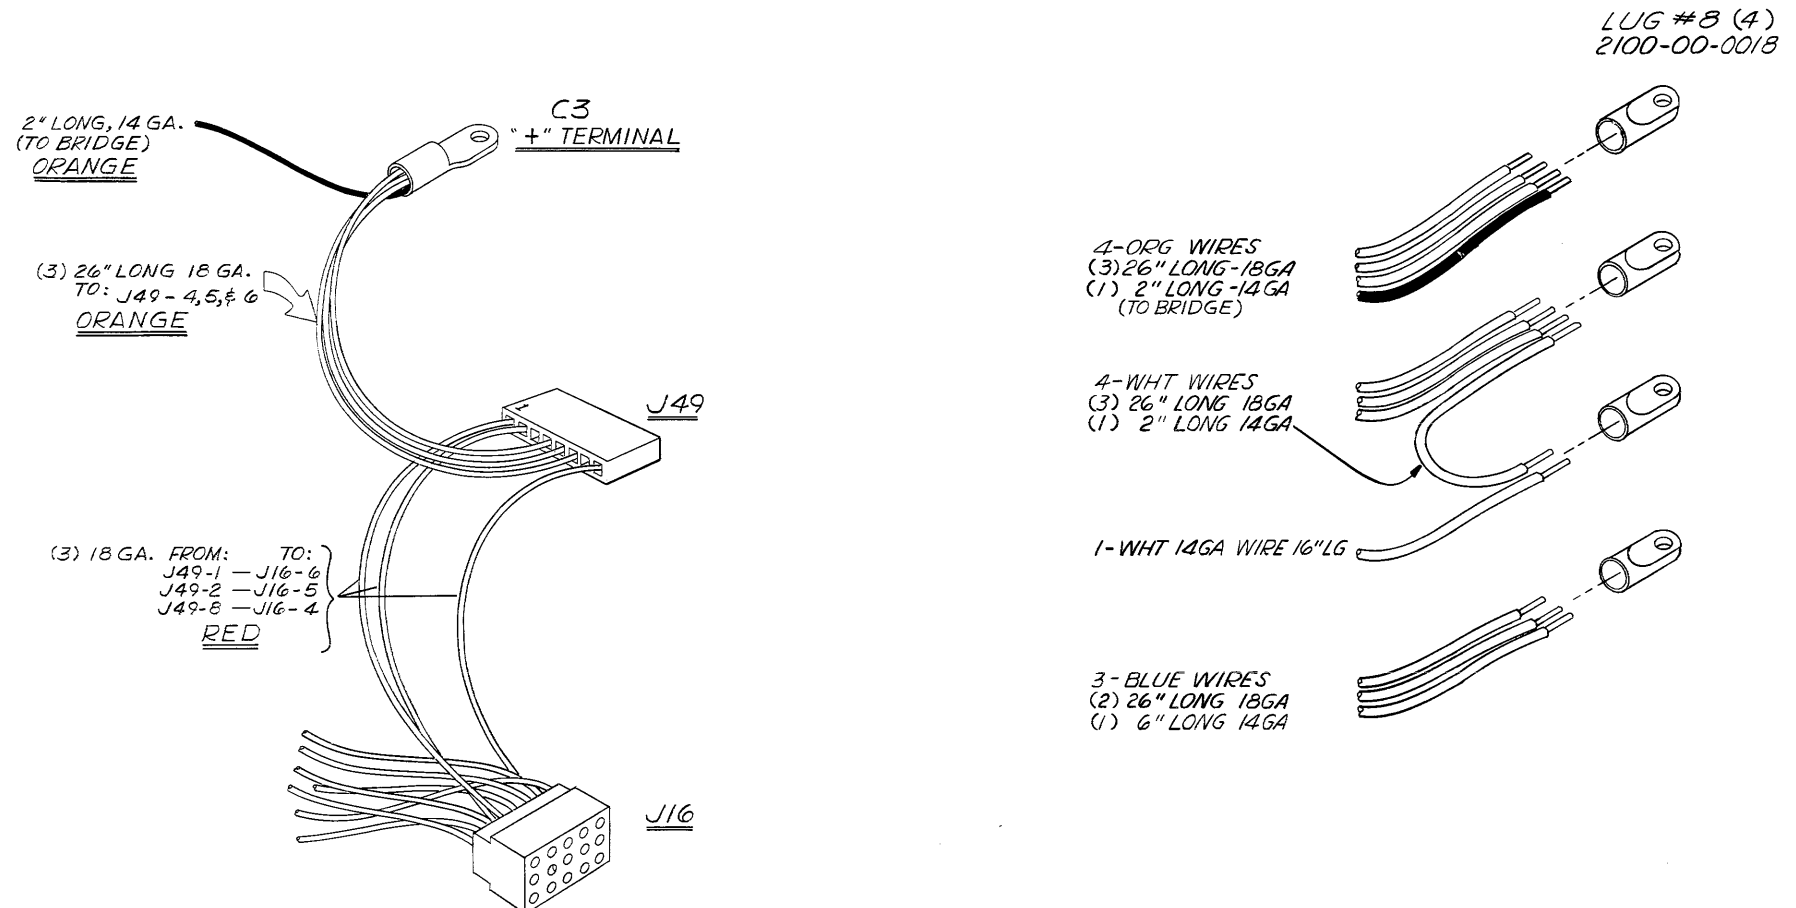

J49 WIRING

| PIN NO. | DESTINATION | COLOR | GA. |
|---------|-------------|-------|-----|
| 1 | J16-6 | RED | 18 |
| 2 | J16-5 | RED | 18 |
| 3 | NOT USED | | |
| 4 | "+" C3 | ORN | 18 |
| 5 | "+" C3 | ORN | 18 |
| 6 | "+" C3 | ORN | 18 |
| 7 | NOT USED | | |
| 8 | J16-4 | RED | 18 |

J16 WIRING

| PIN NO. | DESTINATION | COLOR | GA. |
|---------|-------------|-------|-----|
| 1 | | WHT | 18 |
| 2 | | WHT | 18 |
| 3 | | WHT | 18 |
| 4 | J49-8 | RED | 18 |
| 5 | J49-2 | RED | 18 |
| 6 | J49-1 | RED | 18 |
| 7 | NOT USED | | |
| 8 | NOT USED | | |
| 9 | | RED | 22 |
| 10 | NOT USED | | |
| 11 | NOT USED | | |
| 12 | | RED | 22 |
| 13 | NOT USED | | |
| 14 | | BLU | 18 |
| 15 | | BLU | 18 |

NO JUMPERS USED

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|---|-------------------------------------|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN <i>RO FIFER</i> | DATE 5-17-78 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR <i>[Signature]</i> | DATE <i>[Signature]</i> | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TITLE ASSEMBLY REAR PANEL | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 XX ±.030 | DO NOT SCALE DWG | MODEL NO |
| | SCALE | | DWG NO. 0102-00-0792 |
| | | | REV D |
| | CODE IDENT 23338 | | SHEET 3 OF 3 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFG-PART-NO | MFG | WAVETEK NO. | QTY/PT |
|-----------------------|------------------|------------------|-------|--------------|--------|
| 33 | BNC CONN | KC-19-152 | KING | 2100-01-0006 | 1 |
| 16 | CONN, 9PIN | 03-06-1091 | MOLEX | 2100-02-0010 | 1 |
| 3 | CONN, 15PIN | 03-09-1151 | MOLEX | 2100-02-0012 | 1 |
| 17 | PLUG, 15PIN | 03-09-2151 | MOLEX | 2100-02-0013 | 2 |
| 54 | CONN HOUSING | 1-87025-6 | AMP | 2100-02-0077 | 1 |
| NONE | CONNECTOR | JF25 | WINCH | 2100-02-0081 | 1 |
| 20 | RECEPTACLE | 6VJ1 | CORCH | 2100-03-0026 | 1 |
| 22 | LUG | 35 | ILSCO | 2100-04-0018 | 4 |
| 51 | SOLDER LUG | 1485-6 | SMITH | 2100-04-0025 | 2 |
| 23 | PIN, FEMALE | 02-06-1103 | MOLEX | 2100-05-0002 | 5 |
| 24 | PIN, MALE | 02-09-2118 | MOLEX | 2100-05-0005 | 22 |
| 55 | CONN PINS | 87027-3 | AMP | 2100-05-0047 | 6 |
| 18 | CONN | 27-843 | AMPH | 2100-07-0009 | 1 |
| 47 | LABEL, RECEP | 85-1505 | CORCH | 2400-04-0001 | 1 |
| NONE | FUSE, 3A, 250V | 312003 | LITFU | 2400-05-0018 | 1 |
| 8 | FAN FILTER | 5502 | PANOT | 2600-01-0005 | 1 |
| 25 | FAN, MODIFIED | 2600-99-0002 | WVTK | 2600-99-0002 | 1 |

WAVETEK
PARTS LIST

TITLE REAR PANEL ASSY

ASSEMBLY NO. 1101-00-0792
PAGE: 2

REV C

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFG-PART-NO | MFG | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFG-PART-NO | MFG | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------------------|------------------|-------|--------------|--------|-----------------------|------------------------|-----------------------|-------|--------------|--------|
| NONE | ASSY DRWG REAR PANEL | 0102-00-0792 | WVTK | 0102-00-0792 | 1 | | FROM: 2600-00-0005 | | | | |
| NONE | SCHEMATIC REAR PANEL | 0104-00-0792 | WVTK | 0104-00-0792 | 1 | 46 | TIE MOUNT | TM-256C | PANDT | 2800-00-0005 | 1 |
| 2 | TRANSFORMER | 1728-0035 | WVTK | 1204-00-0035 | 1 | NONE | TY-WRAP | TY-523M | TB | 2800-00-0006 | 20 |
| NONE | TRANSFORMER | 1728-0054 | WVTK | 1204-00-0054 | 1 | 27 | INSERT # 6 | 74-11-106-13 | SOTCO | 2800-09-0017 | 12 |
| 6 | SHIELD, PWR | 1400-00-6210 | WVTK | 1400-00-6210 | 1 | 28 | INSERT #8 | 74-11-108-13 | SOTCO | 2800-09-0018 | 8 |
| 7 | BRKT | 1400-00-7043 | WVTK | 1400-00-7043 | 1 | 29 | CAP, MTC, BKT | FJMR | STM | 2800-12-0006 | 1 |
| 9 | SCREEN COVER | 1400-00-7523 | WVTK | 1400-00-7523 | 1 | 30 | CAP, MTC, BKT | FJMR-2 | STM | 2800-12-0007 | 1 |
| 11 | BRKT, XFMR | 1400-00-7543 | WVTK | 1400-00-7543 | 4 | 33 | NUT, PRESS, 6-32 | 9-632-1 | PEM | 2800-16-0014 | 4 |
| 10 | BRKT, XFMR, MTG | 1400-00-7783 | WVTK | 1400-00-7783 | 2 | 34 | WASHER, SHOULDER | 2668 | SMITH | 2800-27-0004 | 1 |
| 5 | BNC MTG PLATE | 1400-00-7790 | WVTK | 1400-00-7790 | 1 | 35 | NYLON FLAT WASHER | 2264-N-385 | AHTOM | 2800-28-0005 | 1 |
| 12 | REAR PANEL | 1400-00-7810 | WVTK | 1400-00-7810 | 1 | 40 | SLEEIVING, BLK 3/8 IN. | SLEEIVING, BLACK 3/8" | NATBR | 3000-00-0024 | 2 |
| 48 | LABEL, OPTION | 1400-00-8880 | WVTK | 1400-00-8880 | 1 | 41 | SLEEIVING, BLACK #4 | SLEEIVING, BLACK #4 | NATBR | 3000-00-0025 | 2 |
| 45 | I. D. LABEL | 1400-00-9090 | WVTK | 1400-00-9090 | 1 | 42 | SLEEIVING, BLACK #8 | SLEEIVING, BLACK #8 | NATBR | 3000-00-0026 | 2 |
| 52 | IPOLYESTER FILM REF: 1600-99-0002 | 1400-01-3191 | WVTK | 1400-01-3191 | 2 | 31 | BRIDGE ASSY 30 AMP | MDA990-1 | MOT | 4899-00-0010 | 1 |
| C1 | CAP, CER, MON, .1MF, 50V | CAC0325U104Z050A | CORNG | 1500-01-0405 | 1 | NONE | CABLE, 4 COND, 20GA | 8722 | BELDN | 6001-70-0007 | 1 |
| 14 | CAP, ELECT, 2700MF, 25V | 91C25HA272 | MEPCO | 1500-32-7202 | 1 | | | | | | |
| 13 | CAP, ELEC, 5200MF, 15V | FAHM52000-15-B3 | CDE | 1500-35-2301 | 1 | | | | | | |

WAVETEK
PARTS LIST

TITLE REAR PANEL ASSY

ASSEMBLY NO. 1101-00-0792
PAGE: 1

REV C

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFG-PART-NO | MFG | WAVETEK NO. | QTY/PT |
|-----------------------|------------------------|-----------------------|-------|--------------|--------|
| 46 | TIE MOUNT | TM-256C | PANDT | 2800-00-0005 | 1 |
| NONE | TY-WRAP | TY-523M | TB | 2800-00-0006 | 20 |
| 27 | INSERT # 6 | 74-11-106-13 | SOTCO | 2800-09-0017 | 12 |
| 28 | INSERT #8 | 74-11-108-13 | SOTCO | 2800-09-0018 | 8 |
| 29 | CAP, MTC, BKT | FJMR | STM | 2800-12-0006 | 1 |
| 30 | CAP, MTC, BKT | FJMR-2 | STM | 2800-12-0007 | 1 |
| 33 | NUT, PRESS, 6-32 | 9-632-1 | PEM | 2800-16-0014 | 4 |
| 34 | WASHER, SHOULDER | 2668 | SMITH | 2800-27-0004 | 1 |
| 35 | NYLON FLAT WASHER | 2264-N-385 | AHTOM | 2800-28-0005 | 1 |
| 40 | SLEEIVING, BLK 3/8 IN. | SLEEIVING, BLACK 3/8" | NATBR | 3000-00-0024 | 2 |
| 41 | SLEEIVING, BLACK #4 | SLEEIVING, BLACK #4 | NATBR | 3000-00-0025 | 2 |
| 42 | SLEEIVING, BLACK #8 | SLEEIVING, BLACK #8 | NATBR | 3000-00-0026 | 2 |
| 31 | BRIDGE ASSY 30 AMP | MDA990-1 | MOT | 4899-00-0010 | 1 |
| NONE | CABLE, 4 COND, 20GA | 8722 | BELDN | 6001-70-0007 | 1 |

WAVETEK
PARTS LIST

TITLE REAR PANEL ASSY

ASSEMBLY NO. 1101-00-0792
PAGE: 3

REV C

| | | | | |
|--|---|------|---------------------------------------|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | PARTS LIST REAR PANEL ASSY | |
| | RELEASE APPROV | | | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030 | | | |
| FINISH WAVETEK PROCESS | DO NOT SCALE DWG | | | |
| | SCALE | | MODEL NO. 172B | DWG NO. 1101-00-0792 |
| | | | REV C | |
| | | | CODE IDENT 23338 | SHEET 1 OF 1 |

NOTE: UNLESS OTHERWISE SPECIFIED


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|---|-----|---------|-----|
| A | "P17" WAS "J1", "J1" WAS "J2", "NDAC" WAS "NOAC", "ADI0" THRU "ADI4" WAS "AOI0" THRU "AOI4" | TLF | 6-29-77 | |
| B | ECN 1687 | RO | 3-22-78 | |
| C | ECN 2487 | LOU | 1-19-81 | AK |


GPIB BOARD
PIN NO.'S

| REF |
|-----|
| A80 |
| B79 |
| A79 |
| B82 |
| A81 |
| B81 |
| B80 |
| B78 |
| |
| A83 |
| B83 |
| A87 |
| B87 |
| A86 |
| B84 |
| B88 |
| A82 |
| |
| A84 |
| B85 |
| A88 |
| A85 |
| B86 |
| |
| A78 |
| |
| A77 |
| B77 |
| J2 |


P17 (RIBBON CABLE)

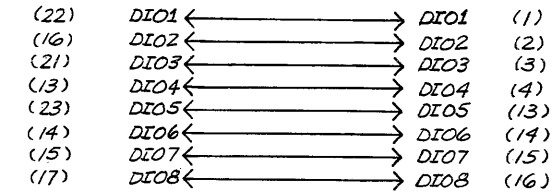

J1 (GPIB REAR CONN)

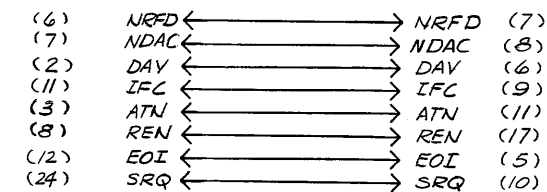


SHIELD COM (12)

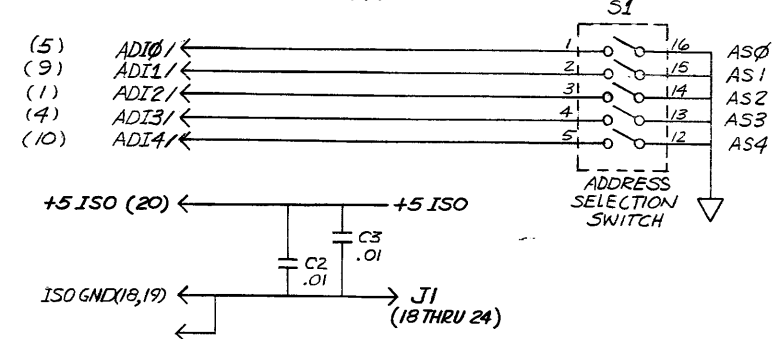


GREEN WIRE TO CHASSIS GROUND

NOTE: UNLESS OTHERWISE SPECIFIED


| | | | |
|--|-------------------------|---|-----------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN T. FOSTER | DATE 5/16/77 | SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR Tom Daliga | SEPT 6/77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES : 1° XX ± .030 | TITLE SCHEMATIC - GPIB DECODER |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0554 |
| | | CODE IDENT 23338 | REV C |
| | | SHEET 1 OF 1 | |

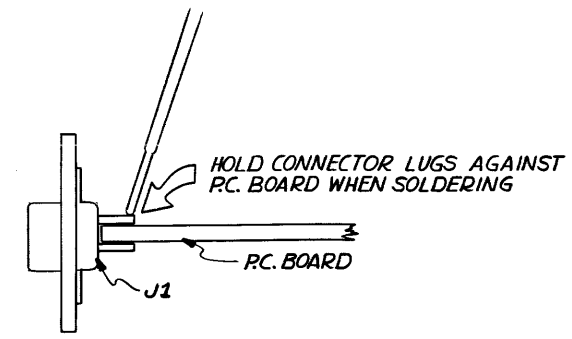

DETAIL "B"
LUG SOLDERING TO PC. BD.

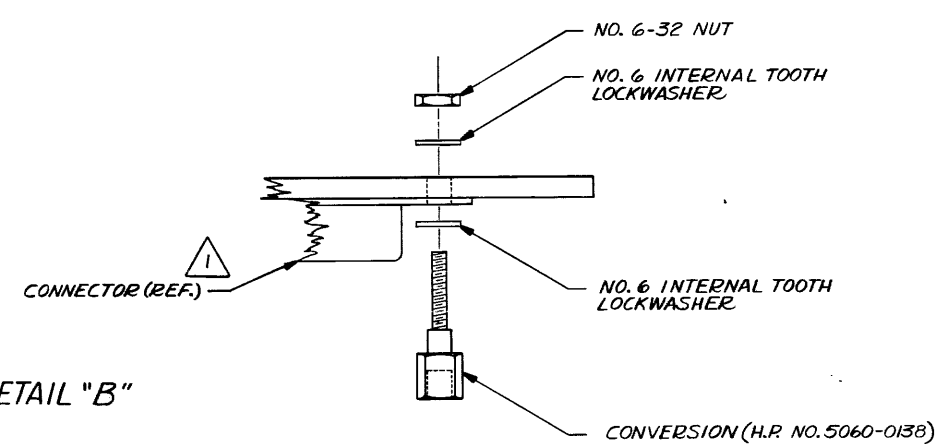

DETAIL "A"
H.R. CONVERSION NO. 5060-0138
HP-1B

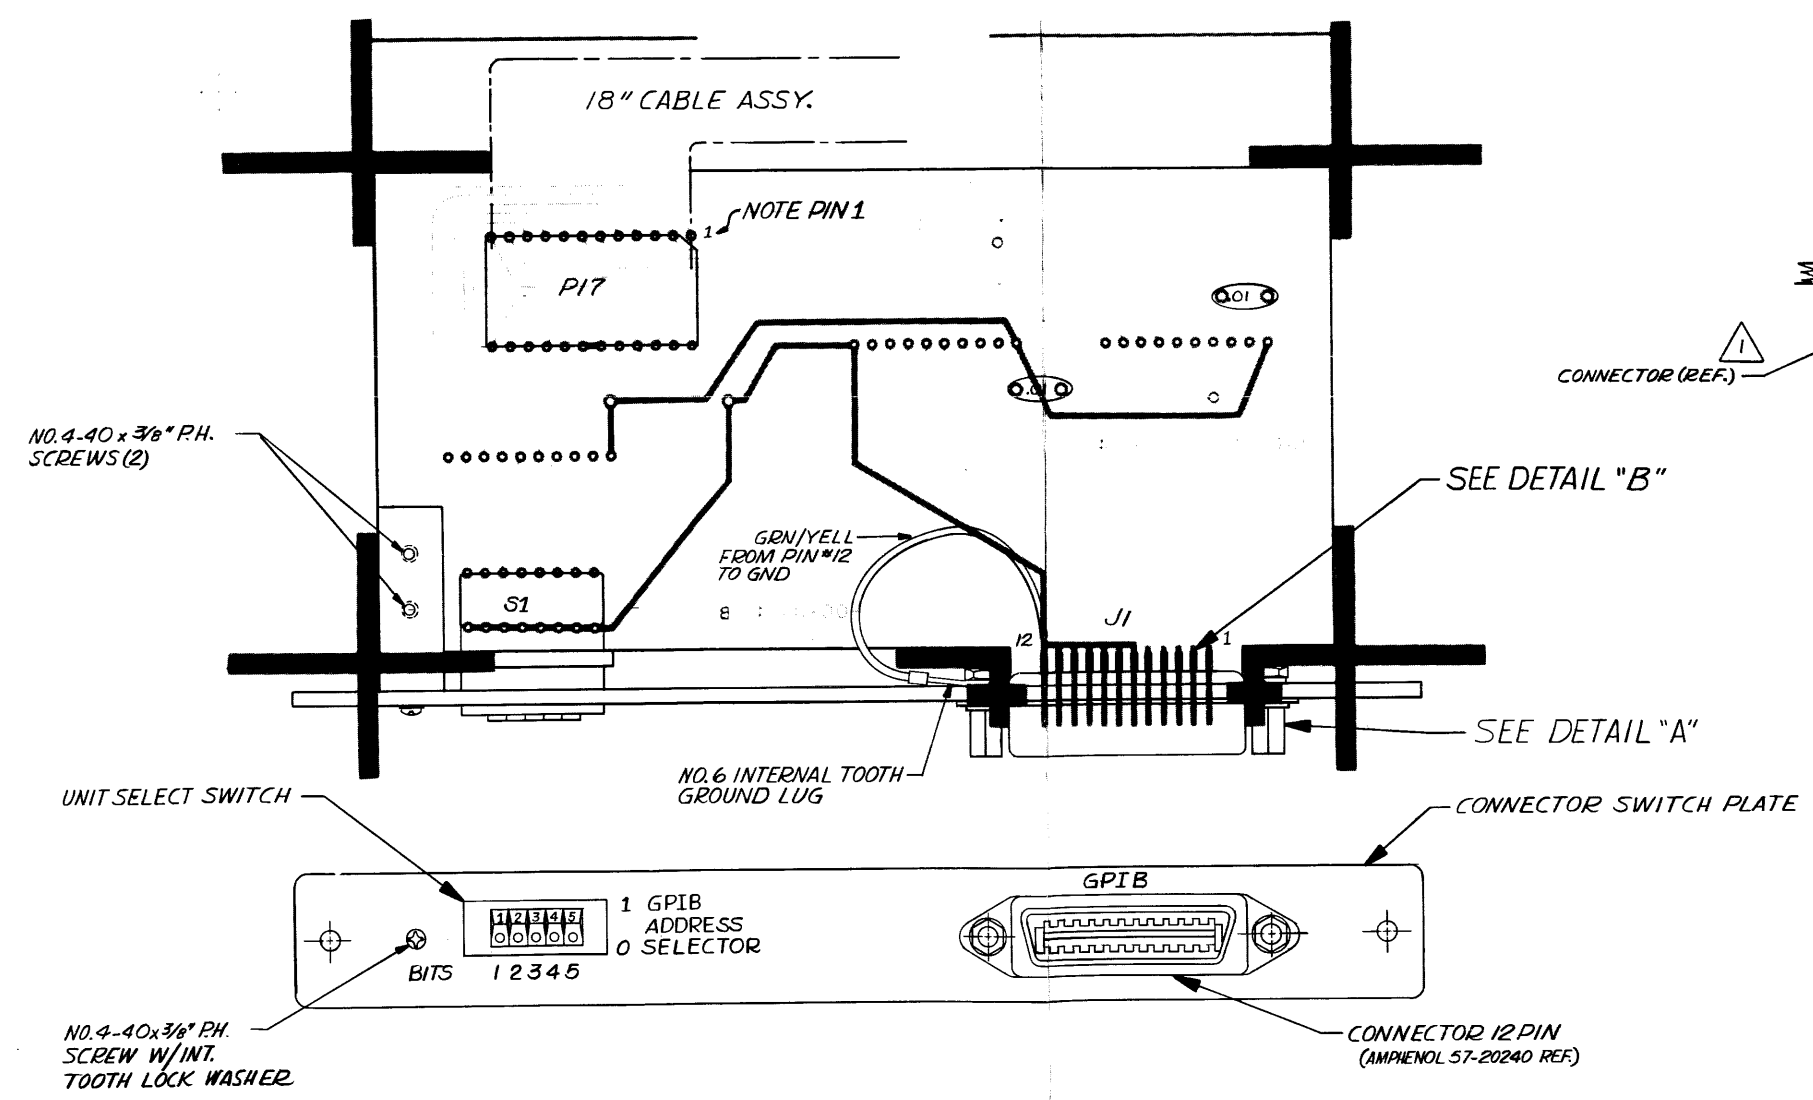

⚠ REMOVE FLOATING HARDWARE FROM CONNECTOR FLANGE

NOTES: UNLESS OTHERWISE SPECIFIED.

| | | | |
|---|----------|--------|----------|
| K | # 2487 | LOU | 11-19-81 |
| J | # 2129 | LJTE | 4-30-80 |
| H | # 2039 | del... | 8-28-79 |
| G | ECN 333 | DC | 11-10-78 |
| F | ECN 1687 | RD | 5-23-78 |

| | | | | |
|-----------|------------|------|---------|--|
| DRAWN | D. COOPER | DATE | 11-8-76 | WAVETEK ASSEMBLY GPIB DECODER 0101-00-0554 K SHEET 1 OF 1 |
| PROJ ENGR | Tom Salgia | SEPT | 6 '77 | |
| RELEASE | APPROV | | | |
| | | | | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFOR-PART-NO | MFOR | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------|----------------------|-------|--------------|--------|
| NONE | ASSY DRWG DECODER | 0101-00-0554 | WVTK | 0101-00-0554 | 1 |
| NONE | SCHEMATIC DECODER | 0103-00-0554 | WVTK | 0103-00-0554 | 1 |
| NONE | CONN. BLOCK | 157-314 | WVTK | 1400-00-3043 | 1 |
| NONE | CONN PLATE | 1400-00-6610 | WVTK | 1400-00-6610 | 1 |
| C2 C3 | CAP, CER, MN. .01MF, 50V | CACD2Z5U103Z100A | CDRNG | 1500-01-0310 | 2 |
| NONE | DECODER | 1700-00-0554 | WVTK | 1700-00-0554 | 1 |
| J1 | CONN | 57-20240 | AMPH | 2100-02-0060 | 1 |
| NONE | SOCKET | 516-A07D | AUGAT | 2100-03-0034 | 1 |
| NONE | TERM. LOCK LUG | 1414-6 | SMITH | 2100-04-0009 | 1 |
| NONE | JACK SCREW | 408-146475 | AMPH | 2800-23-0008 | 2 |
| S1 | SWITCH PC | 500-105 | DUNCN | 5179-00-0001 | 1 |
| P17 | INTERCONNECT CABLE | CA-D24P02-26-1TT-016 | CA | 6002-00-0002 | 1 |


| | | | |
|------------------------------|--------------------------------|------------------------------|----------|
| WAVETEK PARTS LIST | TITLE PCA, GPIB REAR INTERF | ASSEMBLY NO. 1100-00-0554 | REV H |
| | PAGE: 1 | | |

| | | | |
|--|--|-------------------------------------|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR | TITLE | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | PARTS LIST PCA, GPIB REAR INTERF | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX - .010 ANGLES -1 XX - .030 | | MODEL NO. 172B |
| DO NOT SCALE DWG | SCALE | DWG NO. 1100-00-0554 | REV H |
| CODE IDENT 23338 | | SHEET 1 OF 1 | |

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|----------|------|----------|-----|
| B | ECN 1689 | RO | 3-14-78 | |
| C | ECN 1844 | RO | 11-16-78 | |
| D | ECN 1941 | DC | 3-22-79 | |
| E | ECN 2131 | LITE | 5-1-80 | |

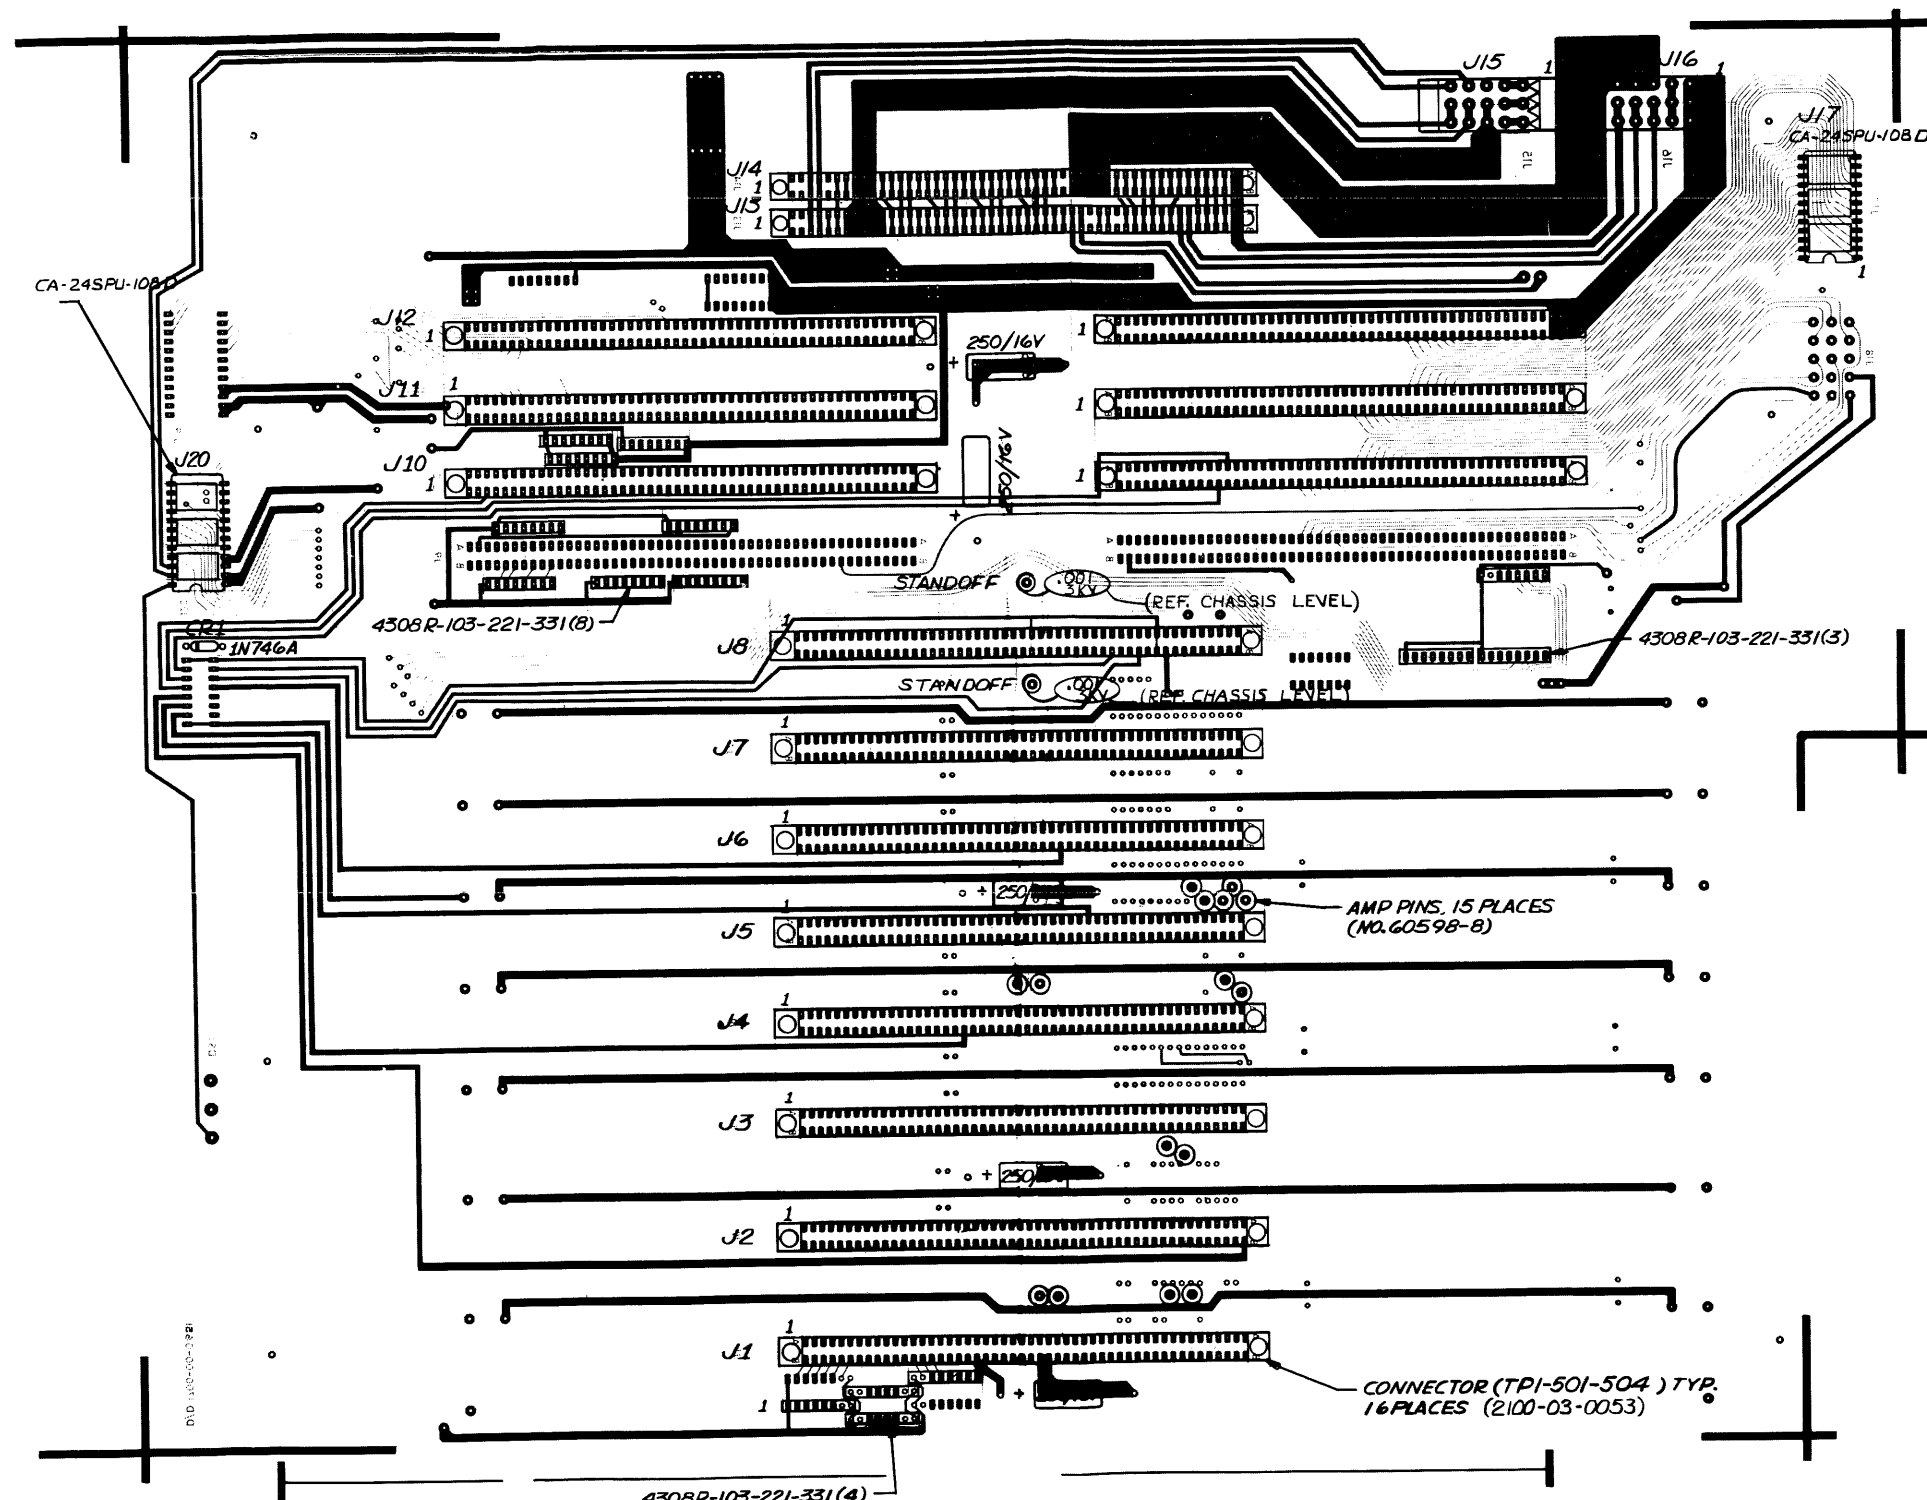

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|--------------------------------|--|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN <i>D. COOPER</i> | DATE 9-4-77 | |
| MATERIAL | PROJ ENGR <i>brn Saliga</i> | DATE SEPT 6 '77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030 | TITLE ASSEMBLY MOTHER BOARD |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0101-00-0717 |
| | | CODE IDENT 23338 | REV E |

8

7

6

5



4

3

2

1

REV ECN BY DATE APP

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

D

D

C

C

B

B

A

A

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|---|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG MOTHER | 0101-00-0717 | WVTK | 0101-00-0717 | 1 |
| C1 C2 C3 C4 C5 | CAP, ELECT, 250MF, 16V | 500D2570016DF7 | SPRAG | 1500-32-5101 | 5 |
| NONE | MOTHER BOARD | 1700-00-0651 | WVTK | 1700-00-0651 | 1 |
| J15 J16 | CONN, 15PIN | 03-09-1151 | MOLEX | 2100-02-0012 | 2 |
| J17 J20 | SKT, IC, 24 PIN | CA-24SPU-10SD | CA | 2100-03-0045 | 2 |
| NONE | CONN, EDGE CARD-CP | TP1-501-504 | TEKA | 2100-03-0053 | 16 |
| NONE | PIN, FEMALE | 02-09-1133 | MOLEX | 2100-03-0004 | 30 |
| NONE | CONN | 60598-B | AMP | 2100-03-0017 | 17 |
| NONE | STANDOFF, SHAGE .125 H. .250 DIA 4-40. .093 MAT'L | 6911-2-3C | LYNTR | 2800-03-0003 | 2 |
| NONE | RES MODULE | 4308R-103-221/331 | BOURN | 4770-00-0013 | 15 |
| CR1 | DIODE | 1N746A | FAIR | 4801-01-0746 | 1 |

| | | | |
|------------------------------|-------------------------|------------------------------|----------|
| WAVETEK PARTS LIST | TITLE PCA, MOTHER BD | ASSEMBLY NO. 1100-00-0717 | REV B |
| | | PAGE: 1 | |

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | | |
|--|--|-------|---------------------------------------|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE APPROV | | PARTS LIST PCA, MOTHER BD | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX - .010 ANGLES - 1 .XX - .030 | | MODEL NO. 172B | DWG NO. 1100-00-0717 |
| | DO NOT SCALE DWG | SCALE | REV B | |
| | | | CODE IDENT 23338 | SHEET 1 OF 1 |

8

7

6

5



4


3

2

1

Signal Routing on Mother Board

1. Terminators are on each line of the bus formed by pins 1 thru 15 of connectors J1 thru J8 and pins 33 thru 47 of connectors J10 thru J12. Typical terminator:



- Terminators are on each line of the bus of pins 5 thru 29 of connectors J10 thru J12.
- Terminators are on each line of the bus of pins 90 thru 99 of connectors J10 thru J12.
- Capacitors on the mother board are tied to +5V on the positive side and grounded on the other side.


J20, Front Panel

| | |
|----|--------------|
| 1 | +5V |
| 2 | 1 |
| 3 | Common |
| 4 | 1 |
| 5 | DBUS 7/ |
| 6 | DBUS 5/ |
| 7 | KB OUT/ |
| 8 | DBUS 3/ |
| 9 | DBUS 4/ |
| 10 | DBUS 1/ |
| 11 | DBUS 2/ |
| 12 | DBUS 0/ |
| 13 | WRP |
| 14 | DISPEN/ |
| 15 | ABUS 0/ |
| 16 | ABUS 2/ |
| 17 | ABUS 1/ |
| 18 | ABUS 4/ |
| 19 | ABUS 3/ |
| 20 | AUDIO |
| 21 | ABUS 5/ |
| 22 | 250 Volts ac |
| 23 | 1 |
| 24 | -12 Volts |

| J1/Digits 4 and 5/Reference | | | J2/Digits 2 and 3 | | | J3/Digit 1/Mixer | | | J4/VCG and Symmetry | | | J5/Triangle Generator | | | J6/Function/Preamp | | | J7/3 Digit Attenuator | | | J8/Power Amplifier/DC Offset | | |
|-----------------------------|-----|-------------|-------------------|-----|---------|------------------|-----|-------------|---------------------|-----|---------|-----------------------|-----|-------------|--------------------|-----|---------|-----------------------|-----|-------------|------------------------------|-----|---------|
| B Side | Pin | A Side | B Side | Pin | A Side | B Side | Pin | A Side | B Side | Pin | A Side | B Side | Pin | A Side | B Side | Pin | A Side | B Side | Pin | A Side | B Side | Pin | A Side |
| C07 | 1 | Strobe | C07 | 1 | Strobe | C07 | 1 | Strobe | C07 | 1 | Strobe | C07 | 1 | Strobe | C07 | 1 | Strobe | C07 | 1 | Strobe | C07 | 1 | Strobe |
| C06 | 2 | A3 | C06 | 2 | A3 | C06 | 2 | A3 | C06 | 2 | A3 | C06 | 2 | A3 | C06 | 2 | A3 | C06 | 2 | A3 | C06 | 2 | A3 |
| C05 | 3 | A2 | C05 | 3 | A2 | C05 | 3 | A2 | C05 | 3 | A2 | C05 | 3 | A2 | C05 | 3 | A2 | C05 | 3 | A2 | C05 | 3 | A2 |
| C04 | 4 | A1 | C04 | 4 | A1 | C04 | 4 | A1 | C04 | 4 | A1 | C04 | 4 | A1 | C04 | 4 | A1 | C04 | 4 | A1 | C04 | 4 | A1 |
| C03 | 5 | A0 | C03 | 5 | A0 | C03 | 5 | A0 | C03 | 5 | A0 | C03 | 5 | A0 | C03 | 5 | A0 | C03 | 5 | A0 | C03 | 5 | A0 |
| C02 | 6 | XSGN/ | C02 | 6 | XSGN/ | C02 | 6 | XSGN/ | C02 | 6 | XSGN/ | C02 | 6 | XSGN/ | C02 | 6 | XSGN/ | C02 | 6 | XSGN/ | C02 | 6 | XSGN/ |
| C01 | 7 | D7 | C01 | 7 | D7 | C01 | 7 | D7 | C01 | 7 | D7 | C01 | 7 | D7 | C01 | 7 | D7 | C01 | 7 | D7 | C01 | 7 | D7 |
| C00 | 8 | D6 | C00 | 8 | D6 | C00 | 8 | D6 | C00 | 8 | D6 | C00 | 8 | D6 | C00 | 8 | D6 | C00 | 8 | D6 | C00 | 8 | D6 |
| C17 | 9 | D5 | C17 | 9 | D5 | C17 | 9 | D5 | C17 | 9 | D5 | C17 | 9 | D5 | C17 | 9 | D5 | C17 | 9 | D5 | C17 | 9 | D5 |
| C16 | 10 | D4 | C16 | 10 | D4 | C16 | 10 | D4 | C16 | 10 | D4 | C16 | 10 | D4 | C16 | 10 | D4 | C16 | 10 | D4 | C16 | 10 | D4 |
| C15 | 11 | D3 | C15 | 11 | D3 | C15 | 11 | D3 | C15 | 11 | D3 | C15 | 11 | D3 | C15 | 11 | D3 | C15 | 11 | D3 | C15 | 11 | D3 |
| C14 | 12 | D2 | C14 | 12 | D2 | C14 | 12 | D2 | C14 | 12 | D2 | C14 | 12 | D2 | C14 | 12 | D2 | C14 | 12 | D2 | C14 | 12 | D2 |
| C13 | 13 | D1 | C13 | 13 | D1 | C13 | 13 | D1 | C13 | 13 | D1 | C13 | 13 | D1 | C13 | 13 | D1 | C13 | 13 | D1 | C13 | 13 | D1 |
| C12 | 14 | D0 | C12 | 14 | D0 | C12 | 14 | D0 | C12 | 14 | D0 | C12 | 14 | D0 | C12 | 14 | D0 | C12 | 14 | D0 | C12 | 14 | D0 |
| (SYNPR 3) | | | (SYNPR 3) | | | (SYNPR 3) | | | (SYNPR 3) | | | (SYNPR 3) | | | (SYNPR 3) | | | (SYNPR 3) | | | (SYNPR 3) | | |
| C11 | 15 | C10 | SYN 45 1 | 16 | SYN45 1 | C11 | 15 | C10 | SYN 45 1 | 16 | SYN45 1 | C11 | 15 | C10 | SYN 45 1 | 16 | SYN45 1 | C11 | 15 | C10 | SYN 45 1 | 16 | SYN45 1 |
| (LOCK 0) | | (CAUTION 0) | COM 45 17 | 17 | COM 45 | (LOCK 0) | | (CAUTION 0) | COM 45 17 | 17 | COM 45 | (LOCK 0) | | (CAUTION 0) | COM 45 17 | 17 | COM 45 | (LOCK 0) | | (CAUTION 0) | COM 45 17 | 17 | COM 45 |
| SYN 45 1 | 16 | SYN45 1 | MC COM 18 | 18 | MC0 5 | SYN 45 1 | 16 | SYN45 1 | MC COM 18 | 18 | MC0 5 | SYN 45 1 | 16 | SYN45 1 | MC COM 18 | 18 | MC0 5 | SYN 45 1 | 16 | SYN45 1 | MC COM 18 | 18 | MC0 5 |
| COM 45 17 | 17 | COM 45 | +5V 19 | 19 | +5V | COM 45 17 | 17 | COM 45 | +5V 19 | 19 | +5V | COM 45 17 | 17 | COM 45 | +5V 19 | 19 | +5V | COM 45 17 | 17 | COM 45 | +5V 19 | 19 | +5V |
| MC COM 18 | 18 | MC0 5 | MC0 1 21 | 21 | MC0 1 | MC COM 18 | 18 | MC0 5 | MC0 1 21 | 21 | MC0 1 | MC COM 18 | 18 | MC0 5 | MC0 1 21 | 21 | MC0 1 | MC COM 18 | 18 | MC0 5 | MC0 1 21 | 21 | MC0 1 |
| +5V 19 | 19 | +5V | +5V 20 | 20 | GND | +5V 19 | 19 | +5V | +5V 20 | 20 | GND | +5V 19 | 19 | +5V | +5V 20 | 20 | GND | +5V 19 | 19 | +5V | +5V 20 | 20 | GND |
| MC0 1 21 | 21 | MC0 1 | GND 22 | 22 | GND | MC0 1 21 | 21 | MC0 1 | GND 22 | 22 | GND | MC0 1 21 | 21 | MC0 1 | GND 22 | 22 | GND | MC0 1 21 | 21 | MC0 1 | GND 22 | 22 | GND |
| +5V 20 | 20 | GND | +5V 23 | 23 | GND | +5V 20 | 20 | GND | +5V 23 | 23 | GND | +5V 20 | 20 | GND | +5V 23 | 23 | GND | +5V 20 | 20 | GND | +5V 23 | 23 | GND |
| GND 22 | 22 | GND | GND 23 | 23 | GND | GND 22 | 22 | GND | GND 23 | 23 | GND | GND 22 | 22 | GND | GND 23 | 23 | GND | GND 22 | 22 | GND | GND 23 | 23 | GND |
| +5V 23 | 23 | GND | +5V 24 | 24 | GND | +5V 23 | 23 | GND | +5V 24 | 24 | GND | +5V 23 | 23 | GND | +5V 24 | 24 | GND | +5V 23 | 23 | GND | +5V 24 | 24 | GND |
| GND 24 | 24 | GND | GND 25 | 25 | GND | GND 24 | 24 | GND | GND 25 | 25 | GND | GND 24 | 24 | GND | GND 25 | 25 | GND | GND 24 | 24 | GND | GND 25 | 25 | GND |
| CLR0 25 | 25 | CLR0 | CLR0 26 | 26 | CLR0 | CLR0 25 | 25 | CLR0 | CLR0 26 | 26 | CLR0 | CLR0 25 | 25 | CLR0 | CLR0 26 | 26 | CLR0 | CLR0 25 | 25 | CLR0 | CLR0 26 | 26 | CLR0 |
| +15V 26 | 26 | +15V | +15V 27 | 27 | GND | +15V 26 | 26 | +15V | +15V 27 | 27 | GND | +15V 26 | 26 | +15V | +15V 27 | 27 | GND | +15V 26 | 26 | +15V | +15V 27 | 27 | GND |
| GND 27 | 27 | GND | GND 28 | 28 | GND | GND 27 | 27 | GND | GND 28 | 28 | GND | GND 27 | 27 | GND | GND 28 | 28 | GND | GND 27 | 27 | GND | GND 28 | 28 | GND |
| +15V 28 | 28 | +15V | +15V 29 | 29 | GND | +15V 28 | 28 | +15V | +15V 29 | 29 | GND | +15V 28 | 28 | +15V | +15V 29 | 29 | GND | +15V 28 | 28 | +15V | +15V 29 | 29 | GND |
| GND 29 | 29 | GND | GND 30 | 30 | GND | GND 29 | 29 | GND | GND 30 | 30 | GND | GND 29 | 29 | GND | GND 30 | 30 | GND | GND 29 | 29 | GND | GND 30 | 30 | GND |
| REF IN 29 | 29 | REF IN | REF IN 30 | 30 | REF IN | REF IN 29 | 29 | REF IN | REF IN 30 | 30 | REF IN | REF IN 29 | 29 | REF IN | REF IN 30 | 30 | REF IN | REF IN 29 | 29 | REF IN | REF IN 30 | 30 | REF IN |
| -15V 30 | 30 | -15V | -15V 31 | 31 | -15V | -15V 30 | 30 | -15V | -15V 31 | 31 | -15V | -15V 30 | 30 | -15V | -15V 31 | 31 | -15V | -15V 30 | 30 | -15V | -15V 31 | 31 | -15V |
| REF IN 30 | 30 | REF IN | REF IN 31 | 31 | REF IN | REF IN 30 | 30 | REF IN | REF IN 31 | 31 | REF IN | REF IN 30 | 30 | REF IN | REF IN 31 | 31 | REF IN | REF IN 30 | 30 | REF IN | REF IN 31 | 31 | REF IN |
| -15V 31 | 31 | -15V | -15V 32 | 32 | -15V | -15V 31 | 31 | -15V | -15V 32 | 32 | -15V | -15V 31 | 31 | -15V | -15V 32 | 32 | -15V | -15V 31 | 31 | -15V | -15V 32 | 32 | -15V |
| REF IN 31 | 31 | REF IN | REF IN 32 | 32 | REF IN | REF IN 31 | 31 | REF IN | REF IN 32 | 32 | REF IN | REF IN 31 | 31 | REF IN | REF IN 32 | 32 | REF IN | REF IN 31 | 31 | REF IN | REF IN 32 | 32 | REF IN |
| -15V 32 | 32 | -15V | -15V 33 | 33 | -15V | -15V 32 | 32 | -15V | -15V 33 | 33 | -15V | -15V 32 | 32 | -15V | -15V 33 | 33 | -15V | -15V 32 | 32 | -15V | -15V 33 | 33 | -15V |
| REF IN 32 | 32 | REF IN | REF IN 33 | 33 | REF IN | REF IN 32 | 32 | REF IN | REF IN 33 | 33 | REF IN | REF IN 32 | 32 | REF IN | REF IN 33 | 33 | REF IN | REF IN 32 | 32 | REF IN | REF IN 33 | 33 | REF IN |
| -15V 33 | 33 | -15V | -15V 34 | 34 | -15V | -15V 33 | 33 | -15V | -15V 34 | 34 | -15V | -15V 33 | 33 | -15V | -15V 34 | 34 | -15V | -15V 33 | 33 | -15V | -15V 34 | 34 | -15V |
| REF IN 33 | 33 | REF IN | REF IN 34 | 34 | REF IN | REF IN 33 | 33 | REF IN | REF IN 34 | 34 | REF IN | REF IN 33 | 33 | REF IN | REF IN 34 | 34 | REF IN | REF IN 33 | 33 | REF IN | REF IN 34 | 34 | REF IN |
| -15V 34 | 34 | -15V | -15V 35 | 35 | -15V | -15V 34 | 34 | -15V | -15V 35 | 35 | -15V | -15V 34 | 34 | -15V | -15V 35 | 35 | -15V | -15V 34 | 34 | -15V | -15V 35 | 35 | -15V |
| REF IN 34 | 34 | REF IN | REF IN 35 | 35 | REF IN | REF IN 34 | 34 | REF IN | REF IN 35 | 35 | REF IN | REF IN 34 | 34 | REF IN | REF IN 35 | 35 | REF IN | REF IN 34 | 34 | REF IN | REF IN 35 | 35 | REF IN |
| -15V 35 | 35 | -15V | -15V 36 | 36 | -15V | -15V 35 | 35 | -15V | -15V 36 | 36 | -15V | -15V 35 | 35 | -15V | -15V 36 | 36 | -15V | -15V 35 | 35 | -15V | -15V 36 | 36 | -15V |
| REF IN 35 | 35 | REF IN | REF IN 36 | 36 | REF IN | REF IN 35 | 35 | REF IN | REF IN 36 | 36 | REF IN | REF IN 35 | 35 | REF IN | REF IN 36 | 36 | REF IN | REF IN 35 | 35 | REF IN | REF IN 36 | 36 | REF IN |
| -15V 36 | 36 | -15V | -15V 37 | 37 | -15V | -15V 36 | 36 | -15V | -15V 37 | 37 | -15V | -15V 36 | 36 | -15V | -15V 37 | 37 | -15V | -15V 36 | 36 | -15V | -15V 37 | 37 | -15V |
| REF IN 36 | 36 | REF IN | REF IN 37 | 37 | REF IN | REF IN 36 | 36 | REF IN | REF IN 37 | 37 | REF IN | REF IN 36 | 36 | REF IN | REF IN 37 | 37 | REF IN | REF IN 36 | 36 | REF IN | REF IN 37 | 37 | REF IN |
| -15V 37 | 37 | -15V | -15V 38 | 38 | -15V | -15V 37 | 37 | -15V | -15V 38 | 38 | -15V | -15V 37 | 37 | -15V | -15V 38 | 38 | -15V | -15V 37 | 37 | -15V | -15V 38 | 38 | -15V |
| REF IN 37 | 37 | REF IN | REF IN 38 | 38 | REF IN | REF IN 37 | 37 | REF IN | REF IN 38 | 38 | REF IN | REF IN 37 | 37 | REF IN | REF IN 38 | 38 | REF IN | REF IN 37 | 37 | REF IN | REF IN 38 | 38 | REF IN |
| -15V 38 | 38 | -15V | -15V 39 | 39 | -15V | -15V 38 | 38 | -15V | -15V 39 | 39 | -15V | -15V 38 | 38 | -15V | -15V 39 | 39 | -15V | -15V 38 | 38 | -15V | -15V 39 | 39 | -15V |
| REF IN 38 | 38 | REF IN | REF IN 39 | 39 | REF IN | REF IN 38 | 38 | REF IN | REF IN 39 | 39 | REF IN | REF IN 38 | 38 | REF IN | REF IN 39 | 39 | REF IN | REF IN 38 | 38 | REF IN | REF IN 39 | 39 | REF IN |
| -15V 39 | 39 | -15V | -15V 40 | 40 | -15V | -15V 39 | 39 | -15V | -15V 40 | 40 | -15V | -15V 39 | 39 | -15V | -15V 40 | 40 | -15V | -15V 39 | 39 | -15V | -15V 40 | 40 | -15V |
| REF IN 39 | 39 | REF IN | REF IN 40 | 40 | REF IN | REF IN 39 | 39 | REF IN | REF IN 40 | 40 | REF IN | REF IN 39 | 39 | REF IN | REF IN 40 | 40 | REF IN | REF IN 39 | 39 | REF IN | REF IN 40 | 40 | REF IN |
| -15V 40 | 40 | -15V | -15V 41 | 41 | -15V | -15V 40 | 40 | -15V | -15V 41 | 41 | -15V | -15V 40 | 40 | -15V | -15V 41 | 41 | -15V | -15V 40 | 40 | -15V | -15V 41 | 41 | -15V |
| REF IN 40 | 40 | REF IN | REF IN 41 | 41 | REF IN | REF IN 40 | 40 | REF IN | REF IN 41 | 41 | REF IN | REF IN 40 | 40 | REF IN | REF IN 41 | 41 | REF IN | REF IN 40 | 40 | REF IN | REF IN 41 | 41 | REF IN |
| -15V 41 | 41 | -15V | -15V 42 | 42 | -15V | -15V 41 | 41 | -15V | -15V 42 | 42 | -15V | -15V 41 | 41 | -15V | -15V 42 | 42 | -15V | -15V 41 | 41 | -15V | -15V 42 | 42 | -15V |
| REF IN 41 | 41 | REF IN | REF IN 42 | 42 | REF IN | REF IN 41 | 41 | REF IN | REF IN 42 | 42 | REF IN | REF IN 41 | 41 | REF IN | REF IN 42 | 42 | REF IN | REF IN 41 | 41 | REF IN | REF IN 42 | 42 | REF IN |
| -15V 42 | 42 | -15V | -15V 43 | 43 | -15V | -15V 42 | 42 | -15V | -15V 43 | 43 | -15V | -15V 42 | 42 | -15V | -15V 43 | 43 | -15V | -15V 42 | 42 | -15V | -15V 43 | 43 | -15V |
| REF IN 42 | 42 | REF IN | REF IN 43 | 43 | REF IN | REF IN 42 | 42 | REF IN | REF IN 43 | 43 | REF IN | REF IN 42 | 42 | REF IN | REF IN 43 | 43 | REF IN | REF IN 42 | 42 | REF IN | REF IN 43 | 43 | |

| REV | ECN | BY | DATE | APP |
|-----|----------|-----|----------|-----|
| A | | TLF | 10/24/77 | |
| B | ECN 1687 | RPO | 3/23/78 | |
| C | ECN 1897 | CC | 4/25/79 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

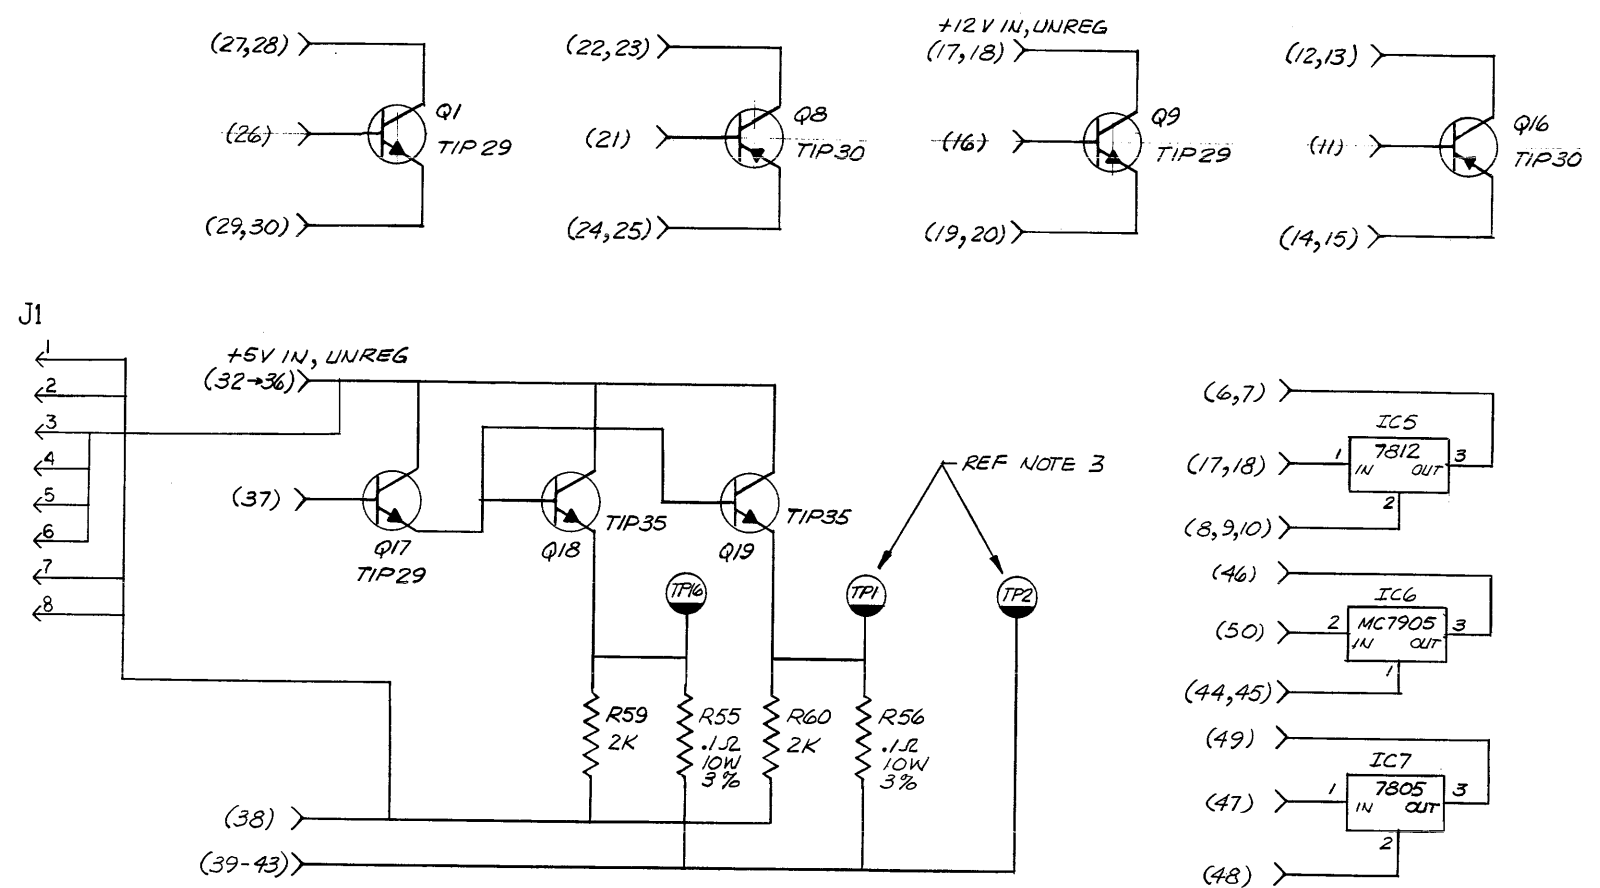

LAST DESIG USED: IC7, Q19, R60


3. $I_L (+5V) \cong (V_{TP1} - V_{TP2}) \times 20 \text{ AMPS}$.
2. THIS SCHEMATIC IS REFERENCED ON THE POWER SUPPLY NO. 0103-00-0633.
1. ALL I/O PIN DESIGNATIONS ARE ON J14.

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|-------------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN T. FOSTER | DATE 7-1-77 | |
| MATERIAL | PROJ ENGR Tom Salgan | DATE 7 SEPT '77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES ± 1° XX ± .030 | TITLE SCHEMATIC- PASS TRANSISTOR/REGULATOR |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0713 |
| | | CODE IDENT 23338 | REV C |
| | | SHEET 1 OF 1 | |

0103-00-0713

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

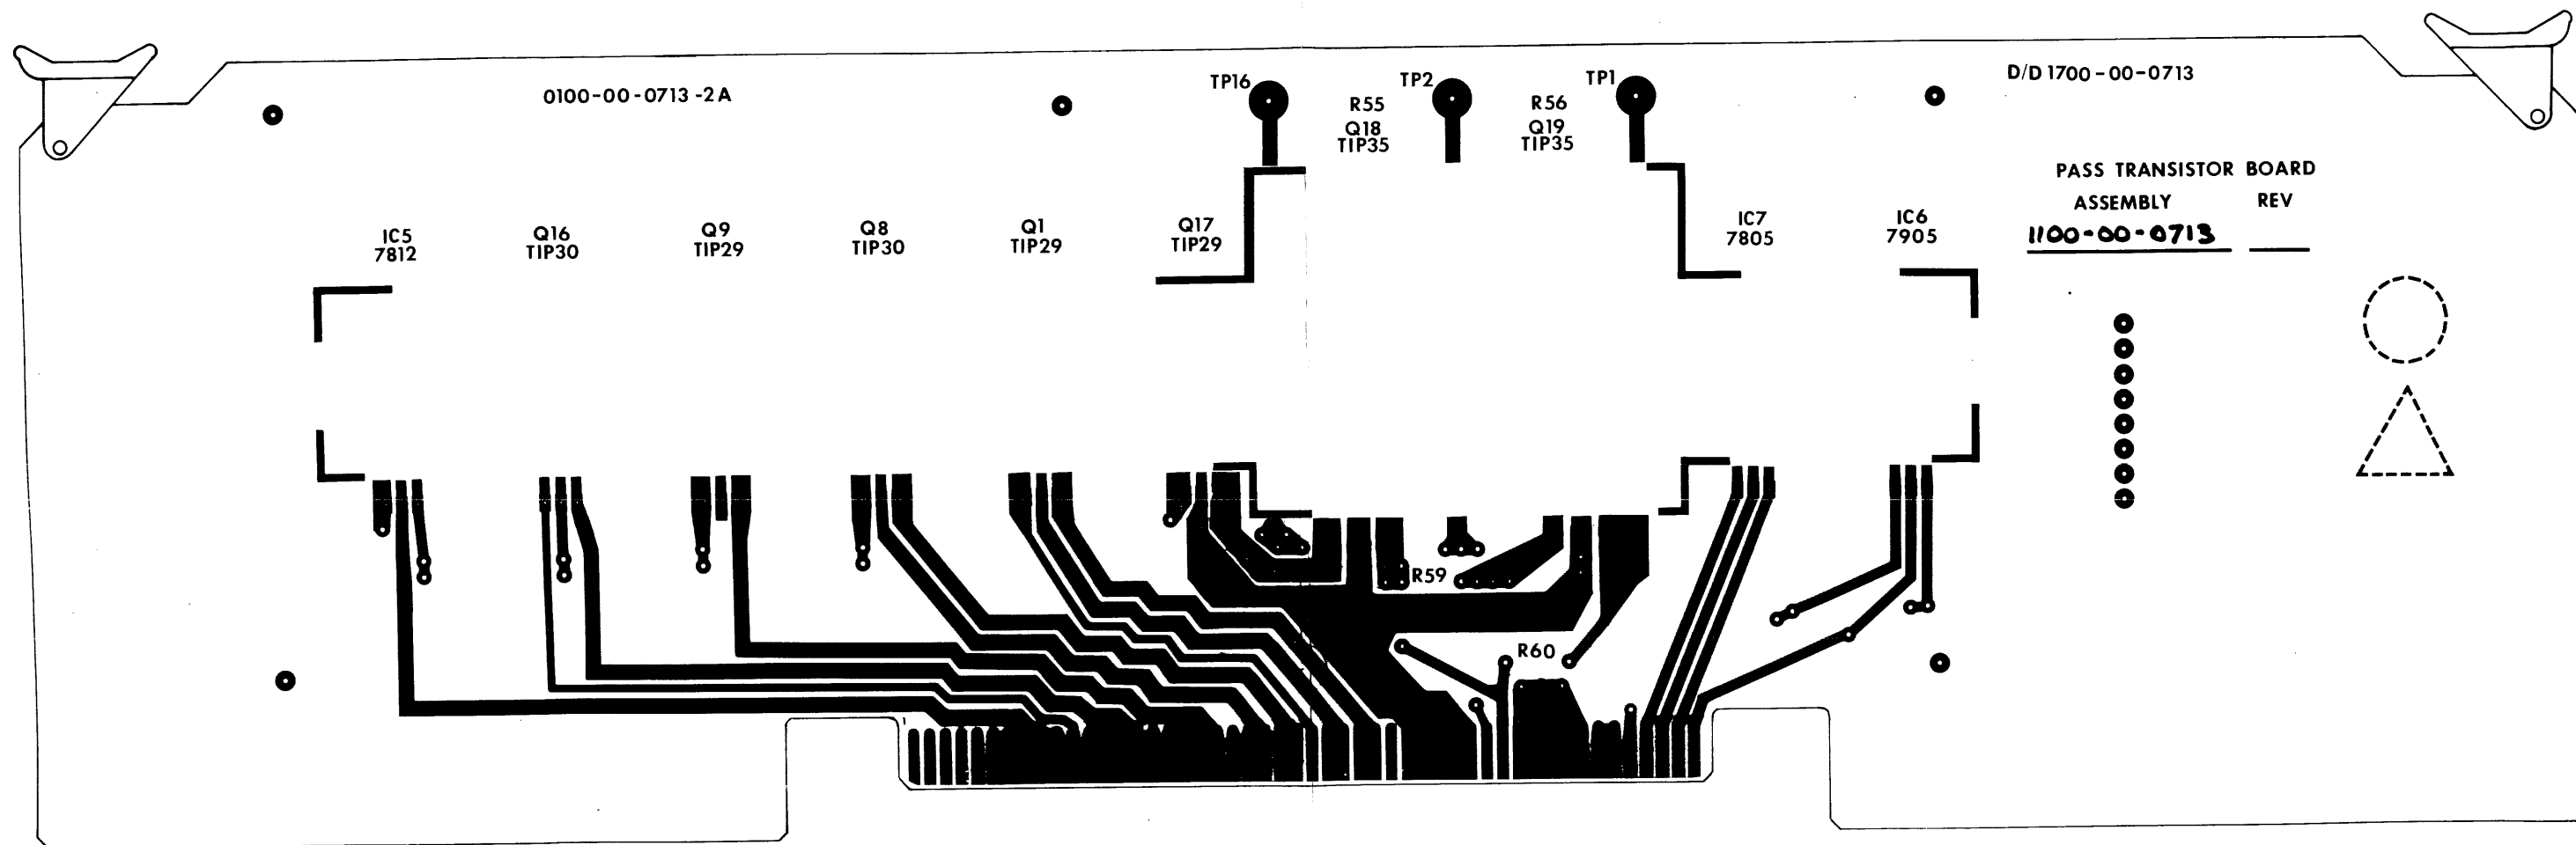

1100-00-0713

| | | | | | |
|--|--------------------------------------|-----------|---------------------------------------|------------------|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | | |
| | MATERIAL | PROJ/ENGR | TITLE | | |
| FINISH WAVETEK PROCESS | RELEASE | APPROV | PASS TRANSISTOR PCA | | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED | | | MODEL NO | REV |
| | XXX - 010 ANGLES 1 | | | 172B | 0101-00-0713 |
| | XX - 030 | | | DO NOT SCALE DWG | SCALE |
| SCALE | CODE IDENT | 23338 | SHEET | OF 1 | |

8

7

6

5

4

3

2

1

REV ECN BY DATE APP

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

D

D

C

C

B

B

A

A

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|---|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, REGULATOR | 0101-00-0713 | WVTK | 0101-00-0713 | 1 |
| NONE | SCHEMATIC, REGULATOR | 0103-00-0713 | WVTK | 0103-00-0713 | 1 |
| NONE | HEATSINK REF: 3200-06-0010 | 1400-00-7933 | WVTK | 1400-00-7933 | 1 |
| NONE | REGULATOR BD | 1700-00-0713 | WVTK | 1700-00-0713 | 1 |
| J1 | RIGHT ANGLE CONN | 87632-8 | AMP | 2100-02-0078 | 1 |
| NONE | CONNECTOR | JF2P | WINCH | 2100-02-0082 | 1 |
| NONE | CABLE CLAMP | 832 | SMITH | 2800-00-0009 | 1 |
| NONE | STANDOFF, SHAGE .125 H. .250 DIA 4-40. .093 MAT'L | 6911-2-3C | LYNTR | 2800-03-0003 | 5 |
| NONE | PC BD EJECTOR | 103 BLACK | CALMK | 2800-07-0017 | 2 |
| NONE | WASHER | B51347F013 | MOT | 2800-11-0015 | 10 |
| NONE | LABLE, CAUTION | B500-8513472-1 | BRADY | 2800-29-0001 | 1 |
| NONE | INSULATOR, MICA | 64-21-023-106 | ASHVL | 3100-00-0006 | 7 |
| NONE | MICA INSULATOR | 10-21-023-212 | TI | 3100-00-0013 | 2 |
| R59 R60 | RES. MF, 1/BW, 1%, 2K | RN55D-2001F | TRW | 4701-03-2001 | 2 |
| R55 R56 | RES. MW, 10W, 3%, .1 OHM | RH10-.1 OHM 3% | DALE | 4702-77-0019 | 2 |
| G1 G17 G9 | TRANS | TIP-29 | TI | 4902-00-0290 | 3 |

WAVETEK PARTS LIST TITLE: PCA, REGULATOR ASSEMBLY NO. 1100-00-0713 REV E
PAGE: 1

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|-----------------------|-------------------|-------|--------------|--------|
| G16 G8 | TRANS | TIP-30 | TI | 4902-00-0300 | 2 |
| G18 G19 | TRANS | TIP-35 | TI | 4902-00-0350 | 2 |
| NONE | THERMOSTAT (185°F) | 3001-24-43/B-209 | ELMWD | 5100-00-0006 | 1 |
| IC5 | IC | MC7812CT | MOT | 7000-78-1200 | 1 |
| IC6 | IC | MC7905CP | MOT | 7000-79-0500 | 1 |
| IC7 | VOLTAGE REGULATOR | MA7805UC | FAIR | 8000-78-0500 | 1 |

WAVETEK PARTS LIST TITLE: PCA, REGULATOR ASSEMBLY NO. 1100-00-0713 REV E
PAGE: 2

| | | | | | |
|--|---|------|---------------------------------------|--------------|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | | |
| MATERIAL | PROJ ENGR | | TITLE | | |
| | RELEASE APPROV | | PARTS LIST PCA, REGULATOR | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX : 010 ANGLES -1 XX : 030 | | MODEL NO. | DWG NO. | REV |
| | DO NOT SCALE DWG | | 172B | 1100-00-0713 | E |
| | SCALE | | CODE IDENT | 23338 | SHEET 1 OF 1 |

NOTE: UNLESS OTHERWISE SPECIFIED

8

7

6

5

4


3

2

1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|----------------|------------|---------|-----|
| A | ENG IMPRV | TLF | 8/28/77 | |
| B | ECN 1692, 1687 | RO | 3-13-78 | |
| C | # 1908 | W. K. Kuch | 2-6-79 | |

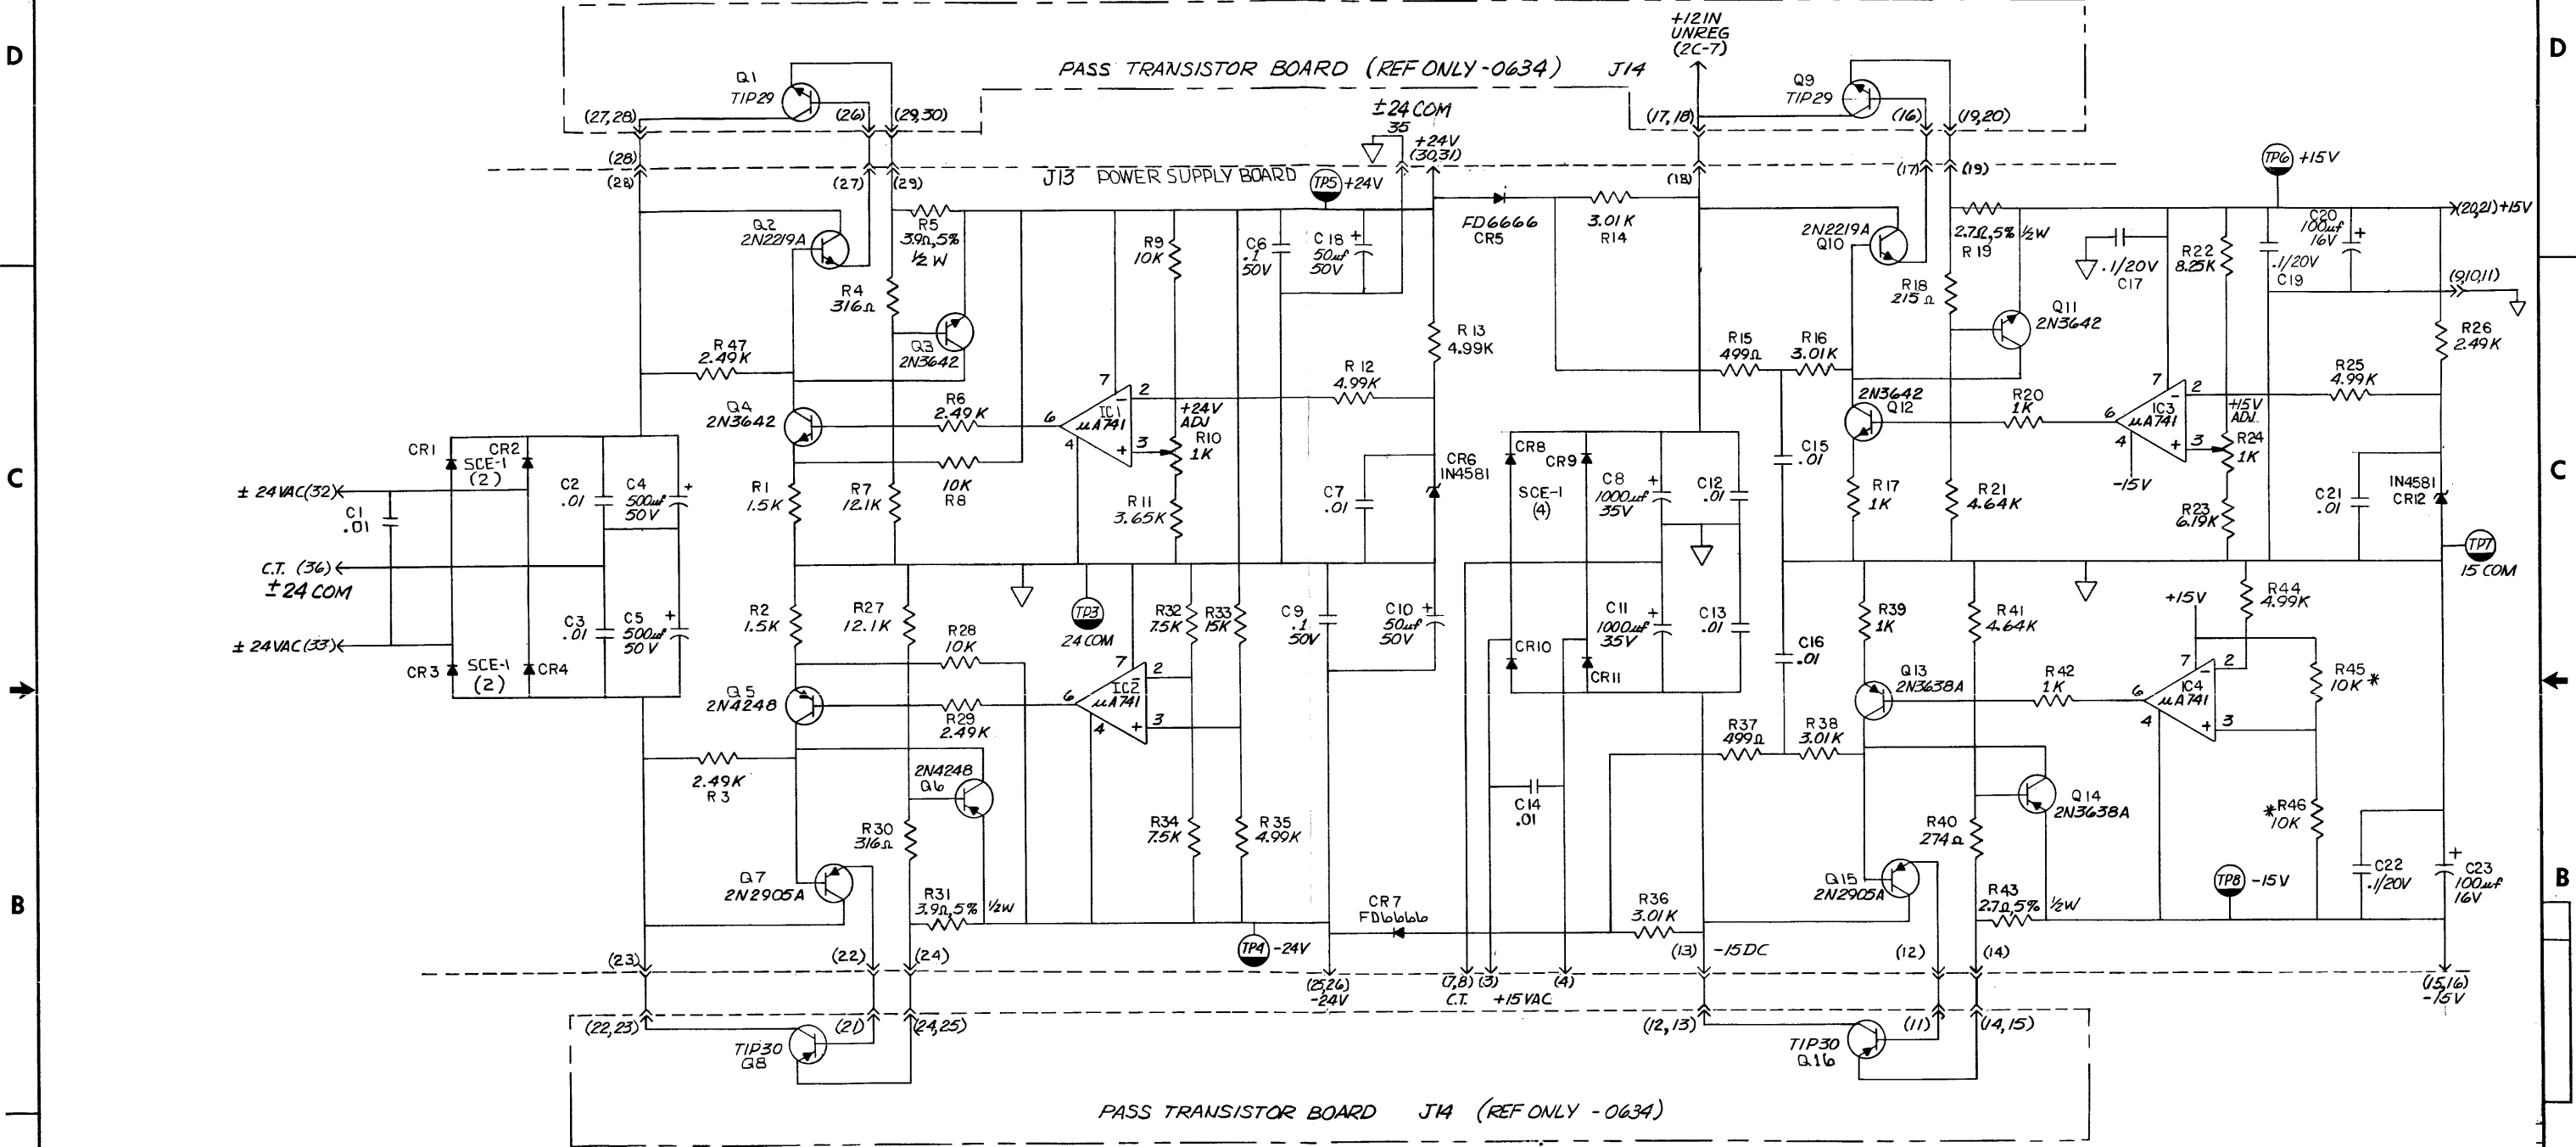

| SUPPLY | I LIMIT |
|--------|---------|
| + 15 | 500 MA. |
| - 15 | 560 MA. |


LAST REF DES USED
 C41
 CR16
 R62
 IC8
 Q19
 TP16

2 * MATCHED SET OF 10K #
 1. ALL CAPACITANCE IS IN MICROFARADS
 NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|------------------------|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 6-9-78 | |
| MATERIAL | PROJ ENGR Tom Salge | DATE SEPT 7'77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 ANGLES 1° XX ±.030 | TITLE SCHEMATIC - POWER SUPPLY REGULATOR |
| SCALE | DO NOT SCALE DWG | MODEL NO. 0103-00-0712 | REV C |
| | | CODE IDENT 23338 | SHEET 1 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|
| | | | | |

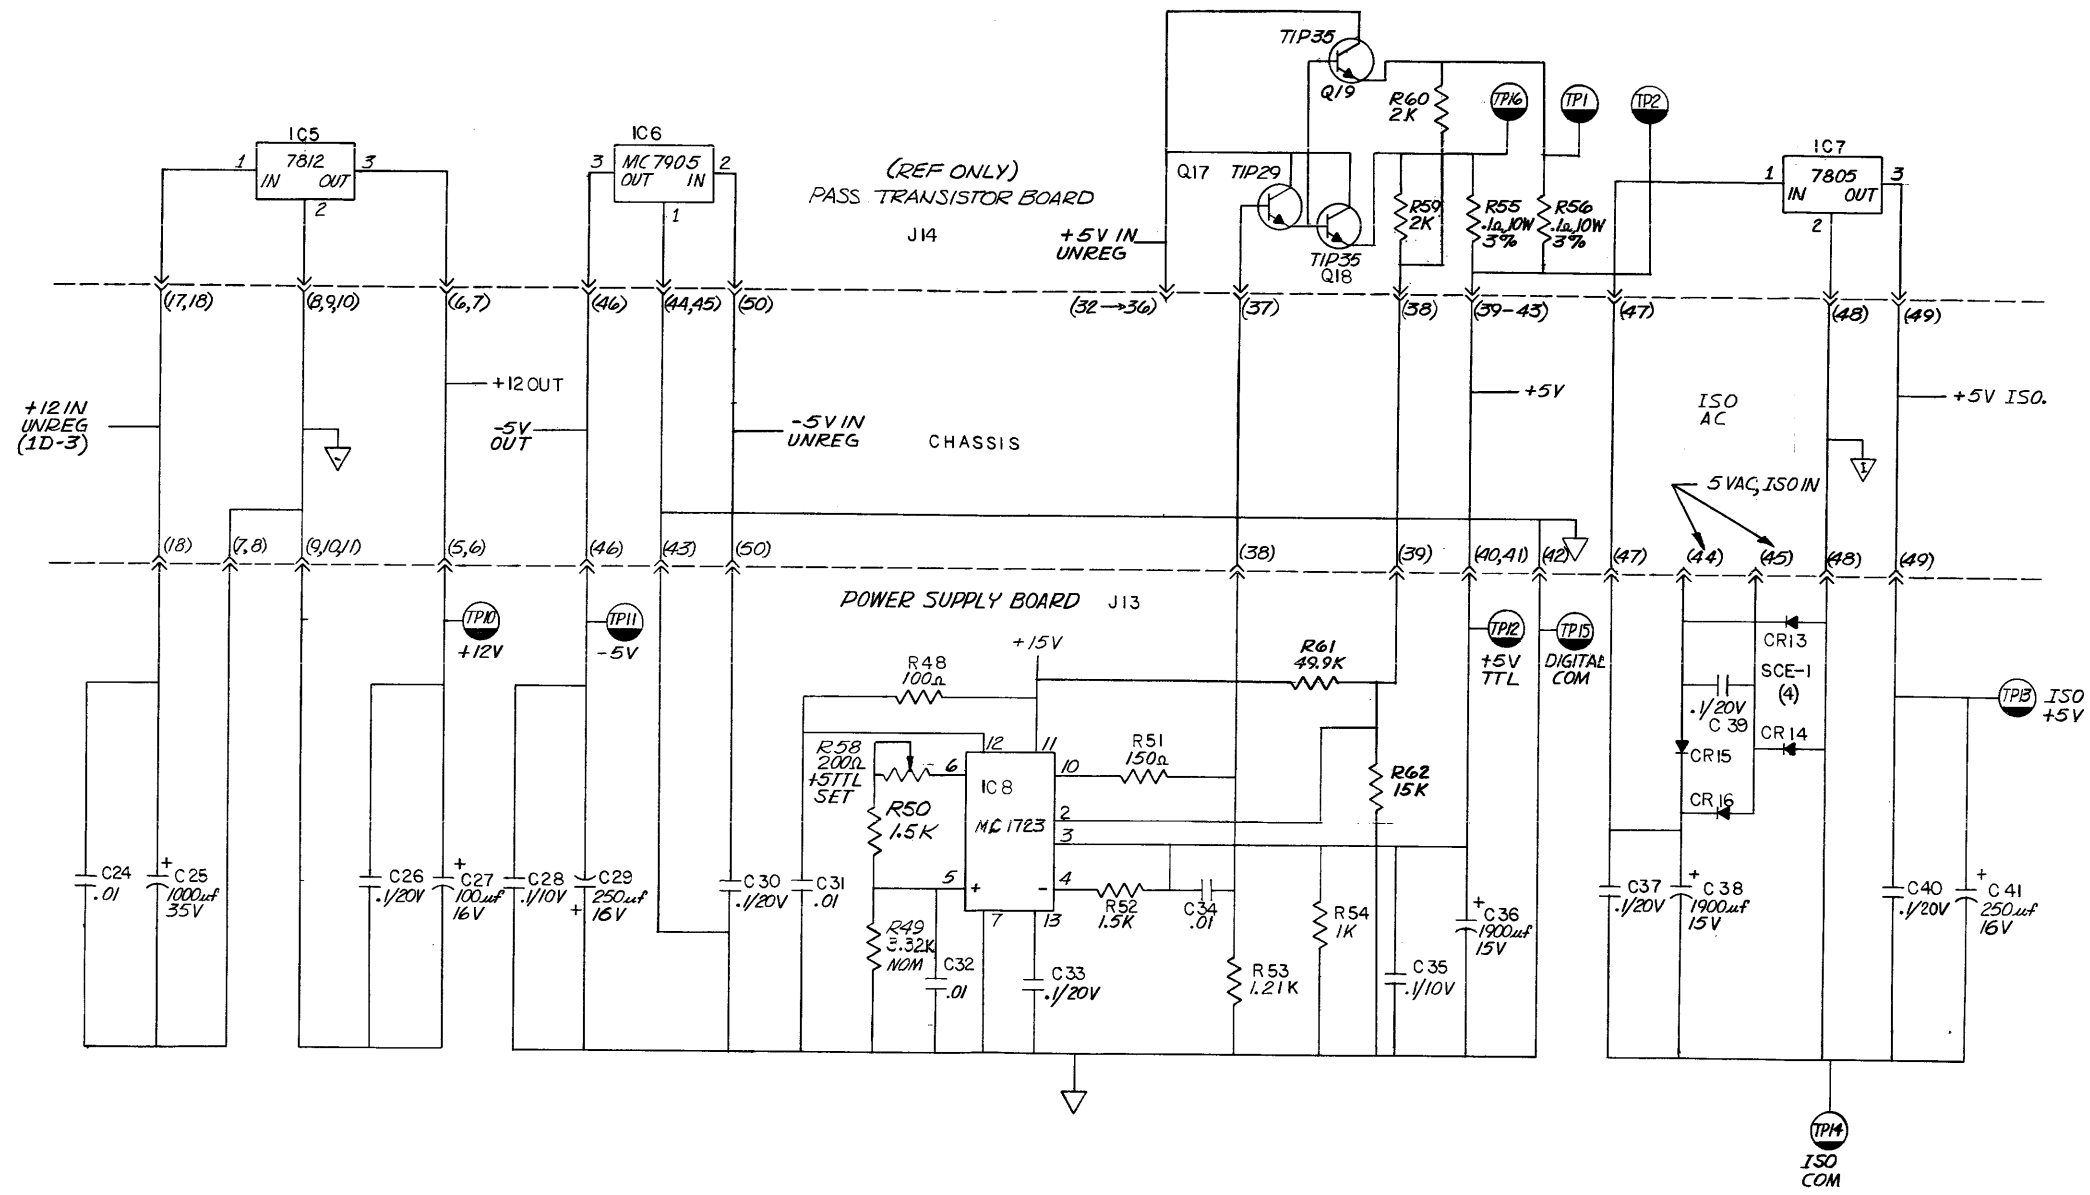

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|------------------------|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 6-9-76 | |
| MATERIAL | PROLENGR 10- Saliga | DATE 7-77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX = .010 XX = .030 | TITLE SCHEMATIC - POWER SUPPLY REGULATOR |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0712 |
| | | SCALE | REV 3 |
| | | CODE IDENT 23338 | SHEET 2 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

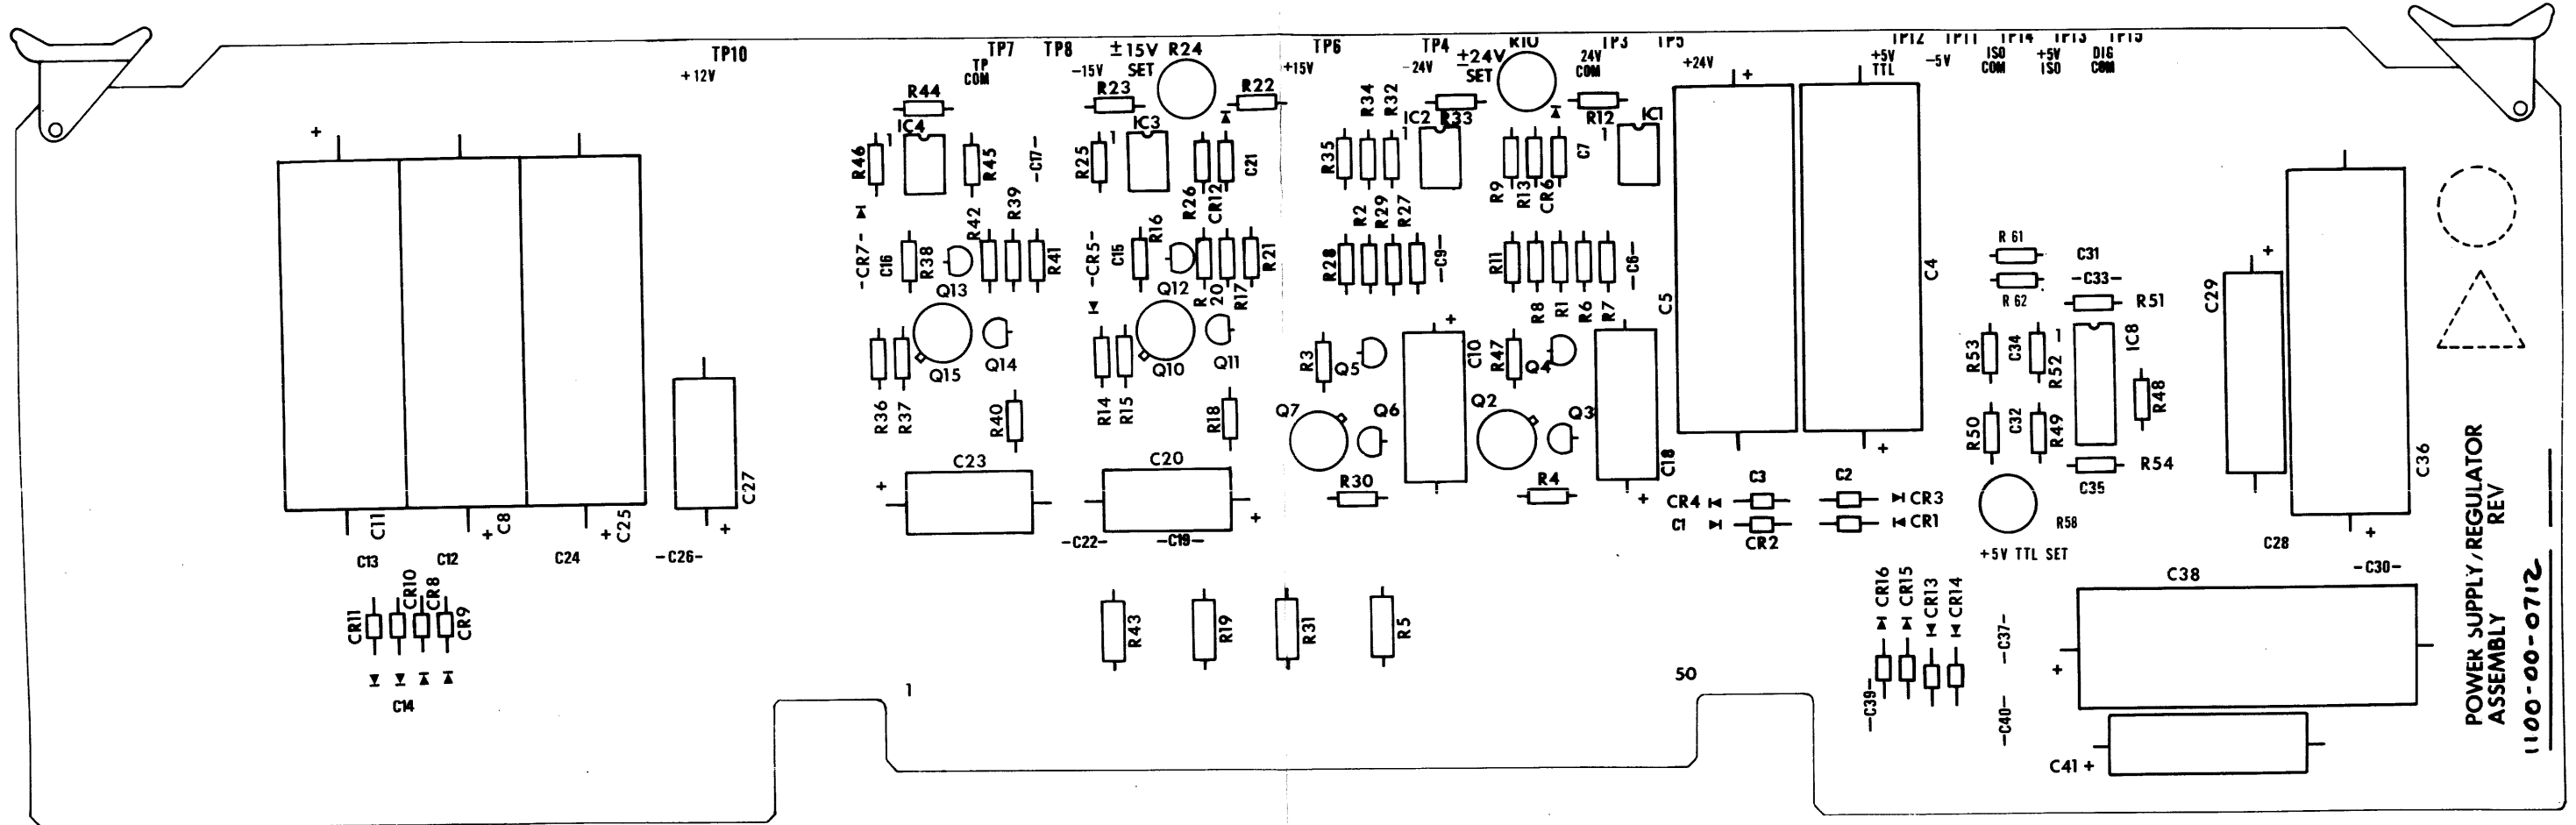

POWER SUPPLY/REGULATOR
ASSEMBLY
REV
1100-00-0712

1100-00-0712

| | | | | |
|--|--|------------------|---------------------------------------|-------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE APPROV | | PWR SUPPLY REGULATOR PCA | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | DO NOT SCALE DWG | MODEL NO 172B | DWG NO 0101-00-0712 |
| SCALE | | | CODE IDENT 23338 | REV SHEET 1 OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | | | |
|---|--------------------------|-------------------|----------------------------|--------------|------------------------------|---|---|-------------------|-------|----------------------------|---------|------------------------------|----------|--|
| NONE | ASSY DRWG, POWER SUPP | 0101-00-0712 | WVTK | 0101-00-0712 | 1 | R15 R37 | RES. MF. 1/8. 1%. 499 | RN55D-4990F | TRW | 4701-03-4990 | 2 | | | |
| NONE | SCHEMATIC, POWER SUP | 0103-00-0712 | WVTK | 0103-00-0712 | 1 | R12 R13 R25 R35 R44 | RES. MF. 1/8W. 1%. 4. 99K | RN55D-4991F | TRW | 4701-03-4991 | 5 | | | |
| C1 C12 C13 C14 C15 C16 C2 C21 C24 C3 C31 C32 C34 C7 | CAP. CER. MN. .01MF. 50V | CAC02Z5U103Z100A | CORNG | 1500-01-0310 | 14 | R61 | RES. MF. 1/8W. 1%. 49. 9K | RN55D-4992F | TRW | 4701-03-4992 | 1 | | | |
| C17 C19 C22 C26 C28 C30 C33 C35 C37 C39 C40 C6 C9 | CAP. CER. MON. .1MF. 50V | CAC03Z5U104Z050A | CORNG | 1500-01-0405 | 13 | R23 | RES. MF. 1/8W. 1%. 6. 19K | RN55D-6191F | TRW | 4701-03-6191 | 1 | | | |
| C20 C23 C27 | CAP. ELECT. 100MF. 16V | 500D1070016DC7 | SPRAG | 1500-31-0101 | 3 | R32 R34 | RES. MF. 1/8W. 1%. 7. 5K | RN55D-7501F | TRW | 4701-03-7501 | 2 | | | |
| C11 C25 C8 | CAP. ELECT. 1000MF. 35V | 39D1080035GL6 | SPRAG | 1500-31-0212 | 3 | R22 | RES. MF. 1/8W. 1%. 8. 25K | RN55D-8251F | TRW | 4701-03-8251 | 1 | | | |
| C36 C38 | CAP. ELECT. 1900MF. 15V | 39D1980015GL4 | SPRAG | 1500-31-9201 | 2 | R45 R46 | RES. SET. 2-10K. 1/8W QTY: 2: 4701-03-1002 | 142-501-64A | WVTK | 4789-00-0019 | 1 | | | |
| C29 C41 | CAP. ELECT. 250MF. 16V | 500D2570016DF7 | SPRAG | 1500-32-5101 | 2 | CR12 CR6 | DIODE | 1N4581 | MICRO | 4801-01-4581 | 2 | | | |
| C10 C18 | CAP. ELECT. 50MF. 50V | 500D5060050DD7 | SPRAG | 1500-35-0003 | 2 | CR1 CR10 CR11 CR13 CR14 CR15 CR16 CR2 CR3 CR4 CR8 CR9 | DIODE | 1N4002 | FAIR | 4801-02-0001 | 12 | | | |
| C4 C5 | CAP. ELECT. 500MF. 50V | 39D5070050GL4 | SPRAG | 1500-35-0103 | 2 | CR5 CR7 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 2 | | | |
| NONE | POWER SUPPLY | 1700-00-0712 | WVTK | 1700-00-0712 | 1 | G10 G2 | TRANS | 2N2219A | NSC | 4901-02-2191 | 2 | | | |
| NONE | PIN, MALE | 611B2-2 | AMP | 2100-05-0020 | 12 | G15 G7 | TRANS | 2N2905A | NSC | 4901-02-9051 | 2 | | | |
| NONE | PC BD EJECTOR | 103 BLACK | CALMK | 2800-07-0017 | 2 | G13 G14 | TRANS | 2N3638A | CARTR | 4901-03-6381 | 2 | | | |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 4 | G11 G12 G3 G4 | TRANS | 2N3642 | FAIR | 4901-03-6420 | 4 | | | |
| R10 R24 | POT. TRIM. 1K | 91AR1K | BECK | 4600-01-0209 | 2 | G5 G6 | TRANS | 2N4248 | FAIR | 4901-04-2480 | 2 | | | |
| R58 | POT. TRIM. 200 | 91AR200 | BECK | 4600-02-0101 | 1 | IC1 IC2 IC3 IC4 | IC | LM741CN | NSC | 7000-07-4100 | 4 | | | |
| WAVETEK PARTS LIST | | | TITLE PCA, POWER SUPPLY | | ASSEMBLY NO. 1100-00-0712 | REV C | WAVETEK PARTS LIST | | | TITLE PCA, POWER SUPPLY | | ASSEMBLY NO. 1100-00-0712 | REV C | |
| | | | PAGE: 1 | | | | | | | | PAGE: 3 | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | | | |
|---------------------------|---------------------------|-------------------|----------------------------|--------------|------------------------------|-----------------------|---------------------------|-------------------|------|----------------------------|---------|------------------------------|----------|--|
| R19 R43 | RES. C. 1/2W. 5%. 2. 7 | RC200F-2R7 | STKPL | 4700-25-0279 | 2 | IC8 | IC | MC1723CP | MOT | 7000-17-2300 | 1 | | | |
| R31 R5 | RES. C. 1/2W. 5%. 3. 9 | RC200F-3R9 | STKPL | 4700-25-0399 | 2 | | | | | | | | | |
| R48 | RES. MF. 1/8W. 1%. 100 | RN55D-1000F | TRW | 4701-03-1000 | 1 | | | | | | | | | |
| R17 R20 R39 R42 R54 | RES. MF. 1/8W. 1%. 1K | RN55D-1001F | TRW | 4701-03-1001 | 5 | | | | | | | | | |
| R28 R8 R9 | RES. MF. 1/8W. 1%. 10K | RN55D-1002F | TRW | 4701-03-1002 | 3 | | | | | | | | | |
| R53 | RES. MF. 1/8W. 1%. 1. 21K | RN55D-1211F | TRW | 4701-03-1211 | 1 | | | | | | | | | |
| R27 R7 | RES. MF. 1/8W. 1%. 12. 1K | RN55D-1212F | TRW | 4701-03-1212 | 2 | | | | | | | | | |
| R51 | RES. MF. 1/8W. 1%. 150 | RN55D-1500F | TRW | 4701-03-1500 | 1 | | | | | | | | | |
| R1 R2 R50 R52 | RES. MF. 1/8W. 1%. 1. 5K | RN55D-1501F | TRW | 4701-03-1501 | 4 | | | | | | | | | |
| R33 R62 | RES. MF. 1/8W. 1%. 15K | RN55D-1502F | TRW | 4701-03-1502 | 2 | | | | | | | | | |
| R18 | RES. MF. 1/8W. 1%. 215 | RN55D-2150F | TRW | 4701-03-2150 | 1 | | | | | | | | | |
| R26 R29 R3 R47 R6 | RES. MF. 1/8W. 1%. 2. 49K | RN55D-2491F | TRW | 4701-03-2491 | 5 | | | | | | | | | |
| R40 | RES. MF. 1/8W. 1%. 274 | RN55D-2740F | TRW | 4701-03-2740 | 1 | | | | | | | | | |
| R14 R16 R36 R38 | RES. MF. 1/8W. 1%. 3. 01K | RN55D-3011F | TRW | 4701-03-3011 | 4 | | | | | | | | | |
| R30 R4 | RES. MF. 1/8W. 1%. 316 | RN55D-3160F | TRW | 4701-03-3160 | 2 | | | | | | | | | |
| R11 R49T | RES. MF. 1/8W. 1%. 3. 65K | RN55D-3651F | TRW | 4701-03-3651 | 2 | | | | | | | | | |
| R21 R41 | RES. MF. 1/8W. 1%. 4. 64K | RN55D-4641F | TRW | 4701-03-4641 | 2 | | | | | | | | | |
| WAVETEK PARTS LIST | | | TITLE PCA, POWER SUPPLY | | ASSEMBLY NO. 1100-00-0712 | REV C | WAVETEK PARTS LIST | | | TITLE PCA, POWER SUPPLY | | ASSEMBLY NO. 1100-00-0712 | REV C | |
| | | | PAGE: 2 | | | | | | | | PAGE: 4 | | | |


| | | | | |
|--|---|------|---------------------------------------|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE APPROV | | PARTS LIST PCA, POWER SUPPLY | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 ANGLES .1 XX .030 | | MODEL NO. 172B | DWG NO. 1100-00-0712 |
| | DO NOT SCALE DWG | | REV C | |
| | SCALE | | CODE IDENT 23338 | SHEET 1 OF 1 |

NOTE: UNLESS OTHERWISE SPECIFIED

BISHOP GRAPHICS/ACCUPRESS
REORDER NO. A-384

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|----------|----|---------|-----|
| F | ECN 1690 | RO | 3-14-78 | |
| G | ECN 1748 | CW | 6-18-78 | |
| H | ECN 1865 | DC | 11-2-78 | |
| J | ECN 1896 | BC | 1-79 | |
| K | ECN 1941 | DX | 3-28-79 | |

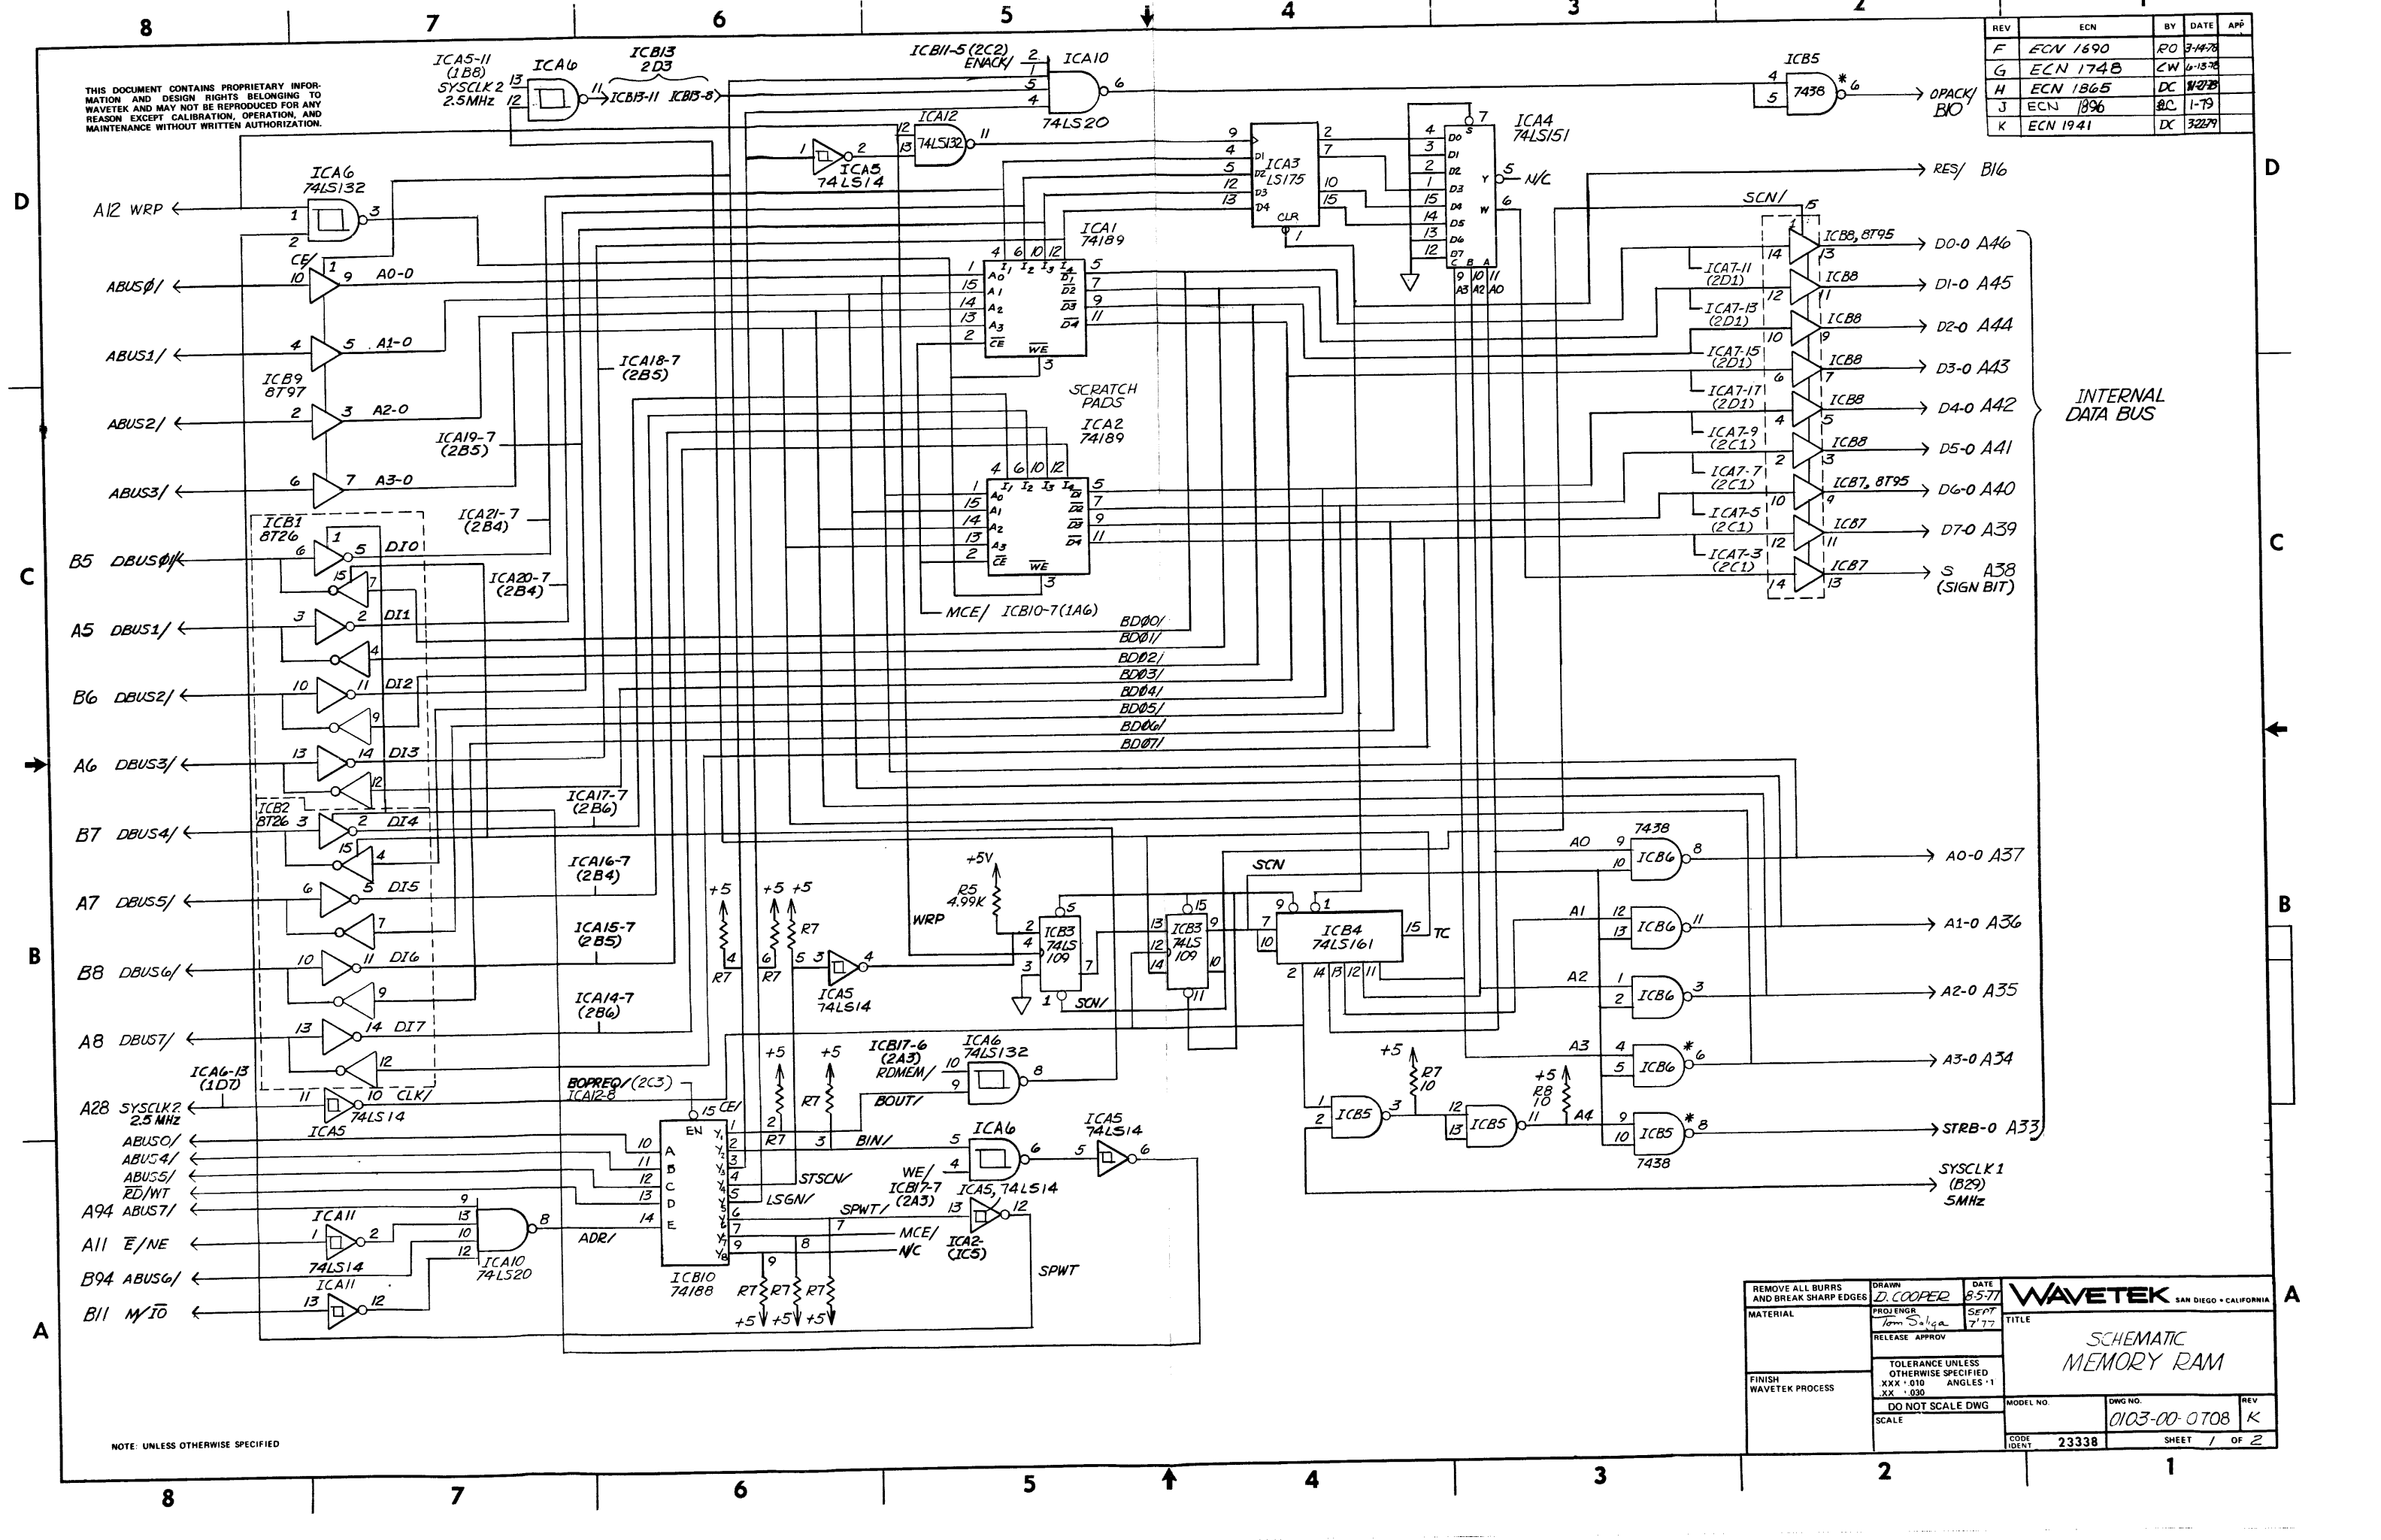


NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|------------------------|--|----------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 8-5-77 | |
| MATERIAL | PROJ ENGR Tom Salga | DATE SEPT 7 '77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 .XX .030 | TITLE SCHEMATIC MEMORY RAM |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0708 |
| | | CODE IDENT 23338 | REV K |
| | | SHEET 1 OF 2 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


D
C
B
A

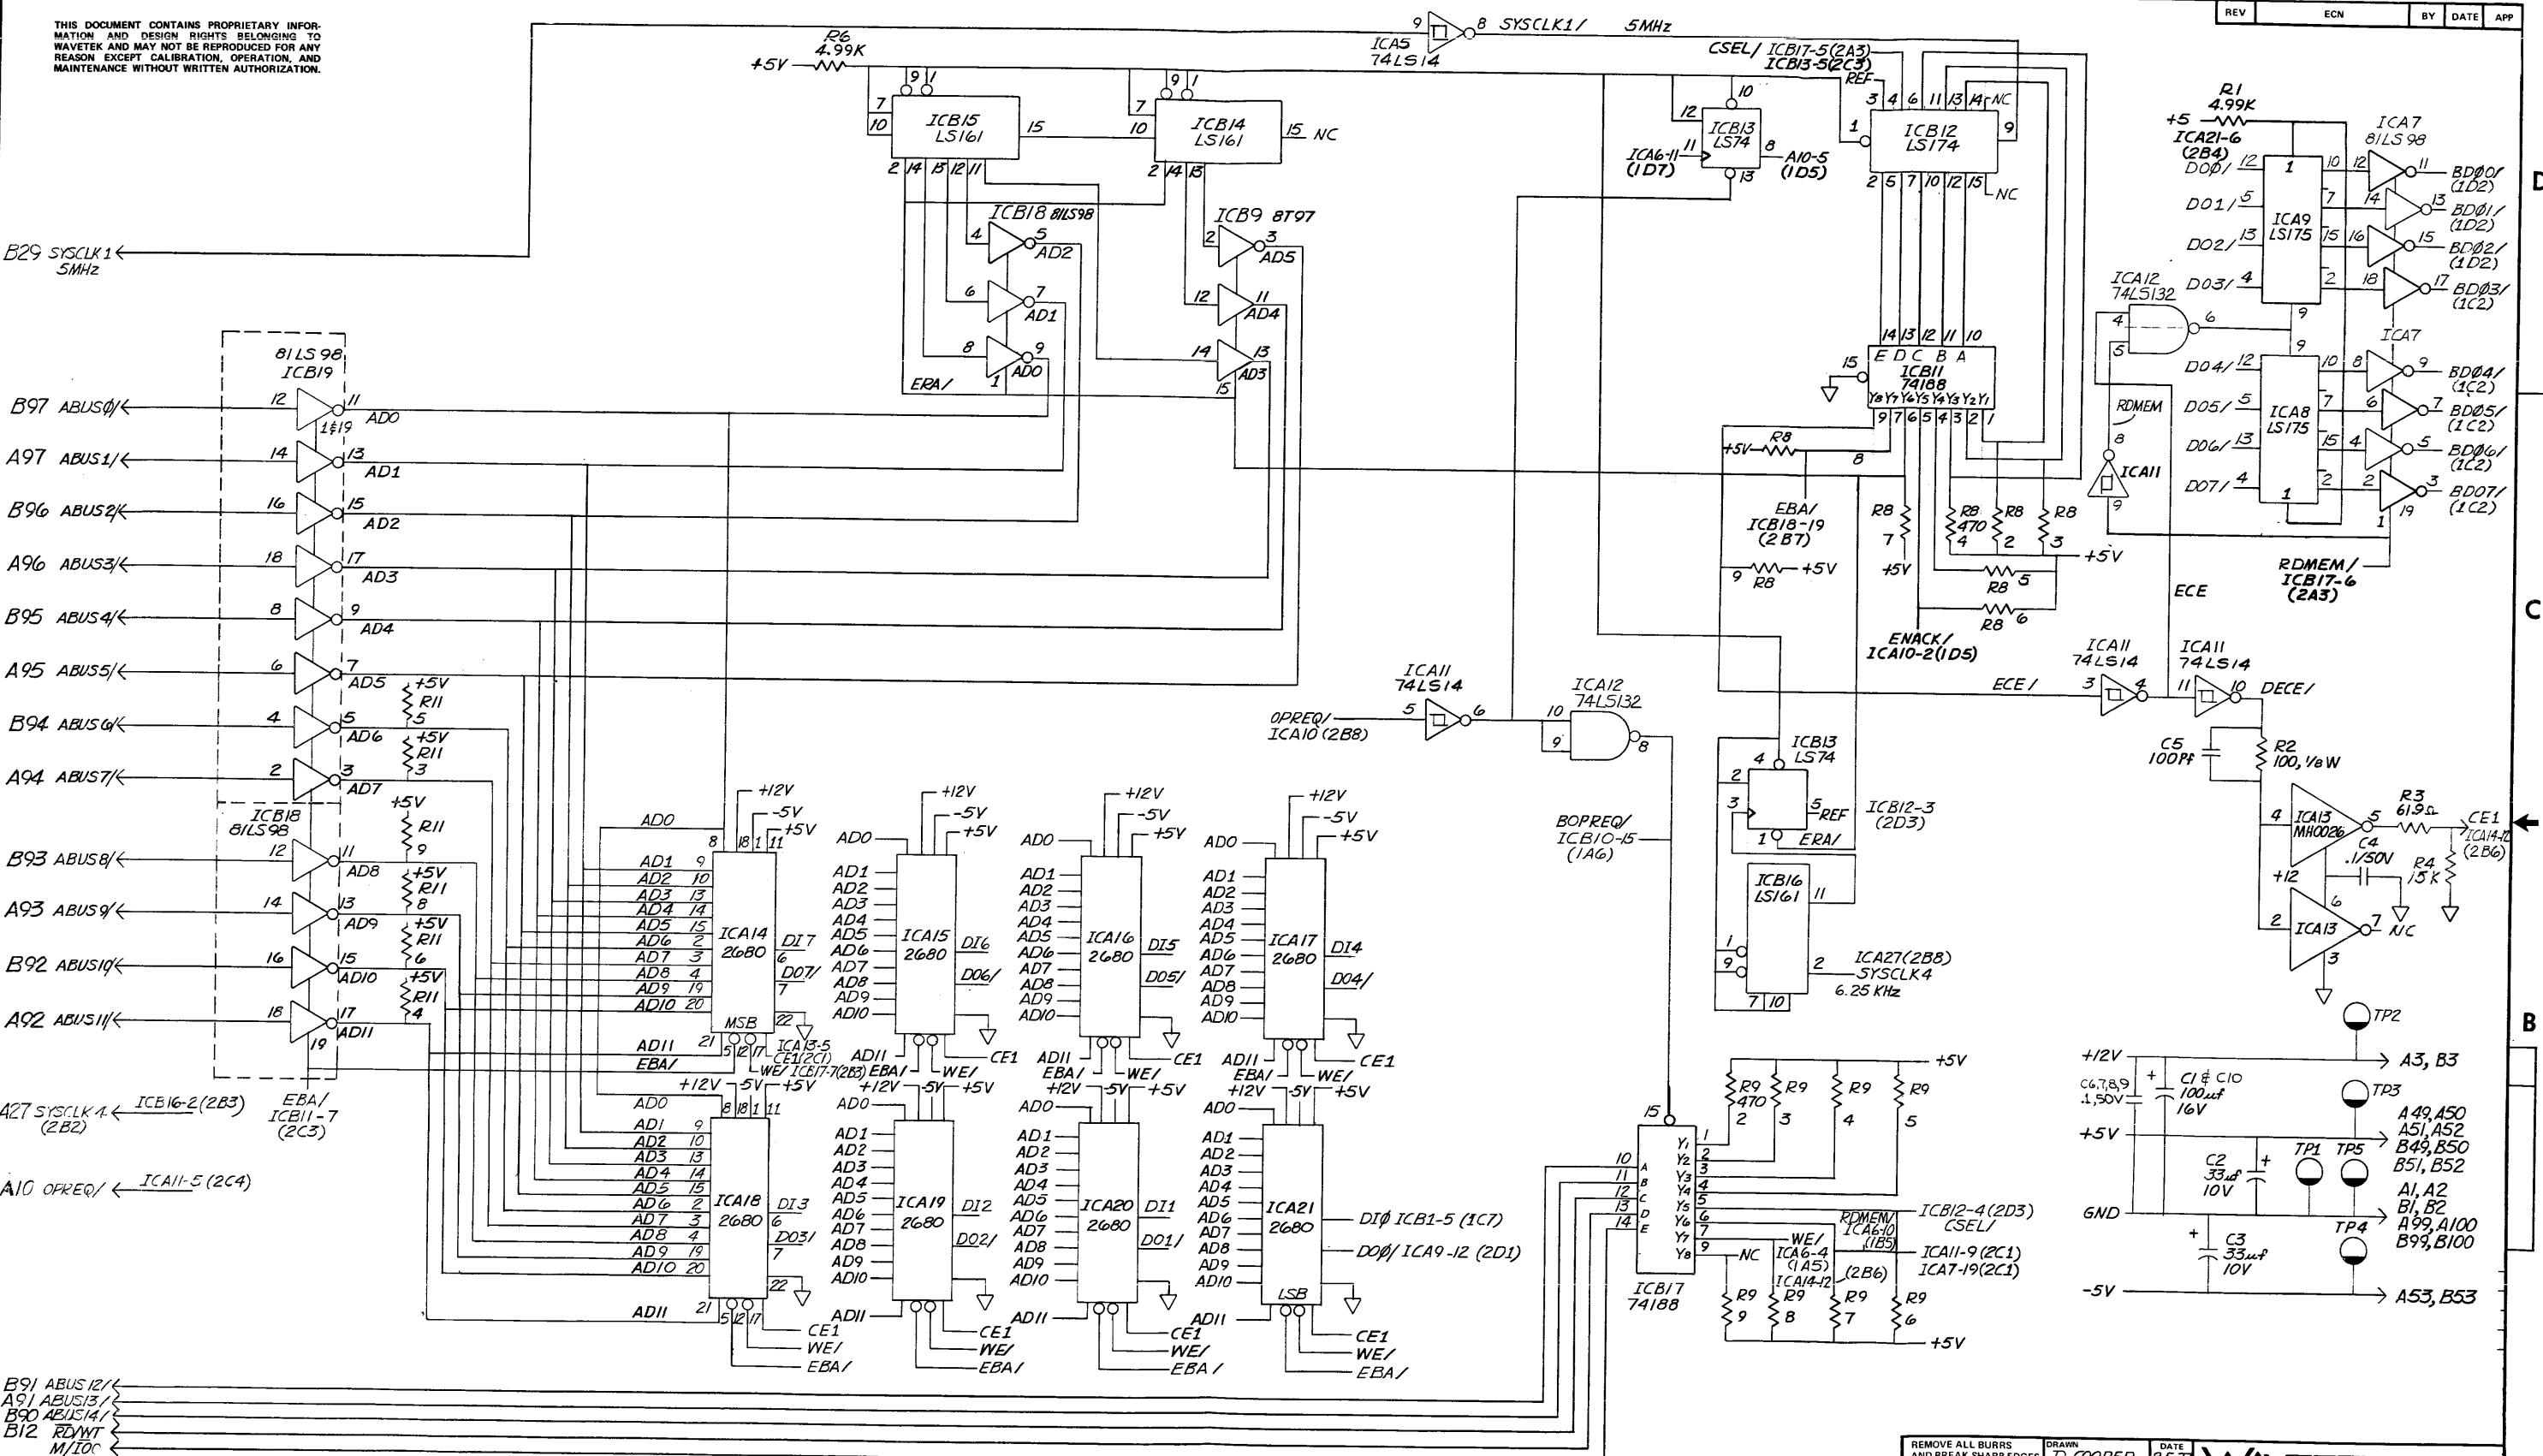

| | | | |
|--|----------------------|------------------|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN J. COOPER | DATE 8-5-77 | |
| MATERIAL | PROJ ENGR Tom Saliga | SEPT 77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TITLE | SCHEMATIC MEMORY RAM |
| | | DO NOT SCALE DWG | |
| SCALE | MODEL NO. | DWG NO. | REV |
| | CODE IDENT 23338 | 0103-00-0708 | K |
| | | SHEET 2 OF 2 | |

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

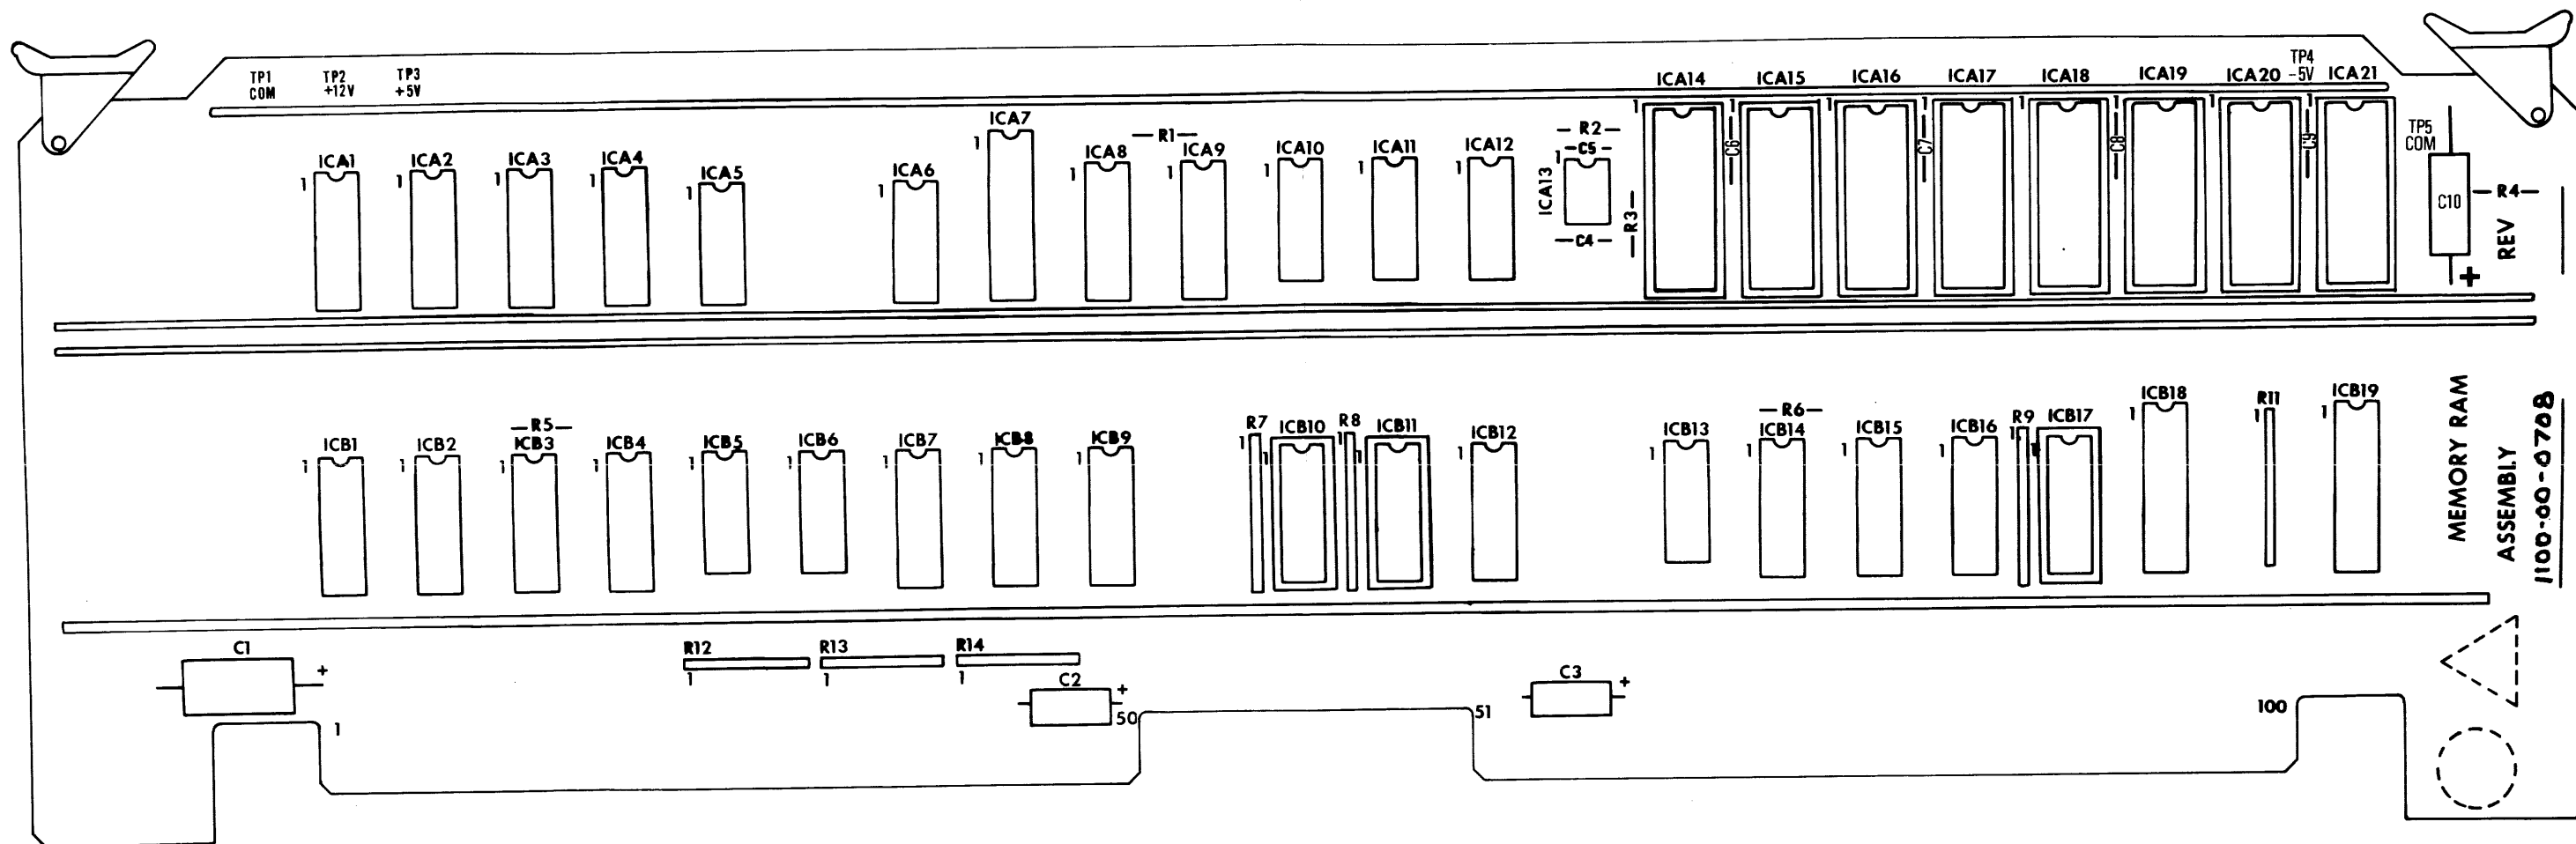

1100-00-0708

MEMORY RAM
ASSEMBLY
1100-00-0708

| | | | |
|--|------------------|---------------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA TITLE MEMORY RAM PCA |
| | PROJ ENGR | | |
| MATERIAL | RELEASE APPROV | | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 |
| | | | |
| FINISH WAVETEK PROCESS | DO NOT SCALE DWG | | MODEL NO 172 B |
| | SCALE | | DWG NO 0101-00-0708 |
| | | CODE IDENT 23338 | REV SHEET 1 OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, MEMORY RAM | 0101-00-0708 | WVTK | 0101-00-0708 | 1 |
| NONE | SCHEMATIC, MEMORY RAM | 0103-00-0708 | WVTK | 0103-00-0708 | 1 |
| C5 | CAP, CER, 100PF, 1KV | DD-101 | CRL | 1500-01-0111 | 1 |
| C4 C6 C7 C8 C9 | CAP, CER, MON, .1MF, 50V | CAC03Z3U104Z050A | CDRNG | 1500-01-0405 | 5 |
| C1 C10 | CAP, ELECT, 100MF, 16V | 500D107G016DC7 | SPRAG | 1500-31-0101 | 2 |
| C2 C3 | CAP, TANT, 33MF, 10V | 150D336X9010B2 | SPRAG | 1500-73-3601 | 2 |
| NONE | MEMORY RAM BD | 1700-00-0708 | WVTK | 1700-00-0708 | 1 |
| NONE | SKT, IC, 16PIN | DILB-16P-108 | BURND | 2100-03-0028 | 3 |
| NONE | SKT, IC, 22 PIN | DILB-22P-108 | BURND | 2100-03-0035 | 8 |
| NONE | PIN, MALE | 61182-2 | AMP | 2100-05-0020 | 5 |
| NONE | PC BD EJECTOR | 103 WHITE | CALMK | 2800-07-0008 | 2 |
| R2 | RES, MF, 1/BW, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 1 |
| R4 | RES, MF, 1/BW, 1%, 15K | RN55D-1502F | TRW | 4701-03-1502 | 1 |
| R1 R5 R6 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 3 |
| R3 | RES, MF, 1/BW, 1%, 61.9 | RN55D-6199F | TRW | 4701-03-6199 | 1 |
| R11 R7 R8 R9 | RES MODULE | 4310R-101-471 | BOURN | 4770-00-0009 | 4 |
| NONE | POWER BUSS BAR (LG) | 6009-90-0004 | WVTK | 6009-90-0004 | 3 |
| NONE | POWER BUSS BAR (ST) | 6009-90-0005 | WVTK | 6009-90-0005 | 1 |

| | | | |
|---------------------------|--------------------------|------------------------------|----------|
| WAVETEK PARTS LIST | TITLE PCA, MEMORY RAM | ASSEMBLY NO. 1100-00-0708 | REV J |
| PAGE: 1 | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|------------------|-------------------|------|--------------|--------|
| ICA13 | IC | MMH0026CP1 | HDT | 8000-00-2600 | 1 |
| ICB1 ICB2 | IC | 8T26 | SIG | 8000-08-2600 | 2 |
| ICB7 ICB8 | IC | 8T95 | SIG | 8000-08-9500 | 2 |
| ICB9 | IC | 8T97 | SIG | 8000-08-9700 | 1 |
| ICA14 ICA15 ICA16 ICA17 ICA18 ICA19 ICA20 ICA21 | IC | 2680 | SIG | 8000-26-8000 | 8 |
| ICA11 ICA5 | IC | 74LS14 | TI | 8000-74-1410 | 2 |
| ICA10 | IC | 74LS20 | TI | 8000-74-2010 | 1 |
| ICB5 ICB6 | IC | 7438 | TI | 8000-74-3800 | 2 |
| ICB13 | IC | 74LS74 | TI | 8000-74-7410 | 1 |
| ICA7 ICB18 ICB19 | IC | DHB1LS98N | NSC | 8000-81-9810 | 3 |
| ICB3 | IC | 74LS109 | SIG | 8007-41-0910 | 1 |
| ICA12 ICA6 | IC | 74LS132 | TI | 8007-41-3210 | 2 |
| ICA4 | IC | 74LS151 | TI | 8007-41-5110 | 1 |
| ICB14 ICB15 ICB16 ICB4 | IC | 74LS161 | SIG | 8007-41-6110 | 4 |
| ICB12 | IC | SN74LS174N | TI | 8007-41-7410 | 1 |
| ICA3 ICA8 ICA9 | IC | 74LS175 | TI | 8007-41-7510 | 3 |

| | | | |
|---------------------------|--------------------------|------------------------------|----------|
| WAVETEK PARTS LIST | TITLE PCA, MEMORY RAM | ASSEMBLY NO. 1100-00-0708 | REV J |
| PAGE: 2 | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|-------------------------------------|-------------------|------|--------------|--------|
| ICA1 ICA2 | IC | N74S189A | SIG | 8007-41-8900 | 2 |
| ICB10 | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0003 | WVTK | 8600-00-0003 | 1 |
| ICB11 | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0004 | WVTK | 8600-00-0004 | 1 |
| ICB17 | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0169 | WVTK | 8600-00-0169 | 1 |

| | | | |
|---------------------------|--------------------------|------------------------------|----------|
| WAVETEK PARTS LIST | TITLE PCA, MEMORY RAM | ASSEMBLY NO. 1100-00-0708 | REV J |
| PAGE: 3 | | | |

| | | | |
|--|--|-------------------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO - CALIFORNIA |
| MATERIAL | PROJ ENGR | | |
| | RELEASE APPROV | | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | |
| FINISH WAVETEK PROCESS | DO NOT SCALE DWG | SCALE | |
| | | | PARTS LIST PCA, MEMORY RAM |
| MODEL NO. 172B | | DWG NO. 1100-00-0708 | REV J |
| CODE 23338 | | SHEET 1 OF 1 | |

NOTE: UNLESS OTHERWISE SPECIFIED

| REV | ECN | BY | DATE | APP |
|-----|-----------|-----|---------|-----|
| D | ECN #1941 | DC | 9-30-78 | |
| E | ECN #2007 | BDS | 7-24-78 | |
| F | ECN #2163 | WTE | 5-12-80 | lc |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

D

D

C


C

B

B

A

A

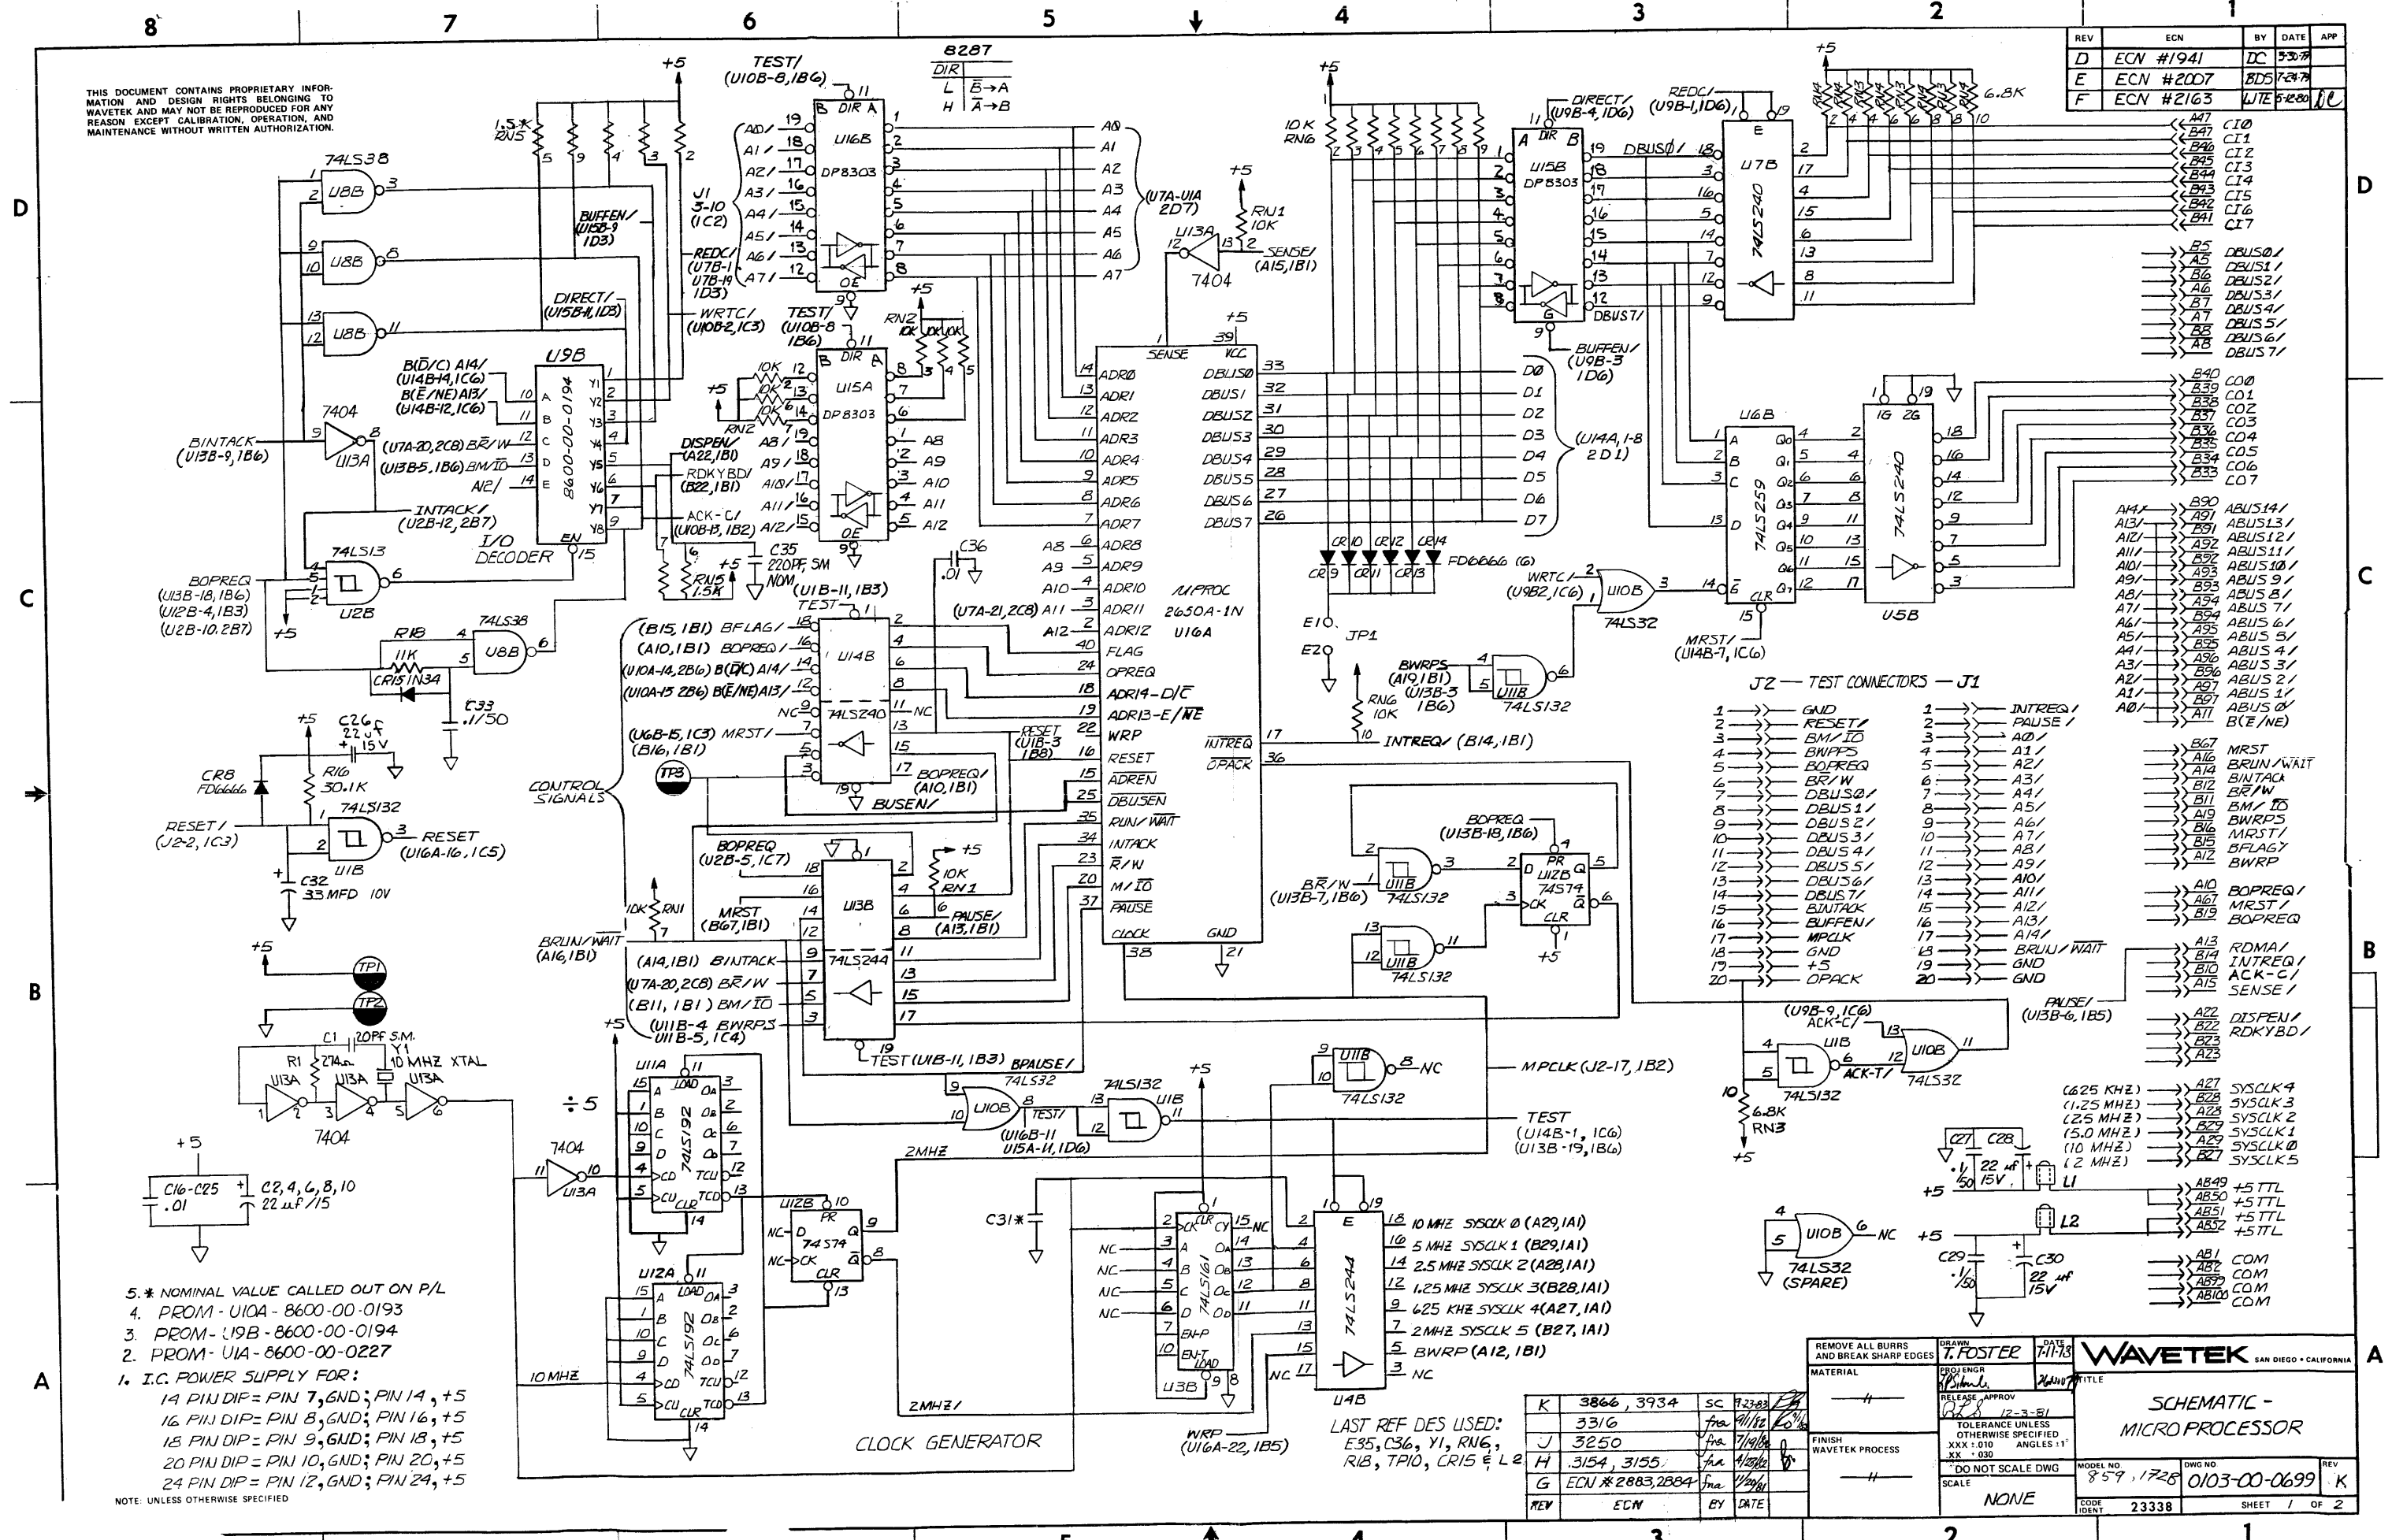

- * NOMINAL VALUE CALLED OUT ON P/L
- PROM - U10A - 8600-00-0193
- PROM - U19B - 8600-00-0194
- PROM - U1A - 8600-00-0227
- I.C. POWER SUPPLY FOR:
 - 14 PIN DIP = PIN 7, GND; PIN 14, +5
 - 16 PIN DIP = PIN 8, GND; PIN 16, +5
 - 18 PIN DIP = PIN 9, GND; PIN 18, +5
 - 20 PIN DIP = PIN 10, GND; PIN 20, +5
 - 24 PIN DIP = PIN 12, GND; PIN 24, +5



NOTE: UNLESS OTHERWISE SPECIFIED

| REV | ECN | BY | DATE |
|-----|-----------------|-----|----------|
| K | 3866, 3934 | SC | 7-23-78 |
| J | 3316 | fra | 11/18/78 |
| H | 3154, 3155 | fra | 4/22/78 |
| G | ECN #2883, 2884 | fra | 1/24/78 |

LAST REF DES USED:
E35, C36, Y1, RN6,
R18, TPI0, CR15 & L2

| | | | |
|--|--------------------------------------|---------------------|------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN T. FOSTER | DATE 7-11-78 | |
| MATERIAL | PROF ENGR | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | 12-3-81 | SCHEMATIC - MICRO PROCESSOR |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED | XXX ± 0.10 | |
| | ° ± 0.03 | | |
| | DO NOT SCALE DWG | SCALE NONE | |
| | MODEL NO 859, 1728 | DWG NO 0103-00-0699 | REV K |
| | SCALE NONE | CODE IDENT 23338 | SHEET 1 OF 2 |


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

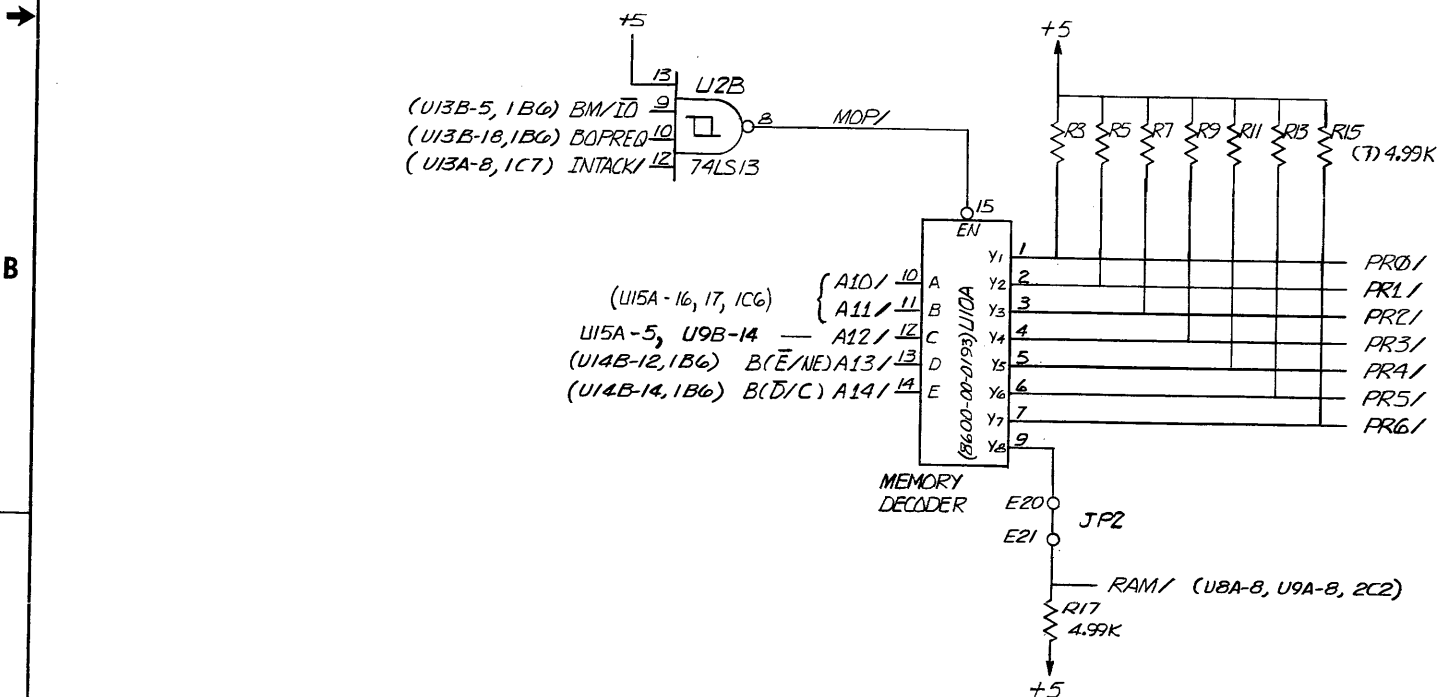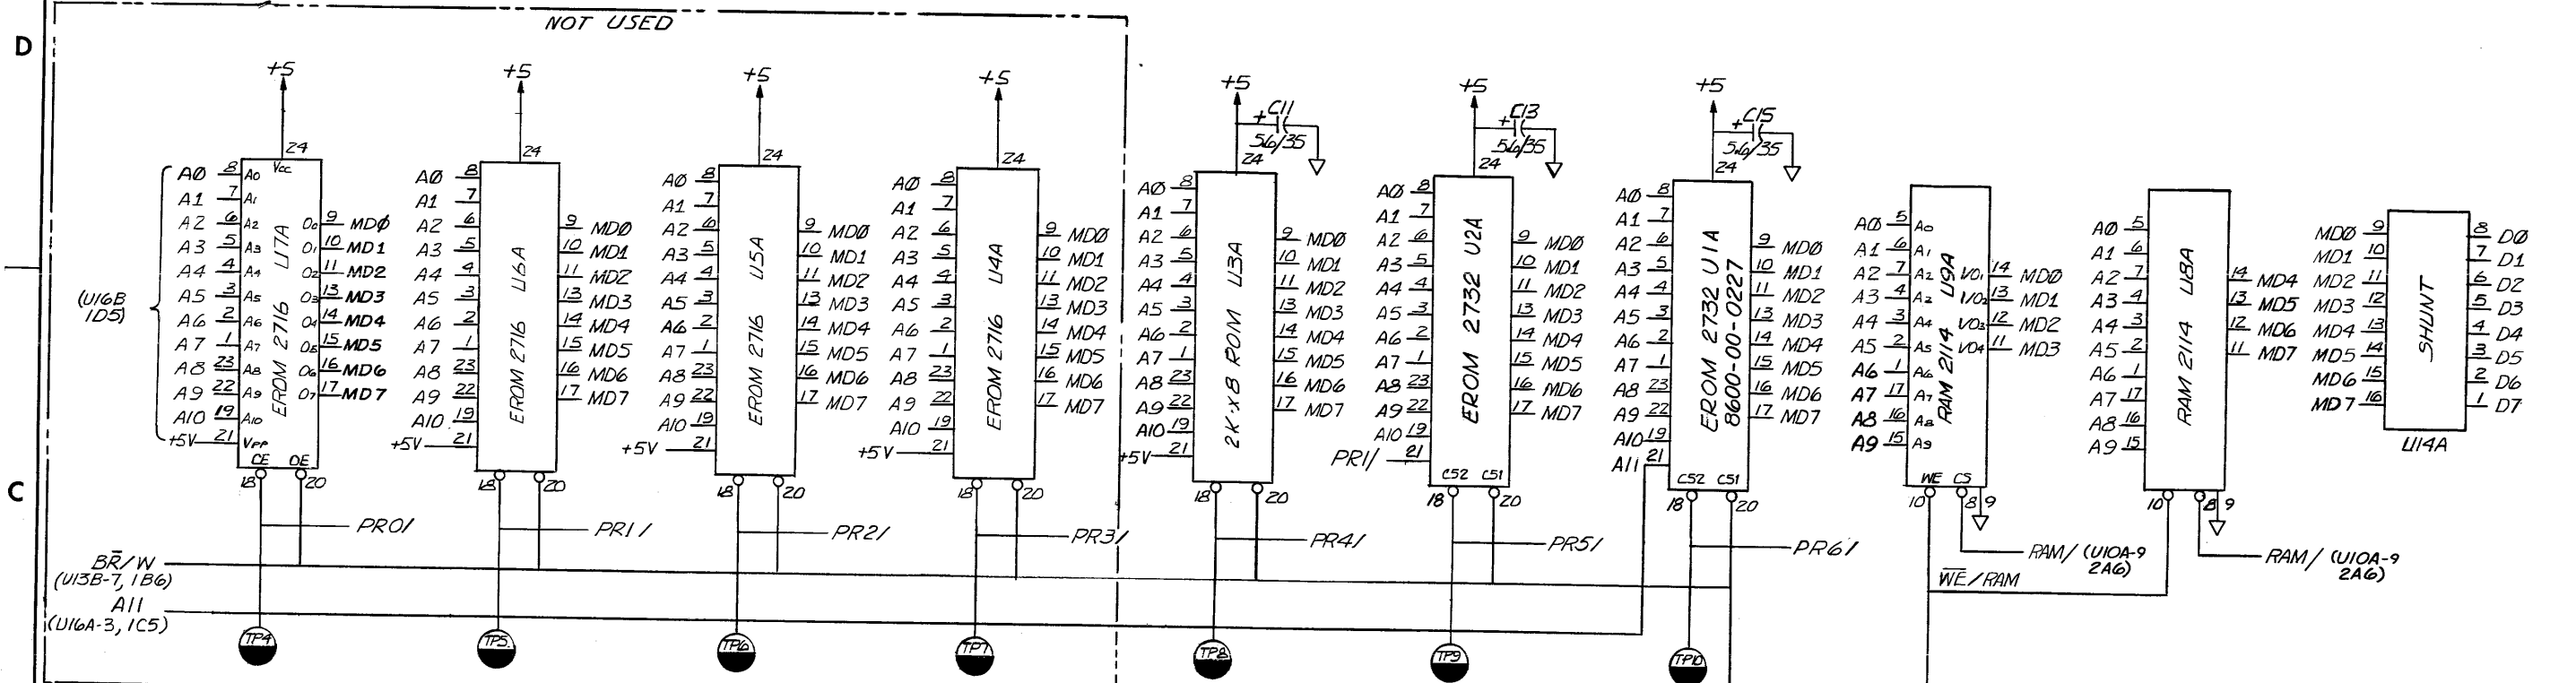

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|--|-----------------------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN: T. FOSTER | DATE: 7/12/78 | |
| MATERIAL: # | PROFESSOR: W. Smith | RELEASE APPROV: [Signature] | |
| FINISH: WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± 0.10 ANGLE ± 1° XX ± 0.30 | | SCHEMATIC - MICRO PROCESSOR (EPROM MEMORY) |
| SCALE: NONE | DO NOT SCALE DWG | MODEL NO. | |
| | | CODE IDENT: 23338 | REV: X |
| | | | SHEET 2 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

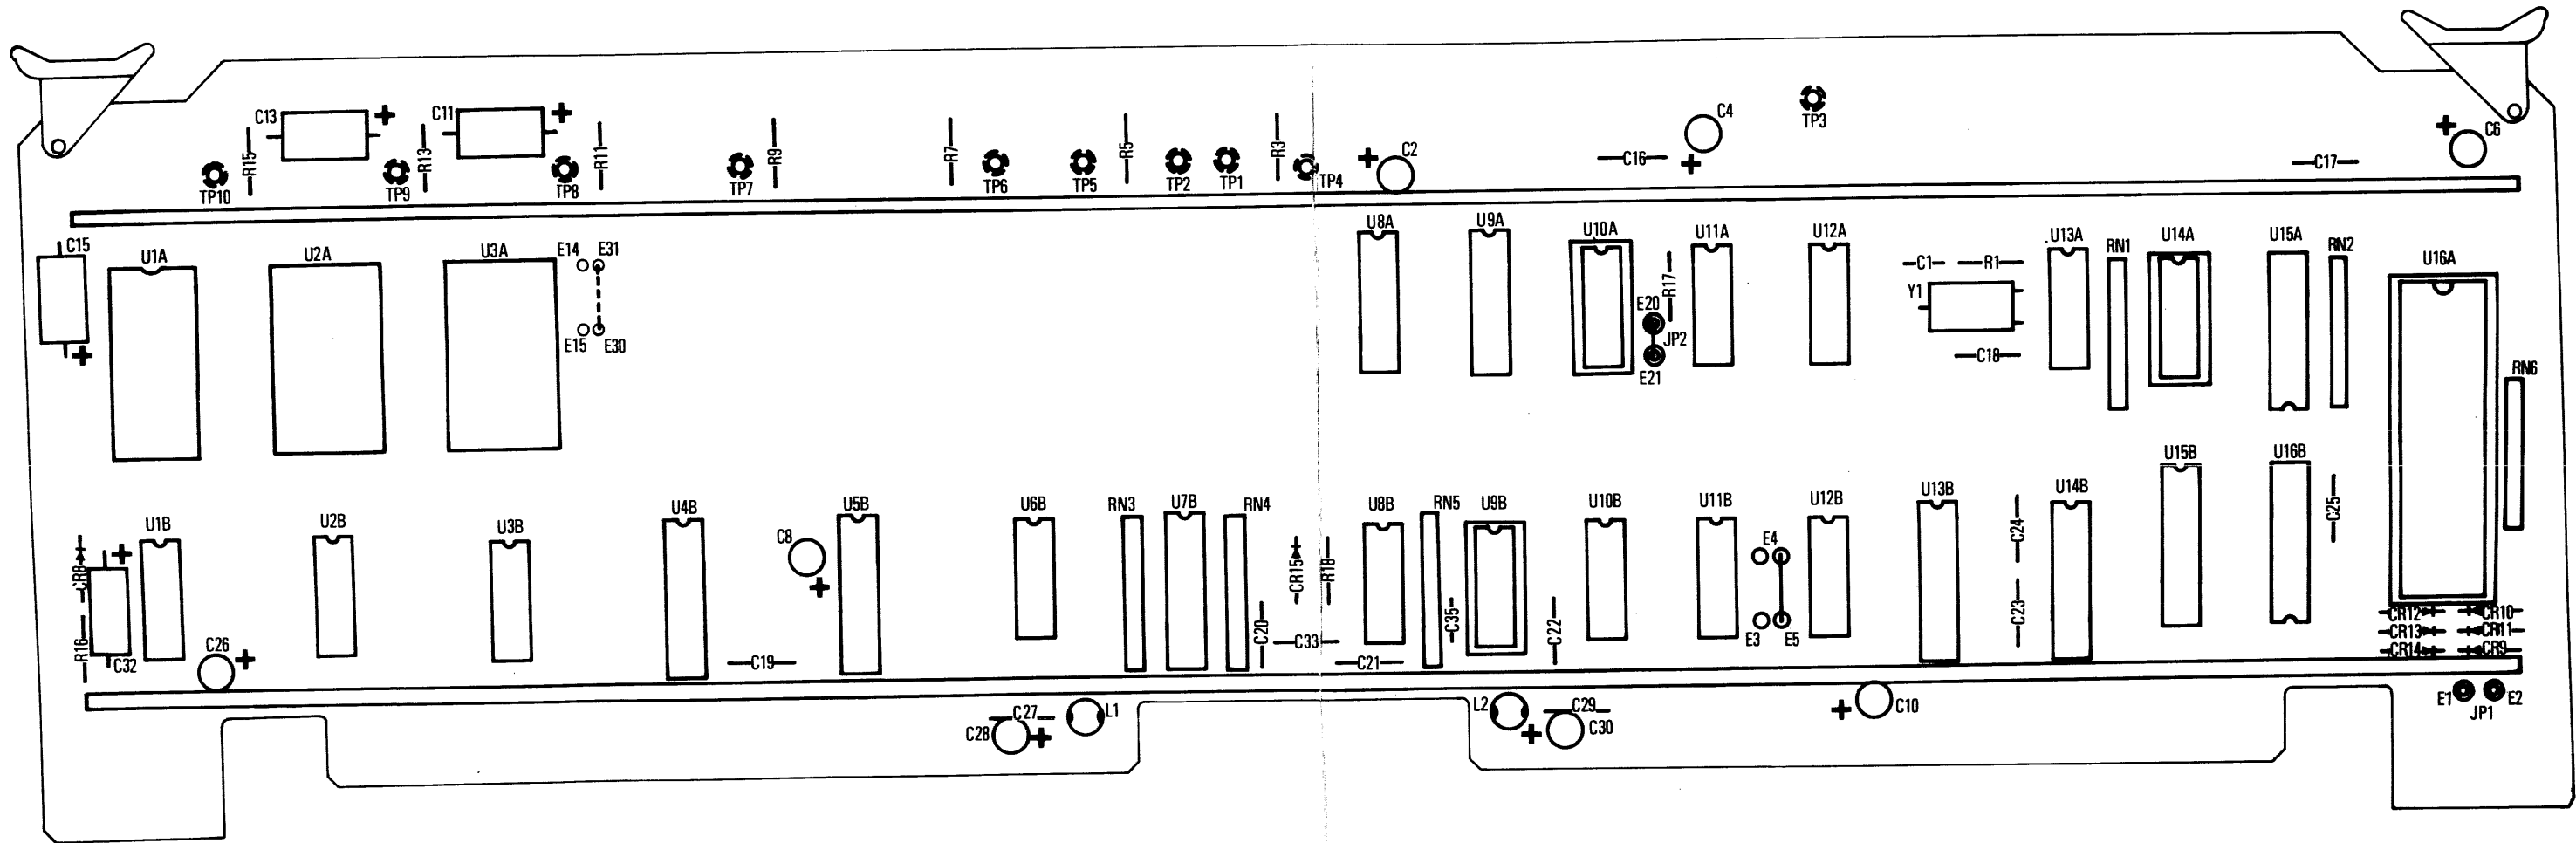

1100-00-0699

| | | | | |
|--|--|--------|---------------------------------------|---------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE | APPROV | MICROPROCESSOR PCA | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | MODEL NO | DWG NO |
| | DO NOT SCALE DWG | | 172B | 0101-00-0699 |
| SCALE | | | CODE IDENT | SHEET 1 OF 1 |
| | | | 2333B | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|----------------------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 2 |
| 1 | SHUNT | 435704-8 | AMP | 3000-00-0033 | 1 |
| NONE | JUMPER | 461-2871-01-03-10 | CAMB | 3000-00-0034 | 1 |
| NONE | PINS, JUMPER | 450-3704-01-03 | CAMB | 3000-00-0035 | 4 |
| L1 L2 | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 2 |
| R18 | RES. MF. 1/8W. 1%, 11K | RN55D-1102F | TRW | 4701-03-1102 | 1 |
| R1 | RES. MF. 1/8W. 1%, 274 | RN55D-2740F | TRW | 4701-03-2740 | 1 |
| R16 | RES. MF. 1/8W. 1%, 30.1K | RN55D-3012F | TRW | 4701-03-3012 | 1 |
| R11 R13 R15 R17 R3 R5 R7 R9 | RES. MF. 1/8W. 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 8 |
| RN1 RN2 RN6 | RES MODULE. 10K | 4310R-101-103 | BOURN | 4770-00-0008 | 3 |
| RN5 | RES NETWK | 785-1R1.5K | BECK | 4770-00-0010 | 1 |
| RN3 RN4 | RES MODULE | 4310R-101-682 | BOURN | 4770-00-0016 | 2 |
| CR15 | DIODE | 1N34 | FAIR | 4804-01-0034 | 1 |
| CR10 CR11 CR12 CR13 CR14 CR8 CR9 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 7 |
| NONE | POWER BUSS BAR (L0) | 6009-90-0004 | WVTK | 6009-90-0004 | 2 |
| UBA U9A | IC | 2114 | INTEL | 8000-21-1400 | 2 |

WAVETEK PARTS LIST
 TITLE: PCA, M-PROC
 ASSEMBLY NO.: 1100-00-0699
 REV: H
 PAGE: 2

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, M-PROC | 0101-00-0699 | WVTK | 0101-00-0699 | 1 |
| NONE | SCHEMATIC, M-PROC | 0103-00-0699 | WVTK | 0103-00-0699 | 1 |
| C16 C17 C18 C19 C20 C21 C22 C23 C24 C25 C36 | CAP. CER. MN. .01MF, 50V | CAC02Z5U103Z100A | CORNG | 1500-01-0310 | 11 |
| C27 C29 C33 | CAP. CER. MON. .1MF, 50V | CAC03Z5U104Z050A | CORNG | 1500-01-0405 | 3 |
| C31T | CAP. CER. 56PF, 1KV | DD-560 | CRL | 1500-05-6001 | 1 |
| C1 | CAP. MICA, 20PF, 500V | DM15-200J | ARCD | 1500-12-0000 | 1 |
| C35T | CAP. MICA, 220PF, 500V | DM15-221J | ARCD | 1500-12-2100 | 1 |
| C10 C2 C26 C28 C30 C4 C6 C8 | CAP. TANT. 22MF, 15V | 196D226X9015KA1 | SPRAG | 1500-72-2601 | 8 |
| C32 | CAP. TANT. 33MF, 10V | 150D336X9010B2 | SPRAG | 1500-73-3601 | 1 |
| C11 C13 C15 | CAP. TANT. 5.6MF, 35V | 150D565X9035B2 | SPRAG | 1500-75-6502 | 3 |
| NONE | M-PROC | 1700-00-0699 | WVTK | 1700-00-0699 | 1 |
| NONE | SKT. IC. 16PIN | DILB-16P-108 | BURND | 2100-03-0028 | 3 |
| NONE | SKT. IC. 24PIN | DILB-24P-108 | BURND | 2100-03-0029 | 7 |
| NONE | SKT. IC. 40PIN | DILB-40P-108 | BURND | 2100-03-0030 | 1 |
| Y1 | CRYSTAL. 10MHZ | 590-502 | WVTK | 2300-99-0006 | 1 |
| NONE | PC BD EJECTOR | 103 WHITE | CALMK | 2800-07-0008 | 2 |

WAVETEK PARTS LIST
 TITLE: PCA, M-PROC
 ASSEMBLY NO.: 1100-00-0699
 REV: H
 PAGE: 1

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|-------------------------------------|-------------------|------|--------------|--------|
| U16A | IC | SCN2650AC2N40 | SIG | 8000-26-5001 | 1 |
| U13A | IC | 7404 | TI | 8000-74-0400 | 1 |
| U2B | IC | SN74LS13N | TI | 8000-74-1310 | 1 |
| U10B | IC | 74LS32 | TI | 8000-74-3210 | 1 |
| U8E | IC | 74LS38 | TI | 8000-74-3810 | 1 |
| U12B | IC | 74S74 | TI | 8000-74-7401 | 1 |
| U15A U15B U16B | IC | DP8303 | NAT | 8000-83-0300 | 3 |
| U11B U1B | IC | 74LS132 | TI | 8007-41-3210 | 2 |
| U3B | IC | 74LS161 | SIG | 8007-41-6110 | 1 |
| U11A U12A | IC | 74LS192 | TI | 8007-41-9210 | 2 |
| U14B U5B U7B | IC | 74LS240 | TI | 8007-42-4010 | 3 |
| U13B U4B | IC | 74LS244 | TI | 8007-42-4410 | 2 |
| U6B | IC | SN74LS259N | TI | 8007-42-5910 | 1 |
| U10A | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0193 | WVTK | 8600-00-0193 | 1 |
| U9B | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0194 | WVTK | 8600-00-0194 | 1 |
| U1A | IC, PROGRAMMED FROM 8000-27-3200 | 8600-00-0227 | WVTK | 8600-00-0227 | 1 |


WAVETEK PARTS LIST
 TITLE: PCA, M-PROC
 ASSEMBLY NO.: 1100-00-0699
 REV: H
 PAGE: 3

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|--|--------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TITLE |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES - 1 XX - .030 | | PARTS LIST PCA, M-PROC |
| DO NOT SCALE DWG | MODEL NO. | DWG NO. | REV |
| SCALE | 172B | 1100-00-0699 | H |
| | CODE IDENT | 23338 | SHEET 1 OF 1 |

| REV | ECN | BY | DATE | APP |
|-----|-------------|-----|----------|-----|
| A | | JL | 4-18-78 | |
| B | ENG. UPDATE | RO | 2-1-79 | |
| C | #2063 | BDS | 11-20-79 | JPS |
| D | 2565.2566 | LDU | 11-6-81 | SC |
| E | 2994 | JL | 12/1/82 | GC |


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

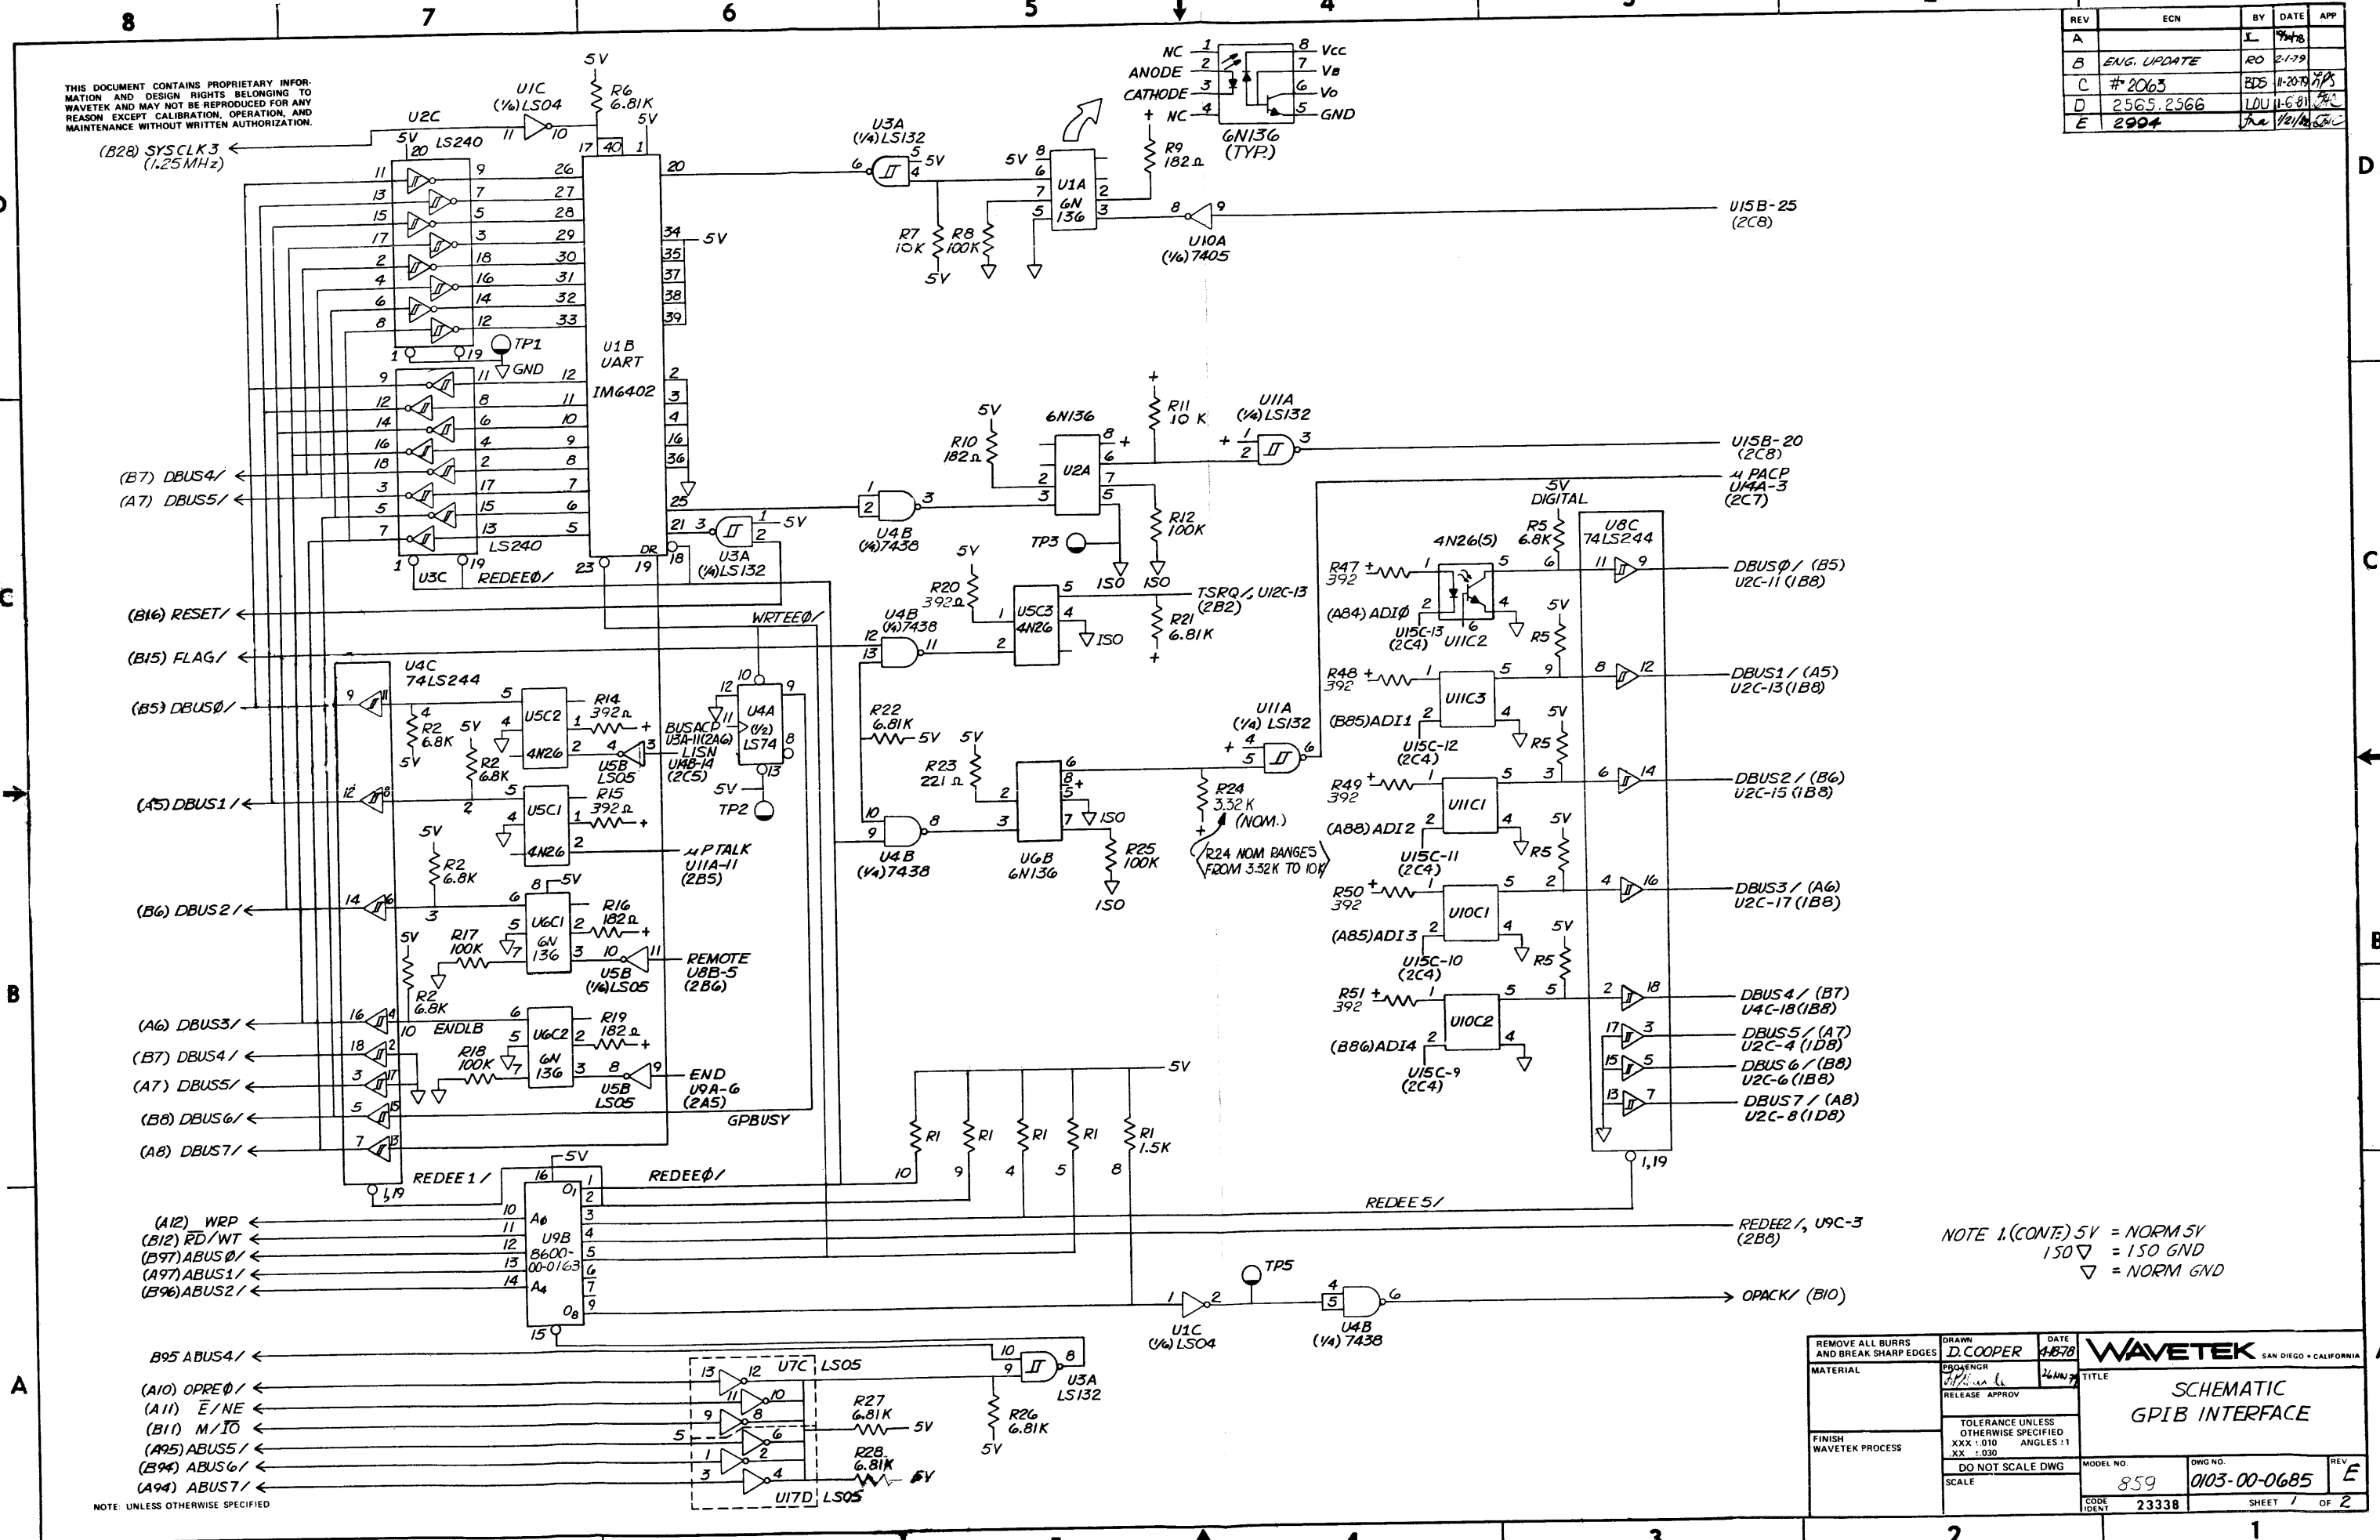

| | | | |
|--|--|---------------|---------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN: D. COOPER | DATE: 4-18-78 | |
| MATERIAL | DESIGNED: J. L. COOPER | DATE: 2-1-79 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV: [Signature] | | TITLE: SCHEMATIC GPIB INTERFACE |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED: .XX ± .010 | ANGLES: 1:1 | |
| | DO NOT SCALE DWG | SCALE | MODEL NO. 859 |
| | | | DWG NO. 0103-00-0685 |
| | | | REV. E |
| | CODE IDENT: 23338 | SHEET: 1 | OF: 2 |

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

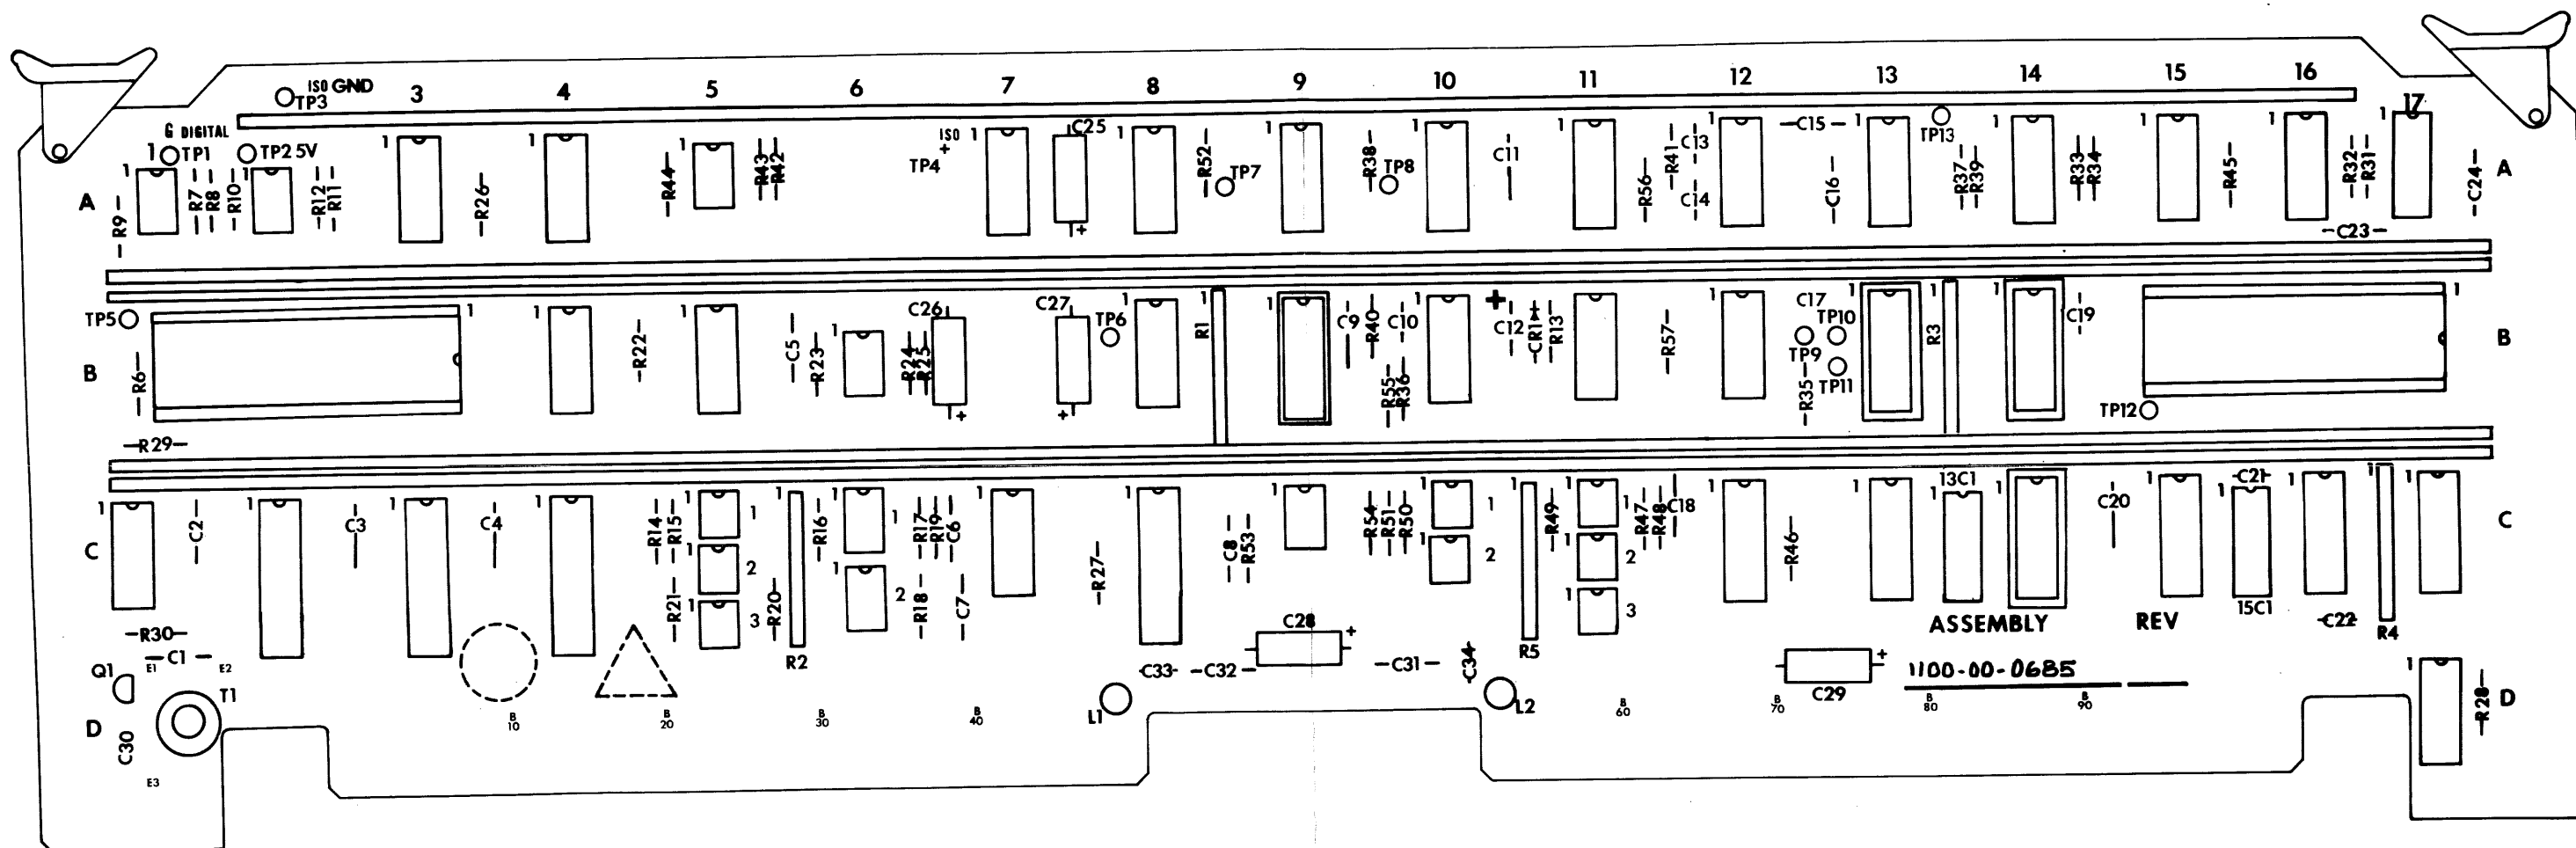

1100-00-0685

| | | | |
|--|--|---------------------------|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| | PROJ/ENGR | TITLE | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | GPIB INTERFACE PCA | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | MODEL NO |
| SCALE | DO NOT SCALE DWG | DWG NO | REV |
| | | 172B | 01D1-00-0685 |
| CODE IDENT | 23338 | SHEET 1 OF 1 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|------------------------------|------------------------------|--------------|---------|
| NONE | ASSY DRWG INTERFACE | 0101-00-0685 | WVTK | 0101-00-0685 | 1 |
| NONE | SCHEMATIC, INTERFACE | 0103-00-0685 | WVTK | 0103-00-0685 | 1 |
| T1 | TRANSFORMER | 175-0024 | WVTK | 1204-00-0024 | 1 |
| C14 | CAP, CER, 100PF, 1KV | DD-101 | CRL | 1500-01-0111 | 1 |
| C1 C11 C15 C16 C17 C18 C19 C2 C20 C21 C22 C23 C24 C3 C30 C4 C5 C6 C7 C8 C9 | CAP, CER, MN, .01MF, 50V | CAC0225U1032100A | CORNG | 1500-01-0310 | 21 |
| C31 C32 | CAP, CER, MON, .1MF, 50V | CAC0325U1042050A | CORNG | 1500-01-0405 | 2 |
| C10 C13 | CAP, CER, 220PF, 1KV | DD-221 | CRL | 1500-02-2111 | 2 |
| C33 C34 | CAP, TANT, 22MF, 15V | 196D226X9015KA1 | SPRAG | 1500-72-2601 | 2 |
| C12 C25 C26 C27 C28 C29 | CAP, TANT, 33MF, 10V | 150D336X9010B2 | SPRAG | 1500-73-3601 | 6 |
| NONE | GP1B INTERFACE | 1700-00-0685 | WVTK | 1700-00-0685 | 1 |
| NONE | SKT, IC, 16PIN | DILB-16P-108 | BURND | 2100-03-0028 | 4 |
| NONE | SKT, IC, 40PIN | DILB-40P-108 | BURND | 2100-03-0030 | 2 |
| NONE | PC BD EJECTOR | 103 WHITE | CALMK | 2800-07-0008 | 2 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 2 |
| L1 L2 | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 2 |
| R44 R53 | RES, MF, 1/BW, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 2 |
| WAVETEK PARTS LIST | | TITLE PCA, GP1B INTERFACE | ASSEMBLY NO. 1100-00-0685 | REV D | PAGE: 1 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|---------------------|------------------------------|------------------------------|--------------|---------|
| CR1 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 1 |
| G1 | TRANS | 2N3903 | NSC | 4901-03-9030 | 1 |
| NONE | POWER BUSS BAR (LG) | 6009-90-0004 | WVTK | 6009-90-0004 | 4 |
| NONE | POWER BUSS BAR (ST) | 6009-90-0005 | WVTK | 6009-90-0005 | 1 |
| U10C1 U10C2 U11C1 U11C2 U11C3 U5C1 U5C2 U5C3 | OPTO-COUPLER | 4N26 | MOT | 7000-04-2600 | 8 |
| U1A U2A U5A U6B U6C1 U6C2 U9C | IC | 6N136 | SPECT | 7100-00-0001 | 7 |
| U12C U13C U16C U17C | IC | MC3446P | MOT | 8000-34-4600 | 4 |
| U11B | IC | CD4093BE | RCA | 8000-40-9300 | 1 |
| U15B U1B | IC | IM5402CPL | INTSL | 8000-64-0200 | 2 |
| U15C1 U7A | IC | 74LS00 | TI | 8000-74-0010 | 2 |
| U13A U1C | IC | 74LS04 | TI | 8000-74-0410 | 2 |
| U10A | IC | 7405 | TI | 8000-74-0500 | 1 |
| U17D U5B U7C | IC | 74LS05 | TI | 8000-74-0510 | 3 |
| U12A | IC | 74LS08 | TI | 8000-74-0810 | 1 |
| U10B | IC | 74LS11 | TI | 8000-74-1110 | 1 |
| U12B | IC | 74LS32 | TI | 8000-74-3210 | 1 |
| WAVETEK PARTS LIST | | TITLE PCA, GP1B INTERFACE | ASSEMBLY NO. 1100-00-0685 | REV D | PAGE: 3 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|------------------------------|------------------------------|--------------|---------|
| R29 | RES, MF, 1/BW, 1%, 1K | RN55B-1001F | TRW | 4701-03-1001 | 1 |
| R11 R13 R42 R56 R7 | RES, MF, 1/BW, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 5 |
| R12 R17 R18 R25 R43 R54 R8 | RES, MF, 1/BW, 1%, 100K | RN55D-1003F | TRW | 4701-03-1003 | 7 |
| R46 | RES, MF, 1/BW, 1%, 1.21K | RN55D-1211F | TRW | 4701-03-1211 | 1 |
| R30 | RES, MF, 1/BW, 1%, 15K | RN55D-1502F | TRW | 4701-03-1502 | 1 |
| R10 R16 R19 R9 | RES, MF, 1/BW, 1%, 182 | RN55D-1820F | TRW | 4701-03-1820 | 4 |
| R40 R41 | RES, MF, 1/BW, 1%, 1.96K | RN55D-1961F | TRW | 4701-03-1961 | 2 |
| R23 | RES, MF, 1/BW, 1%, 221 | RN55D-2210F | TRW | 4701-03-2210 | 1 |
| R24T | RES, MF, 1/BW, 1%, 3.32K | RN55D-3321F | TRW | 4701-03-3321 | 1 |
| R14 R15 R20 R47 R48 R49 R50 R51 | RES, MF, 1/BW, 1%, 392 | RN55D-3920F | TRW | 4701-03-3920 | 8 |
| R55 R57 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 2 |
| R21 R22 R26 R27 R28 R31 R32 R33 R34 R35 R36 R37 R38 R39 R45 R52 R6 | RES, MF, 1/BW, 1%, 6.81K | RN55D-6811F | TRW | 4701-03-6811 | 17 |
| R1 | RES NETWK | 785-1R1.5K | BECK | 4770-00-0010 | 1 |
| R3 R4 | RES MODULE 2.2K | 4310R-101-222 | BOURN | 4770-00-0011 | 2 |
| R2 R5 | RES MODULE | 4310R-101-682 | BOURN | 4770-00-0016 | 2 |
| WAVETEK PARTS LIST | | TITLE PCA, GP1B INTERFACE | ASSEMBLY NO. 1100-00-0685 | REV D | PAGE: 2 |


| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|-------------------------------------|------------------------------|------------------------------|--------------|---------|
| U4B | IC | 7438 | TI | 8000-74-3800 | 1 |
| U13C1 U14A U15A U17A U4A U8A U8B U9A | IC | 74LS74 | TI | 8000-74-7410 | 8 |
| U15C | IC | 93L24PC | FAIR | 8000-93-2410 | 1 |
| U16A | IC | MC14006BCP | MOT | 8001-40-0600 | 1 |
| U11A U3A | IC | 74LS132 | TI | 8007-41-3210 | 2 |
| U2C U3C | IC | 74LS240 | TI | 8007-42-4010 | 2 |
| U4C U8C | IC | 74LS244 | TI | 8007-42-4410 | 2 |
| U13B | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0092 | WVTK | 8600-00-0092 | 1 |
| U9B | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0163 | WVTK | 8600-00-0163 | 1 |
| U14B | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0164 | WVTK | 8600-00-0164 | 1 |
| U14C | IC, PROGRAMMED REF: 8008-21-2601 | 8600-00-0165 | WVTK | 8600-00-0165 | 1 |
| WAVETEK PARTS LIST | | TITLE PCA, GP1B INTERFACE | ASSEMBLY NO. 1100-00-0685 | REV D | PAGE: 4 |

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|---|-----------|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR | | |
| | RELEASE APPROV | | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX - .010 ANGLES - 1 XX - .030 | | |
| FINISH WAVETEK PROCESS | DO NOT SCALE DWG | MODEL NO. | PARTS LIST PCA, GP1B INTERFACE |
| SCALE | 172B | DWG NO. | |
| | 1100-00-0685 | REV | |
| | CODE IDENT 23338 | SHEET 1 | OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|-------------|-----|----------|-----|
| A | ADD RB6 | TJF | 4/8/77 | |
| B | ENG IMPRINT | | | |
| C | ECN 1707 | ED | 4-17-78 | |
| D | ECN 1843 | BDS | 11-11-78 | |




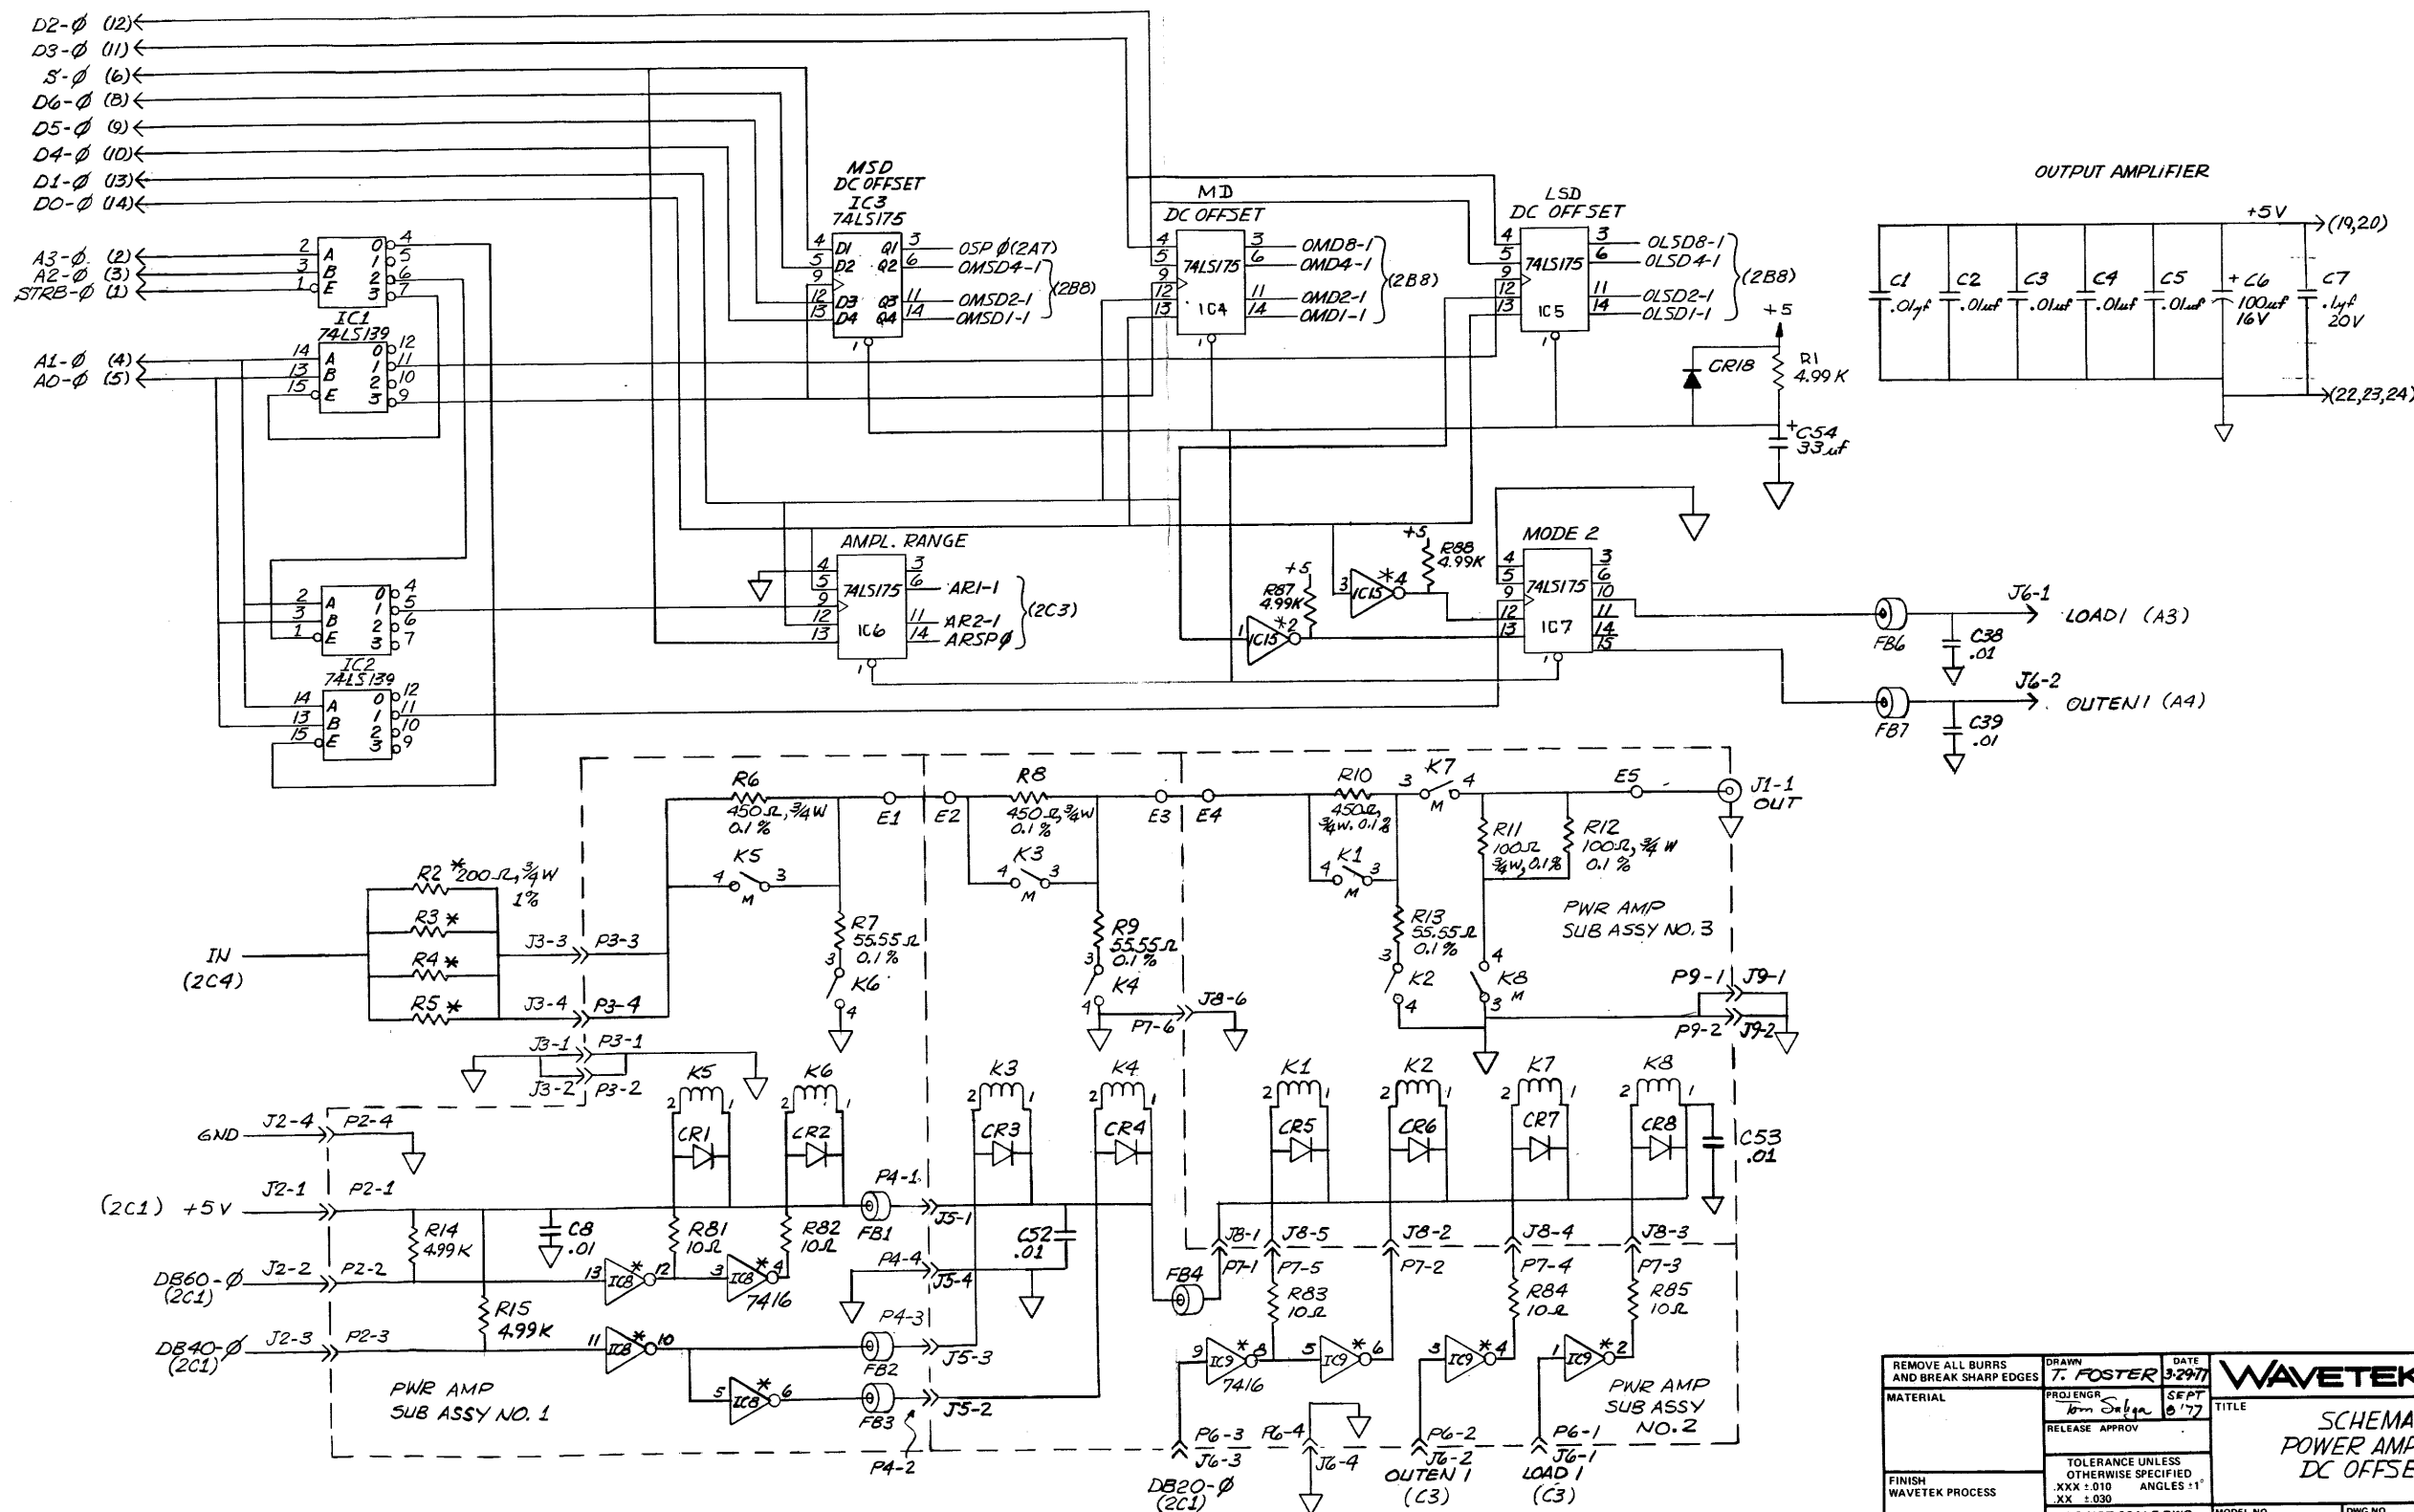


| | | | |
|--|----------------------|--|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN T. FOSTER | DATE 3-29-77 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR Tom Salyer | SEPT 8 '77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ± 0.10 ANGLES :1 | TITLE SCHEMATIC POWER AMPLIFIER/DC OFFSET |
| SCALE | DO NOT SCALE DWG | MODEL NO. | |
| | | DWG NO. | 0103-00-0710 |
| | | REV | D |
| | CODE IDENT 23338 | SHEET 1 | OF 2 |

NOTE: UNLESS OTHERWISE SPECIFIED

0103-00-0710

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVE TEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

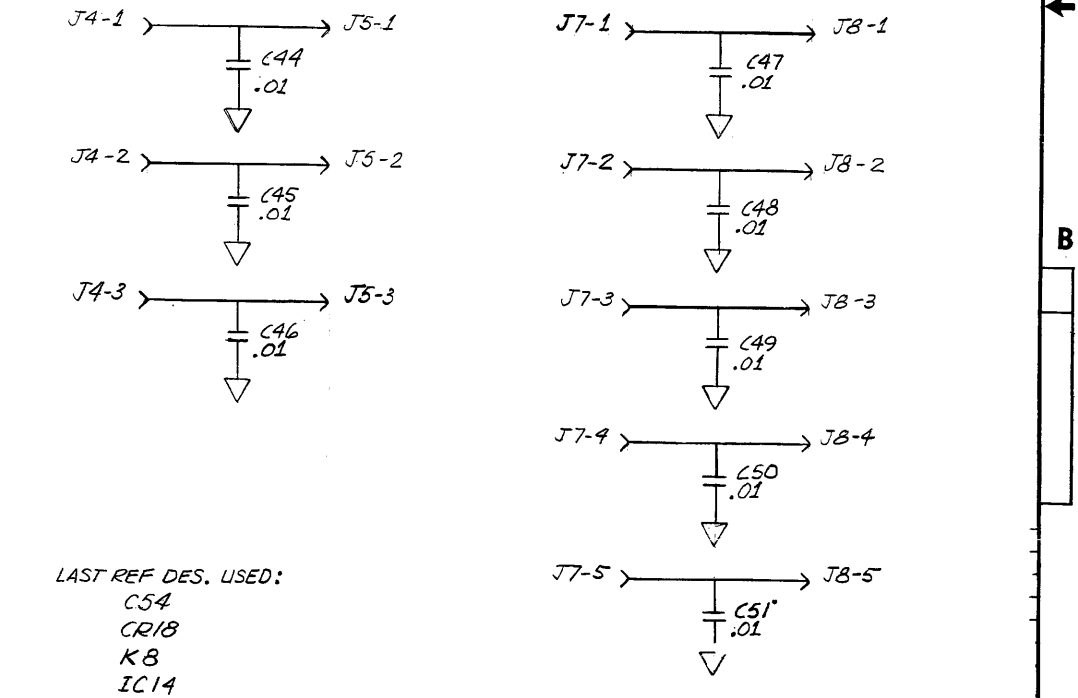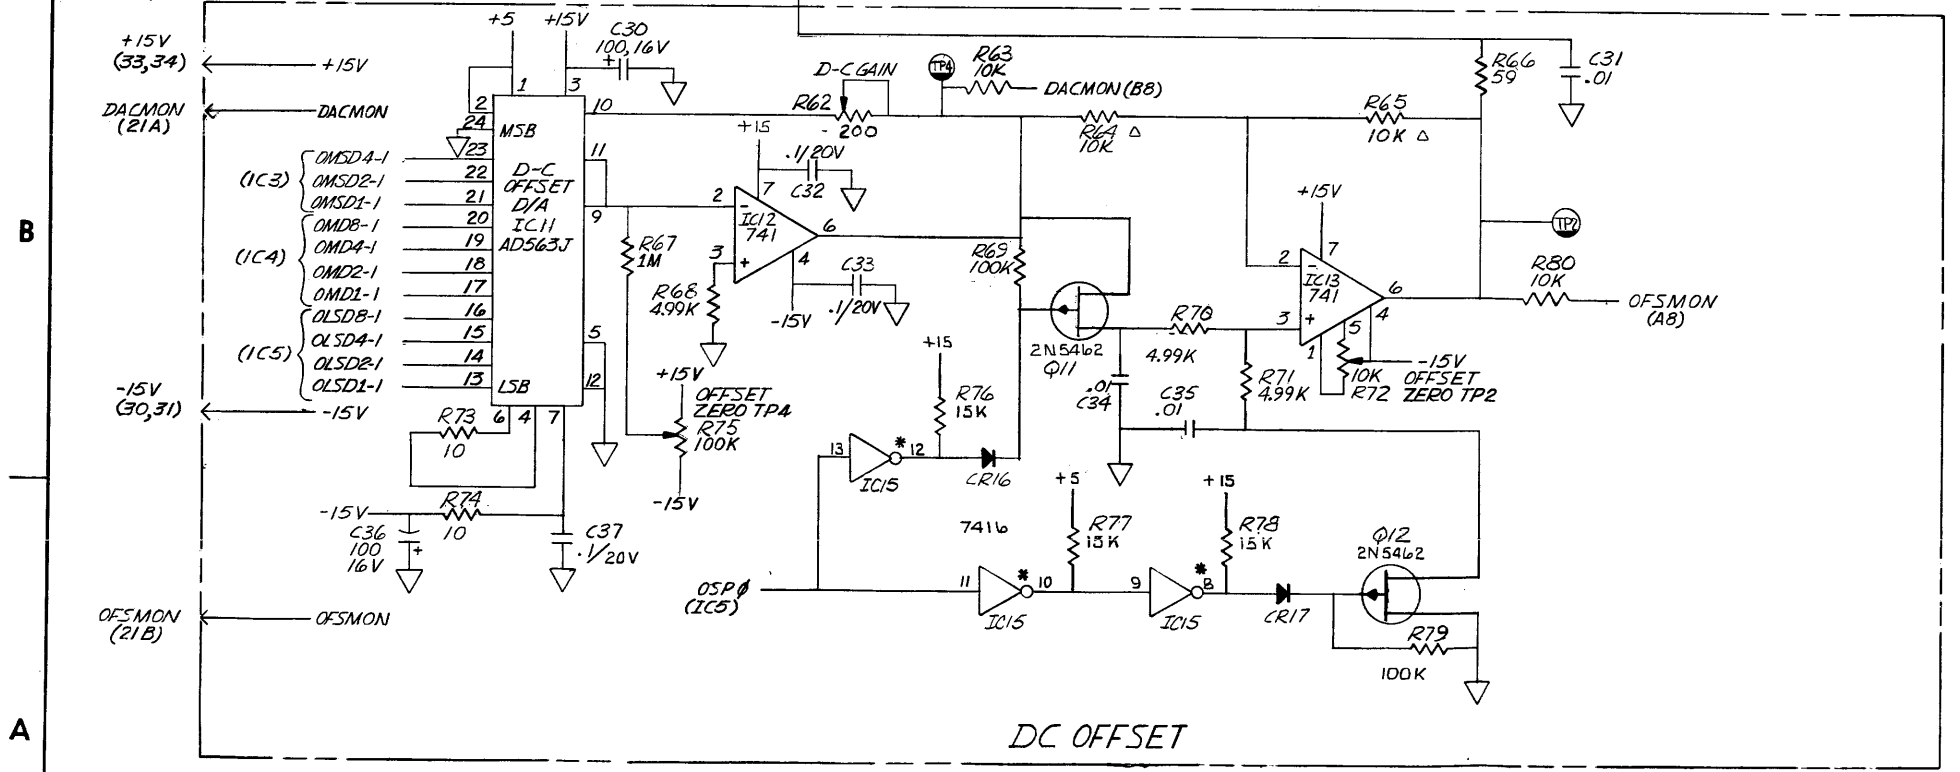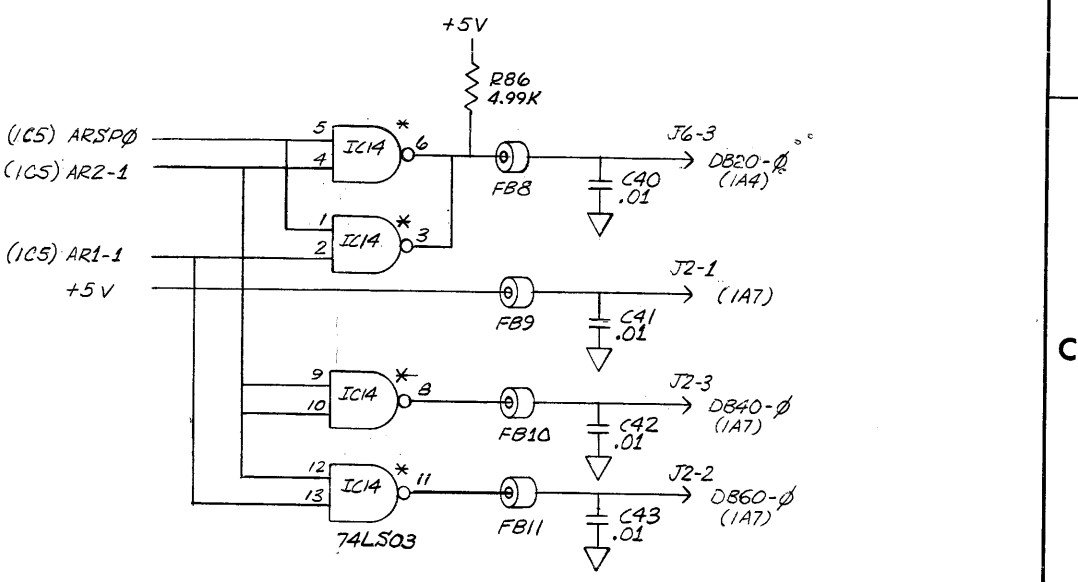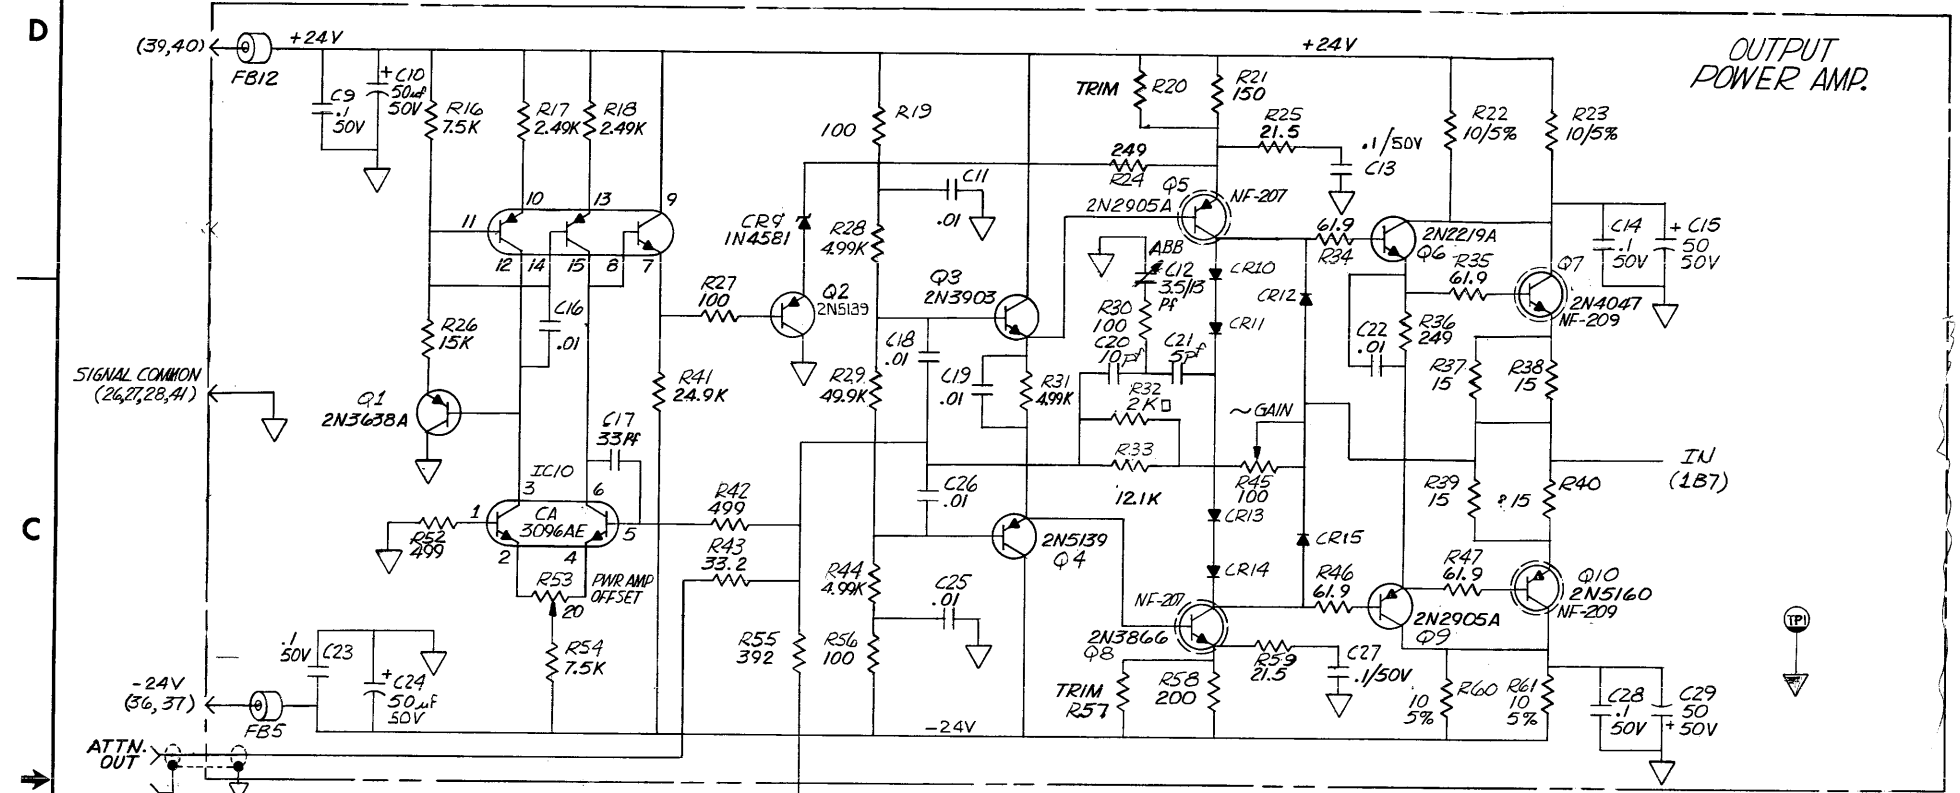


1. ALL RESISTORS IN OHMS 1/8W, 1%
2. ALL CAPACITORS IN MICROFARADS
3. □ = 0.1% 1/8W RES.
4. Δ MATCHED SET # 4789-00-0D19
5. ALL UNMARKED DIODES - FD66666

- LAST REF DES. USED:
- C54
 - CR18
 - K8
 - IC14
 - Q12
 - R88
 - FB12
 - PI0
 - J9
 - TP4
 - E6


| | | | |
|--|-----------------------|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN T. FOSTER | DATE 3-23-77 | |
| MATERIAL | DESIGNED BY Tom Selig | DATE 8-17-77 | |
| FINISH WAVE TEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 ANGLE ±1° XX ±.030 | TITLE |
| | DO NOT SCALE DWG | SCALE | SCHEMATIC POWER AMPLIFIER DC OFFSET |
| | | | MODEL NO. |
| | | | DWG NO. 0103-00-0710 |
| | | | REV |
| | | | 23338 |
| | | | SHEET 2 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

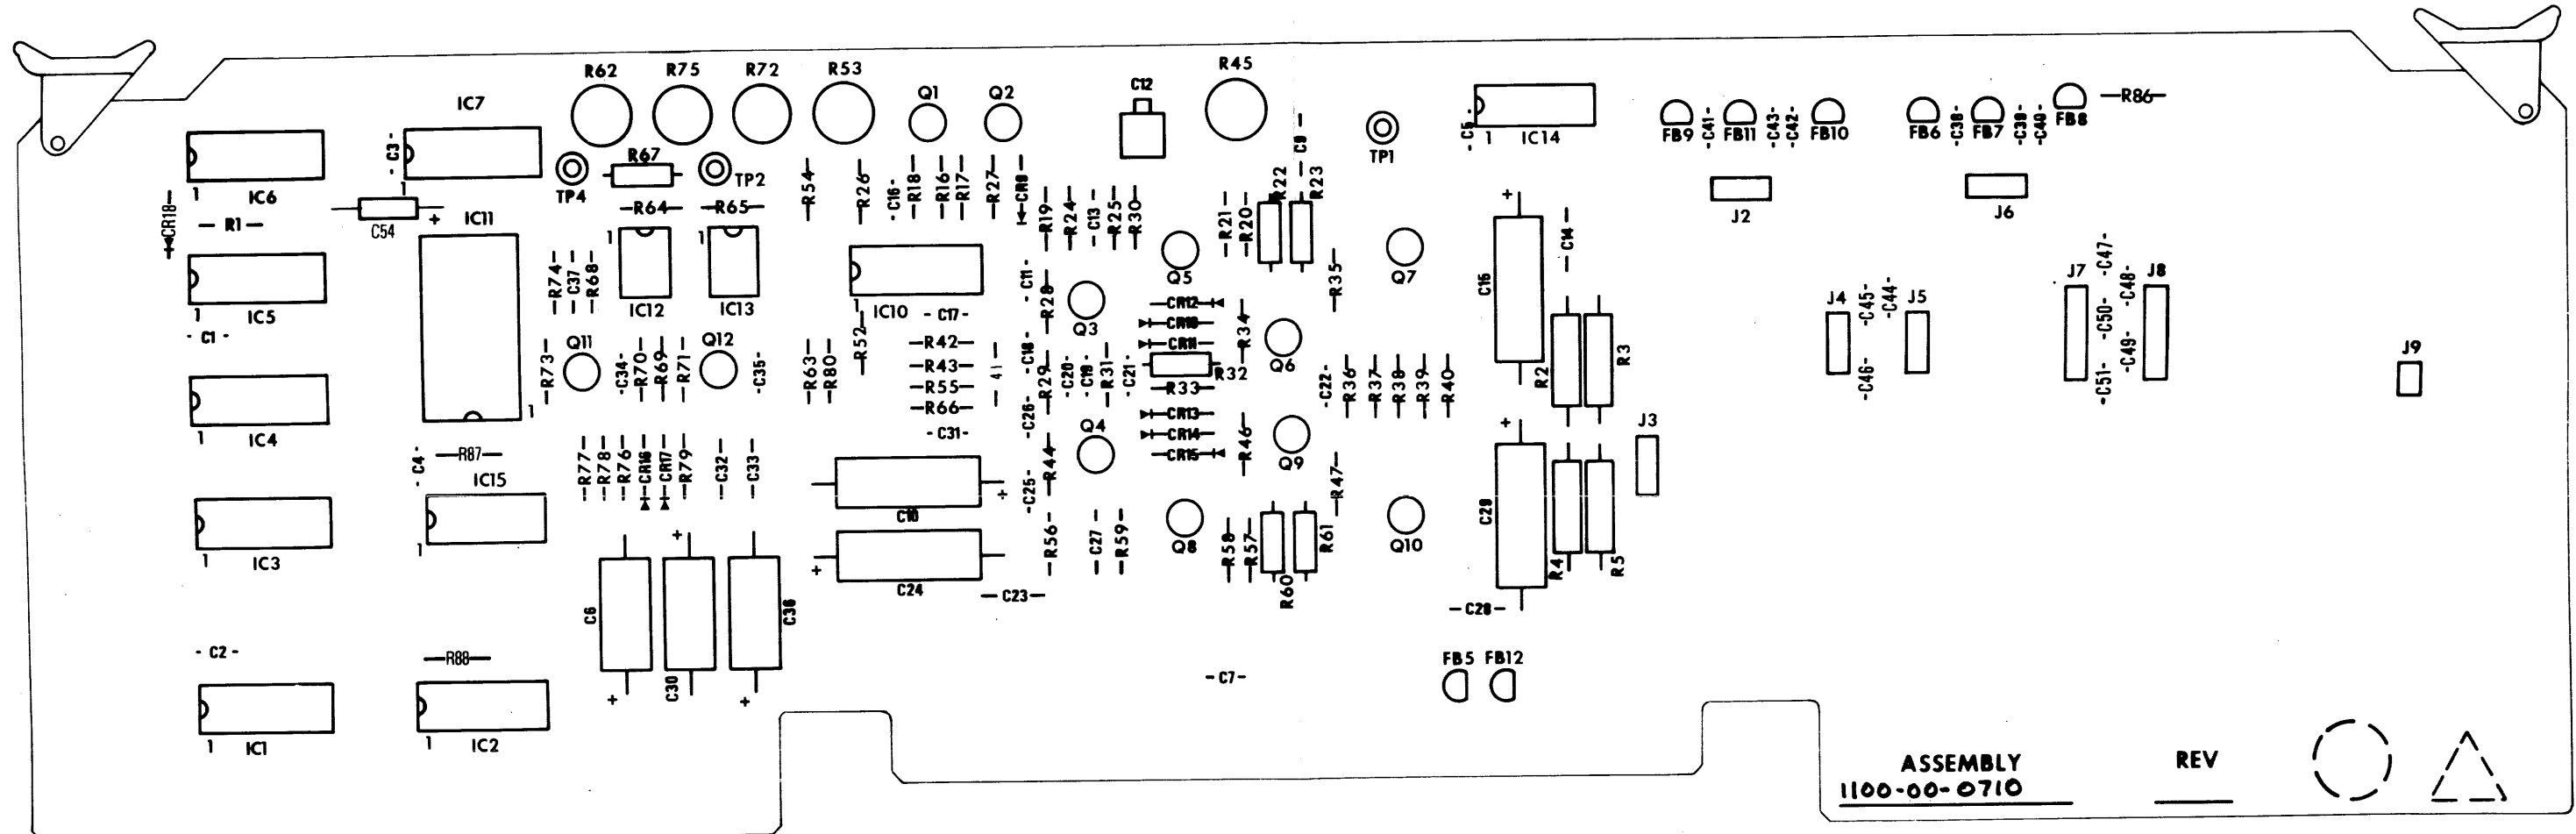

ASSEMBLY
1100-00-0710

REV



1100-00-0710

| | | | | |
|--|--|-------|---------------------------------------|-------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO - CALIFORNIA | |
| | PROJ ENGR | | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TITLE | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES 1 XX - 030 | | POWER AMPLIFIER PCA | |
| | DO NOT SCALE DWG | SCALE | MODEL NO 172B | DWG NO 0101-00-0710 |
| | | | REV | |
| | CODE 23338 | | SHEET | OF |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|-------------------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, PWR AMPL | 0101-00-0710 | WVTK | 0101-00-0710 | 1 |
| NONE | SCHEMATIC, PWR AMPL | 0103-00-0710 | WVTK | 0103-00-0710 | 1 |
| 1 | PWR AMPL SUB ASSY #1 | 172-591 | WVTK | 1208-00-0591 | 1 |
| 2 | PWR AMPL SUB ASSY #2 | 172-592 | WVTK | 1208-00-0592 | 1 |
| 3 | PWR AMPL SUB ASSY #3 | 172-593 | WVTK | 1208-00-0593 | 1 |
| NONE | SHIELD, RF | 1400-00-7091 | WVTK | 1400-00-7091 | 2 |
| NONE | SHIELD, RF | 1400-00-7101 | WVTK | 1400-00-7101 | 2 |
| NONE | SHIELD, RF | 1400-00-7111 | WVTK | 1400-00-7111 | 2 |
| NONE | SHIELD, RF | 1400-00-7121 | WVTK | 1400-00-7121 | 1 |
| NONE | SHIELD, RF | 1400-00-7131 | WVTK | 1400-00-7131 | 1 |
| NONE | COVER, RF SHIELD | 1400-00-7143 | WVTK | 1400-00-7143 | 1 |
| NONE | X, CORNER PDST REF: 3200-02-0004 | 1400-00-7439 | WVTK | 1400-00-7439 | 7 |
| NONE | T-CORNER POST REF: 3200-02-0004 | 1400-00-7449 | WVTK | 1400-00-7449 | 1 |
| NONE | SHIELD, RF | 1400-00-7451 | WVTK | 1400-00-7451 | 2 |
| C21 | CAP, CER, 5PF, 1KV | DD-050 | CRL | 1500-00-5011 | 1 |
| C20 | CAP, CER, 10PF, 1KV | DD-100 | CRL | 1500-01-0011 | 1 |
| C1 C11 C16 C18 C19 C2 | CAP, CER, MIN. .01MF, 50V | CAC02Z5U103Z100A | CORNG | 1500-01-0310 | 29 |

WAVETEK PARTS LIST
TITLE: PCA, PWR AMPL
ASSEMBLY NO. 1100-00-0710
PAGE: 1
REV D

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---------------------------------------|-------------------------|-------------------|-------|--------------|--------|
| NONE | HEAT SINK | 207 | WAKE | 2800-11-0001 | 2 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 10 |
| NONE | TRANSIPAD | 10160 | METRS | 2800-11-0004 | 4 |
| NONE | HEATSINK | 209 | WAKE | 2800-11-0008 | 2 |
| NONE | MOUSETAIL | 2829-75-2 | RUBTK | 2800-12-0005 | 1 |
| NONE | TAPE, DBL SIDED FOAM | 4416-1/16" X 2" | 3M | 3000-00-0023 | 2 |
| FB10 FB11 FB12 FB5 FB6 FB7 FB8 FB9 | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 8 |
| R45 | POT, TRIM, 100 | 91AR100 | BECK | 4600-01-0103 | 1 |
| R72 | POT, TRIM, 10K | 91AR10K | BECK | 4600-01-0315 | 1 |
| R75 | POT, TRIM, 100K | 91AR100K | BECK | 4600-01-0402 | 1 |
| R53 | POT, TRIM, 20 | 91AR20 | BECK | 4600-02-0000 | 1 |
| R62 | POT, TRIM, 200 | 91AR200 | BECK | 4600-02-0101 | 1 |
| R22 R23 R60 R61 | RES, C, 1/2W, 5%, 10 | RC200F-100 | STKPL | 4700-25-0100 | 4 |
| R32 | RES, MF, 1/8W, 1%, 2K | RN55E-2001B | MEPCO | 4701-02-2001 | 1 |
| R19 R27 R30 R56 | RES, MF, 1/8W, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 4 |
| R63 R80 | RES, MF, 1/8W, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 2 |
| R69 R79 | RES, MF, 1/8W, 1%, 100K | RN55D-1003F | TRW | 4701-03-1003 | 2 |

WAVETEK PARTS LIST
TITLE: PCA, PWR AMPL
ASSEMBLY NO. 1100-00-0710
PAGE: 3
REV D

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|---|-------------------|-------|--------------|--------|
| R16 R54 | RES, MF, 1/8W, 1%, 7.5K | RN55D-7501F | TRW | 4701-03-7501 | 2 |
| R67 | RES, MF, 1/4W, 1%, 1M | RN60D-1004F | TRW | 4701-13-1004 | 1 |
| R64 R65 | RES, SET, 2-10K, 1/8W QTY: 2: 4701-03-1002 | 142-501-64A | WVTK | 4789-00-0019 | 1 |
| R2 R3 R4 R5 | RES, MF, 3/4W, 1%, 200 | ML212-200 | CADDO | 4799-00-0047 | 4 |
| CR9 | DIODE | 1N45B1 | MICRO | 4801-01-45B1 | 1 |
| CR10 CR11 CR12 CR13 CR14 CR15 CR16 CR17 CR18 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 9 |
| Q6 | TRANS | 2N2219A | NSC | 4901-02-2191 | 1 |
| Q5 Q9 | TRANS | 2N2905A | NSC | 4901-02-9051 | 2 |
| Q1 | TRANS | 2N3638A | CARTR | 4901-03-6381 | 1 |
| Q8 | TRANS | 2N3866 | MDT | 4901-03-8660 | 1 |
| Q3 | TRANS | 2N3903 | NSC | 4901-03-9030 | 1 |
| Q7 | TRANS | 2N4047 | FAIR | 4901-04-0470 | 1 |
| Q2 Q4 | TRANS | 2N5139 | FAIR | 4901-05-1390 | 2 |
| Q10 | TRANS | 2N5160-1B | MDT | 4901-05-1600 | 1 |
| Q11 Q12 | TRANS | 2N5462 | MDT | 4901-05-4620 | 2 |
| NONE | CABLE, CDAX, 26AWG | R0 174/U | ITT | 6001-40-0001 | 1 |

WAVETEK PARTS LIST
TITLE: PCA, PWR AMPL
ASSEMBLY NO. 1100-00-0710
PAGE: 5
REV D

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|------------------------------|---------------------|-------|--------------|--------|
| C22 C25 C26 C3 C31 C34 C35 C38 C39 C4 C40 C41 C42 C43 C44 C45 C46 C47 C48 C49 C5 C50 C51 | | | | | |
| C13 C14 C23 C27 C28 C32 C33 C37 C7 C9 | CAP, CER, MON., 1MF, 50V | CAC03Z5U104Z050A | CORNG | 1500-01-0405 | 10 |
| C17 | CAP, CER, 33PF, 1KV | DD-330 | CRL | 1500-03-3011 | 1 |
| C30 C36 C6 | CAP, ELECT, 100MF, 16V | 500D107G016DC7 | SPRAG | 1500-31-0101 | 3 |
| C10 C15 C24 C29 | CAP, ELECT, 50MF, 50V | 500D506G050DD7 | SPRAG | 1500-35-0003 | 4 |
| C12 | CAP, VAR, 3.5-13PF250V | 300422-411 | TRIKO | 1500-31-3010 | 1 |
| C34 | CAP, TANT, 33MF, 10V | 150D336X901082 | SPRAG | 1500-73-3601 | 1 |
| NONE | PWR AMPL, OFFSET BD | 1700-00-0710 | WVTK | 1700-00-0710 | 1 |
| NONE | SKT, IC, 24PIN | DILB-24P-108 | BURND | 2100-03-0029 | 1 |
| NONE | TERM | 2010B1 | USECO | 2100-05-0011 | 12 |
| TP1 TP2 TP4 | CONN | 60598-8 | AMP | 2100-05-0017 | 3 |
| 4 | CONN PIN, MALE UDM-EA PIN | CAS36SP-100-230-730 | CA | 2100-05-0031 | 34 |
| NONE | CONN | 27-843 | AMPH | 2100-07-0009 | 1 |
| J1 | CONN | 27-3 | AMPH | 2100-07-0012 | 1 |
| 4 | PC BD EJECTOR | 103 GRAY | CALM | 2800-07-0016 | 2 |

WAVETEK PARTS LIST
TITLE: PCA, PWR AMPL
ASSEMBLY NO. 1100-00-0710
PAGE: 2
REV D


| REFERENCE DESIGNATORS | PART DESCRIPTION | DRIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|-------------------|------|--------------|--------|
| R73 R74 | RES, MF, 1/8W, 1%, 10 | RN55D-10R0F | TRW | 4701-03-1009 | 2 |
| R33 | RES, MF, 1/8W, 1%, 12.1K | RN55D-1212F | TRW | 4701-03-1212 | 1 |
| R21 | RES, MF, 1/8W, 1%, 150 | RN55D-1500F | TRW | 4701-03-1500 | 1 |
| R26 R76 R77 R78 | RES, MF, 1/8W, 1%, 15K | RN55D-1502F | TRW | 4701-03-1502 | 4 |
| R37 R38 R39 R40 | RES, MF, 1/8W, 1%, 15 | RN55D-15R0F | TRW | 4701-03-1509 | 4 |
| R58 | RES, MF, 1/8W, 1%, 200 | RN55D-2000F | TRW | 4701-03-2000 | 1 |
| R25 R59 | RES, MF, 1/8W, 1%, 21.5 | RN55D-21R5F | TRW | 4701-03-2159 | 2 |
| R24 R36 | RES, MF, 1/8W, 1%, 249 | RN55D-2490F | TRW | 4701-03-2490 | 2 |
| R17 R18 | RES, MF, 1/8W, 1%, 2.49K | RN55D-2491F | TRW | 4701-03-2491 | 2 |
| R41 | RES, MF, 1/8W, 1%, 24.9K | RN55D-2492F | TRW | 4701-03-2492 | 1 |
| R43 | RES, MF, 1/8W, 1%, 33.2 | RN55D-33R2F | TRW | 4701-03-3329 | 1 |
| R55 | RES, MF, 1/8W, 1%, 392 | RN55D-3920F | TRW | 4701-03-3920 | 1 |
| R42 R52 | RES, MF, 1/8, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 2 |
| R1 R28 R31 R44 R68 R70 R71 R86 R87 R88 | RES, MF, 1/8W, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 10 |
| R29 | RES, MF, 1/8W, 1%, 49.9K | RN55D-4992F | TRW | 4701-03-4992 | 1 |
| R66 | RES, MF, 1/8W, 1%, 59 | RN55D-59R0F | TRW | 4701-03-5909 | 1 |
| R34 R35 R46 R47 | RES, MF, 1/8W, 1%, 61.9 | RN55D-61R9F | TRW | 4701-03-6199 | 4 |


WAVETEK PARTS LIST
TITLE: PCA, PWR AMPL
ASSEMBLY NO. 1100-00-0710
PAGE: 4
REV D

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|------------------|-------------------|-------|--------------|--------|
| IC11 | IC | AD563J | ANDEV | 7000-05-6300 | 1 |
| IC12 IC13 | IC | LM741CN | NSC | 7000-07-4100 | 2 |
| IC10 | IC | CA-3096AE | RCA | 7000-30-9600 | 1 |
| IC14 | IC | 74LS03 | TI | 8000-74-0310 | 1 |
| IC15 | IC | 7416 | SIG | 8000-74-1600 | 1 |
| IC1 IC2 | IC | 74LS139 | SIG | 8007-41-3910 | 2 |
| IC3 IC4 IC5 IC6 IC7 | IC | 74LS175 | TI | 8007-41-7510 | 5 |

WAVETEK PARTS LIST
TITLE: PCA, PWR AMPL
ASSEMBLY NO. 1100-00-0710
PAGE: 6
REV D

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | | |
|--|--------------------------------------|--------------|---|--------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE |  | |
| MATERIAL | PROJ ENGR | | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | PARTS LIST | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED | | PCA, PWR AMPL | |
| | XXX .010 ANGLES .1 XX .030 | | | |
| DO NOT SCALE DWG | MODEL NO. | DWG NO. | REV | |
| SCALE | 172B | 1100-00-0710 | D | |
| | CODE IDENT | 23338 | SHEET | 1 OF 1 |

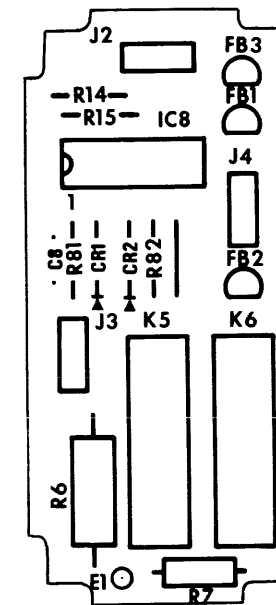

1208-00-0591

| | | | | |
|---|---|--------|---|----|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA TITLE ASSEMBLY POWER AMPLIFIER SUB. ASSY. NO.1 | |
| | PROJ ENGR | | | |
| FINISH WAVETEK PROCESS | RELEASE | APPROV | MODEL NO 172 DWG NO 0101-00-0591 REV SCALE | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED | | | |
| | XXX 010 ANGLES 1 XX 030 | | | |
| | DO NOT SCALE DWG | | | |
| | CODE IDENT | 23338 | SHEET | OF |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|


| REFERENCE DESIGNATORS | PART DESCRIPTION | DRG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|---------------------------------------|---------------------|-------|--------------|--------|
| NONE | ASSY DRWG PWR AMPL#1 | 0101-00-0591 | WVTK | 0101-00-0591 | 1 |
| NONE | SCHEMATIC, PWR AMPL | 0103-00-0710 | WVTK | 0103-00-0710 | 1 |
| C8 | CAP, CER, MN, .01MF, 50V | CAC02Z5U103Z100A | CORNG | 1500-01-0310 | 1 |
| NONE | PWR AMPL BD #1 | 1700-00-0591 | WVTK | 1700-00-0591 | 1 |
| J2 J3 J4 | CONN | 22-17-2042 | MOLEX | 2100-02-0065 | 3 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 3 |
| FB1 FB2 FB3 | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 3 |
| K6 | RELAY, REED, FORM-A | RA3019-1051 | ETROL | 4500-00-0007 | 1 |
| K5 | RELAY, FORM A MERCURY | 4500-00-0012 | WVTK | 4500-00-0012 | 1 |
| R7 | RES, MF, 1/BW, .1%, 55.5 | RN55E55R5B | MEPCO | 4701-02-5559 | 1 |
| RB1 RB2 | RES, MF, 1/BW, 1%, 10 | RN55D-10R0F | TRW | 4701-03-1009 | 2 |
| R14 R15 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 2 |
| R6 | RES, MF, 3/4W, .1%, 450 | ML212-450 | CADDO | 4799-00-0046 | 1 |
| CR1 CR2 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 2 |
| NONE | WIRE, WIREWRAP 24GA. KYNAR INSULATION | UL1422 W/W WIRE WHT | BRDRX | 6000-52-4009 | 1 |
| IC8 | IC | 7416 | SIG | 8000-74-1600 | 1 |

WAVETEK PARTS LIST
 TITLE: PWR AMPL SUB ASSY #1
 ASSEMBLY NO.: 1208-00-0591
 REV: C
 PAGE: 1

| | | | |
|--|----------------|---|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR | TITLE | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX - .010 ANGLES .1 .XX - .030 | PARTS LIST PWR AMPL SUB ASSY #1 |
| | SCALE | DO NOT SCALE DWG | |
| MODEL NO. 172B | | DWG NO. 1208-00-0591 | REV C |
| CODE IDENT 23338 | | SHEET 1 OF 1 | |

NOTE: UNLESS OTHERWISE SPECIFIED

BISHOP GRAPHICS/ACUPRESS
 REORDER NO. A 3854

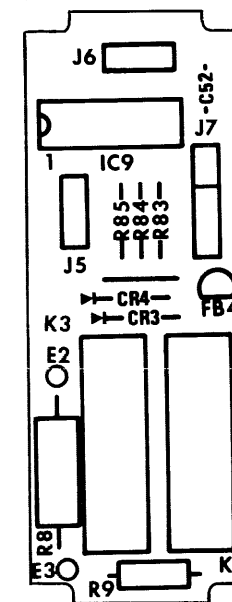

1208-00-0592

| | | | | | |
|---|--|------------------|------|---|-------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | | PROJ ENGR | | | |
| FINISH WAVETEK PROCESS | | RELEASE APPROV | | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES 1 XX .030 | |
| | | DO NOT SCALE DWG | | MODEL NO 172 | DWG NO 0101-00-0592 |
| | | SCALE | | CODE IDENT 23338 | REV SHEET OF |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON, EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFR-PART-NO | MFR | WAVETEK NO. | QTY/PT |
|-----------------------|---------------------------------------|---------------------|-------|--------------|--------|
| NONE | ASSY DRWG PWR AMPL#2 | 0101-00-0592 | WVTK | 0101-00-0592 | 1 |
| NONE | SCHEMATIC, PWR AMPL | 0103-00-0710 | WVTK | 0103-00-0710 | 1 |
| C52 | CAP, CER, MN. .01MF, 50V | CAC0275U103Z100A | CORNG | 1500-01-0310 | 1 |
| NONE | PWR AMPL SUB BD #2 | 1700-00-0592 | WVTK | 1700-00-0592 | 1 |
| J7A | CONN | 22-17-2022 | MOLEX | 2100-02-0061 | 1 |
| J5 J6 J7B | CONN | 22-17-2042 | MOLEX | 2100-02-0065 | 3 |
| NONE | SPRING SOCKET | 50935-1 | AMP | 2100-03-0039 | 1 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 1 |
| FB4 | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 1 |
| K4 | RELAY, REED, FORM-A | RA3019-1051 | ETROL | 4500-00-0007 | 1 |
| K3 | RELAY, FORM A MERCURY | 4500-00-0012 | WVTK | 4500-00-0012 | 1 |
| R9 | RES, MF, 1/8W, .1%, 55.5 | RN55E5R5B | MEPCO | 4701-02-3539 | 1 |
| R83 R84 R85 | RES, MF, 1/8W, 1%, 10 | RN55D-10R0F | TRW | 4701-03-1009 | 3 |
| R8 | RES, MF, 3/4W, .1%, 450 | ML212-450 | CADDO | 4799-00-0046 | 1 |
| CR3 CR4 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 2 |
| NONE | WIRE, WIREWRAP 24GA. KYMAR INSULATION | UL1422 W/W WIRE WHT | BRDRX | 6000-52-4009 | 1 |
| IC9 | IC | 7416 | SIG | 8000-74-1600 | 1 |

WAVETEK PARTS LIST
 TITLE: PWR AMPL SUB ASSY #2
 ASSEMBLY NO.: 1208-00-0592
 PAGE: 1
 REV: D

| | | | | |
|--|--|------|---------------------------------------|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ/ENGR | | TITLE | |
| | RELEASE APPROV | | PARTS LIST | |
| | | | PWR AMPL SUB ASSY #2 | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES - 1 XX - .030 | | MODEL NO. | REV |
| | DO NOT SCALE DWG | | 172B | D |
| | SCALE | | DWG NO. | |
| | | | 1208-00-0592 | |
| | | | CODE IDENT | SHEET 1 OF 1 |
| | | | 23338 | |

NOTE: UNLESS OTHERWISE SPECIFIED

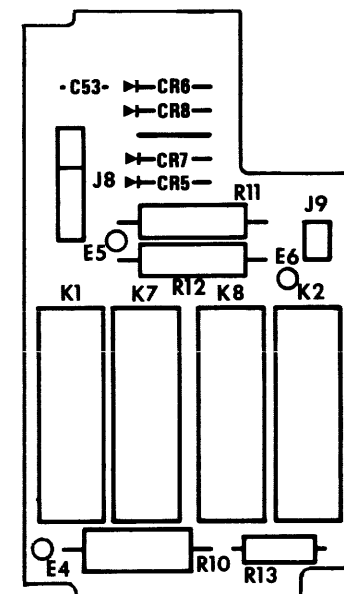

1208-00-0593

| | | | | |
|---|---|------------|--|----------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE | APPROV | ASSEMBLY POWER AMPLIFIER SUB ASSY. NO. 3 | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED | | | |
| | XXX 010 ANGLES 1 | | | |
| | XX 030 | | | |
| | DO NOT SCALE DWG | MODEL NO | DWG NO | REV |
| | SCALE | 172 | 0101-00-0593 | |
| | | CODE IDENT | 23338 | SHEET OF |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|

| REFERENCE DESIGNATORS | PART DESCRIPTION | DRG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|---------------------------------------|---------------------|-------|--------------|--------|
| NONE | ASSY DRWG PWR AMPL#3 | 0101-00-0593 | WVTK | 0101-00-0593 | 1 |
| NONE | SCHEMATIC, PWR AMPL | 0103-00-0710 | WVTK | 0103-00-0710 | 1 |
| C53 | CAP, CER, MN, .01MF, 50V | CAC02Z5U103Z100A | CORNG | 1500-01-0310 | 1 |
| NONE | PWR AMPL BD #3 | 1700-00-0593 | WVTK | 1700-00-0593 | 1 |
| J8A J9 | CONN | 22-17-2022 | MOLEX | 2100-02-0061 | 2 |
| P8B | CONN | 22-17-2042 | MOLEX | 2100-02-0063 | 1 |
| NONE | SPRING SOCKET | 50935-1 | AMP | 2100-03-0039 | 2 |
| K2 | RELAY, REED, FORM-A | RA3019-1051 | ETROL | 4500-00-0007 | 1 |
| K1 K7 K8 | RELAY, FORM A MERCURY | 4500-00-0012 | WVTK | 4500-00-0012 | 3 |
| R13 | RES, MF, 1/8W, .1%, 55.5 | RN55E59R5B | MEPCO | 4701-02-5559 | 1 |
| R11 R12 | RES, MF, 3/4W, .1%, 100 | ML212-100 | CADDO | 4799-00-0038 | 2 |
| R10 | RES, MF, 3/4W, .1%, 450 | ML212-450 | CADDO | 4799-00-0046 | 1 |
| CR5 CR6 CR7 CR8 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 4 |
| NONE | WIRE, WIREWRAP 24GA. KYNAR INSULATION | UL1422 W/W WIRE WHT | BRDRX | 6000-52-4009 | 1 |

WAVETEK
PARTS LIST

TITLE
PWR AMPL SUB ASSY #3

ASSEMBLY NO.
1208-00-0593

REV
D


PAGE: 1

| | | | | |
|--|---|-------|---------------------------------------|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE APPROV | | PARTS LIST | |
| | | | PWR AMPL SUB ASSY #3 | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES -1 XX - .030 | | MODEL NO | DWG NO |
| | DO NOT SCALE DWG | | 172B | 1208-00-0593 |
| SCALE | | | REV | |
| | | | D | |
| | CODE IDENT | 23338 | SHEET | 1 OF 1 |

NOTE: UNLESS OTHERWISE SPECIFIED

BISHOP GRAPHICS/ACCUPRESS
REORDER NO. A384

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

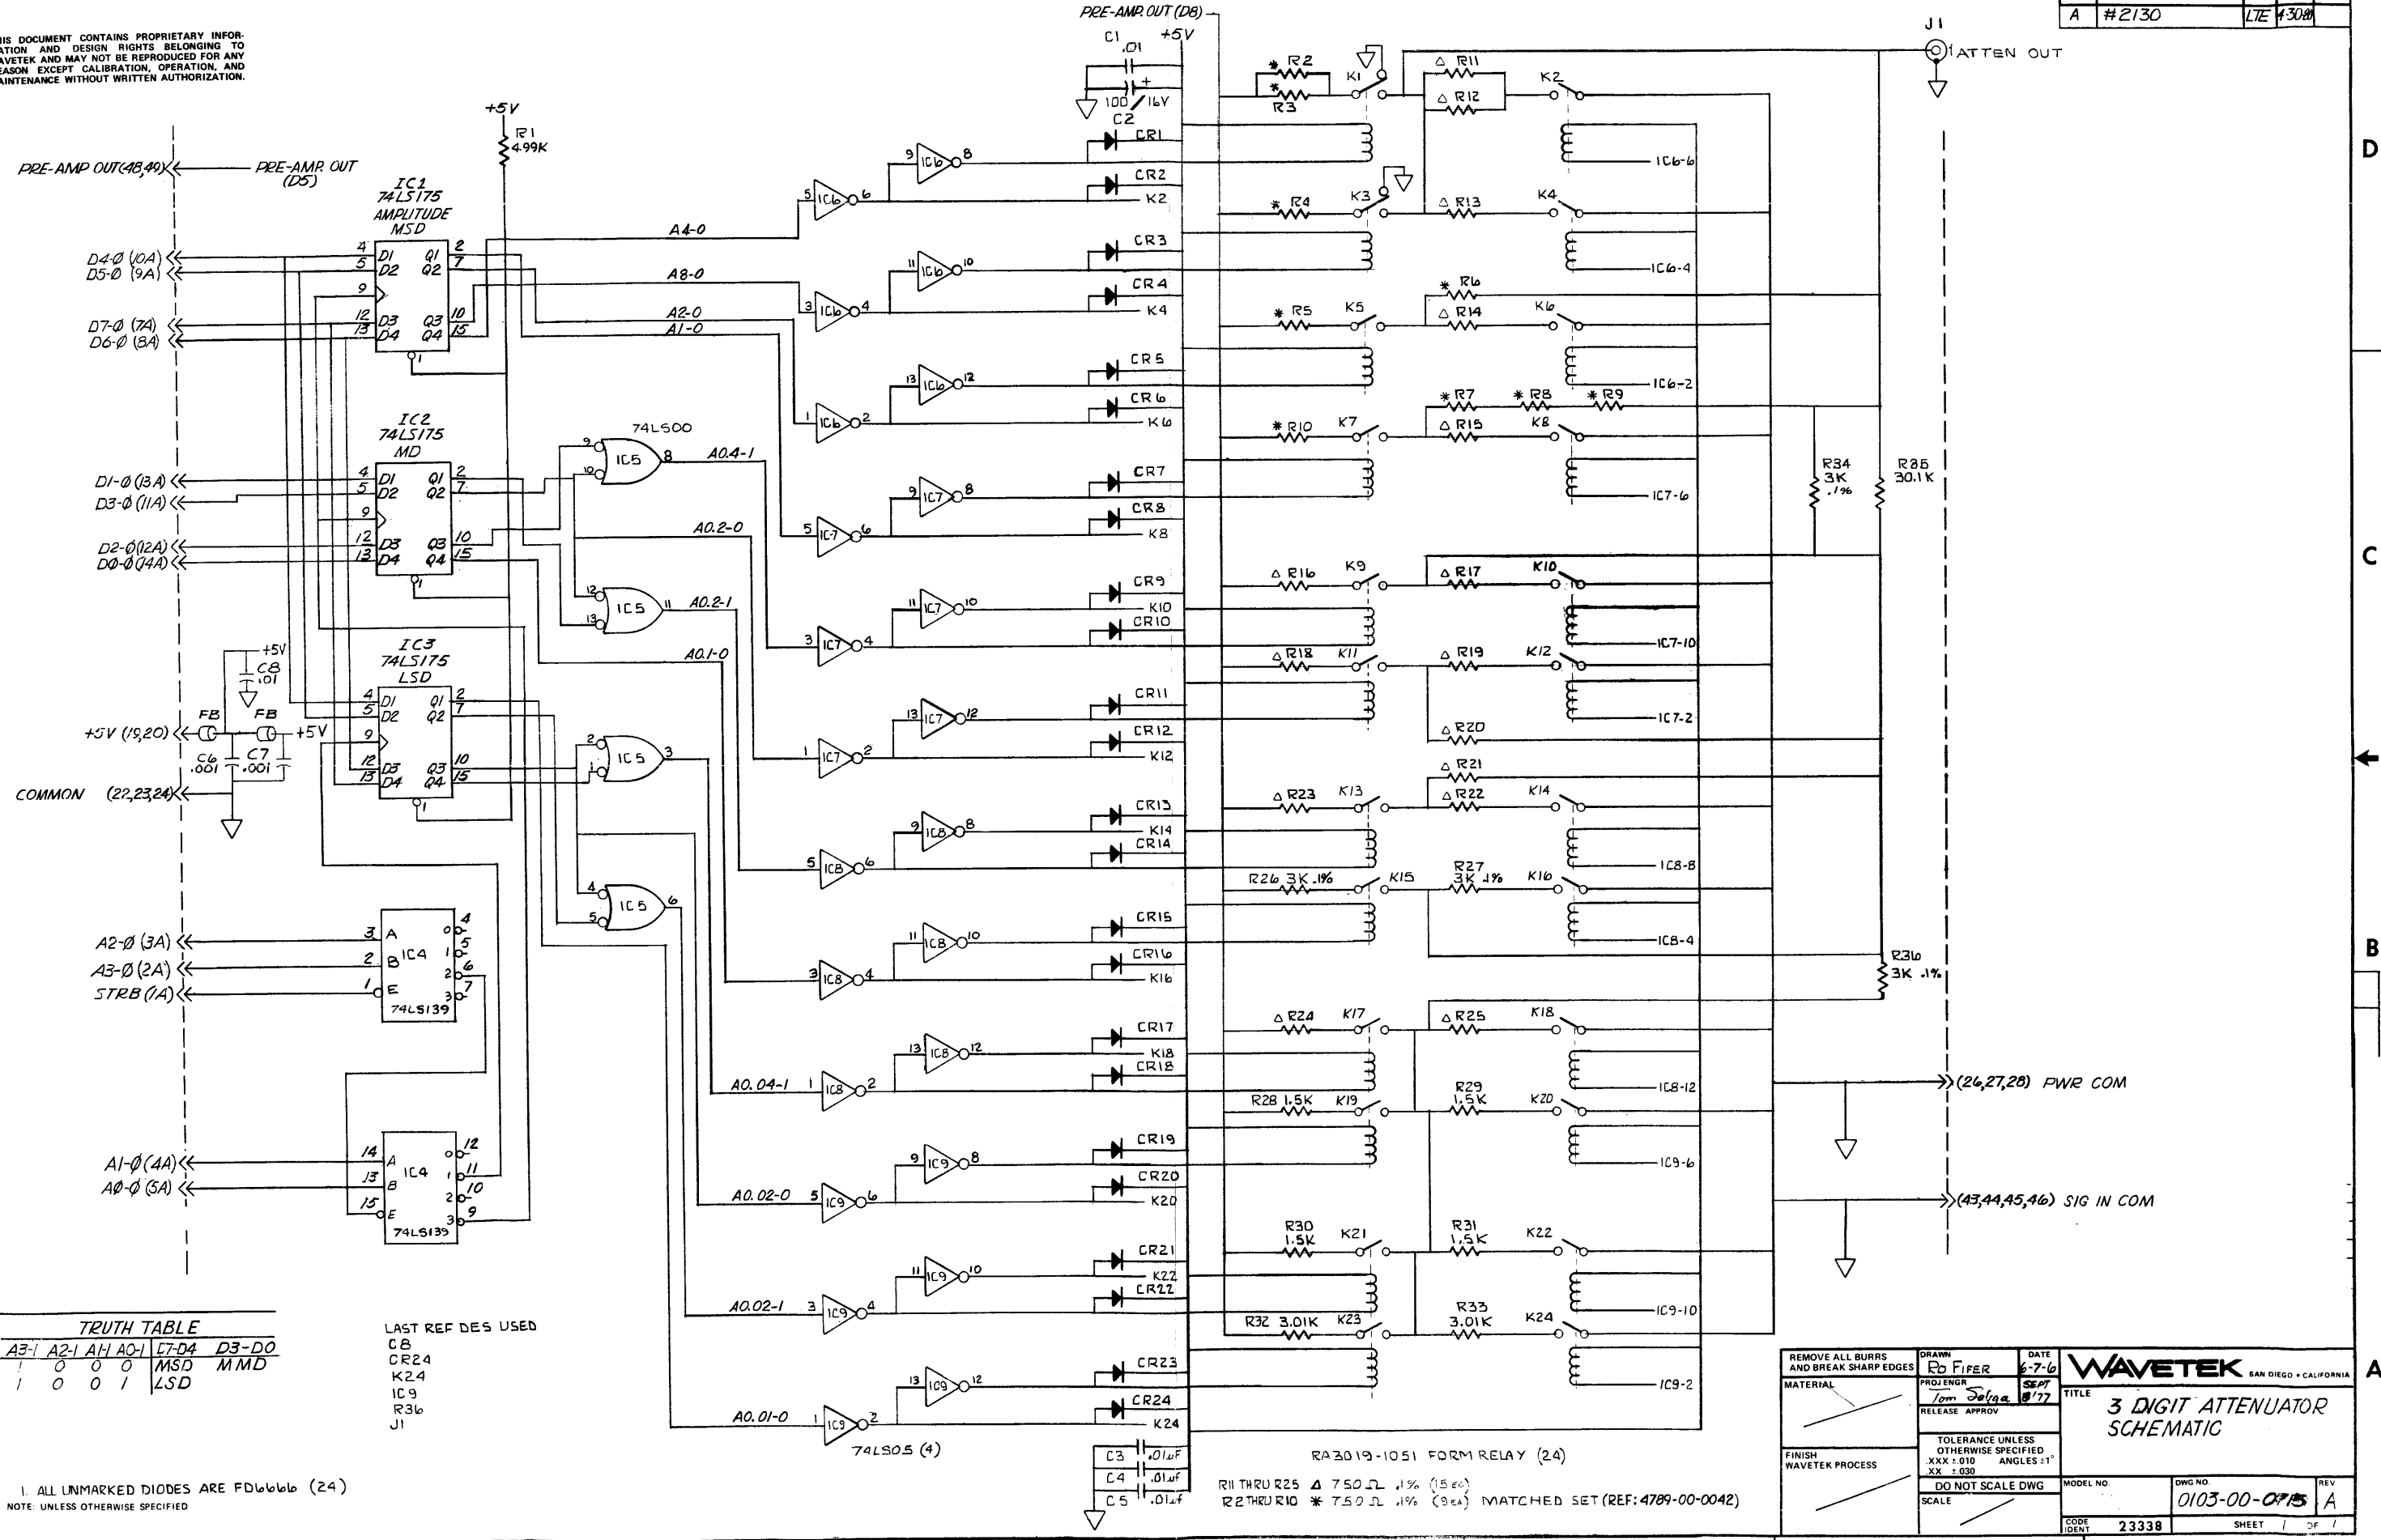

TRUTH TABLE

| A3-1 | A2-1 | A1-A0-1 | C7-D4 | D3-D0 |
|------|------|---------|-------|-------|
| 1 | 0 | 0 | MSD | MMD |
| 1 | 0 | 0 | LSD | |


LAST REF DES USED
 C8
 CR24
 K24
 IC9
 R36
 J1

1. ALL UNMARKED DIODES ARE FD6666 (24)
 NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|-------------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN Rd Fifer | DATE 6-7-6 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR Tom Seliga | DATE SEPT 87 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± 010 ANGLES 1:1 XX ± 030 | TITLE 3 DIGIT ATTENUATOR SCHEMATIC |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0715 |
| | | CODE IDENT 23338 | REV A |

RA3019-1051 FORM RELAY (24)
 R11 THRU R25 Δ 750 Ω 1% (15 ea)
 R2 THRU R10 * 750 Ω 1% (9 ea) MATCHED SET (REF: 4789-00-0042)

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

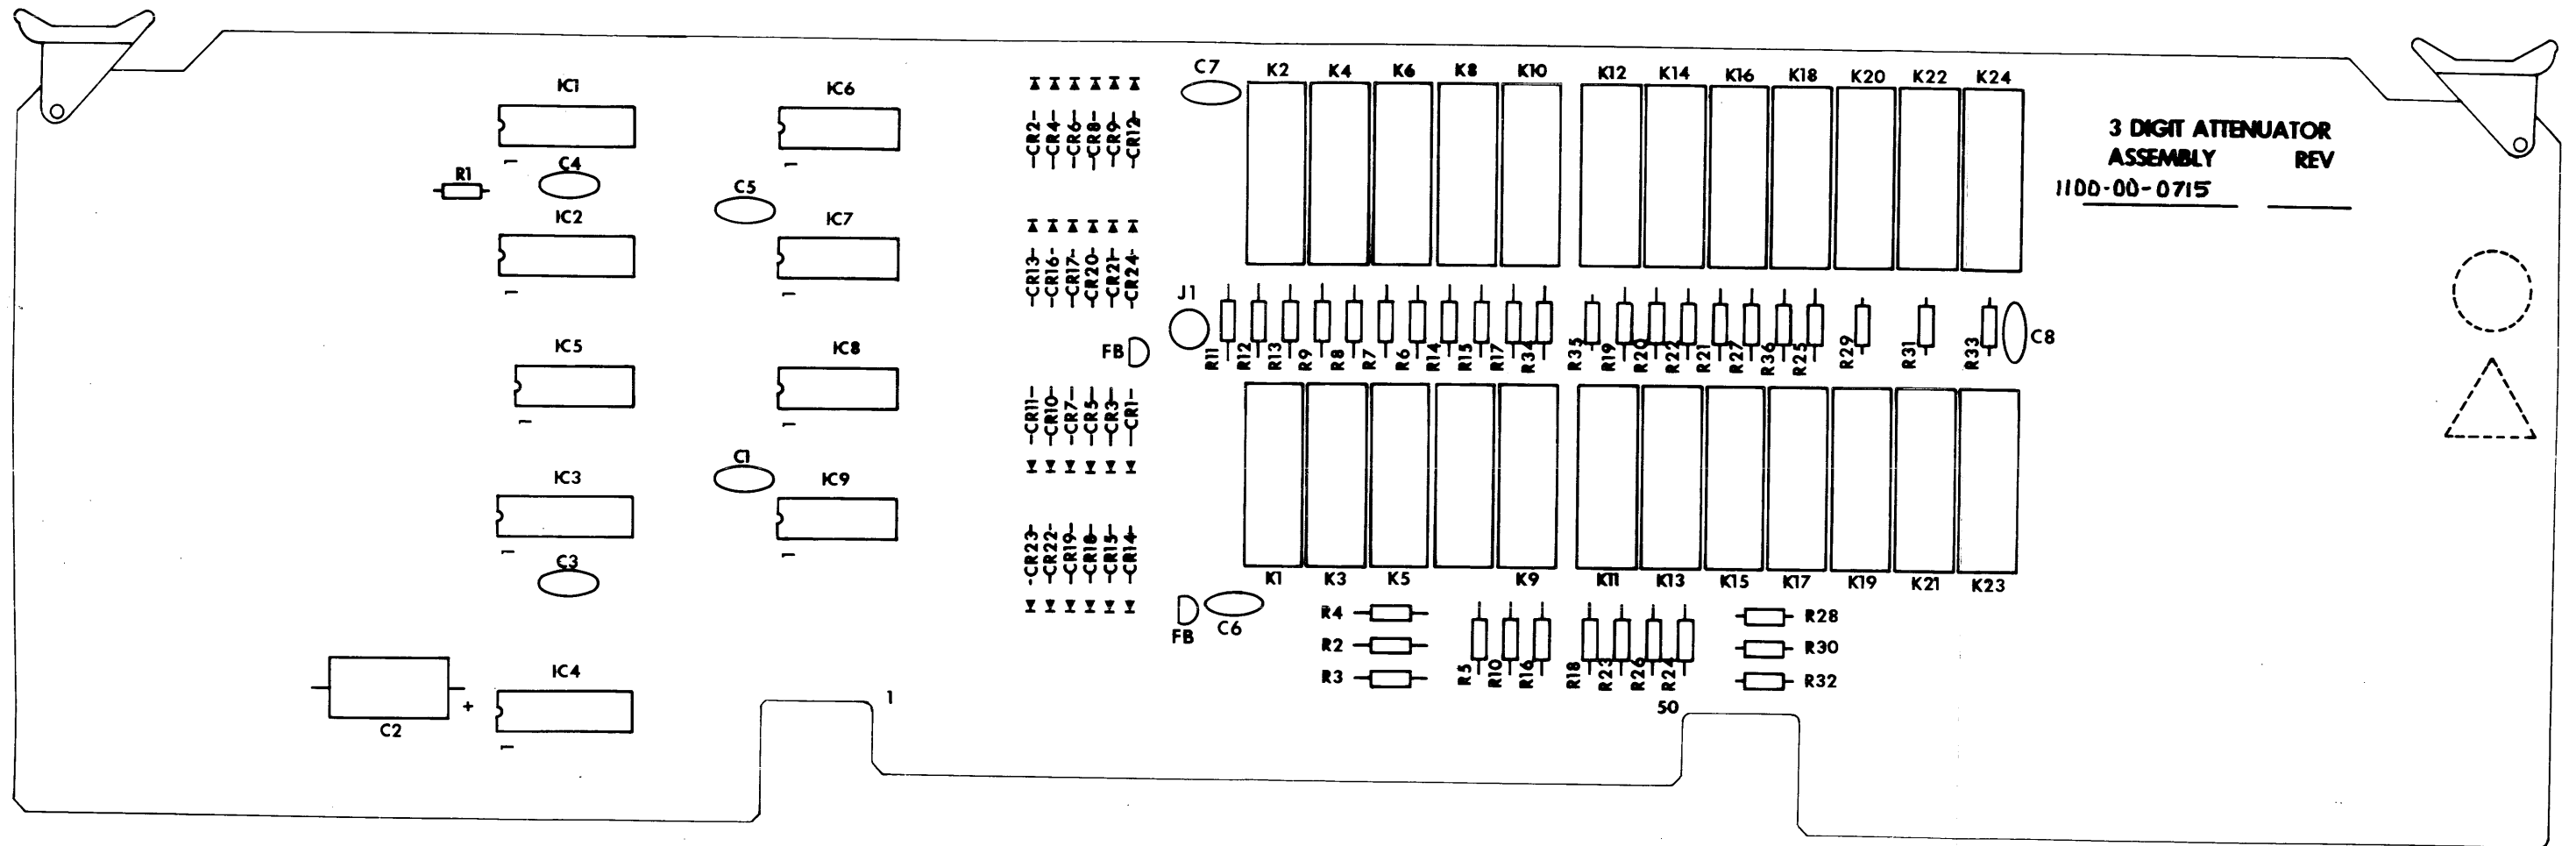

3 DIGIT ATTENUATOR
ASSEMBLY REV
1100-00-0715

1100-00-0715

| | | | | | |
|--|--|----------------|----------|---------------------------------|-----|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | RELEASE APPROV | | TITLE 3 DIGIT ATTENUATOR PLA | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | MODEL NO | DWG NO | REV |
| | DO NOT SCALE DWG | SCALE | 172 B | 0101-00-0715 | |
| | | CODE IDENT | 23338 | SHEET 1 OF 1 | |

8

7

6

5

↓

4

3

2

1

REV ECN BY DATE APP

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, 3RD DIGIT | 0101-00-0715 | WVTK | 0101-00-0715 | 1 |
| NONE | SCHEMATIC, 3RD DIGIT | 0103-00-0715 | WVTK | 0103-00-0715 | 1 |
| C6 C7 | CAP, CER, .001MF, 1KV | DD-102 | CRL | 1500-01-0211 | 2 |
| C1 C3 C4 C5 C8 | CAP, CER, MN, .01MF, 50V | CACD225U103Z100A | CDRNG | 1500-01-0310 | 5 |
| C2 | CAP, ELECT, 100MF, 16V | 500D1070016DC7 | SPRAQ | 1500-31-0101 | 1 |
| NONE | 3RD DIGIT ATTEN BD | 1700-00-0715 | WVTK | 1700-00-0715 | 1 |
| J1 | CONN | 27-84B | AMPH | 2100-07-0011 | 1 |
| NONE | PC BD EJECTOR | 103 VIOLET | CALMK | 2800-07-0015 | 2 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 2 |
| NONE | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 2 |
| K10 K11 K12 K13 K14 K15 K16 K17 K18 K19 K2 K20 K21 K22 K23 K24 K4 K5 K6 K7 K8 K9 | RELAY, REED, FORM-A | RA3019-1051 | ETROL | 4500-00-0007 | 22 |
| K1 K3 | RELAY, REED, FORM-C | RA3020-1051 | ETROL | 4500-00-0009 | 2 |
| R26 R27 R34 R36 | RES, MF, 1/BW, .1%, 3K | RN55E-3001B | MEPCO | 4701-02-3001 | 4 |
| R11 R12 R13 R14 R15 R16 R17 R18 R19 R20 R21 R22 R23 R24 R25 | RES, MF, 1/BW, .1%, 750 | RN55E-7500B | MEPCO | 4701-02-7500 | 15 |
| R28 R29 R30 R31 | RES, MF, 1/BW, 1%, 1.5K | RN55D-1501F | TRW | 4701-03-1501 | 4 |

WAVETEK
PARTS LIST

TITLE
PCA, 3 DIGIT ATTEN

ASSEMBLY NO.
1100-00-0715
PAGE: 1

REV
A

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|-------------------|------|--------------|--------|
| R32 R33 | RES, MF, 1/BW, 1%, 3.01K | RN55D-3011F | TRW | 4701-03-3011 | 2 |
| R35 | RES, MF, 1/BW, 1%, 30.1K | RN55D-3012F | TRW | 4701-03-3012 | 1 |
| R1 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 1 |
| R10 R2 R3 R4 R5 R6 R7 R8 R9 | RES, SET, 9-750, 1/BW QTY: 9, 4701-02-7500 | 4789-00-0042 | WVTK | 4789-00-0042 | 1 |
| CR5 CR1 CR10 CR11 CR12 CR13 CR14 CR15 CR16 CR17 CR18 CR19 CR2 CR20 CR21 CR22 CR23 CR24 CR3 CR4 CR6 CR7 CR8 CR9 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 24 |
| IC5 | IC | 74LS00 | TI | 8000-74-0010 | 1 |
| IC6 IC7 IC8 IC9 | IC | 74LS05 | TI | 8000-74-0510 | 4 |
| IC4 | IC | 74LS139 | SIG | 8007-41-3910 | 1 |
| IC1 IC2 IC3 | IC | 74LS175 | TI | 8007-41-7510 | 3 |

WAVETEK
PARTS LIST

TITLE
PCA, 3 DIGIT ATTEN

ASSEMBLY NO.
1100-00-0715
PAGE: 2

REV
A

| | | | | | |
|--|------------------|------|---|--------------|-----|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | | |
| MATERIAL | PROJ ENGR | | TITLE PARTS LIST PCA, 3 DIGIT ATTEN | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES .1 XX - .030 | | |
| | DO NOT SCALE DWG | | MODEL NO | DWG NO | REV |
| | SCALE | | 172B | 1100-00-0715 | A |
| | | | CODE IDENT | SHEET | OF |
| | | | 23338 | 1 | 1 |

NOTE: UNLESS OTHERWISE SPECIFIED

8

7

6

5

↑


4

3

2

1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

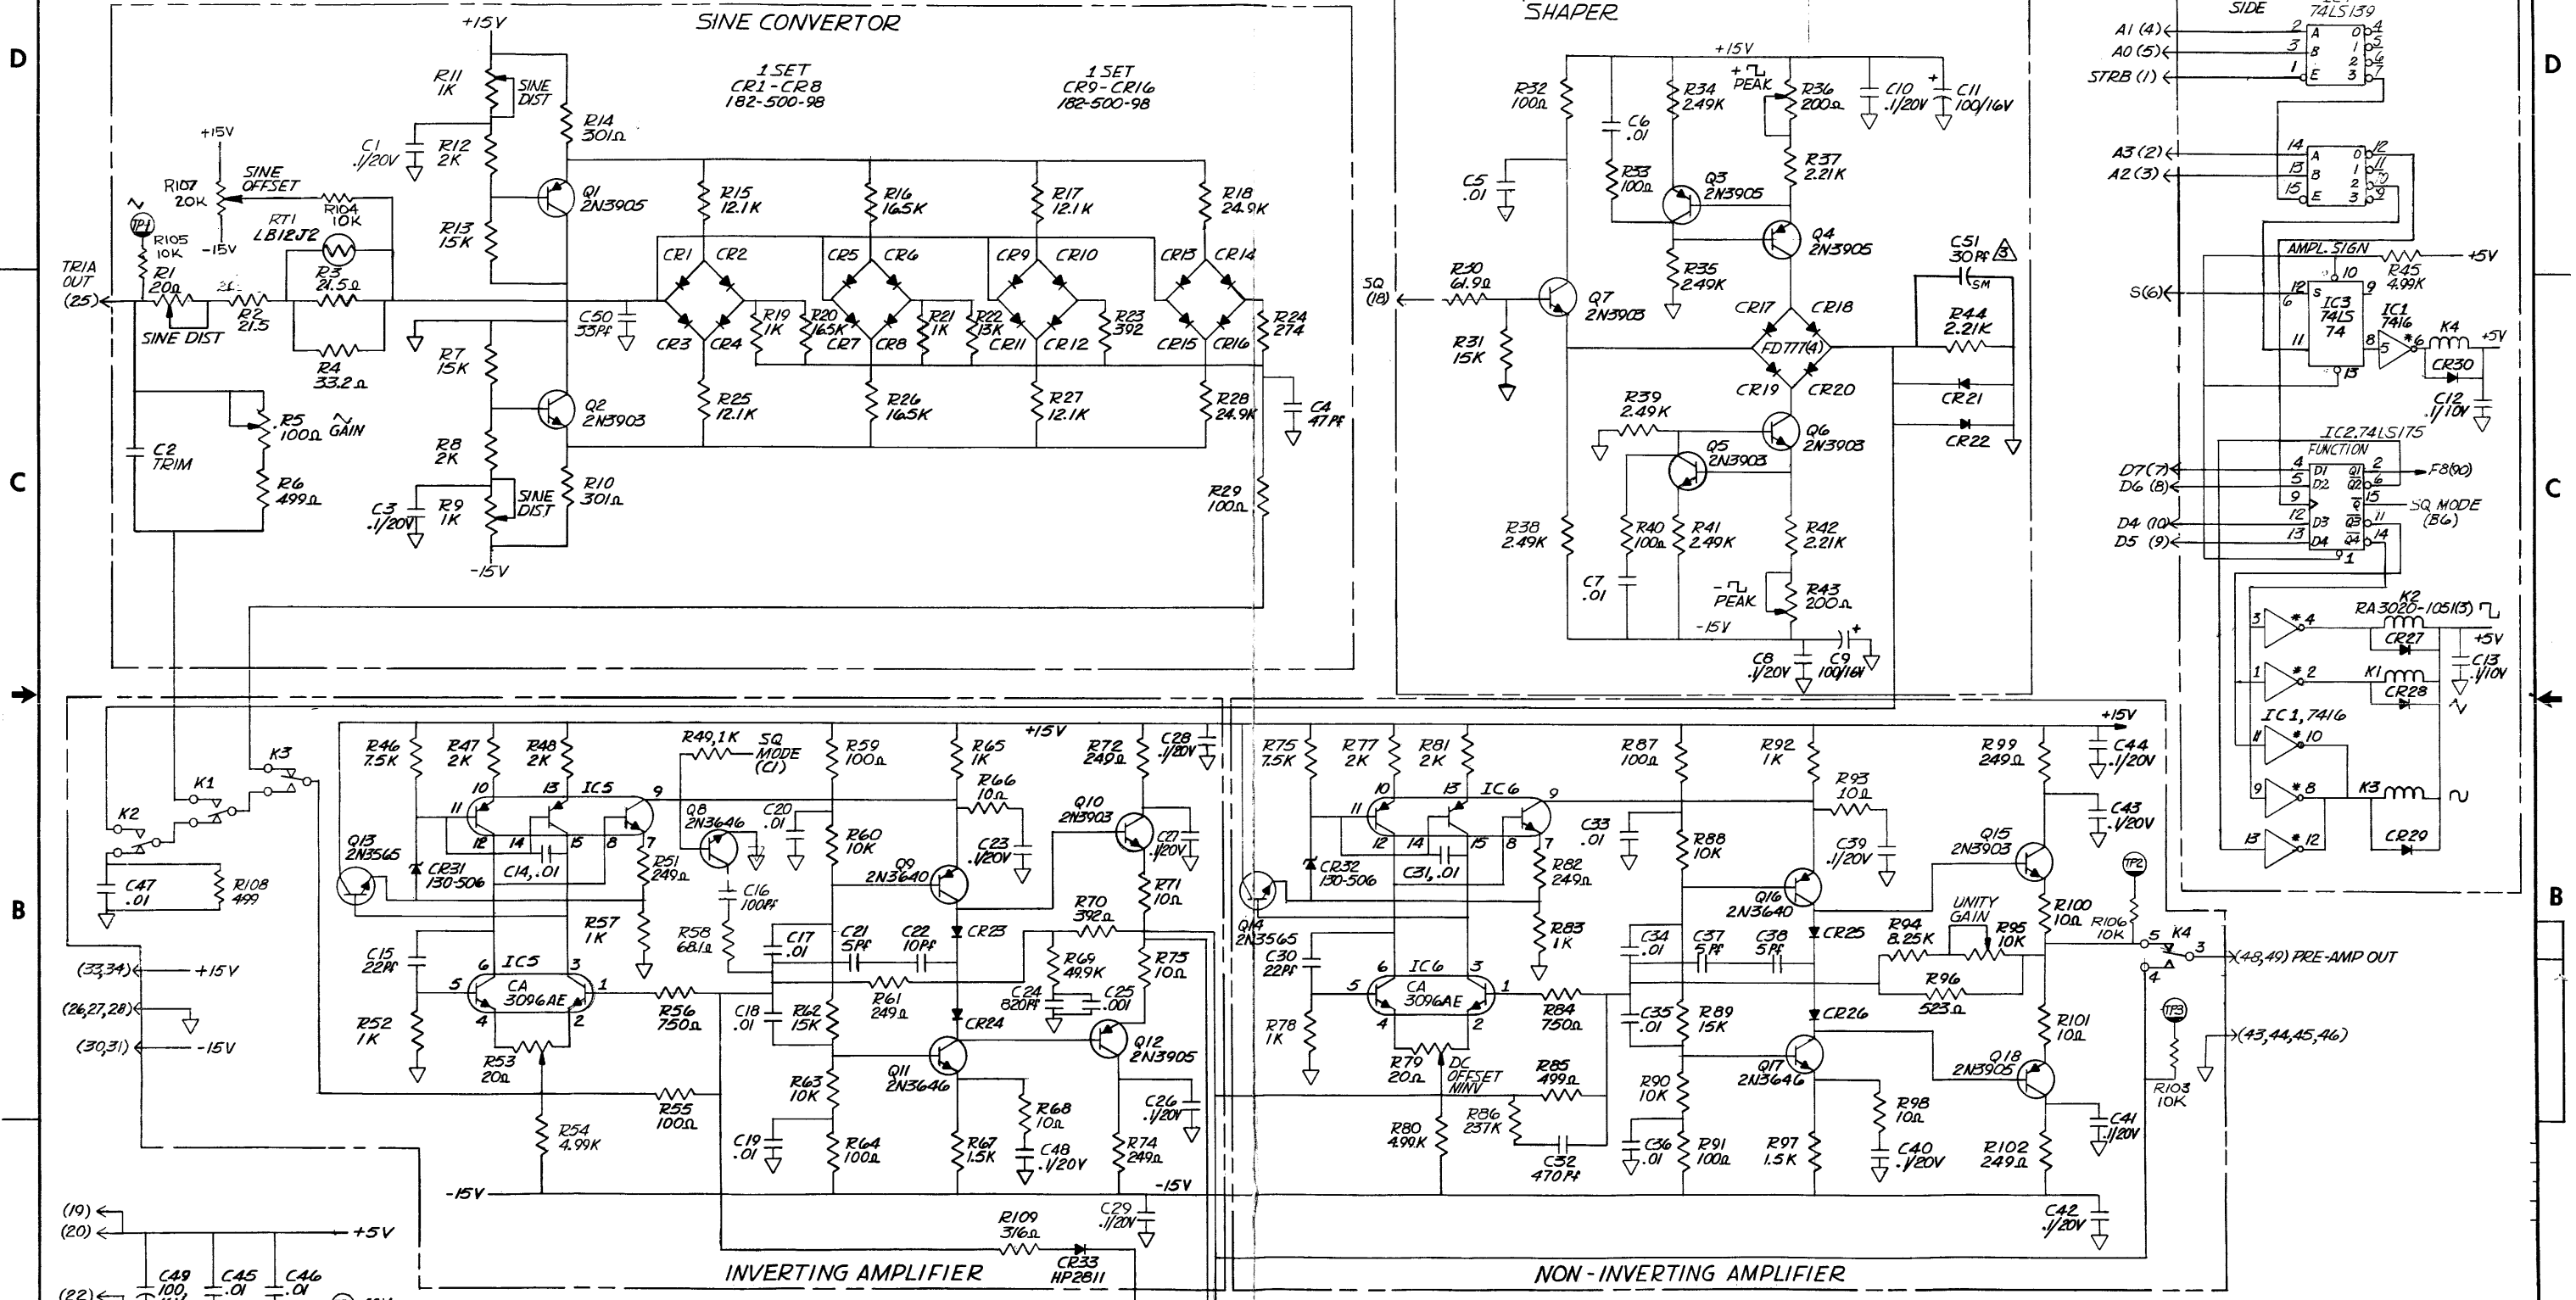

2) UNLESS OTHERWISE SPECIFIED, ALL CAPACITORS ARE MICROFARADS
ALL DIODES ARE FD6666


1) LAST REF. DESIGNATORS USED: K5, C51, TP4, IC6, CR35, R108, Q18, RT1

NOTE: UNLESS OTHERWISE SPECIFIED

△ SQUARE WAVE ABERRATION TRIM CAP.

| | | | |
|--|---------------------|--|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 6-28-76 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROLENGR Tom DeLuga | SEPT 7 '77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES 1:1 XX .030 | TITLE SCHMATIC FUNCTION/PRE-AMP. |
| SCALE | DO NOT SCALE DWG | MODEL NO. | |
| | | CODE IDENT 23338 | REV F |
| | | | SHEET 1 OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

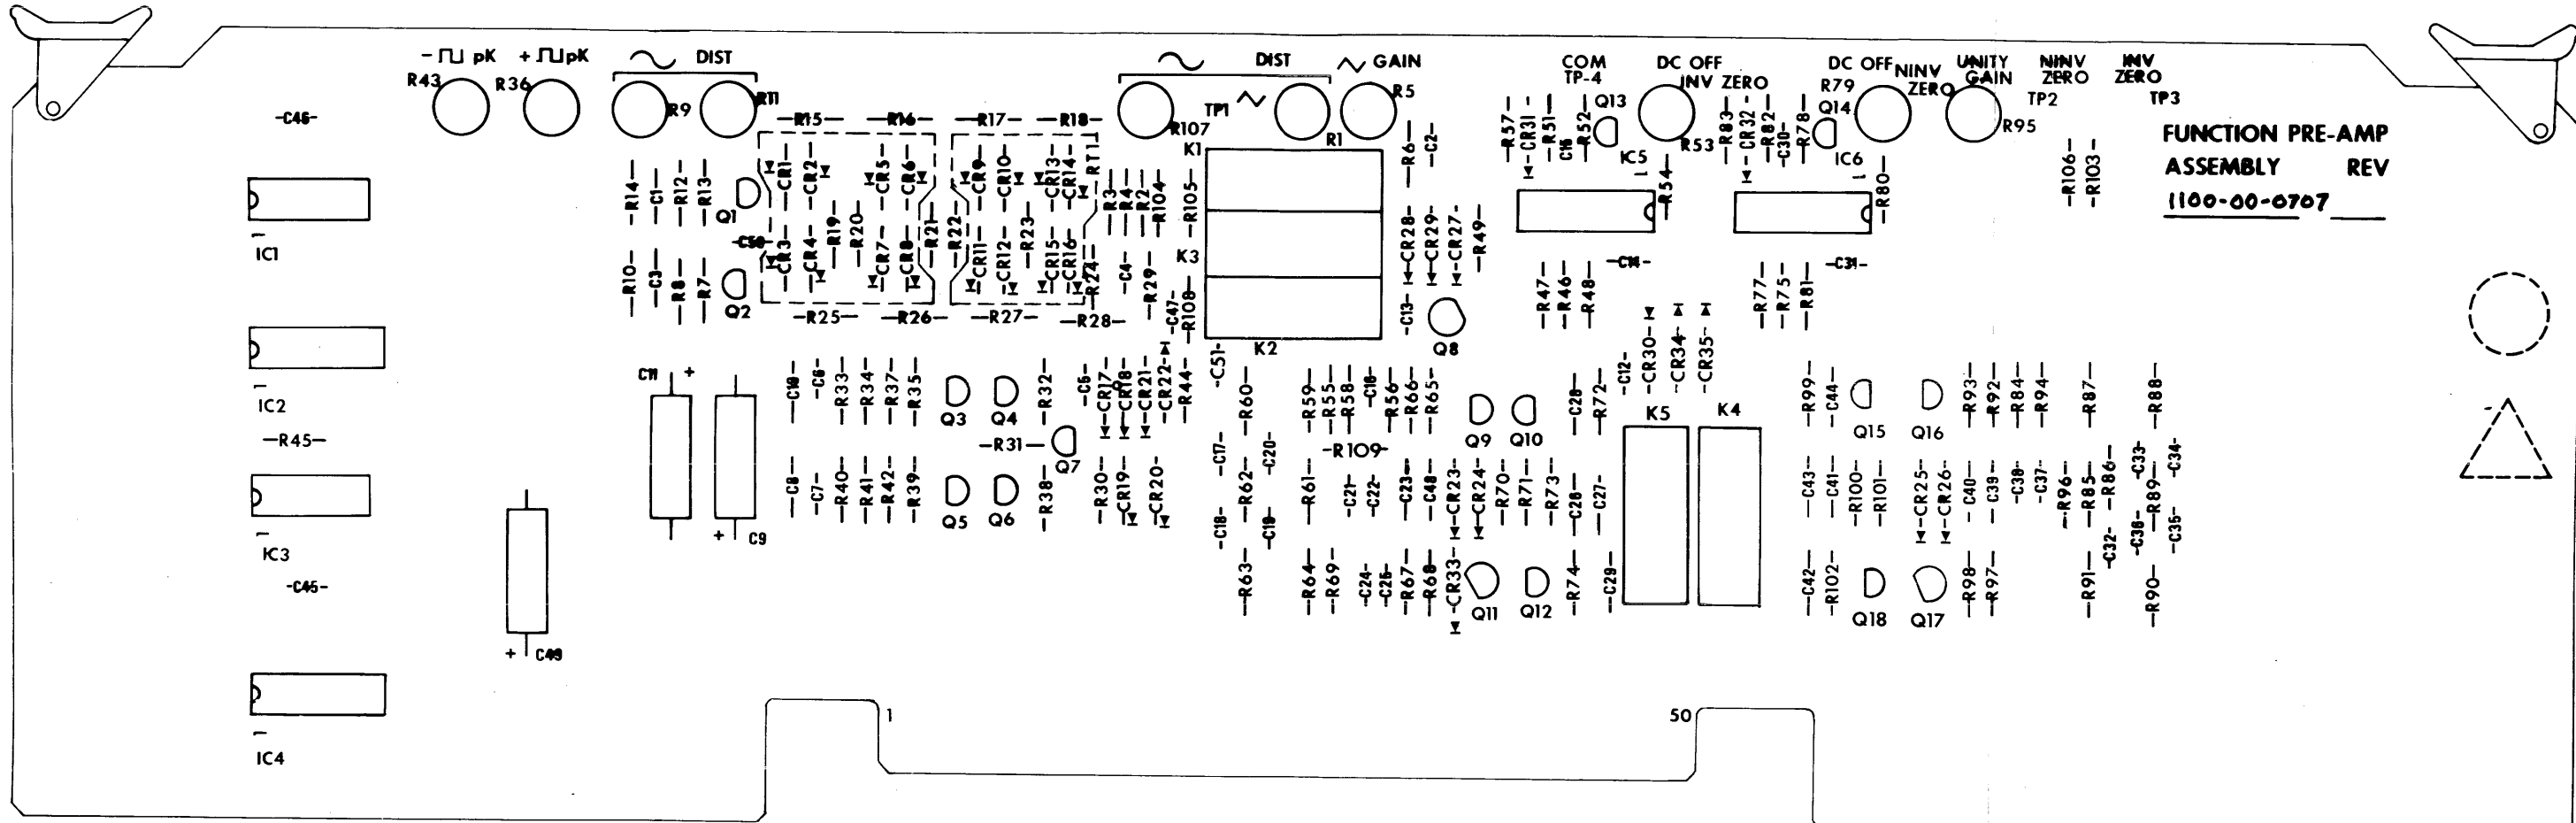

**FUNCTION PRE-AMP
ASSEMBLY REV
1100-00-0707**

1100-00-0707

| | | | | |
|--|--|--------|---------------------------------------|---------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PRO. ENGR | | TITLE | |
| | RELEASE | APPROV | FUNCTION/PREAMP PCA | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | MODEL NO | REV |
| | DO NOT SCALE DWG | SCALE | 172B | 0101-00-0707 |
| | | | CODE IDENT | 23338 |
| | | | SHEET | OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, FUNCTION | 0101-00-0707 | WVTK | 0101-00-0707 | 1 |
| NONE | SCHEMATIC, FUNCTION | 0103-00-0707 | WVTK | 0103-00-0707 | 1 |
| C21 C37 C38 | CAP, CER, 5PF, 1KV | DD-050 | CRL | 1500-00-5011 | 3 |
| C22 | CAP, CER, 10PF, 1KV | DD-100 | CRL | 1500-01-0011 | 1 |
| C16 | CAP, CER, 100PF, 1KV | DD-101 | CRL | 1500-01-0111 | 1 |
| C25 | CAP, CER, .001MF, 1KV | DD-102 | CRL | 1500-01-0211 | 1 |
| C14 C17 C18 C19 C20 C31 C33 C34 C35 C36 C45 C46 C47 C5 C6 C7 | CAP, CER, MN, .01MF, 50V | CAC02Z5U103Z100A | CORNG | 1500-01-0310 | 16 |
| C1 C10 C12 C13 C23 C26 C27 C28 C29 C3 C39 C40 C41 C42 C43 C44 C48 C8 | CAP, CER, MON, .1MF, 50V | CAC03Z5U104Z050A | CORNG | 1500-01-0405 | 18 |
| C15 C30 | CAP, CER, 22PF, 1KV | DD-220 | CRL | 1500-02-2011 | 2 |
| C50 | CAP, CER, 33PF, 1KV | DD-330 | CRL | 1500-03-3011 | 1 |
| C4 | CAP, CER, 47PF, 1KV | DD-470 | CRL | 1500-04-7011 | 1 |
| C32 | CAP, CER, 470PF, 1KV | DD-471 | CRL | 1500-04-7111 | 1 |
| C24 | CAP, CER, 820PF, 1KV | DD-821 LONG LEAD | CRL | 1500-08-2101 | 1 |
| C51 | CAP, MICA, 30PF, 500V | DM15-300J | ARCO | 1500-13-0000 | 1 |
| C11 C49 C9 | CAP, ELECT, 100MF, 16V | 500D1076016DC7 | SPRAG | 1500-31-0101 | 3 |
| WAVETEK PARTS LIST TITLE: PCA, FUNCTION BD ASSEMBLY NO. 1100-00-0707 PAGE: 1 REV F | | | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|-------------------|------|--------------|--------|
| R15 R17 R25 R27 | RES, MF, 1/BW, 1%, 12.1K | RN55D-1212F | TRW | 4701-03-1212 | 4 |
| R22 | RES, MF, 1/BW, 1%, 13K | RN55D-1302F | TRW | 4701-03-1302 | 1 |
| R67 R97 | RES, MF, 1/BW, 1%, 1.5K | RN55D-1501F | TRW | 4701-03-1501 | 2 |
| R13 R31 R62 R7 R89 | RES, MF, 1/BW, 1%, 15K | RN55D-1502F | TRW | 4701-03-1502 | 5 |
| R16 R20 R26 | RES, MF, 1/BW, 1%, 16.5K | RN55D-1652F | TRW | 4701-03-1652 | 3 |
| R12 R47 R48 R77 R8 R81 | RES, MF, 1/BW, 1%, 2K | RN55D-2001F | TRW | 4701-03-2001 | 6 |
| R2 R3 | RES, MF, 1/BW, 1%, 21.5 | RN55D-2159F | TRW | 4701-03-2159 | 2 |
| R37 R42 R44 | RES, MF, 1/BW, 1%, 2.21K | RN55D-2211F | TRW | 4701-03-2211 | 3 |
| R86 | RES, MF, 1/BW, 1%, 237K | RN55D-2373F | TRW | 4701-03-2373 | 1 |
| R102 R31 R61 R72 R74 R82 R99 | RES, MF, 1/BW, 1%, 249 | RN55D-2490F | TRW | 4701-03-2490 | 7 |
| R34 R35 R38 R39 R41 | RES, MF, 1/BW, 1%, 2.49K | RN55D-2491F | TRW | 4701-03-2491 | 5 |
| R18 R28 | RES, MF, 1/BW, 1%, 24.9K | RN55D-2492F | TRW | 4701-03-2492 | 2 |
| R24 | RES, MF, 1/BW, 1%, 274 | RN55D-2740F | TRW | 4701-03-2740 | 1 |
| R10 R14 | RES, MF, 1/BW, 1%, 301 | RN55D-3010F | TRW | 4701-03-3010 | 2 |
| R109 | RES, MF, 1/BW, 1%, 316 | RN55D-3160F | TRW | 4701-03-3160 | 1 |
| R4 | RES, MF, 1/BW, 1%, 33.2 | RN55D-3329F | TRW | 4701-03-3329 | 1 |
| WAVETEK PARTS LIST TITLE: PCA, FUNCTION BD ASSEMBLY NO. 1100-00-0707 PAGE: 3 REV F | | | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|------------------------|-------------------|-------|--------------|--------|
| NONE | FUNCTION BD | 1700-00-0707 | WVTK | 1700-00-0707 | 1 |
| TP1 TP2 TP3 TP4 | TERM | 4523B-5.04 | USECO | 2100-05-0029 | 4 |
| NONE | PC BD EJECTOR | 103 BLUE | CALMK | 2800-07-0014 | 2 |
| K1 K2 K3 K5 | RELAY, REED, FORM-C | RA3020-1051 | ETROL | 4500-00-0009 | 4 |
| K4 | RELAY, FORM C MERCURY | 4500-00-0013 | WVTK | 4500-00-0013 | 1 |
| R5 | POT, TRIM, 100 | 91AR100 | BECK | 4600-01-0103 | 1 |
| R11 R9 | POT, TRIM, 1K | 91AR1K | BECK | 4600-01-0209 | 2 |
| R99 | POT, TRIM, 10K | 91AR10K | BECK | 4600-01-0315 | 1 |
| R1 R53 R79 | POT, TRIM, 20 | 91AR20 | BECK | 4600-02-0000 | 3 |
| R36 R43 | POT, TRIM, 200 | 91AR200 | BECK | 4600-02-0101 | 2 |
| R107 | POT, TRIM, 20K | 91AR20K | BECK | 4600-02-0301 | 1 |
| R29 R32 R33 R40 R55 R59 R64 R87 R91 | RES, MF, 1/BW, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 9 |
| R19 R21 R49 R52 R57 R65 R78 R83 R92 | RES, MF, 1/BW, 1%, 1K | RN55D-1001F | TRW | 4701-03-1001 | 9 |
| R103 R104 R105 R106 R60 R63 R88 R90 | RES, MF, 1/BW, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 8 |
| R100 R101 R66 R68 R71 R73 R93 R98 | RES, MF, 1/BW, 1%, 10 | RN55D-1009F | TRW | 4701-03-1009 | 8 |
| WAVETEK PARTS LIST TITLE: PCA, FUNCTION BD ASSEMBLY NO. 1100-00-0707 PAGE: 2 REV F | | | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|---|-------------------|-------|--------------|--------|
| R23 R70 | RES, MF, 1/BW, 1%, 392 | RN55D-3920F | TRW | 4701-03-3920 | 2 |
| R108 R6 R85 | RES, MF, 1/B, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 3 |
| R45 R54 R80 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 3 |
| R69 | RES, MF, 1/BW, 1%, 49.9K | RN55D-4992F | TRW | 4701-03-4992 | 1 |
| R96 | RES, MF, 1/BW, 1%, 523 | RN55D-5230F | TRW | 4701-03-5230 | 1 |
| R30 | RES, MF, 1/BW, 1%, 61.9 | RN55D-6199F | TRW | 4701-03-6199 | 1 |
| R58 | RES, MF, 1/BW, 1%, 68.1 | RN55D-6819F | TRW | 4701-03-6819 | 1 |
| R56 R84 | RES, MF, 1/BW, 1%, 750 | RN55D-7500F | TRW | 4701-03-7500 | 2 |
| R46 R75 | RES, MF, 1/BW, 1%, 7.5K | RN55D-7501F | TRW | 4701-03-7501 | 2 |
| R94 | RES, MF, 1/BW, 1%, 8.25K | RN55D-8251F | TRW | 4701-03-8251 | 1 |
| CR31 CR32 | DIODE | 1N4581 | MICRO | 4801-01-4581 | 2 |
| CR17 CR18 CR19 CR20 | DIODE | FD777 | FAIR | 4807-02-0777 | 4 |
| CR21 CR22 CR23 CR24 CR25 CR26 CR27 CR28 CR29 CR30 CR34 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 11 |
| CR33 CR35 | DIODE | 5082-2811 | HP | 4809-02-2811 | 2 |
| CR1 CR10 CR11 CR12 CR13 CR14 CR15 CR16 CR2 CR3 CR4 CR5 CR6 | DIODE, SET, 8-FD-777 QTY: 8 4807-02-0777 | 182-500-98 | WVTK | 4898-00-0010 | 2 |
| WAVETEK PARTS LIST TITLE: PCA, FUNCTION BD ASSEMBLY NO. 1100-00-0707 PAGE: 4 REV F | | | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|------------------|-------------------|------|--------------|--------|
| CR7 CR8 CR9 | | | | | |
| Q13 Q14 | TRANS | 2N3565 | FAIR | 4901-03-5650 | 2 |
| Q16 Q9 | TRANS | 2N3640 | FAIR | 4901-03-6400 | 2 |
| Q11 Q17 Q8 | TRANS | 2N3646 | NSC | 4901-03-6460 | 3 |
| Q10 Q15 Q2 Q5 Q6 Q7 | TRANS | 2N3903 | NSC | 4901-03-9030 | 6 |
| Q1 Q12 Q18 Q3 Q4 | TRANS | 2N3905 | ITT | 4901-03-9050 | 5 |
| RT1 | THERMISTER | LB12J2 | FNWL | 5300-00-0002 | 1 |
| IC5 IC6 | IC | CA-3096AE | RCA | 7000-30-9600 | 2 |
| IC1 | IC | 7416 | SIQ | 8000-74-1600 | 1 |
| IC3 | IC | 74LS74 | TI | 8000-74-7410 | 1 |
| IC4 | IC | 74LS139 | SIQ | 8007-41-3910 | 1 |
| IC2 | IC | 74LS175 | TI | 8007-41-7510 | 1 |
| WAVETEK PARTS LIST TITLE: PCA, FUNCTION BD ASSEMBLY NO. 1100-00-0707 PAGE: 5 REV F | | | | | |

| | | | | |
|--|---|--------------------------------|---------------------------------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | TITLE | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | PARTS LIST PCA, FUNCTION BD | | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030 | | | |
| DO NOT SCALE DWG | MODEL NO. | DWG NO. | REV | |
| SCALE | 172B | 1100-00-0707 | F | |
| CODE IDENT | 23338 | SHEET 1 | OF 1 | |

NOTE UNLESS OTHERWISE SPECIFIED


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|---------------------|-----|---------|-----|
| 1 | EUG IMPRV. | TLF | 8-22-77 | |
| 2 | ECN 1687, 1701 | RO | 3-27-78 | |
| 3 | 2921, 3552 (CL III) | DC | 2-1-85 | |
| 4 | 3555 | DC | 2-7-85 | |
| 5 | 3937 | SC | 7-23-85 | |


D

C

A

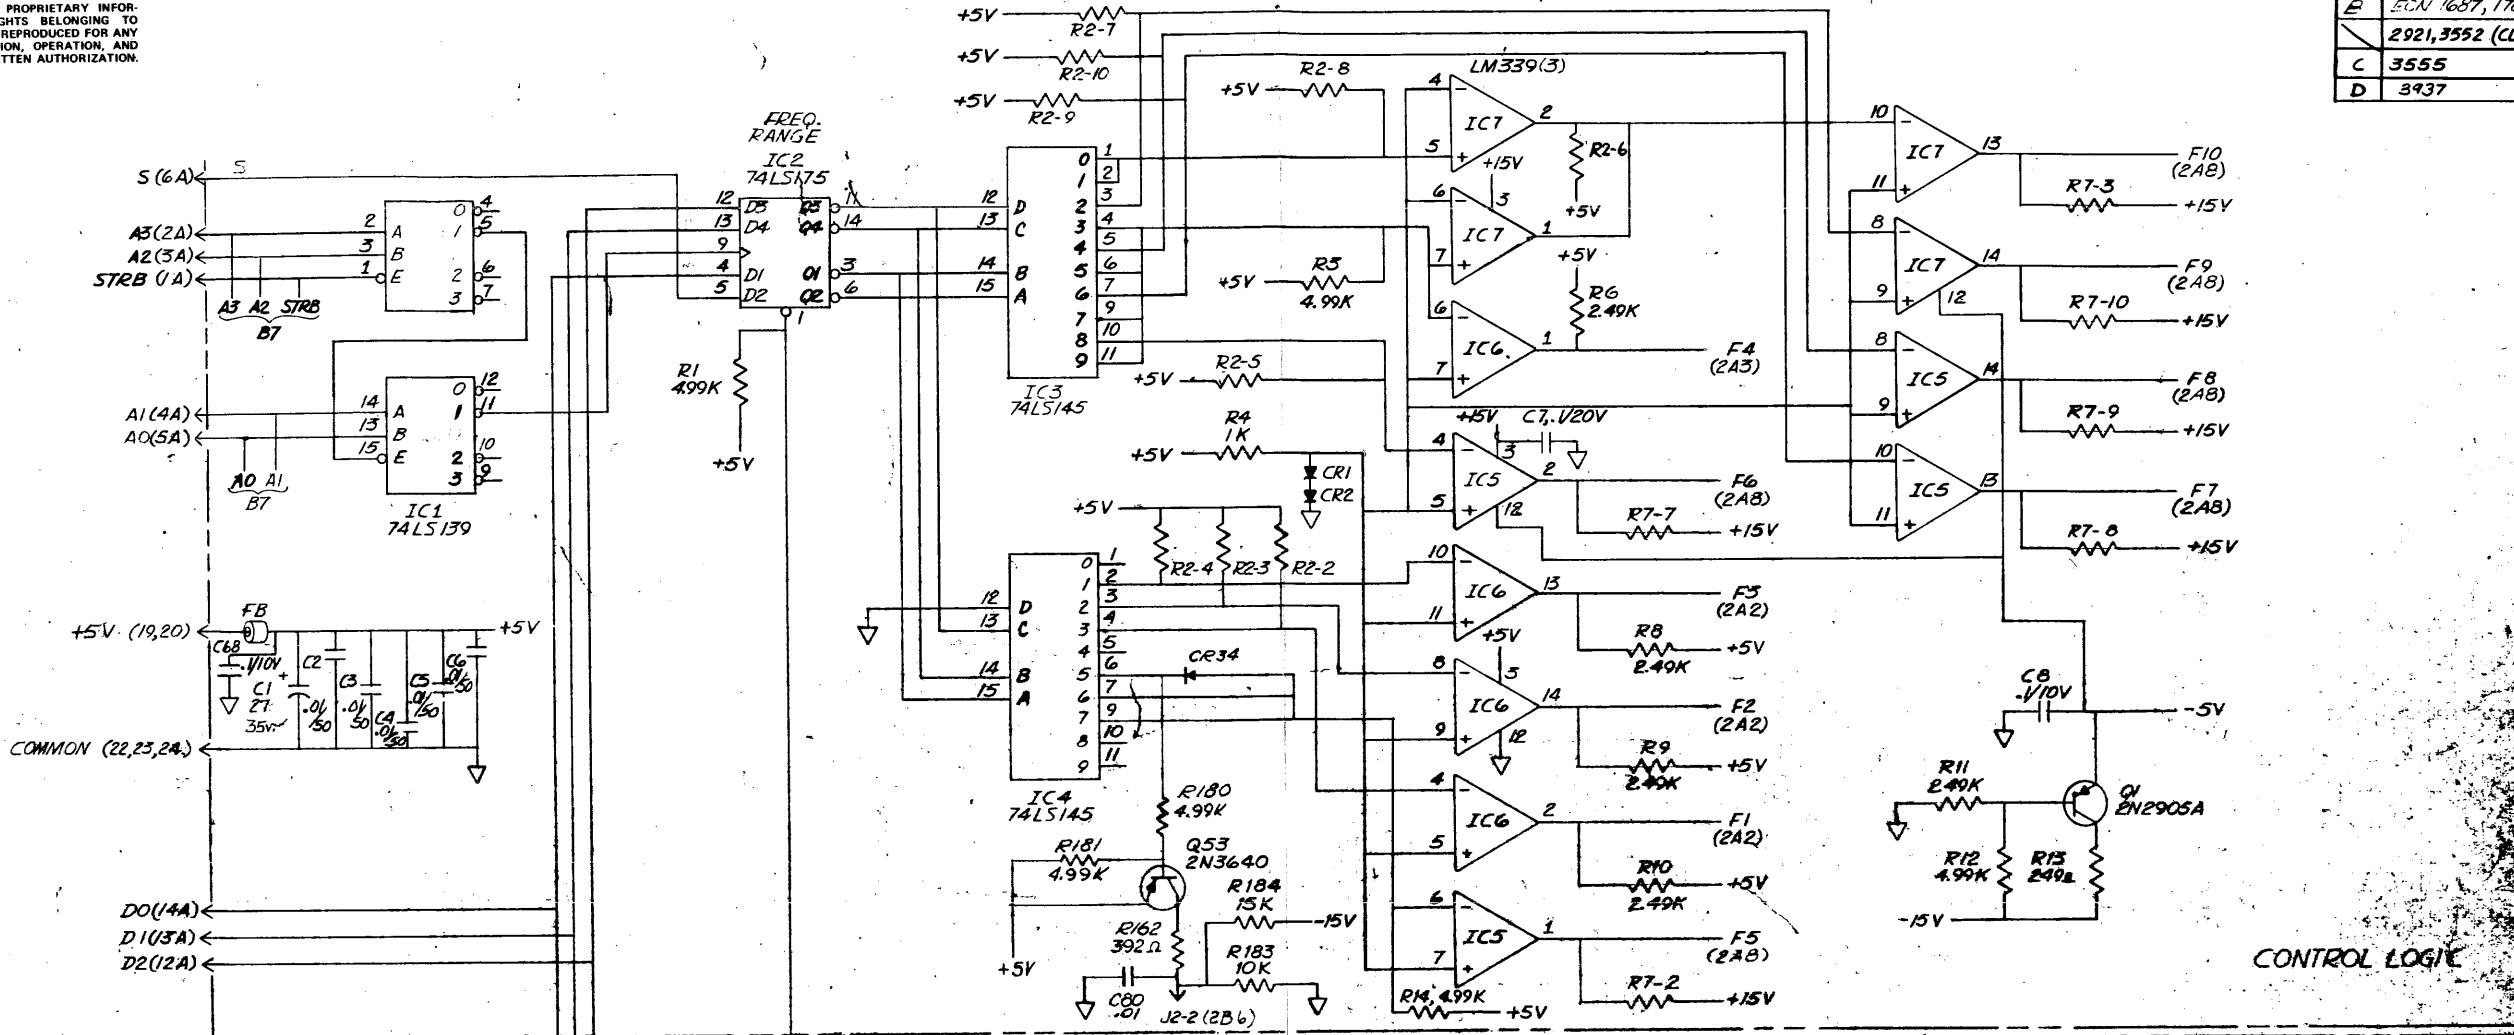

CONTROL LOGIC

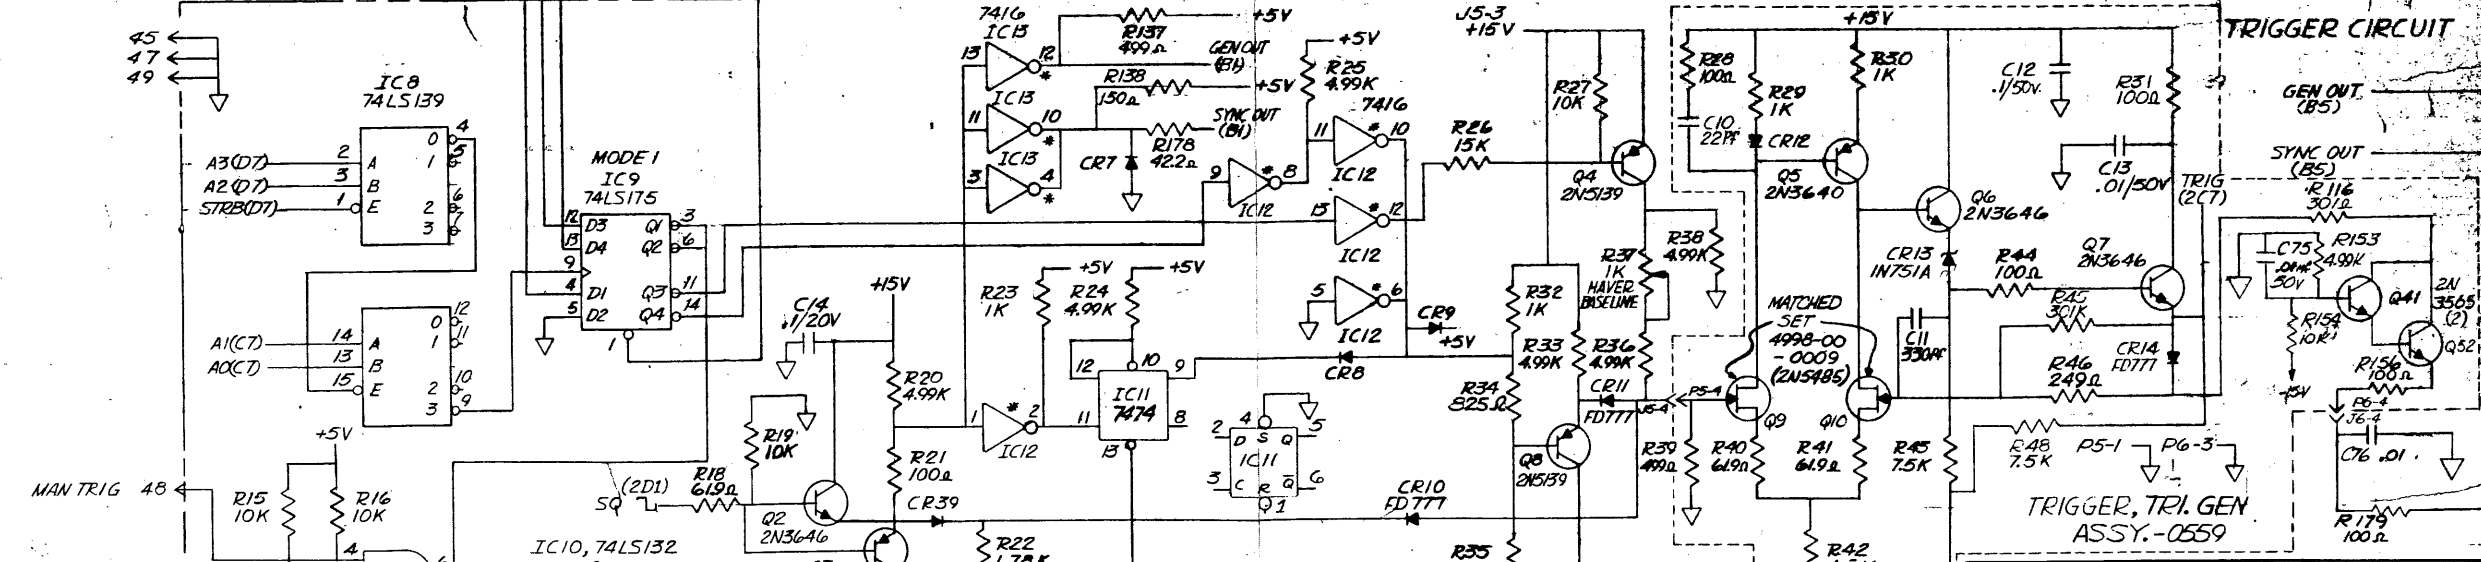


TRIGGER CIRCUIT

| | | | |
|--|------------------------|------------------|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 8-27-77 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | DESIGNED BY Tom Doliga | DATE 10-77 | |
| FINISH WAVEK PROCESS | RELEASE APPROV | XX - 830 | TITLE |
| | | DO NOT SCALE DWG | SCHMATIC TRIANGLE GENERATOR |
| | | SCALE | MODEL NO. 172B |
| | | | DWG NO. 0103-00-0114-D |
| | | | CODE IDENT. 23358 |
| | | | SHEET 7 |

NOTE: UNLESS OTHERWISE SPECIFIED LAST REF. DESIGNATORS USED R181-C105, CR39-IC20, L2-K4-Q53
 2) ALL CAPACITORS ARE IN MICROFARADS. ALL DIODES ARE FD666G.
 3) UNUSED PINS: IC13-1,5,9,2,6,4,8 - IC12-3,4,4 - IC11-6,2,3,5,4,6
 4. R2 AND R7 SIPS ARE 10K 5. * NOMINAL VALUE CALLED OUT ON P/L

GEN, HYS SW ASSY. 0558

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

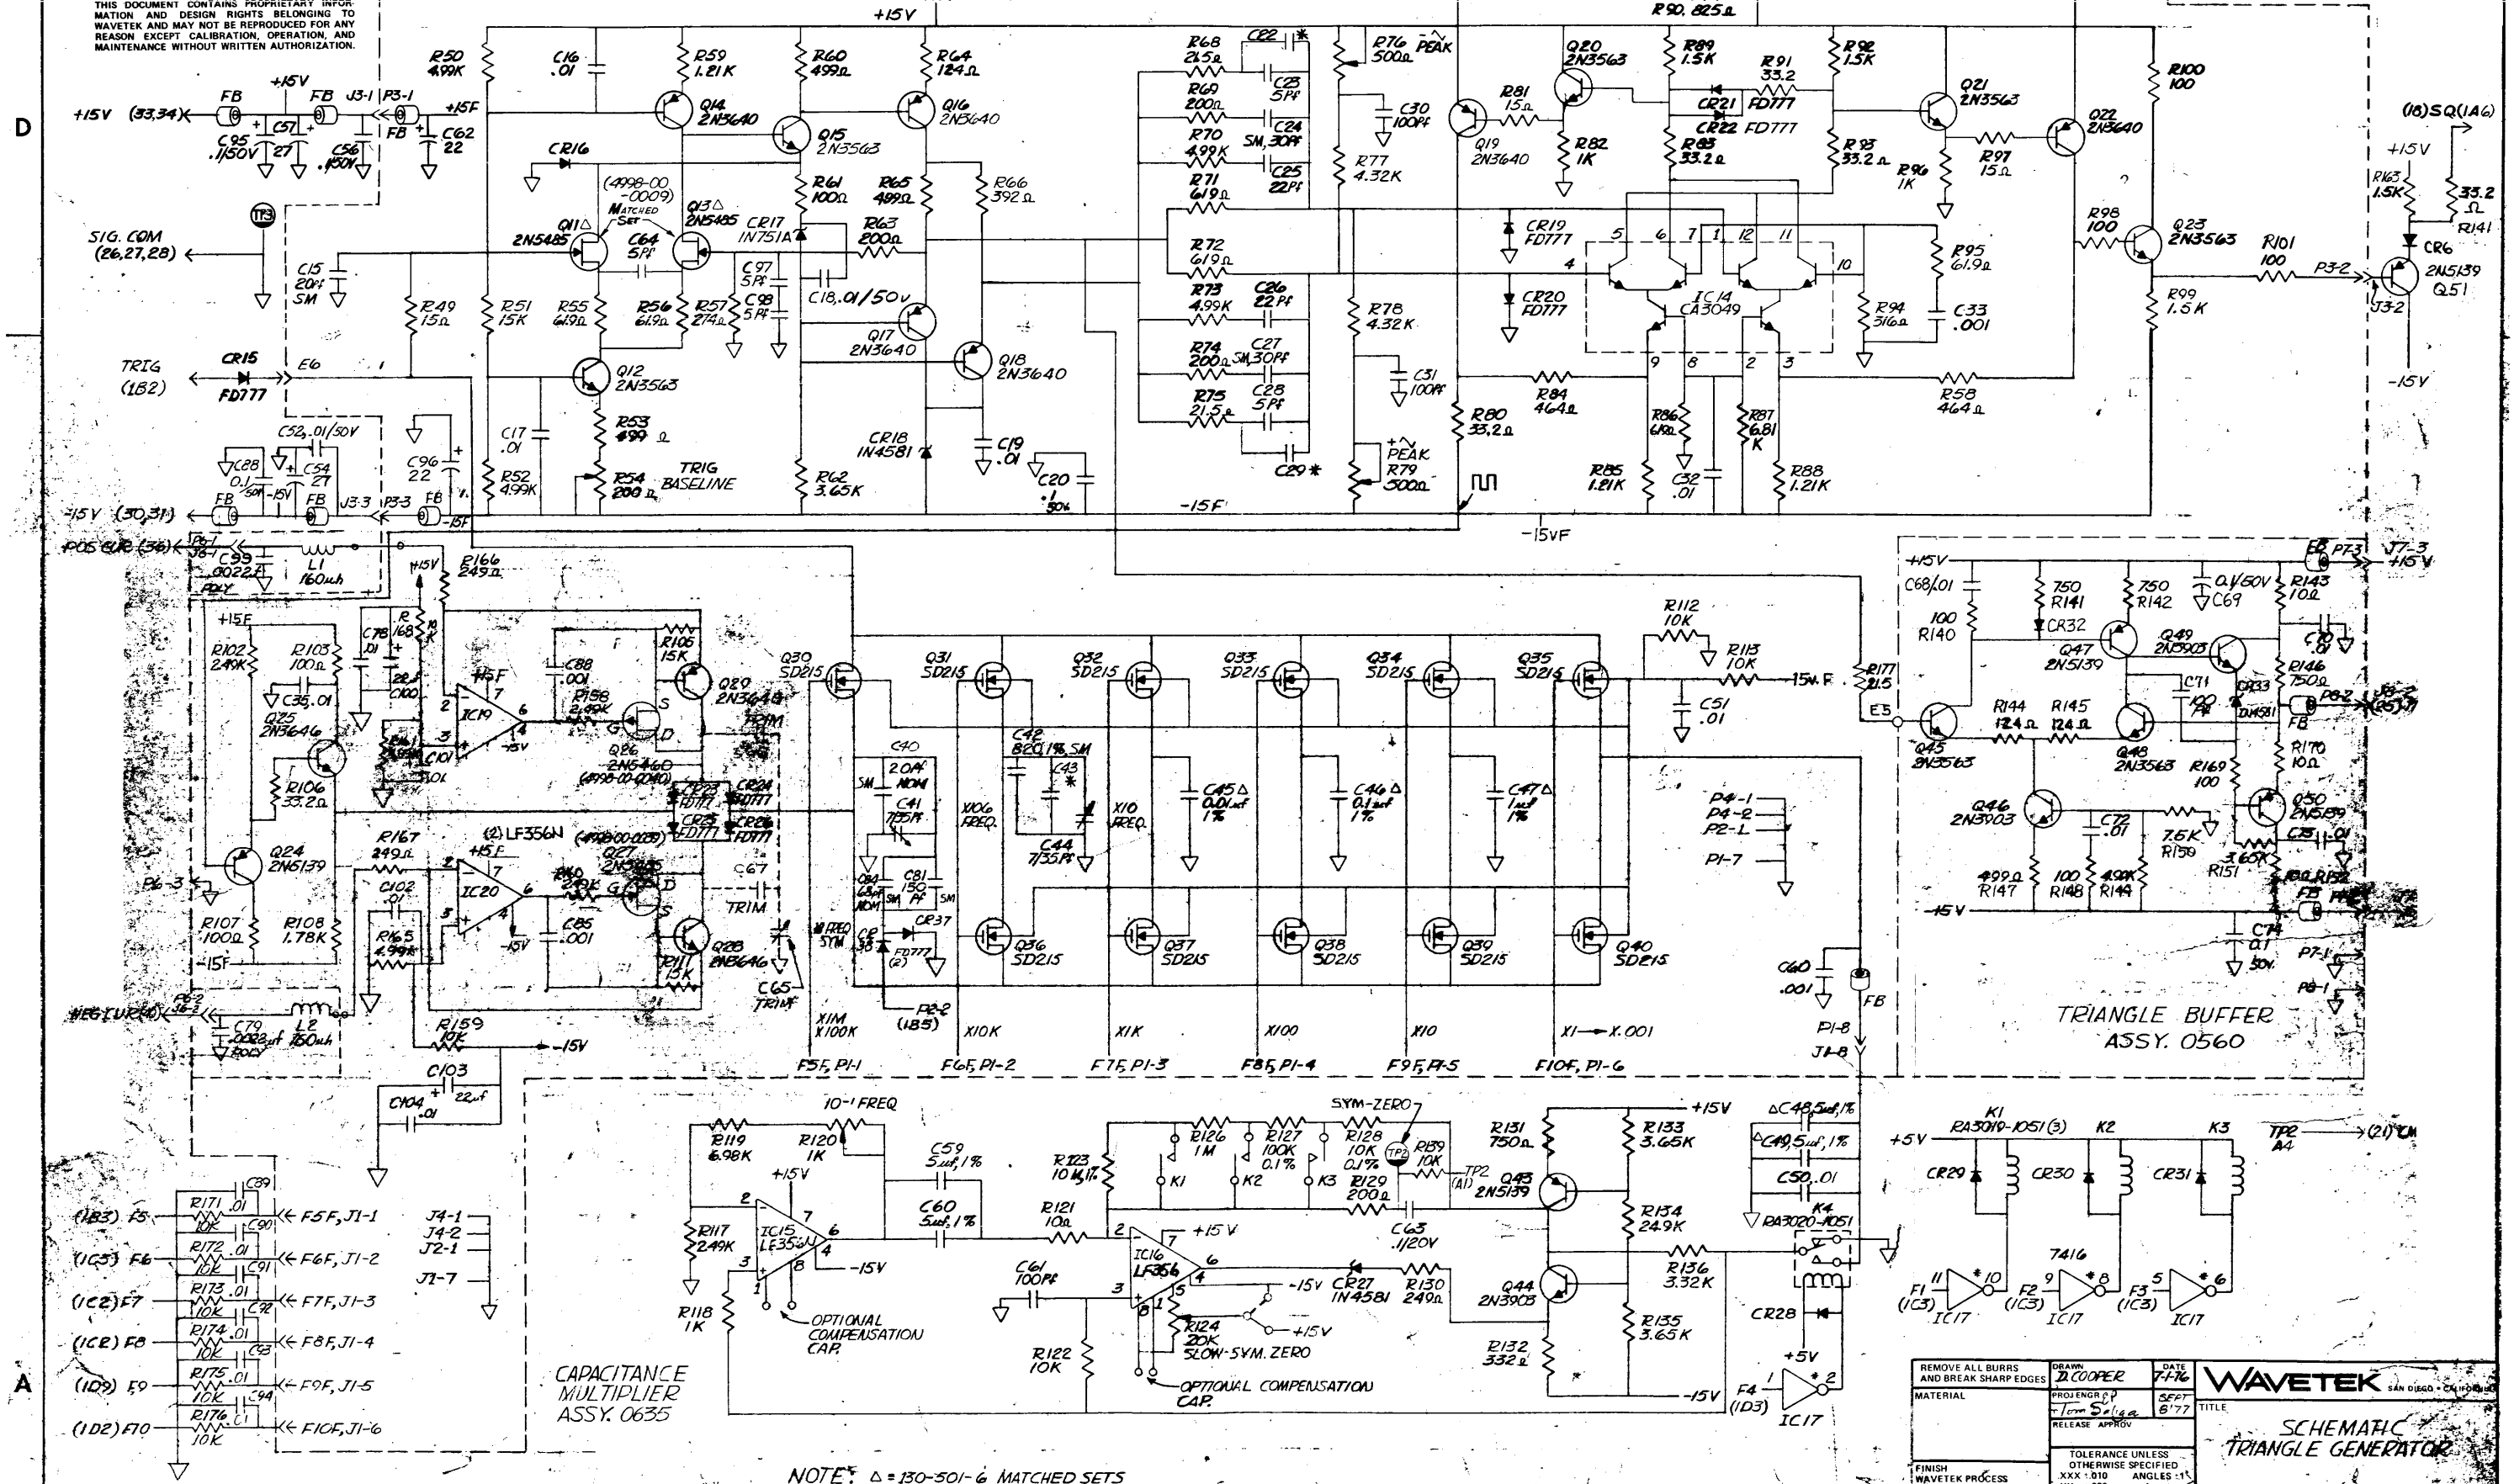

TRIANGLE BUFFER ASSY. 0560

CAPACITANCE MULTIPLIER ASSY. 0635


NOTE: Δ = 130-501-6 MATCHED SETS (C45, C46, C47, C48, E49)

* SELECTED FOR 4.4V VGS(OFF) C58, C62 ELIM.

NOTE: UNLESS OTHERWISE SPECIFIED 1. R2 AND R7 SIPS ARE 10K

| | | | |
|--|-------------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 7-76 | WAVETEK SAN DIEGO, CALIF. |
| MATERIAL | PROJ ENGR Tom Saliga | SEPT 8-77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES - 1° XX - .030 | TITLE SCHEMATIC TRIANGLE GENERATOR |
| SCALE | DO NOT SCALE DWG | MODEL NO 172B | DWG NO 0103-00-0116 D |
| | | CODE IDENT 23338 | SHEET 2 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

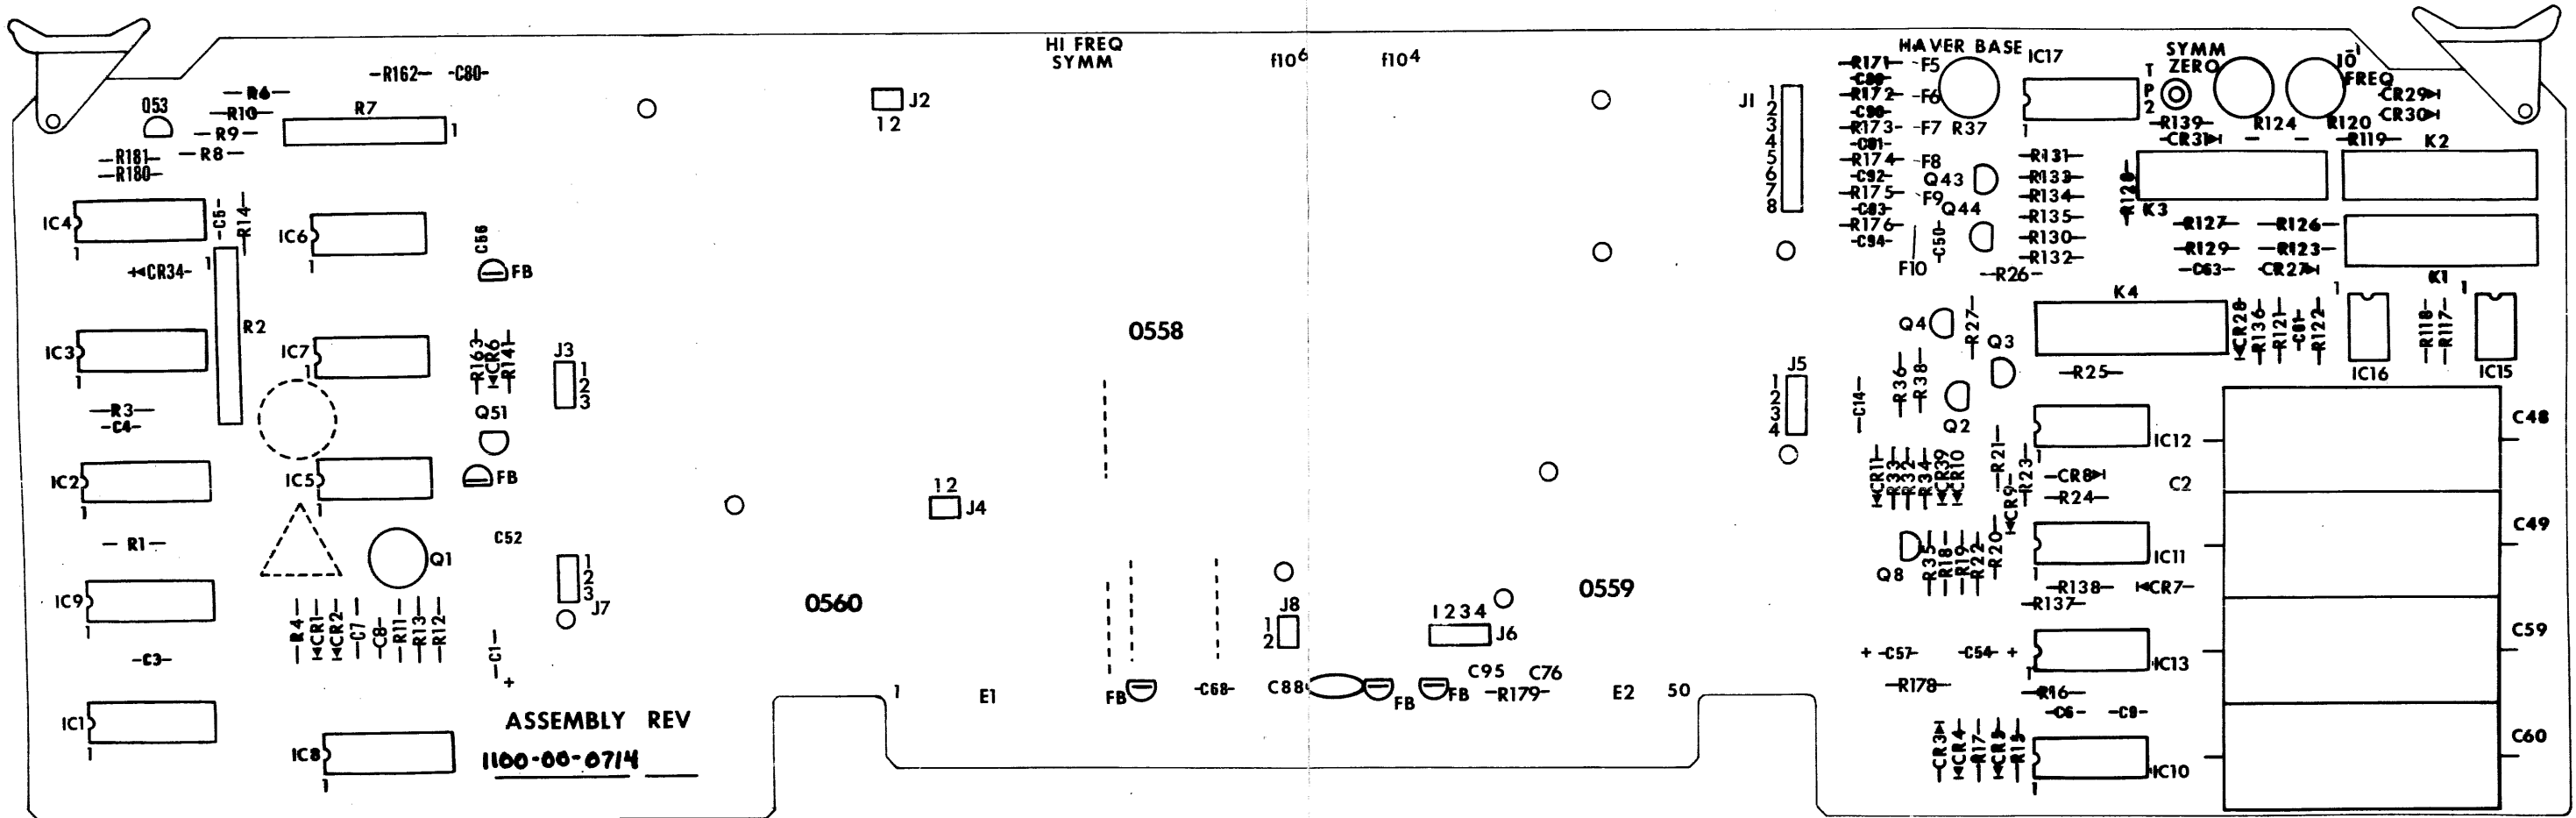

1100-00-0714

ASSEMBLY REV
1100-00-0714

| | | | | |
|--|--|-------|--|-------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| | PROJ ENGR | | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TITLE TRIANGLE GENERATOR PGA | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES 1 XX .030 | | | |
| | DO NOT SCALE DWG | SCALE | MODEL NO 172B | DWG NO 0101-00-0714 |
| | | | REV | |
| | | | CODE 23338 | SHEET 1 OF 1 |


THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

Table with 12 columns: REFERENCE DESIGNATORS, PART DESCRIPTION, ORIG-MFG-PART-NO, MFR, WAVETEK NO., QTY/PT, and a second set of the same columns. Includes a title block at the bottom with 'WAVETEK PARTS LIST' and assembly information.

Table with 16 columns: REFERENCE DESIGNATORS, PART DESCRIPTION, ORIG-MFG-PART-NO, MFR, WAVETEK NO., QTY/PT, and a second set of the same columns. Includes a title block at the bottom with 'WAVETEK PARTS LIST' and assembly information.

Bottom section containing a title block with 'WAVETEK PARTS LIST', assembly number '1100-00-0714', and a technical drawing control table with fields for DRAWN, DATE, PROJ ENGR, etc.

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

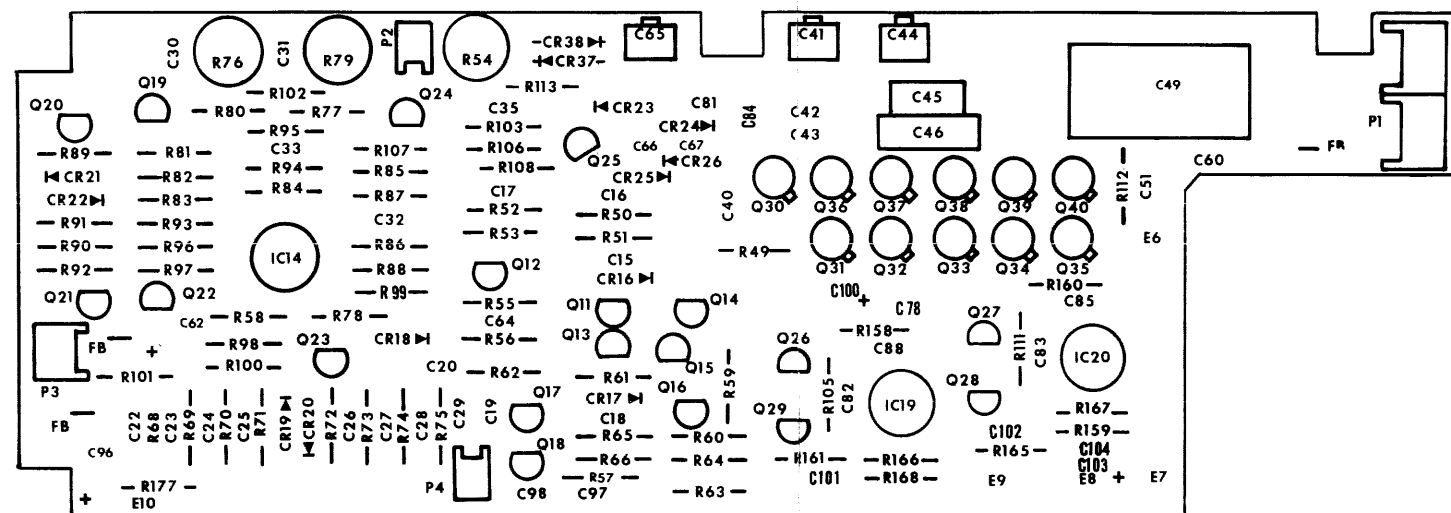

1208-00-0558

| | | | | |
|--|--|------------|--|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO - CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE APPROV | | HYSTERESIS SW ASSY, TRI GEN | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES ° XX - 030 | | MODEL NO | REV |
| SCALE | DO NOT SCALE DWG | | 0101-00-0558 | |
| | | CODE IDENT | 23338 | SHEET 1 OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

Table with columns: REV, ECN, BY, DATE, APP


Main parts list table with columns: REFERENCE DESIGNATORS, PART DESCRIPTION, ORIG-MFGR-PART-NO, MFGR, WAVETEK NO., QTY/PT. Includes sub-tables for WAVETEK PARTS LIST and assembly information.

Parts list table with columns: REFERENCE DESIGNATORS, PART DESCRIPTION, ORIG-MFGR-PART-NO, MFGR, WAVETEK NO., QTY/PT. Includes sub-table for WAVETEK PARTS LIST and assembly information.

Parts list table with columns: REFERENCE DESIGNATORS, PART DESCRIPTION, ORIG-MFGR-PART-NO, MFGR, WAVETEK NO., QTY/PT. Includes sub-table for WAVETEK PARTS LIST and assembly information.

Parts list table with columns: REFERENCE DESIGNATORS, PART DESCRIPTION, ORIG-MFGR-PART-NO, MFGR, WAVETEK NO., QTY/PT. Includes sub-table for WAVETEK PARTS LIST and assembly information.

Bottom section containing technical drawing notes, revision history, and drawing identification information. Includes 'WAVETEK' logo and 'PARTS LIST HYS. SWITCH TRI GEN' title.

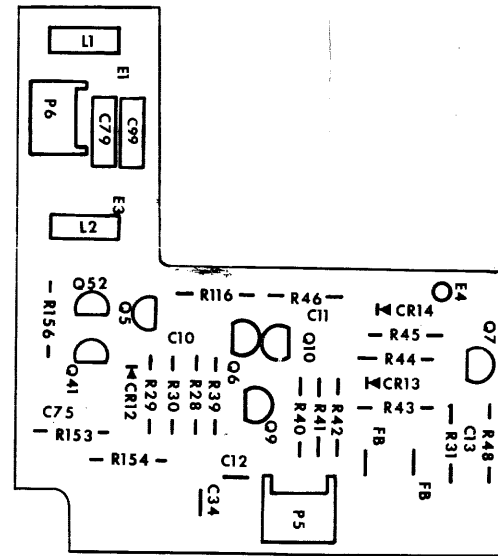

1208-00-0559

| | | | | |
|--|------------------|--------|--|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE ASSEMBLY TRIGGER, TRIANGLE GEN. ASSY. | |
| FINISH WAVETEK PROCESS | RELEASE | APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX 010 ANGLES 1 XX 030 | |
| | DO NOT SCALE DWG | | MODEL NO | DWG NO |
| | SCALE | | 172 | 0101-00-0559 |
| CODE IDENT | 23338 | SHEET | OF | REV |

8

7

6

5

↓

4

3

2

1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, TRIGGER | 0101-00-0559 | WVTK | 0101-00-0559 | 1 |
| NONE | SCHEMATIC, TRI GEN | 0103-00-0714 | WVTK | 0103-00-0714 | 1 |
| C13 C75 | CAP, CER, MN, .01MF, 50V | CAC0225U103Z100A | CORNG | 1500-01-0310 | 2 |
| C10 | CAP, CER, 22PF, 1KV | DD-220 | CRL | 1500-02-2011 | 1 |
| C11 | CAP, CER, 330PF, 1KV | DD-331 | CRL | 1500-03-3111 | 1 |
| C79 C99 | POLYC, .0022MF, 200V | 192P22292 | SPRA9 | 1500-42-2204 | 2 |
| C12 C34 | CAP, CER, .1MF, 50V | D645BX104MP | WSTCP | 1509-90-0011 | 2 |
| NONE | TRIGGER | 1700-00-0559 | WVTK | 1700-00-0559 | 1 |
| L1 L2 | CHOKE, 160MH | 1537-86 | DLVAN | 1800-00-0016 | 2 |
| P5 P6 | CONN | 22-17-2042 | MOLEX | 2100-02-0065 | 2 |
| NONE | SOCKET | 5-330808-0 | AMP | 2100-03-0044 | 3 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 2 |
| NONE | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 2 |
| R156 R28 R31 R44 | RES, MF, 1/BW, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 4 |
| R29 R30 | RES, MF, 1/BW, 1%, 1K | RN55D-1001F | TRW | 4701-03-1001 | 2 |
| R154 | RES, MF, 1/BW, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 1 |
| R42 | RES, MF, 1/BW, 1%, 1.5K | RN55D-1501F | TRW | 4701-03-1501 | 1 |
| R46 | RES, MF, 1/BW, 1%, 249 | RN55D-2490F | TRW | 4701-03-2490 | 1 |

WAVETEK
PARTS LIST

TITLE
TRIGGER TRI GEN

ASSEMBLY NO.
1208-00-0559

REV
C

PAGE: 1

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|---|-------------------|------|--------------|--------|
| R116 | RES, MF, 1/BW, 1%, 301 | RN55D-3010F | TRW | 4701-03-3010 | 1 |
| R45 | RES, MF, 1/BW, 1%, 301K | RN55D-3013F | TRW | 4701-03-3013 | 1 |
| R39 | RES, MF, 1/B, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 1 |
| R153 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 1 |
| R40 R41 | RES, MF, 1/BW, 1%, 61.9 | RN55D-6199F | TRW | 4701-03-6199 | 2 |
| R43 R48 | RES, MF, 1/BW, 1%, 7.5K | RN55D-7501F | TRW | 4701-03-7501 | 2 |
| CR13 | DIODE | 1N751A | FAIR | 4801-01-0751 | 1 |
| CR14 | DIODE | FD777 | FAIR | 4807-02-0777 | 1 |
| CR12 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 1 |
| G41 G52 | TRANS | 2N3563 | FAIR | 4901-03-5650 | 2 |
| G5 | TRANS | 2N3640 | FAIR | 4901-03-6400 | 1 |
| G6 G7 | TRANS | 2N3646 | NSC | 4901-03-6460 | 2 |
| G10 G9 | TRANS, M/PR, 2N5485 QTY: 2: 4901-05-4850 | 142-501-53 | WVTK | 4998-00-0009 | 1 |

WAVETEK
PARTS LIST

TITLE
TRIGGER TRI GEN

ASSEMBLY NO.
1208-00-0559

REV
C

PAGE: 2

| | | | | |
|--|--|----------------|---|-----|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA TITLE PARTS LIST TRIGGER TRI GEN | |
| MATERIAL | PROJ ENGR | RELEASE APPROV | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES - 1 XX - .030 | | | |
| SCALE | DO NOT SCALE DWG | MODEL NO | | |
| | | SCALE | DWG NO | REV |
| | | CODE IDENT | 1208-00-0559 | C |
| | | 23338 | SHEET 1 OF 1 | |

NOTE: UNLESS OTHERWISE SPECIFIED

8

7

6

5


↑

4

3

2

1

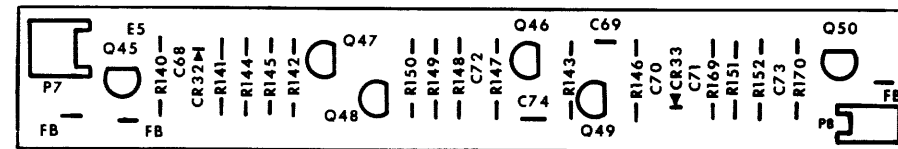

1208-00-0560

| | | | | |
|---|---|--------|---------------------------------------|------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE | APPROV | ASSEMBLY BUFFER AMPLIFIER | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX 010 ANGLES 1 XX 030 | | TRIANGLE GENERATOR ASSY. | |
| | DO NOT SCALE DWG | SCALE | MODEL NO 172 | DWG NO 0101-00-0560 |
| | | | CODE IDENT 23338 | REV SHEET OF |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, BUFFER AMP | 0101-00-0560 | WVTK | 0101-00-0560 | 1 |
| NONE | SCHEMATIC, TRI GEN | 0103-00-0714 | WVTK | 0103-00-0714 | 1 |
| C71 | CAP. CER. 100PF, 1KV | DD-101 LONG LEAD | CRL | 1500-01-0101 | 1 |
| C68 C70 C72 C73 | CAP. CER. MN. .01MF, 50V | CAC0225U103Z100A | CORNG | 1500-01-0310 | 4 |
| C69 C74 | CAP. CER. .1MF, 50V | DG45BX104MP | WSTCP | 1509-90-0011 | 2 |
| NONE | BUFFER AMP | 1700-00-0560 | WVTK | 1700-00-0560 | 1 |
| P8 | CONN | 22-17-2022 | MOLEX | 2100-02-0061 | 1 |
| P7 | CONN | 22-17-2032 | MOLEX | 2100-02-0066 | 1 |
| NONE | SOCKET | 5-330808-0 | AMP | 2100-03-0044 | 1 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 3 |
| NONE | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 3 |
| R140 R148 R169 | RES. MF, 1/8W, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 3 |
| R143 R152 R170 | RES. MF, 1/8W, 1%, 10 | RN55D-10R0F | TRW | 4701-03-1009 | 3 |
| R144 R145 | RES. MF, 1/8W, 1%, 124 | RN55D-1240F | TRW | 4701-03-1240 | 2 |
| R151 | RES. MF, 1/8W, 1%, 3.65K | RN55D-3651F | TRW | 4701-03-3651 | 1 |
| R147 | RES. MF, 1/8W, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 1 |
| R149 | RES. MF, 1/8W, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 1 |
| R141 R142 R146 | RES. MF, 1/8W, 1%, 750 | RN55D-7500F | TRW | 4701-03-7500 | 3 |

WAVETEK
PARTS LIST

TITLE
BUFFER AMP TRI GEN

ASSEMBLY NO.
1208-00-0560

REV
A

PAGE: 1

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|-------------------------|-------------------|-------|--------------|--------|
| R150 | RES. MF, 1/8W, 1%, 7.5K | RN55D-7501F | TRW | 4701-03-7501 | 1 |
| CR33 | DIODE | 1N4581 | MICRO | 4801-01-4581 | 1 |
| CR32 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 1 |
| G45 G48 | TRANS | 2N3563 | FAIR | 4901-03-5630 | 2 |
| G46 G49 | TRANS | 2N3903 | NSC | 4901-03-9030 | 2 |
| G47 G50 | TRANS | 2N5139 | FAIR | 4901-05-1390 | 2 |

WAVETEK
PARTS LIST

TITLE
BUFFER AMP TRI GEN

ASSEMBLY NO.
1208-00-0560


REV
A

PAGE: 2

| | | | | |
|--|--|------|--|------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE PARTS LIST BUFFER AMP TRI GEN | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - .010 ANGLES - 1 XX - .030 | | MODEL NO 172B | DWG NO 1208-00-0560 |
| | DO NOT SCALE DWG | | SCALE | REV A |
| | | | CODE IDENT 23338 | SHEET 1 OF |

NOTE: UNLESS OTHERWISE SPECIFIED

| REV | ECN | BY | DATE | APP |
|-----|----------|-----|---------|-----|
| B | | TLF | 9/22/77 | |
| C | ECN 1700 | ED | 3-23-78 | |

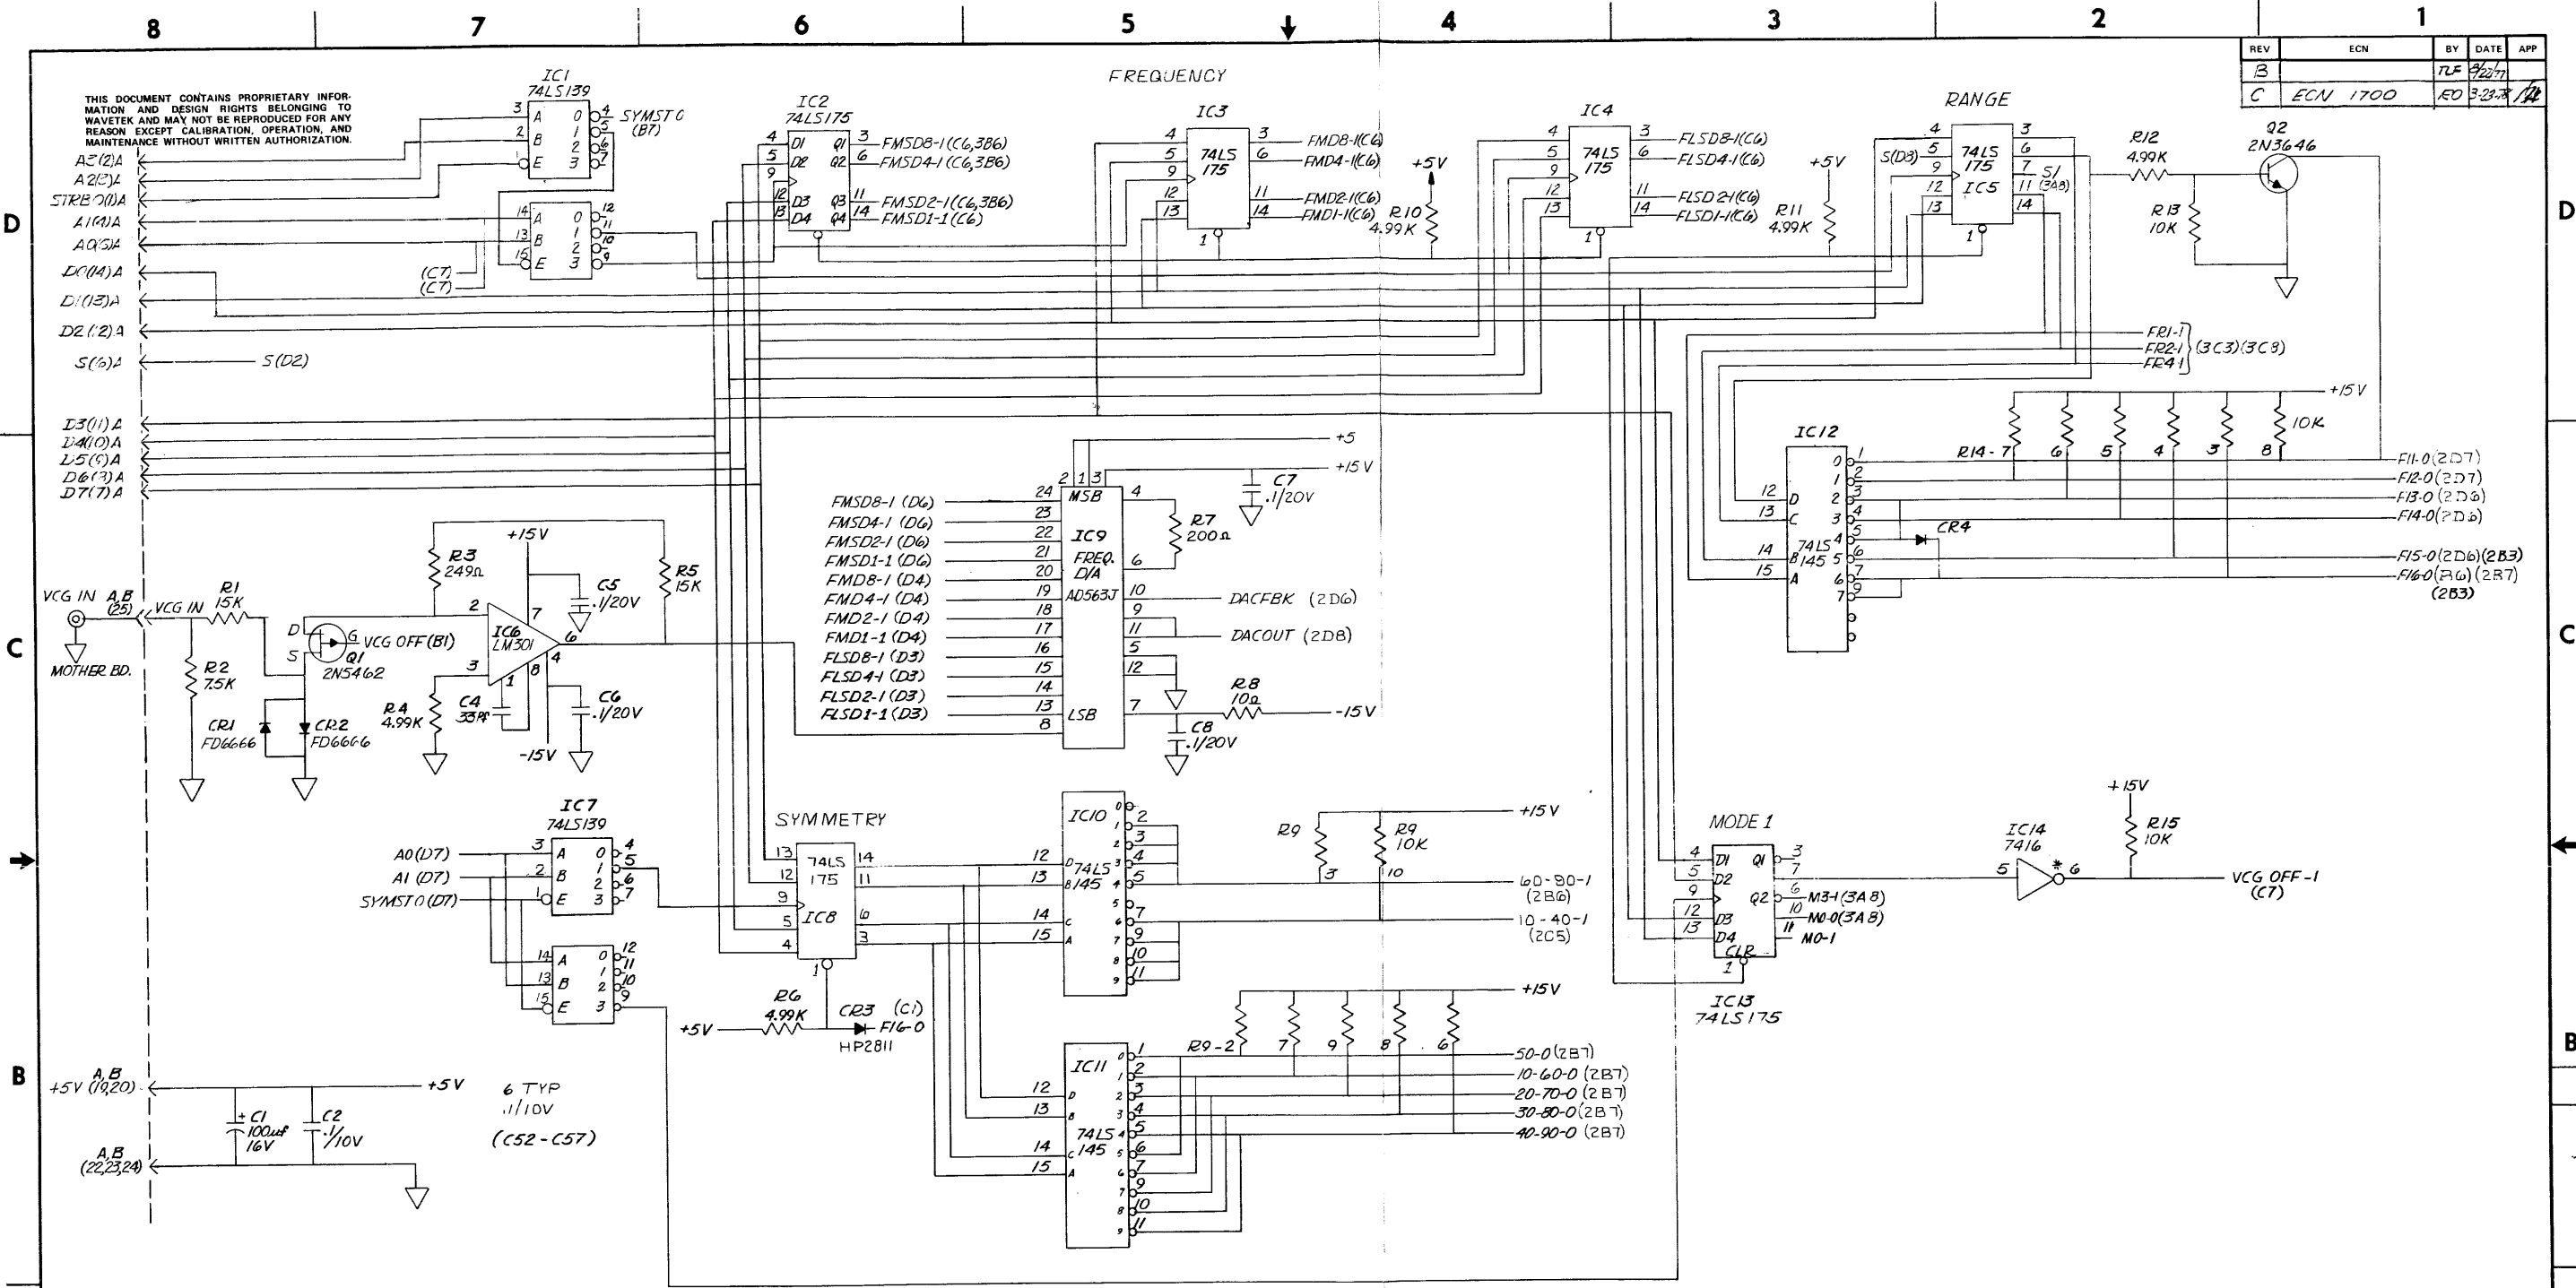

| | | | |
|---|-------|-----------|--------|
| E | *3551 | D. COOPER | 2.1.83 |
| D | #2018 | altman:h | 8-6-79 |

| | | | |
|--|---------------------|--|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN: D. COOPER | DATE: 6-76 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR: S.P. Tom | DATE: 8/17/77 | |
| FINISH: WAVETEK PROCESS | RELEASE APPROV: | TOLERANCE UNLESS OTHERWISE SPECIFIED: XXX : .010 ANGLES : 1° XX : .030 | TITLE: SCHEMATIC, VCG AND SYMMETRY |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0711 |
| | | CODE IDENT: 23338 | REV: E |
| | | | SHEET 1 OF 3 |


LAST REF. DES. USED: T1, R133, C60, Q41, CR17, IC41, TP5, FB3

* = NOMINAL VALUE CALLED OUT ON PARTS LIST

NOTE: UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|

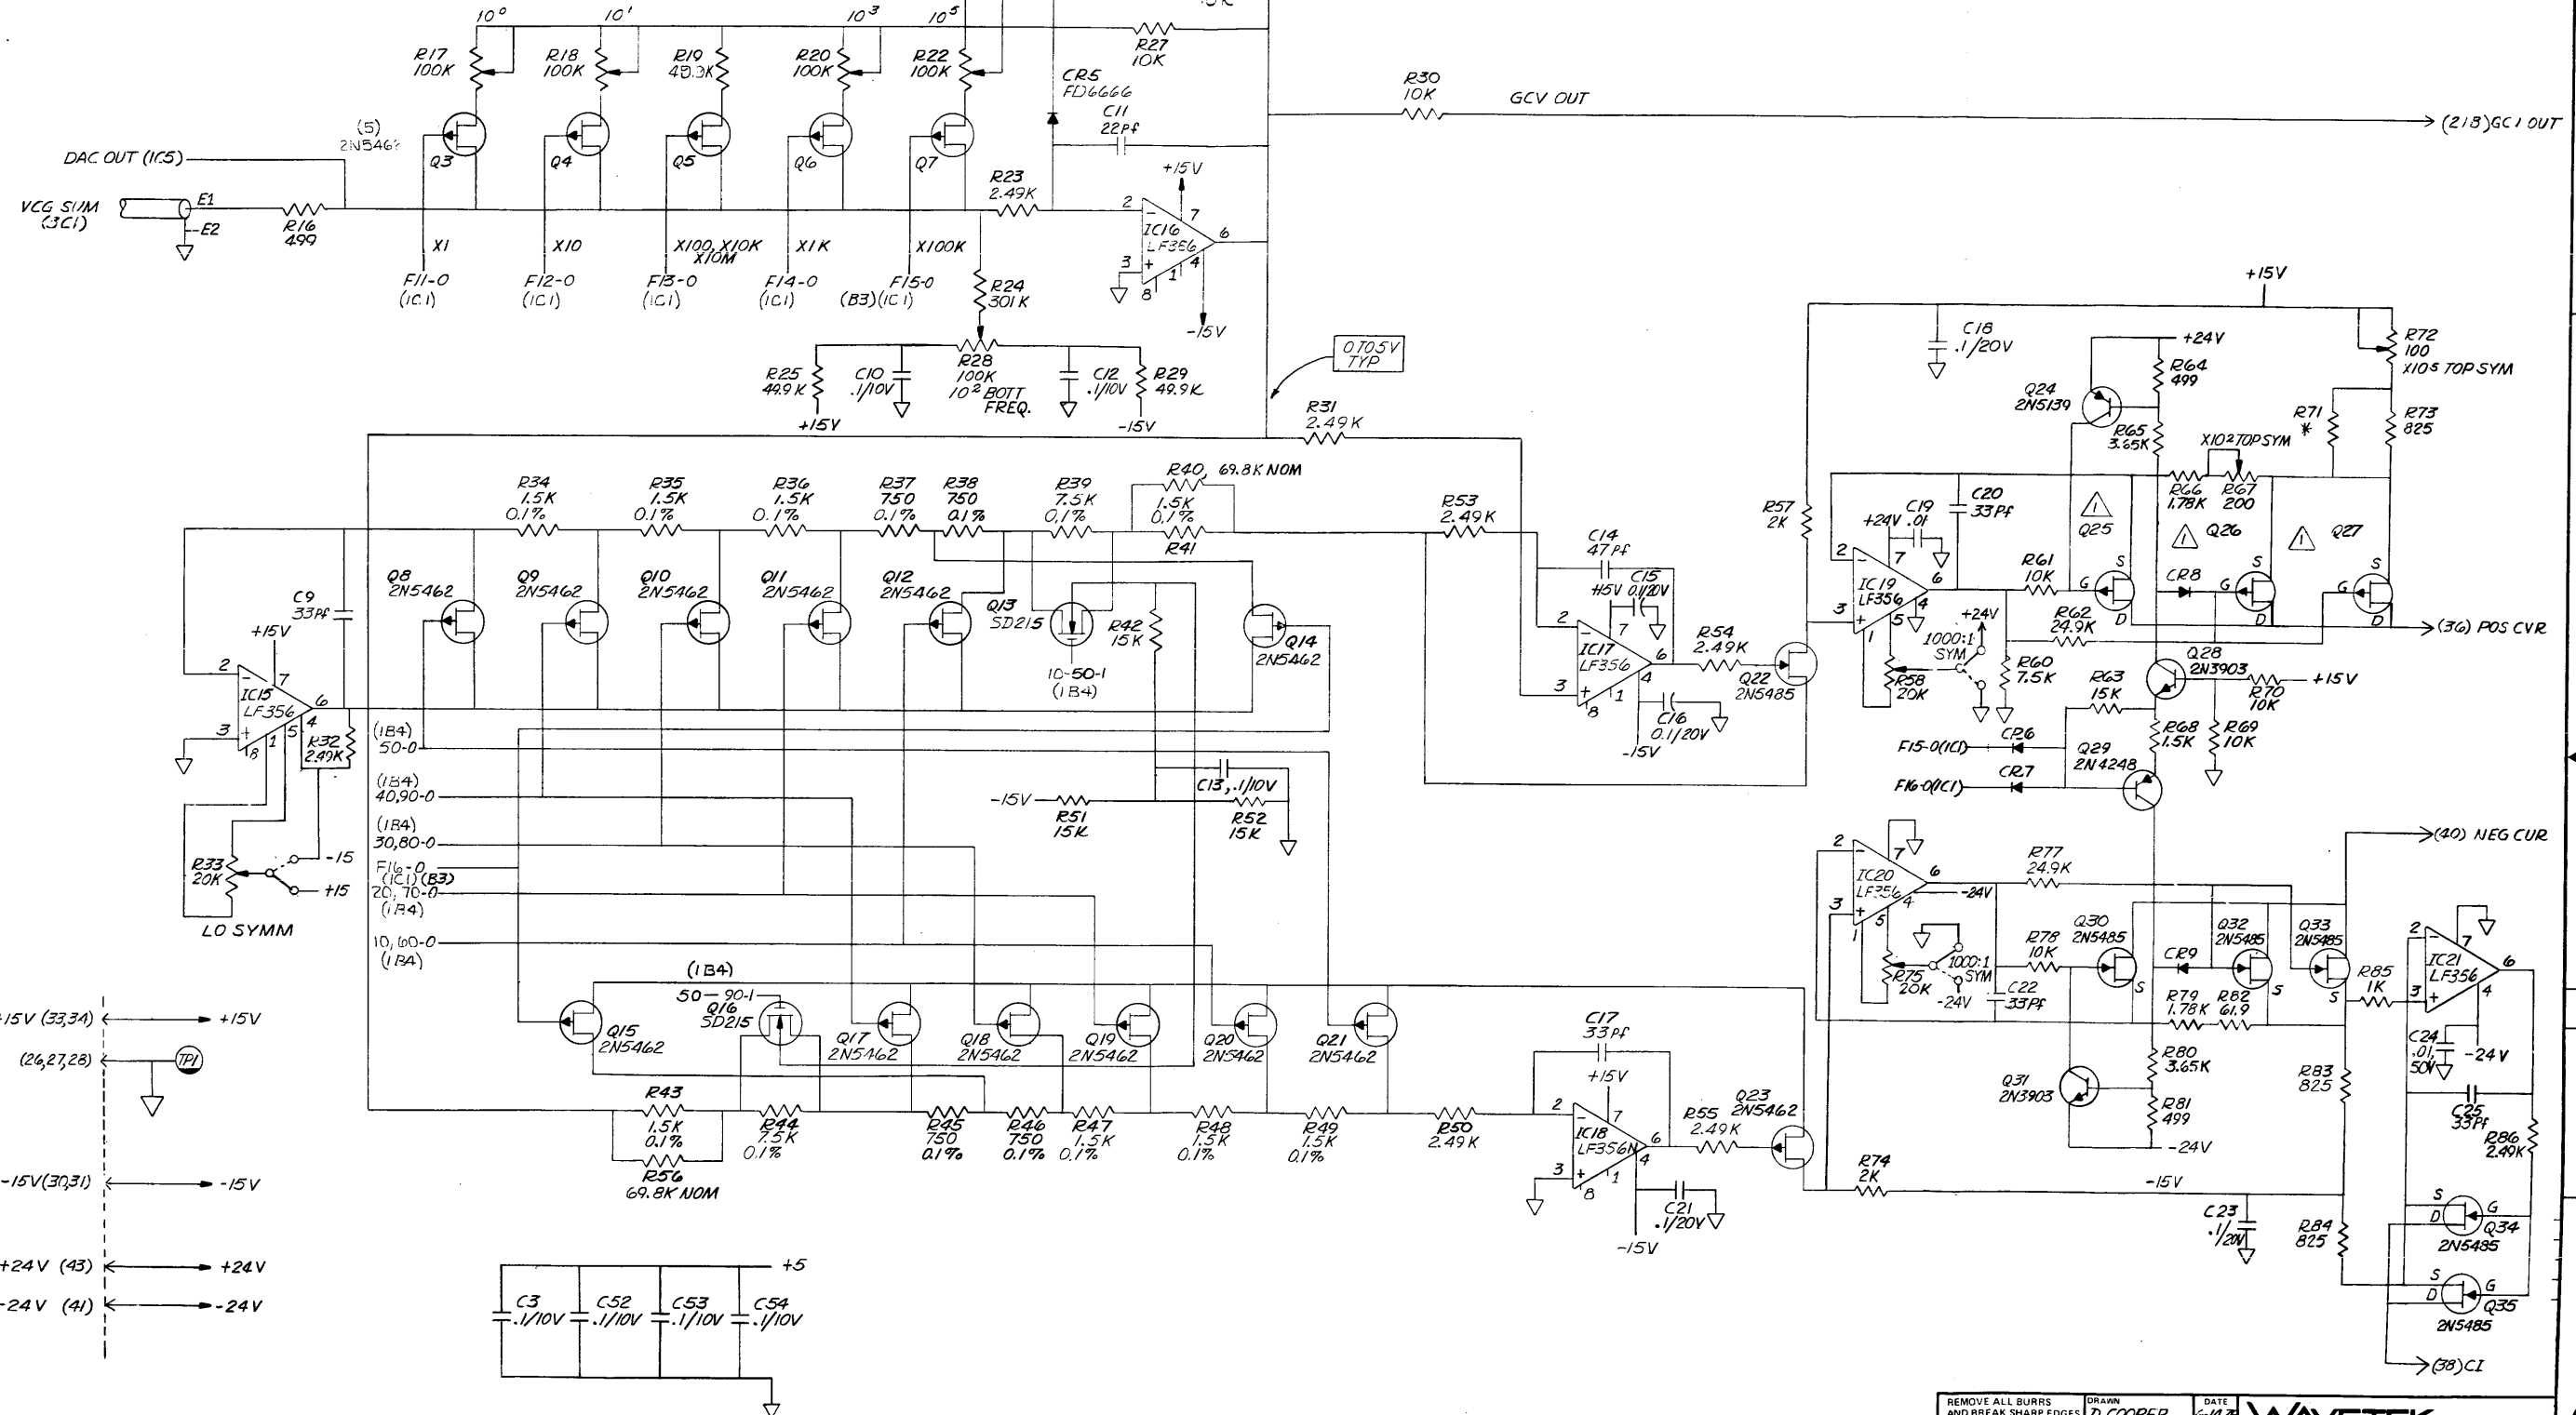

LAST REF. DES. USED:


T1, R133, C60, Q41, CR17, IC41, TP5, FB3

NOTE: UNLESS OTHERWISE SPECIFIED Δ 4998 00-0040

2. R34, R35, R36, R37, R38, R39, R41, R43, R44, R45, R47, R48, R46, AND R49 PRECISION .1% RESISTORS

| | | | |
|--|---|------------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 6-14-78 | |
| MATERIAL | PROJ ENGR Tom Salza | SEPT 8'77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TITLE SCHEMATIC - VCG & SYMMETRY |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XX - .010 ANGLES - 1 XX - .030 | DO NOT SCALE DWG | MODEL NO |
| | SCALE | | DWG NO 0103-00-0711 |
| | | | REV E |
| | | | CODE IDENT 23338 |
| | | | SHEET 2 OF 3 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

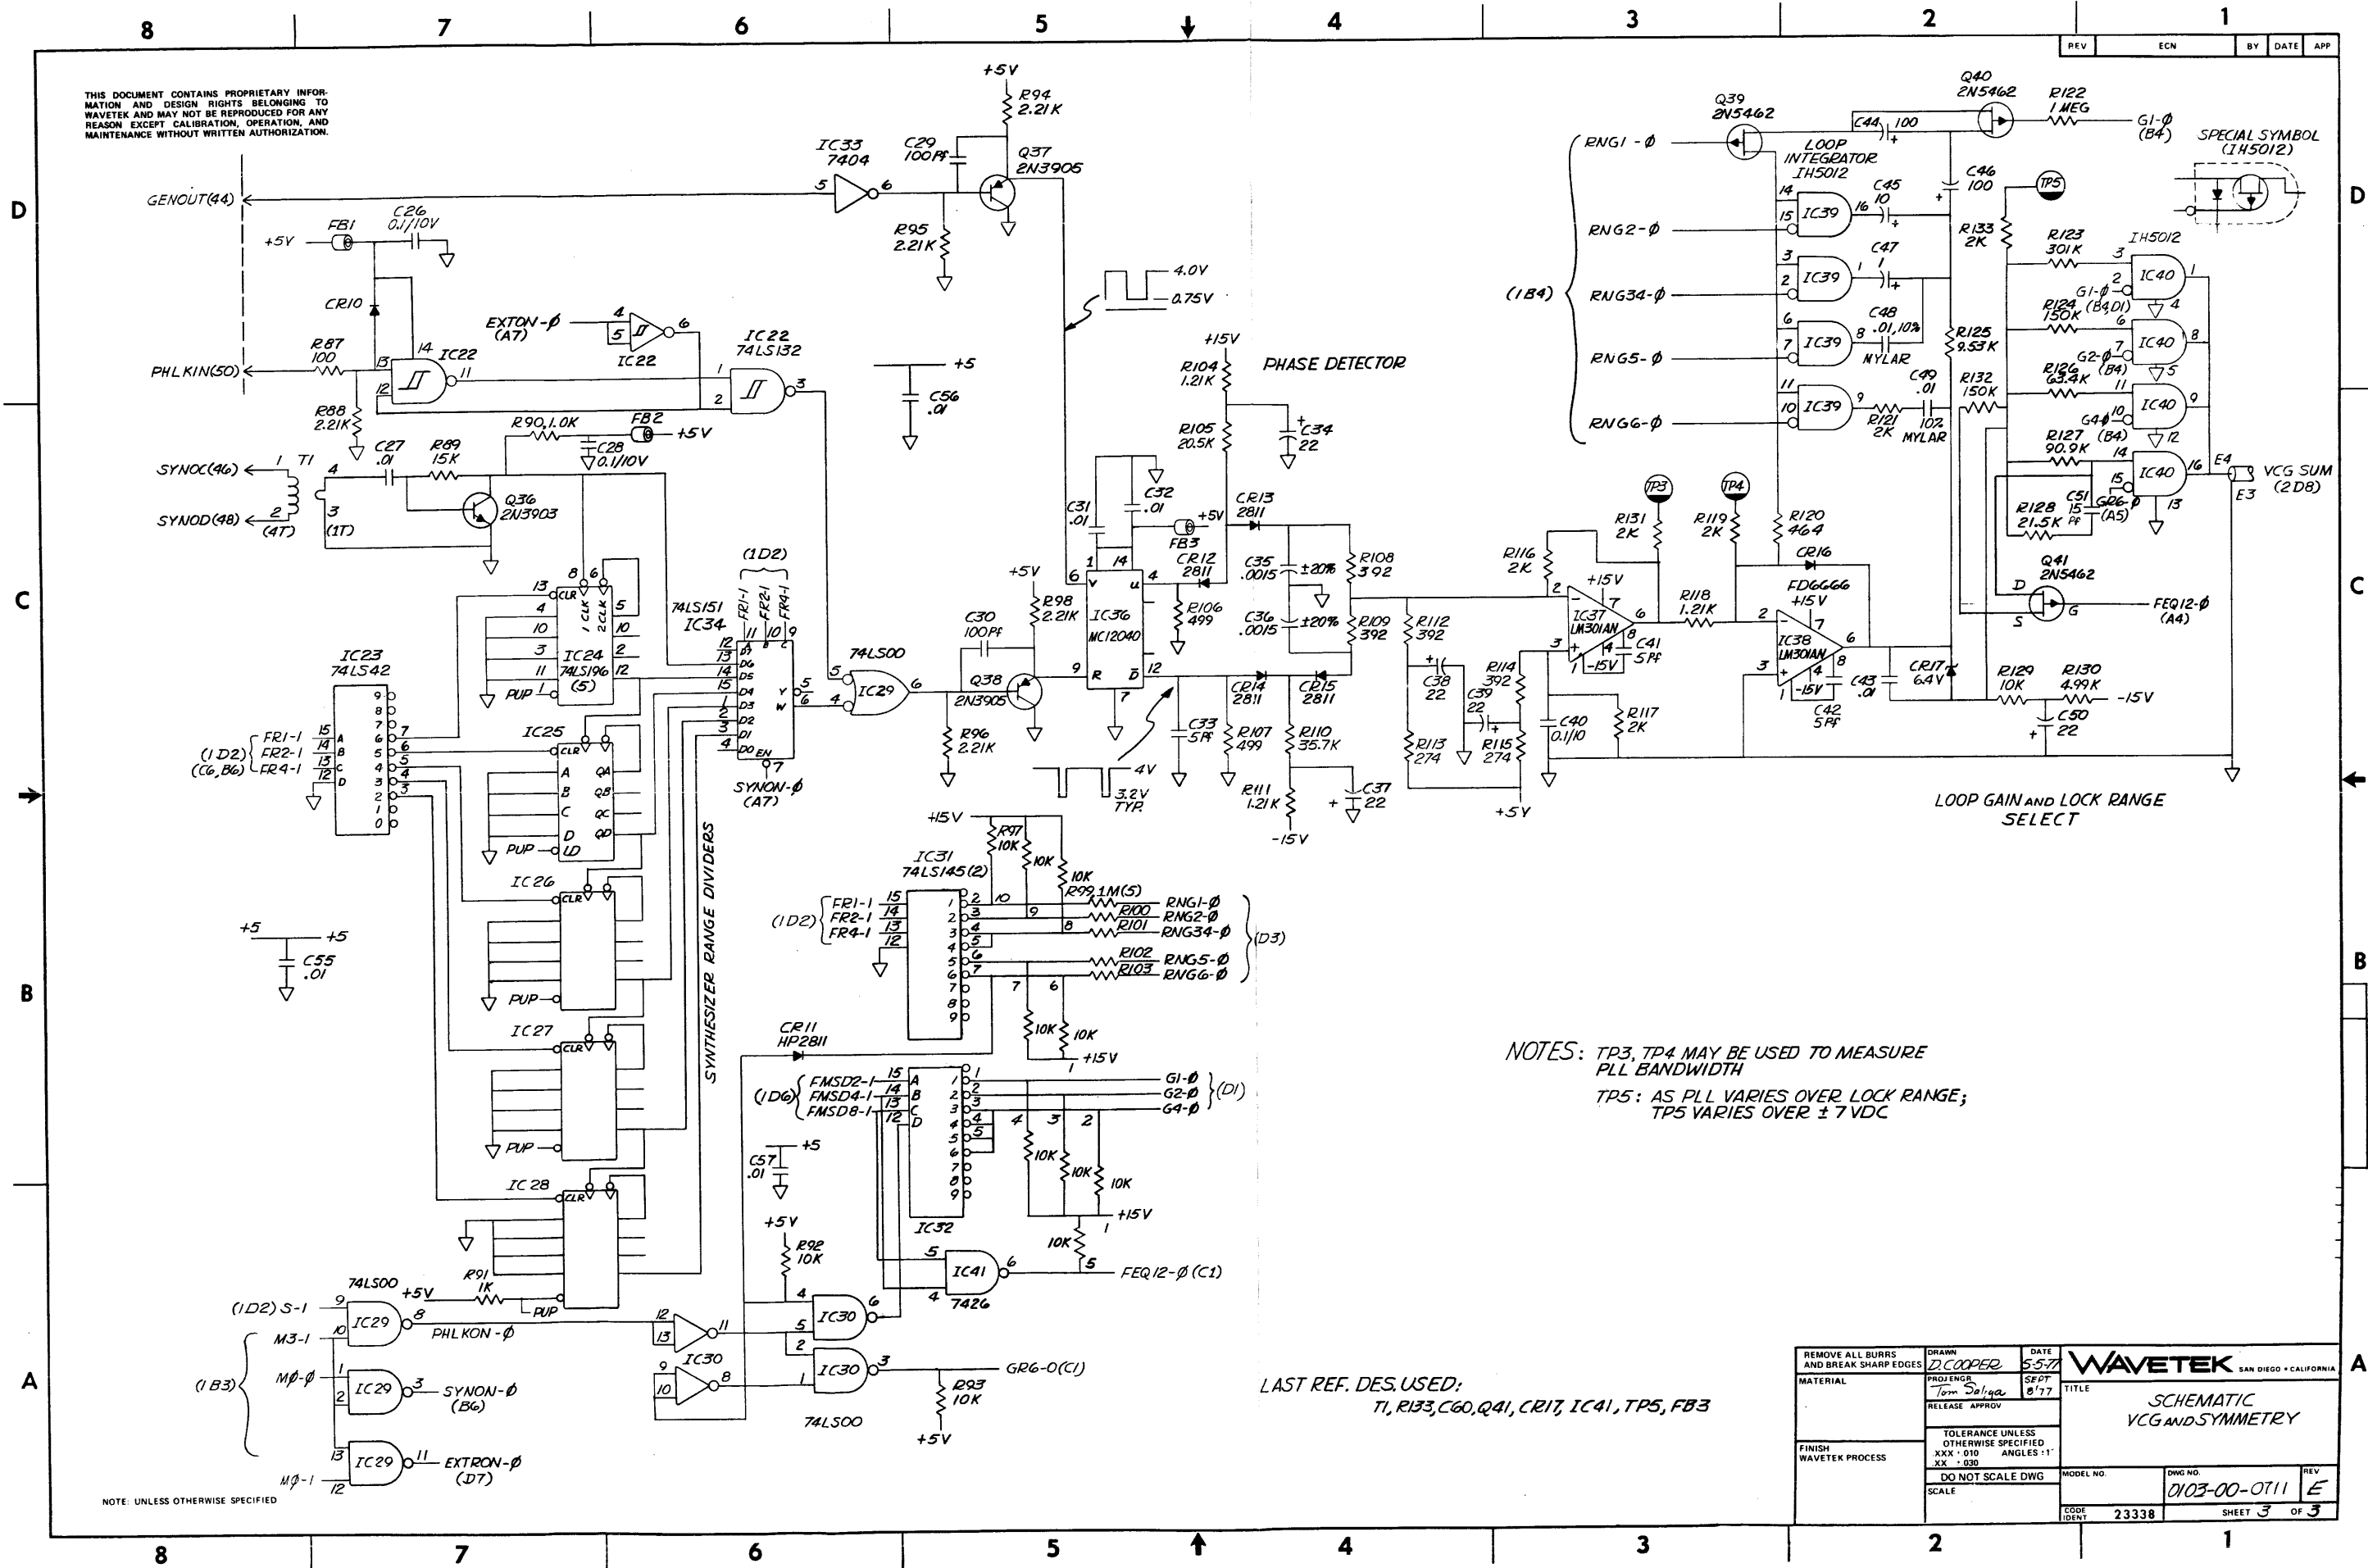


NOTES: TP3, TP4 MAY BE USED TO MEASURE PLL BANDWIDTH
 TP5: AS PLL VARIES OVER LOCK RANGE; TP5 VARIES OVER ± 7 VDC

LAST REF. DES. USED:
 T1, R133, C60, Q41, CR17, IC41, TP5, FB3

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | | |
|---|--|-----------------------|----------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | | DRAWN D. COOPER | DATE 5-5-77 | |
| MATERIAL | | PROFNGR Tom Saliga | SEPT 8/77 | |
| FINISH WAVETEK PROCESS | | RELEASE APPROV | | TITLE SCHEMATIC VCG AND SYMMETRY |
| TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1° XX - 030 | | DO NOT SCALE DWG | | MODEL NO. D103-00-0111 |
| SCALE | | REV E | | REV E |
| CODE IDENY | | 23338 | | SHEET 3 OF 3 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

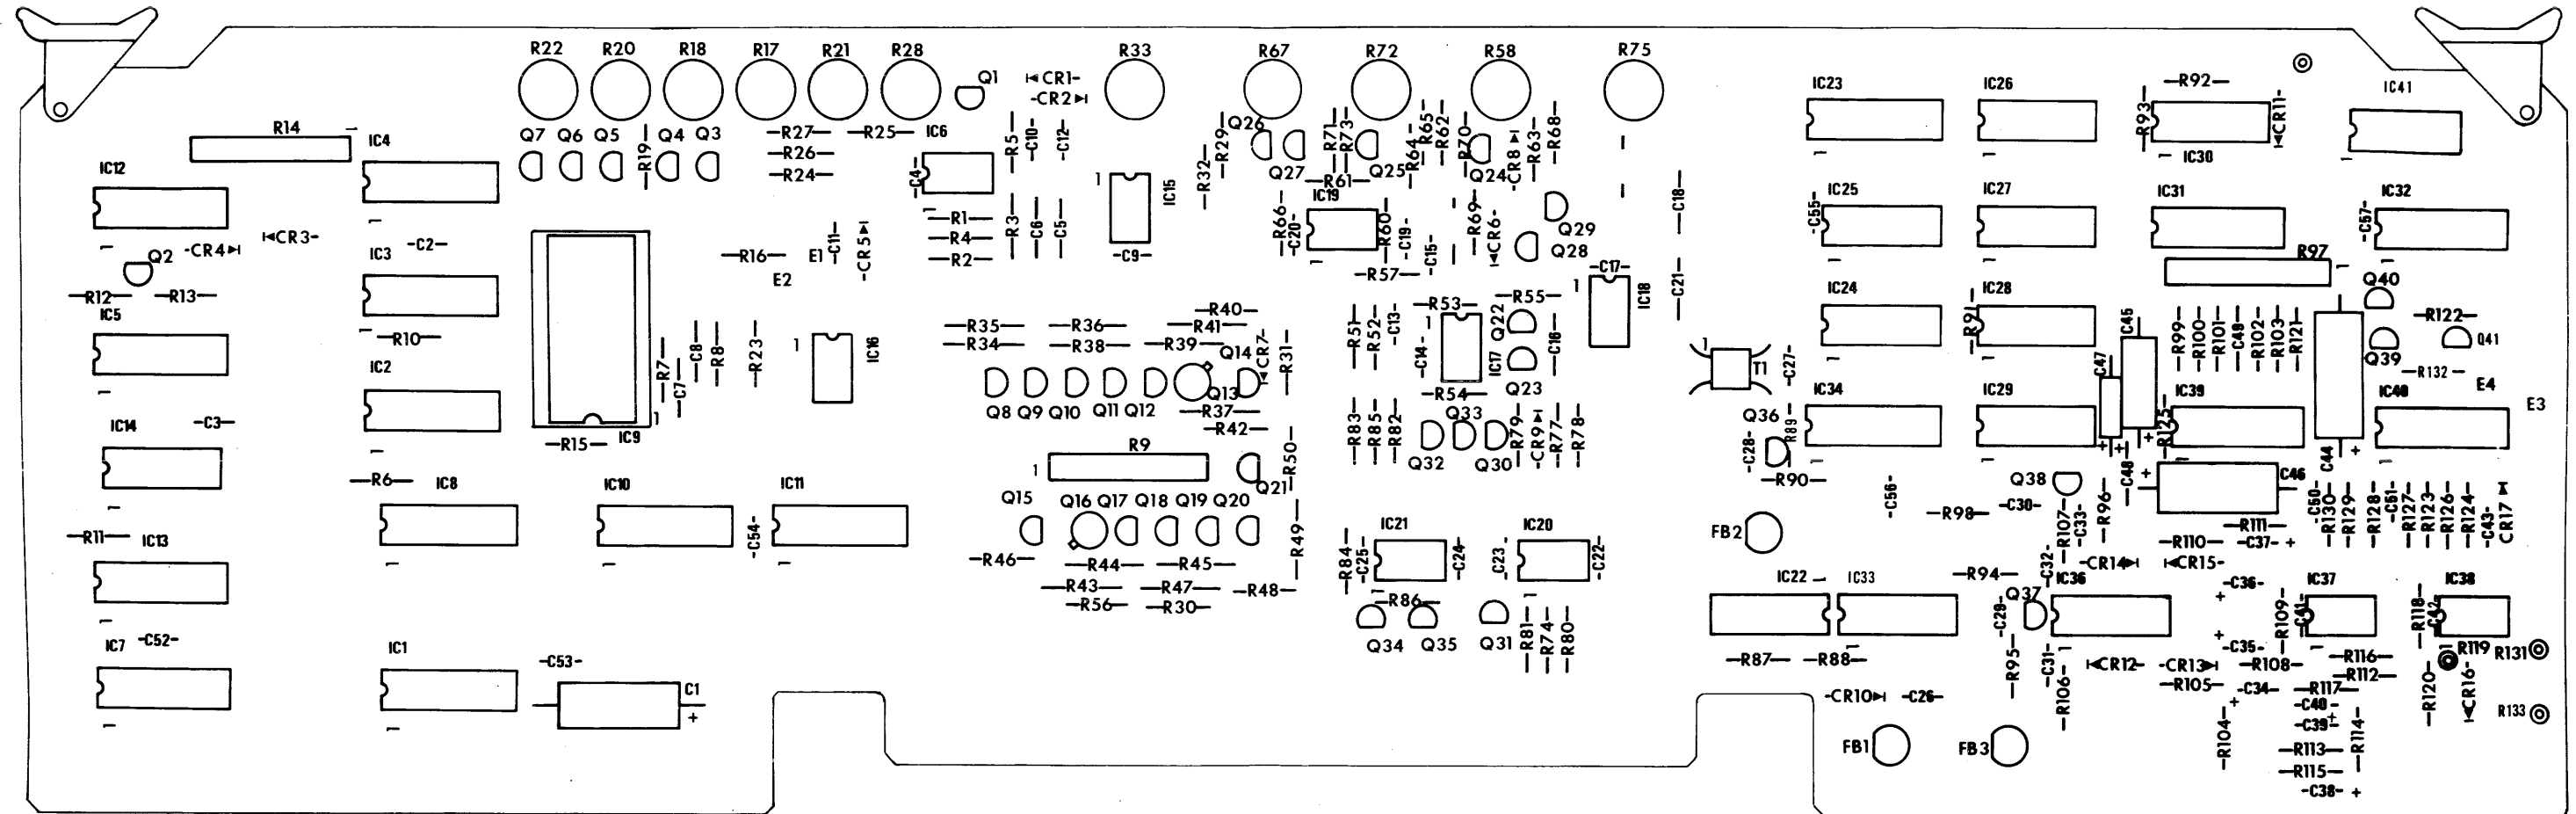

1100-00-0711

| | | | | |
|--|----------------|--------------|--|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA TITLE VCG & SYMMETRY PGA | |
| MATERIAL | PROJ ENGR | | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 DO NOT SCALE DWG | |
| | SCALE | | | |
| | MODEL NO | DWG NO | REV | |
| | 172B | 0101-00-0711 | | |
| CODE IDENT | 23338 | SHEET | 1 OF 1 | |

8

7

6

5

4

3

2

1

REV ELN BY DATE APP

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

Table with 3 columns of parts lists. Each column contains reference designators, part descriptions, and quantities. Includes headers like 'REFERENCE DESIGNATORS', 'PART DESCRIPTION', 'ORIG-MFGR-PART-NO', 'MFGR', 'WAVETEK NO.', and 'QTY/PT'. Includes 'WAVETEK PARTS LIST' logos and assembly information at the bottom of each column.

Table with 3 columns of parts lists. Each column contains reference designators, part descriptions, and quantities. Includes headers like 'REFERENCE DESIGNATORS', 'PART DESCRIPTION', 'ORIG-MFGR-PART-NO', 'MFGR', 'WAVETEK NO.', and 'QTY/PT'. Includes 'WAVETEK PARTS LIST' logos and assembly information at the bottom of each column.

Engineering drawing header block containing: REMOVE ALL BURRS AND BREAK SHARP EDGES, DRAWN, DATE, MATERIAL, PROJ ENGR, TITLE, FINISH WAVETEK PROCESS, TOLERANCE UNLESS OTHERWISE SPECIFIED, DO NOT SCALE DWG, SCALE, MODEL NO. 172B, DWG NO. 1100-00-0711, REV F, SHEET 1 OF 2.

NOTE: UNLESS OTHERWISE SPECIFIED

8

7

6

5

4

3

2

1

BISHOP GRAPHICS/ACCPRESS RECORDER NO. A 354

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFOR-PART-NO | MFOR | WAVETEK NO. | QTY/PT |
|-----------------------------|------------------|-------------------|------|--------------|--------|
| IC24 IC25 IC26 IC27 IC28 | IC | 74LS196 | SIQ | 8007-41-9610 | 5 |




| | | | |
|------------------------------|----------------------|---|----------|
| WAVETEK PARTS LIST | TITLE PCA: VCG BD | ASSEMBLY NO. 1100-00-0711 PAGE: 7 | REV F |
|------------------------------|----------------------|---|----------|

| | | | | |
|--|------------------|-----------|--|-----|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE PARTS LIST PCA, VCG BD | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | |
| | DO NOT SCALE DWG | MODEL NO. | DWG NO. | REV |
| SCALE | | 172B | 1100-00-0711 | F |
| | CODE IDENT | 23338 | SHEET 2 OF 2 | |

NOTE UNLESS OTHERWISE SPECIFIED

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|---|-----|---------|-----|
| D | R3 WAS 2K, ICC2-8A15 WERE COMMON, "SEL-1" WAS "MDIOS" | TJF | 6/13/77 | |

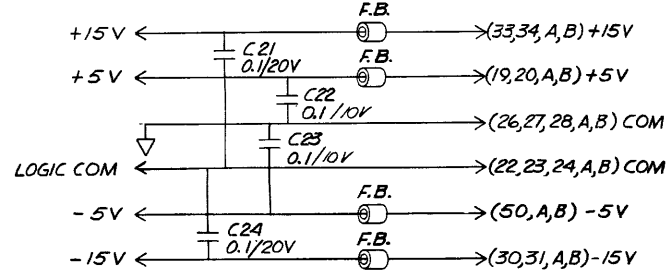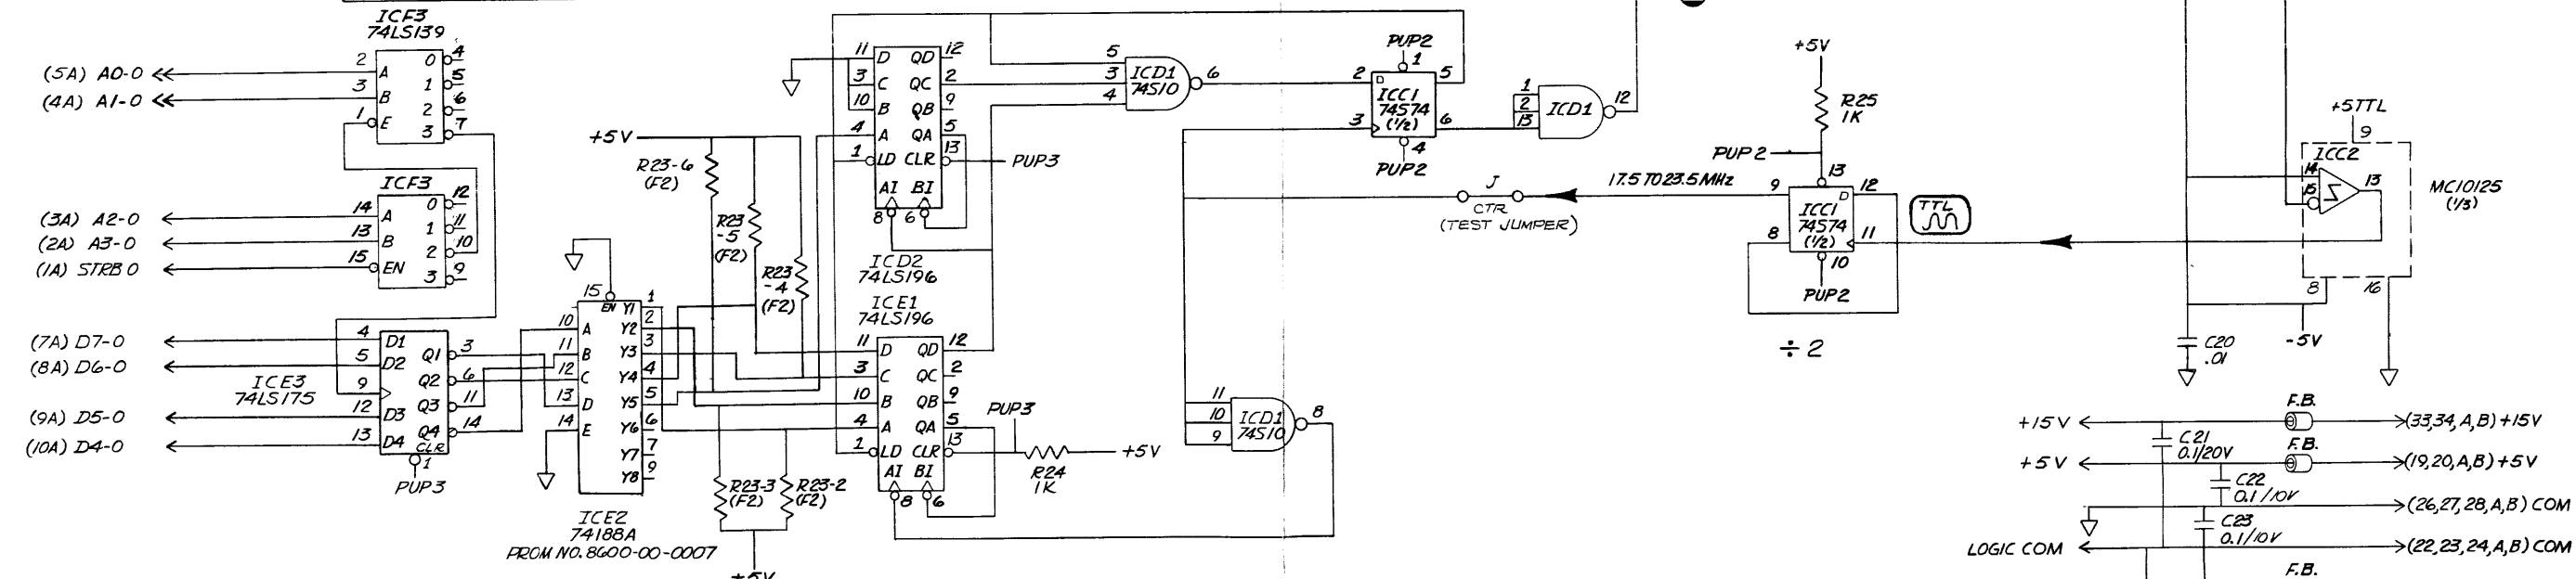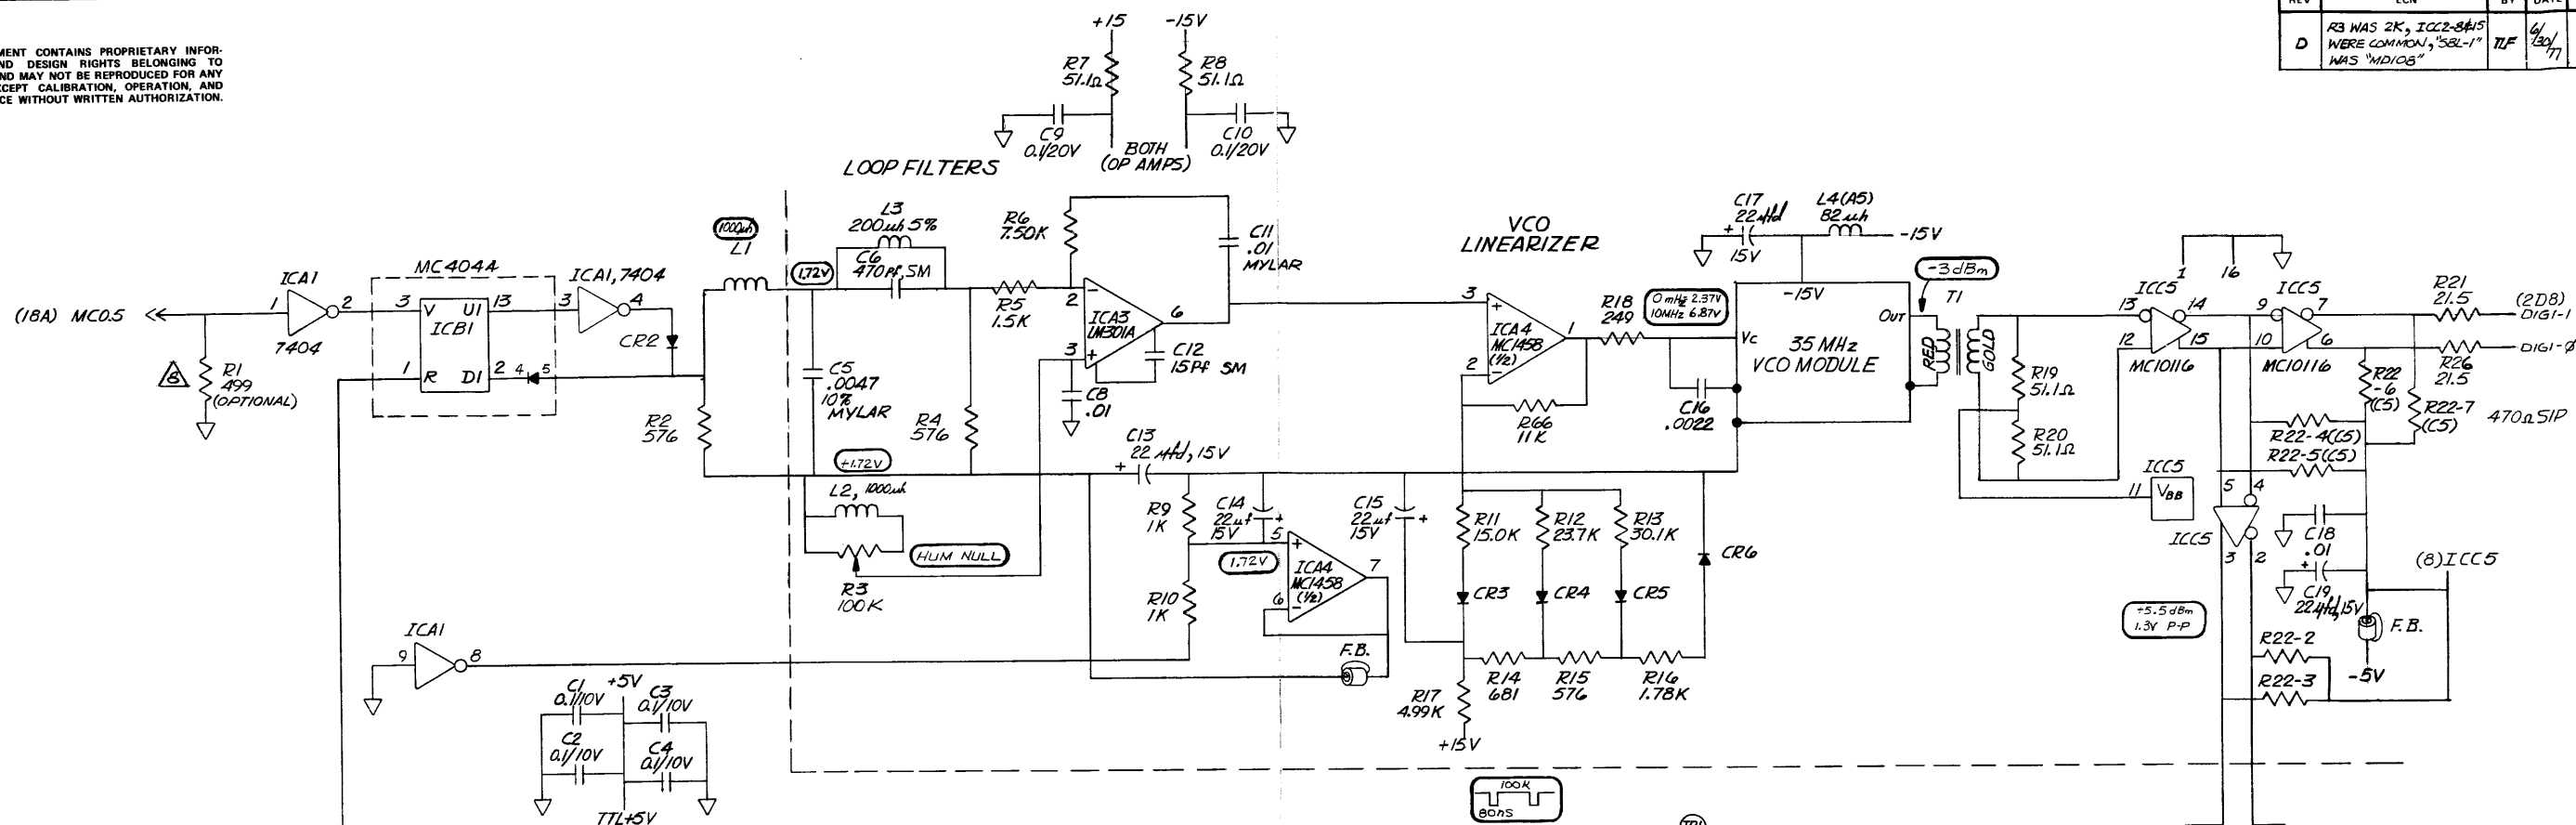



- ⚠ R1 (499Ω) IS OPTIONAL, "DO NOT INSTALL".
- ⚠ R54 AND R55 (78.7Ω) ARE OPTIONAL, "DO NOT INSTALL".
- 6. LAST REFERENCE DESIGNATORS USED:
L14, T1, CR6, R66, C54
- 5. COIL FORMS; CAMBION 2173-X-3; X=2 FOR <20Mc, X=3 FOR >20Mc
- 4. FERRITE BEADS (REF. DES. "F.B.") NO. 56-590-65/3B
- 3. ALL RESISTORS IN OHMS; 1/BW, 1%
- 2. ALL CAPACITORS ARE MICROFARADS
- 1. ALL DIODES ARE FD6666

DIG 1/MIXER PCB
DIGIT 1 SUBSYS.

| | | | |
|--|------------------------|--|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 7.6.76 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROLENGR Tom Saliga | DATE SEPT 7'77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES 1:1 XX - 030 | TITLE SCHEMATIC DIG 1/MIXER PCB. |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0706 |
| | | CODE IDENT 23338 | REV D |
| | | | SHEET 1 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| | | | | |
|-----|-----|----|------|-----|
| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|

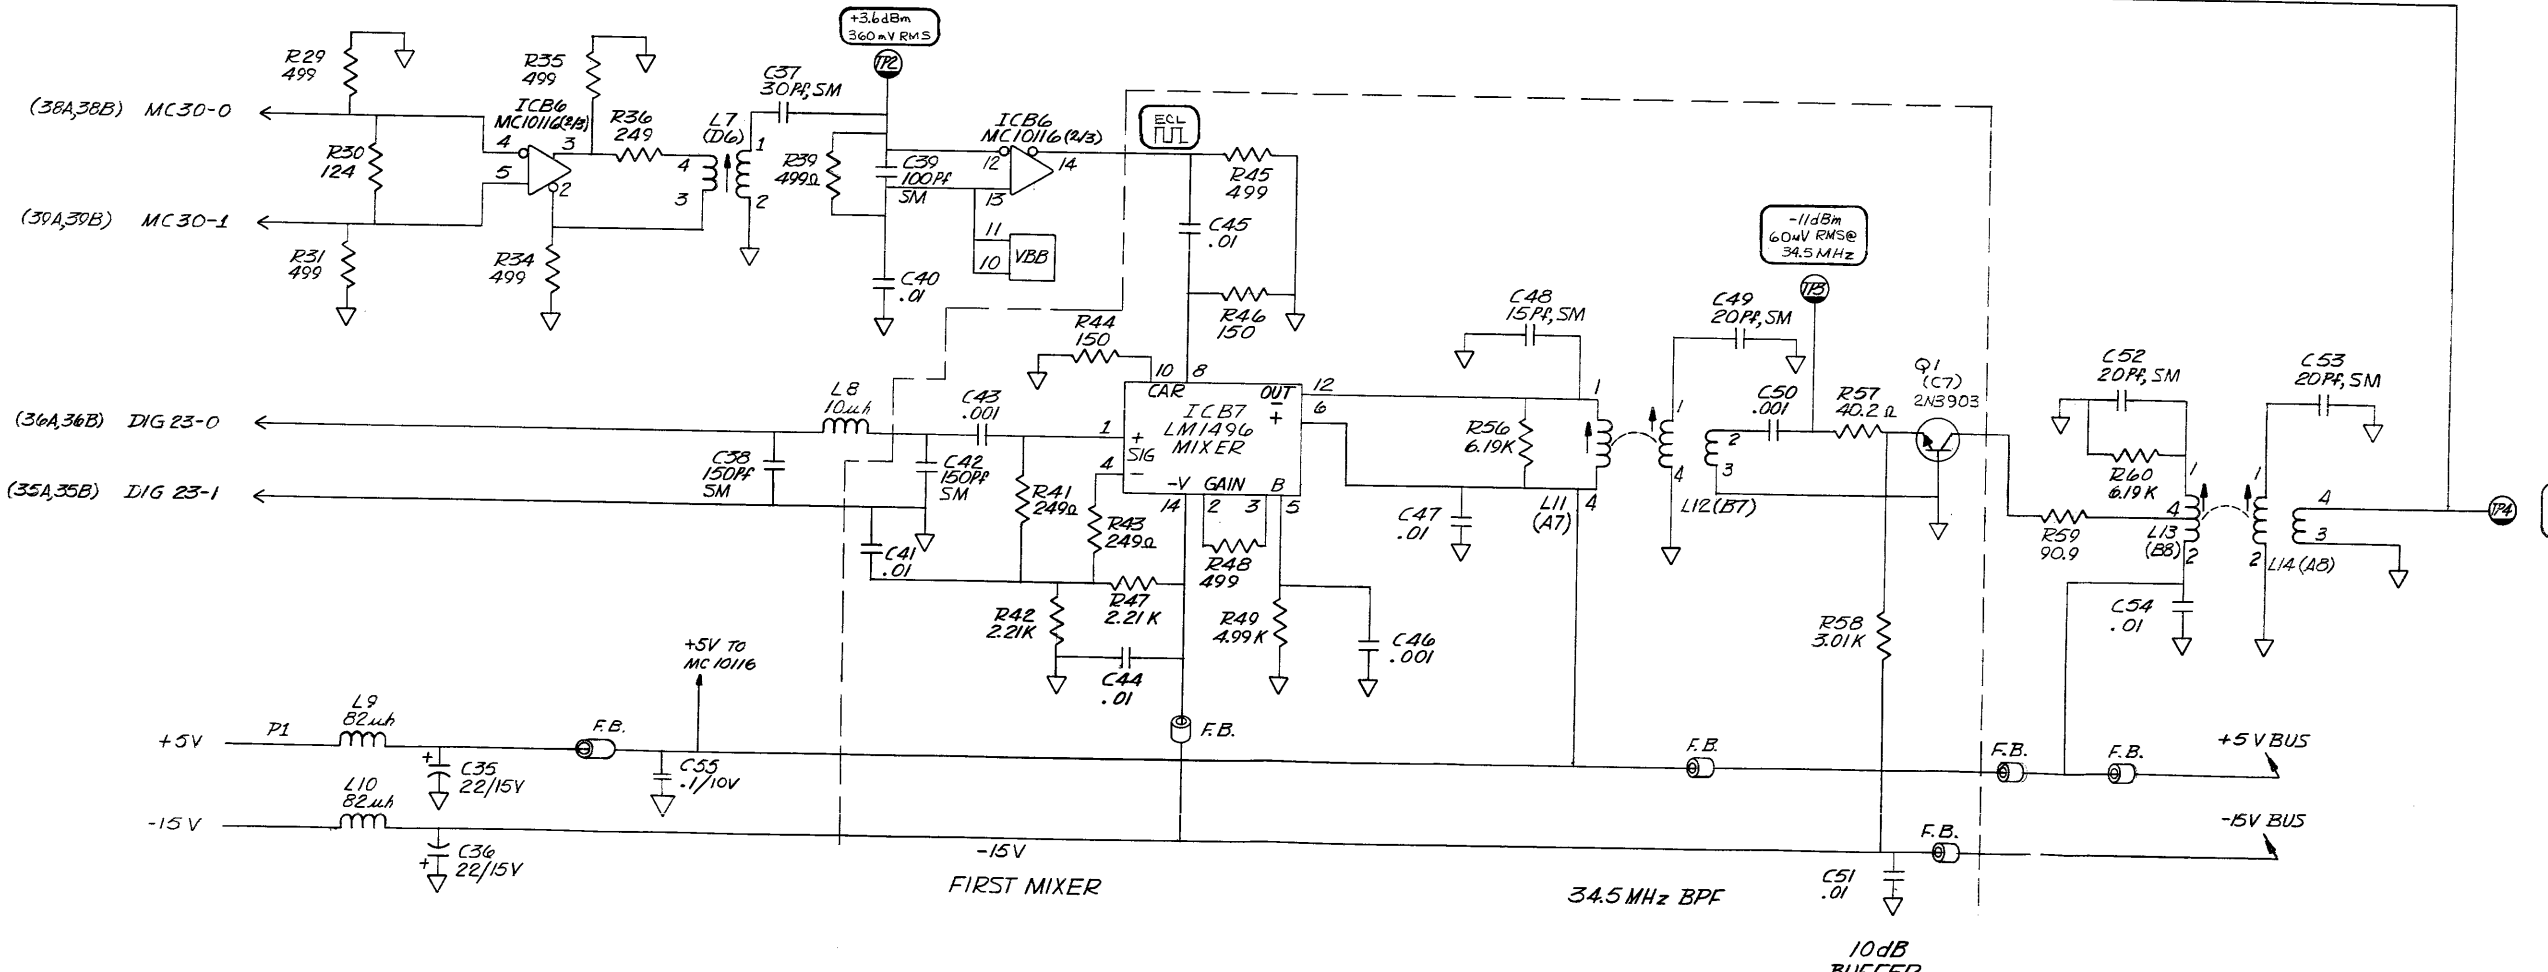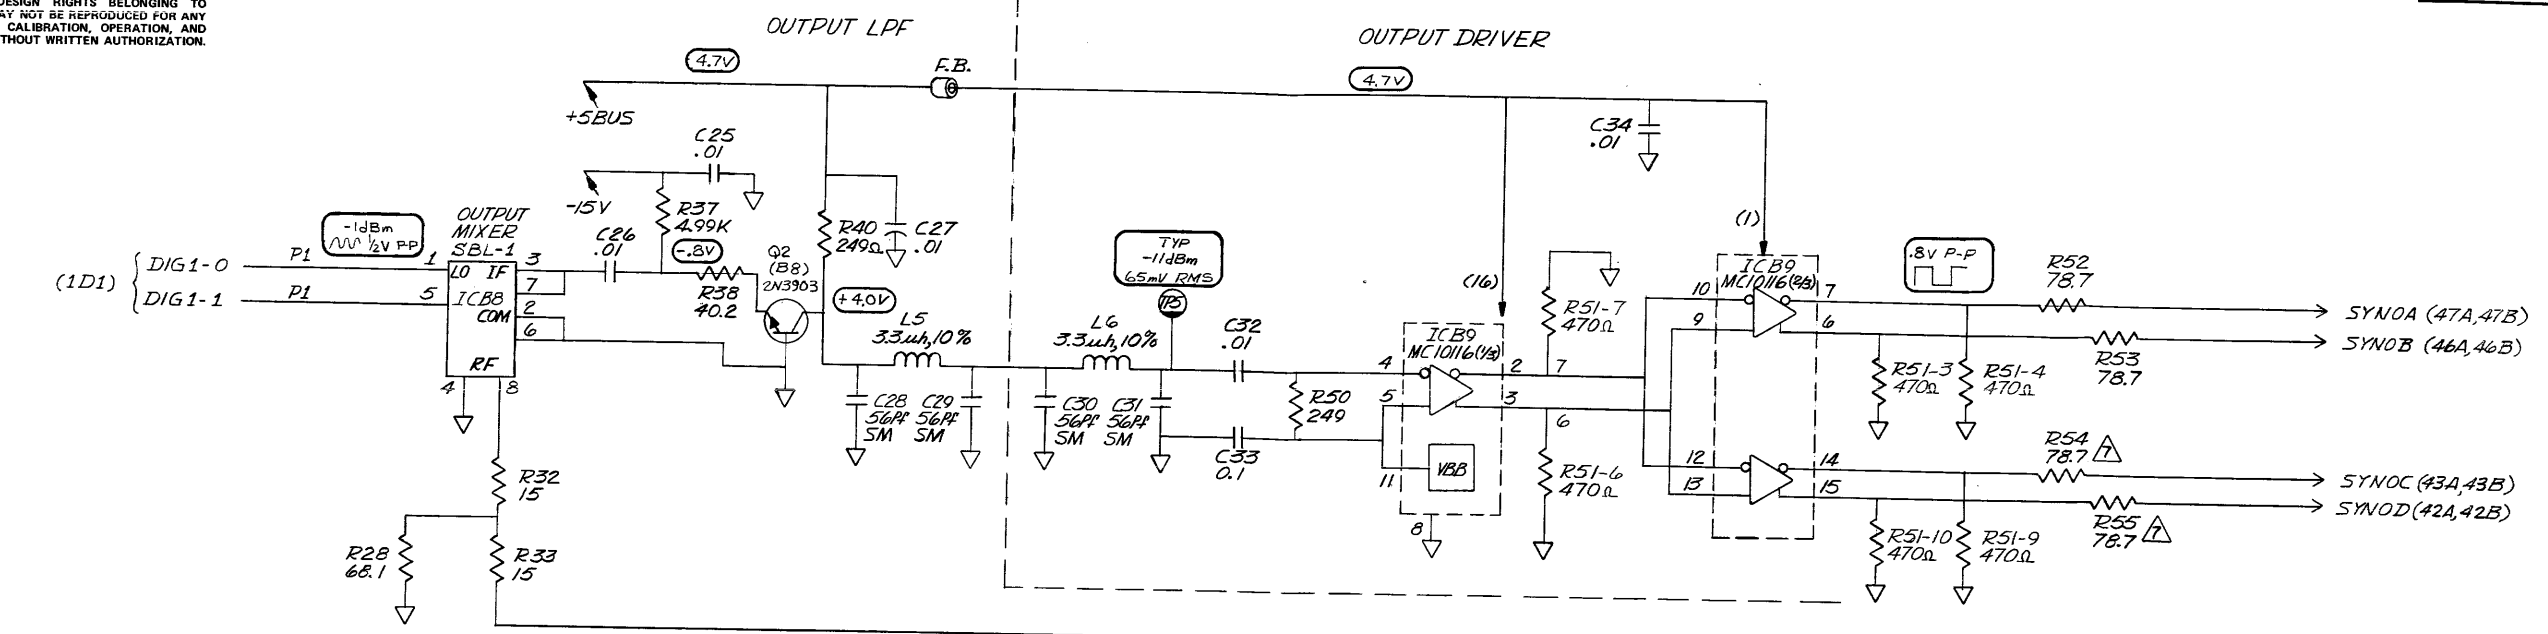


DIG 1/MIXER PCB.
MIXER AND LPF SUBSYS.

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|------------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 76-76 | SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJENGR Ibn Delige | DATE SEPT 7 '77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ±.010 ANGLES 1:1 XX .030 | TITLE SCHEMATIC DIG 1/MIXER PCB. |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. 0103-00-0706 |
| | | REV ID | REV ID |
| | | CODE IDENT 23338 | SHEET 2 OF 2 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

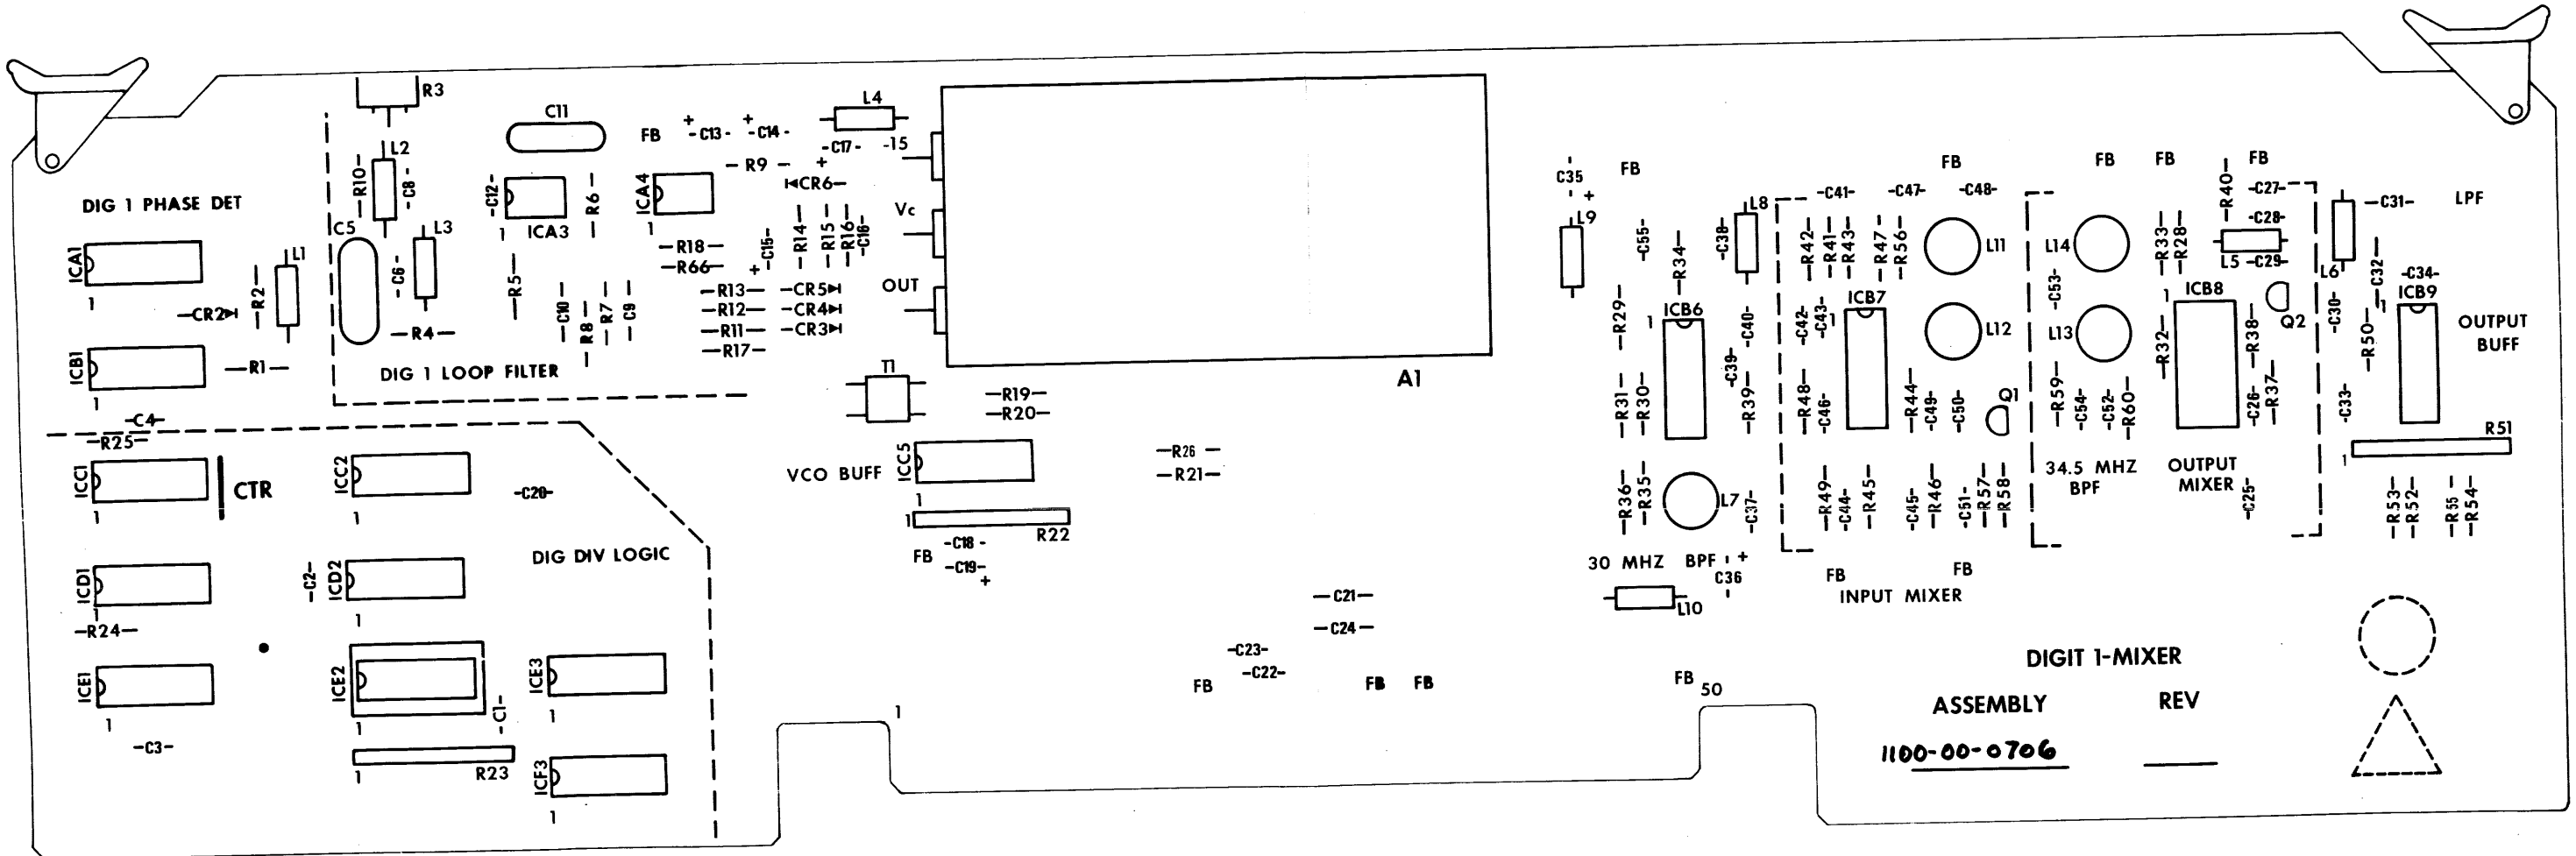

1100-00-0706

| | | | | |
|--|-----------|------------------|--|--------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | | DATE | WAVETEK SAN DIEGO - CALIFORNIA | |
| MATERIAL | PROJ/ENGR | TITLE | DIGIT 1 / MIXER PCA | |
| FINISH WAVETEK PROCESS | | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | |
| SCALE | | DO NOT SCALE DWG | MODEL NO | DWG NO |
| | | | 172 B | 0101-00-0706 |
| EDGE IDENT | | 23338 | SHEET 1 OF 1 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|-------------------|-------|--------------|---|-----------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG, DIGIT 1 | 0101-00-0706 | WVTK | 0101-00-0706 | 1 | NONE | STANDOFF | SS5368-3C-5A | UNICP | 2800-05-6114 | 5 |
| NONE | SCHEMATIC, DIGIT 1 | 0103-00-0706 | WVTK | 0103-00-0706 | 1 | NONE | PC BD EJECTOR | 103 ORANGE | CALMK | 2800-07-0011 | 2 |
| T1 | TRANSFORMER | 172-537 | WVTK | 1204-00-0537 | 1 | NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 13 |
| L7 | COIL, 30MC BPF | 172-545 | WVTK | 1204-00-0545 | 1 | NONE | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 13 |
| L11 | COIL, 35MC BPF | 172-546 | WVTK | 1204-00-0546 | 1 | R3 | POT, TRIM, 100K | 91AR100K | BECK | 4600-01-0402 | 1 |
| L12 | COIL, 35MC BPF | 172-547 | WVTK | 1204-00-0547 | 1 | R10 R24 R25 R9 | RES, MF, 1/8W, 1%, 1K | RN55D-1001F | TRW | 4701-03-1001 | 4 |
| L13 | COIL, 35MC BPF | 172-548 | WVTK | 1204-00-0548 | 1 | R66 | RES, MF, 1/8W, 1%, 11K | RN55D-1102F | TRW | 4701-03-1102 | 1 |
| L14 | COIL, 35MC BPF | 172-549 | WVTK | 1204-00-0549 | 1 | R30 | RES, MF, 1/8W, 1%, 124 | RN55D-1240F | TRW | 4701-03-1240 | 1 |
| A1 | 35/40 MHZ VCO MODULE | 172-519 | WVTK | 1206-00-0519 | 1 | R44 R46 | RES, MF, 1/8W, 1%, 150 | RN55D-1500F | TRW | 4701-03-1500 | 2 |
| NONE | SHIELD | 1400-00-6171 | WVTK | 1400-00-6171 | 3 | R5 | RES, MF, 1/8W, 1%, 1.5K | RN55D-1501F | TRW | 4701-03-1501 | 1 |
| NONE | SHIELD | 1400-00-6181 | WVTK | 1400-00-6181 | 1 | R11 | RES, MF, 1/8W, 1%, 1.5K | RN55D-1502F | TRW | 4701-03-1502 | 1 |
| NONE | SHIELD, SYNTH | 1400-00-6193 | WVTK | 1400-00-6193 | 1 | R32 R33 | RES, MF, 1/8W, 1%, 15 | RN55D-15R0F | TRW | 4701-03-1509 | 2 |
| C43 C46 C50 | CAP, CER, .001MF, 1KV | DD-102 | CRL | 1500-01-0211 | 3 | R16 | RES, MF, 1/8W, 1%, 1.78K | RN55D-1781F | TRW | 4701-03-1781 | 1 |
| C18 C20 C25 C26 C27 C32 C34 C40 C41 C44 C45 C47 C51 C54 C8 | CAP, CER, MN, .01MF, 50V | CAC02Z5U103Z100A | CORNG | 1500-01-0310 | 15 | R21 R26 | RES, MF, 1/8W, 1%, 21.5 | RN55D-21R5F | TRW | 4701-03-2159 | 2 |
| C1 C10 C2 C21 C22 C23 C24 C3 C33 C4 C53 C9 | CAP, CER, MDN, .1MF, 50V | CAC03Z5U104Z050A | CORNG | 1500-01-0405 | 12 | R42 R47 | RES, MF, 1/8W, 1%, 2.21K | RN55D-2211F | TRW | 4701-03-2211 | 2 |
| C16 | CAP, CER, .0022, 1KV | DD-222SLL | CRL | 1500-02-2201 | 1 | R12 | RES, MF, 1/8W, 1%, 23.7K | RN55D-2372F | TRW | 4701-03-2372 | 1 |
| | | | | | | R18 R36 R40 R41 R43 | RES, MF, 1/8W, 1%, 249 | RN55D-2490F | TRW | 4701-03-2490 | 6 |
| WAVETEK PARTS LIST TITLE: PCA, DIGIT 1 ASSEMBLY NO. 1100-00-0706 PAGE: 1 REV F | | | | | WAVETEK PARTS LIST TITLE: PCA, DIGIT 1 ASSEMBLY NO. 1100-00-0706 PAGE: 3 REV F | | | | | | |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT | |
|---|-------------------------|-------------------|-------|--------------|---|--------------------------------|--------------------------|-------------------|-------|---|--------|-----------------------|---|-------------------|-------|--------------|--------|--|
| C39 | CAP, MICA, 100PF, 500V | DM15-101J | ARCO | 1500-11-0100 | 1 | R50 | RES, MF, 1/8W, 1%, 3.01K | RN55D-3011F | TRW | 4701-03-3011 | 1 | G1 G2 | TRANS | 2N3903 | NSC | 4901-03-9030 | 2 | |
| C12 C48 | CAP, MICA, 15PF, 500V | DM15-150J | ARCO | 1500-11-5000 | 2 | R58 | RES, MF, 1/8W, 1%, 30.1K | RN55D-3012F | TRW | 4701-03-3012 | 1 | ICB8 | IC, MIXER | MD108 | ANZAC | 7000-01-0800 | 1 | |
| C38 C42 | CAP, MICA, 150PF, 500V | DM15-151J | ARCO | 1500-11-5100 | 2 | R13 | RES, MF, 1/8W, 1%, 30.1K | RN55D-3012F | TRW | 4701-03-3012 | 1 | ICA3 | IC | LM 301AN | NSC | 7000-03-0100 | 1 | |
| C49 C52 C53 | CAP, MICA, 20PF, 500V | DM15-200J | ARCO | 1500-12-0000 | 3 | R38 R57 | RES, MF, 1/8W, 1%, 40.2 | RN55D-40R2F | TRW | 4701-03-4029 | 2 | ICA4 | IC | MC1458P1 | MOT | 7000-14-5800 | 1 | |
| C37 | CAP, MICA, 30PF, 500V | DM15-300J | ARCO | 1500-13-0000 | 1 | R29 R31 R34 R35 R39 R45 R48 | RES, MF, 1/8, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 7 | ICB7 | IC | MC1496P | MOT | 7000-14-9600 | 1 | |
| C6 | CAP, MICA, 470PF, 500V | DM15-471J | ARCO | 1500-14-7100 | 1 | R17 R37 R49 | RES, MF, 1/8W, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 3 | ICA1 | IC | 7404 | TI | 8000-74-0400 | 1 | |
| C28 C29 C30 C31 | CAP, MICA, 56PF, 500V | DM15-560J | ARCO | 1500-15-6000 | 4 | R19 R20 R7 R8 | RES, MF, 1/8W, 1%, 51.1 | RN55D-51R1F | TRW | 4701-03-5119 | 4 | ICD1 | IC | 74S10 | SIG | 8000-74-1001 | 1 | |
| C11 | CAP, MYLAR, .01MF, 100V | 225P10391WD3 | SPRAG | 1500-41-0314 | 1 | R15 R2 R4 | RES, MF, 1/8W, 1%, 576 | RN55D-5760F | TRW | 4701-03-5760 | 3 | ICC1 | IC | 74S74 | TI | 8000-74-7401 | 1 | |
| C5 | CAP, MLAR, .0047MF100V | 225P47291WD3 | SPRAG | 1500-44-7204 | 1 | R56 R60 | RES, MF, 1/8W, 1%, 6.19K | RN55D-6191F | TRW | 4701-03-6191 | 2 | ICC2 | IC | MC10125P | MOT | 8001-01-2500 | 1 | |
| C13 C14 C15 C17 C19 C35 C36 | CAP, TANT, 22MF, 15V | 196D226X9015KA1 | SPRAG | 1500-72-2601 | 7 | R14 | RES, MF, 1/8W, 1%, 681 | RN55D-6810F | TRW | 4701-03-6810 | 1 | ICF3 | IC | 74LS139 | SIG | 8007-41-3910 | 1 | |
| NONE | 1ST DIGIT MIXER BD | 1700-00-0706 | WVTK | 1700-00-0706 | 1 | R28 | RES, MF, 1/8W, 1%, 68.1 | RN55D-68R1F | TRW | 4701-03-6819 | 1 | ICE3 | IC | 74LS175 | TI | 8007-41-7510 | 1 | |
| L1 L2 | CHOKER, 1000MIC H, 5% | 2500-28 | DLVAN | 1800-00-0004 | 2 | R6 | RES, MF, 1/8W, 1%, 7.5K | RN55D-7501F | TRW | 4701-03-7501 | 1 | ICD2 ICE1 | IC | 74LS196 | SIG | 8007-41-9610 | 2 | |
| L10 L4 L9 | CHOKER, 82MH, 5% | 1537-72 | DLVAN | 1800-00-0005 | 3 | R52 R53 | RES, MF, 1/8W, 1%, 78.7 | RN55D-78R7F | TRW | 4701-03-7879 | 2 | ICB1 | IC | MC4044P | MOT | 8100-40-4400 | 1 | |
| L5 L6 | CHOKER, 3.3MH, 10% | 1537-24 | DLVAN | 1800-00-0006 | 2 | R59 | RES, MF, 1/8W, 1%, 90.9 | RN55D-90R9F | TRW | 4701-03-9099 | 1 | ICB6 ICB9 ICC5 | IC, SEL, MC10116P QTY: 1: 8001-01-1600 | 8200-00-0012 | WVTK | 8200-00-0012 | 3 | |
| L8 | CHOKER, 10MH, 10% | 1537-36 | DLVAN | 1800-00-0007 | 1 | R22 R51 | RES MODULE | 4310R-101-471 | BOURN | 4770-00-0009 | 2 | ICE2 | IC, PROGRAMMED REF: 8007-41-8801 | 8600-00-0007 | WVTK | 8600-00-0007 | 1 | |
| L3 | CHOKER, 200MH, 5% | 1537-90 | DLVAN | 1800-00-0008 | 1 | R23 | RES MODULE 2.2K | 4310R-101-222 | BOURN | 4770-00-0011 | 1 | | | | | | | |
| NONE | SKT, IC, 16PIN | D1LB-16P-108 | BURND | 2100-03-0028 | 1 | CR2 CR3 CR4 CR5 CR6 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 5 | | | | | | | |
| WAVETEK PARTS LIST TITLE: PCA, DIGIT 1 ASSEMBLY NO. 1100-00-0706 PAGE: 2 REV F | | | | | WAVETEK PARTS LIST TITLE: PCA, DIGIT 1 ASSEMBLY NO. 1100-00-0706 PAGE: 4 REV F | | | | | WAVETEK PARTS LIST TITLE: PCA, DIGIT 1 ASSEMBLY NO. 1100-00-0706 PAGE: 5 REV F | | | | | | | | |


NOTE: UNLESS OTHERWISE SPECIFIED

| | | | | |
|--|--|------------------|---------------------------------------|------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | | |
| | RELEASE APPROV | | TITLE | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | PARTS LIST PCA, DIGIT 1 | |
| SCALE | DO NOT SCALE DWG | MODEL NO. | DWG NO. | REV |
| | | 172B | 1100-00-0706 | F |
| | | CODE IDENT 23338 | SHEET 1 | OF 1 |


BISHOP GRAPHICS/ACCUPRESS REORDER NO. A-3354

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


| REV | ECN | BY | DATE | APP |
|-----|---------------------|-----|---------|-----|
| A | LOOP2 Added | Tvs | 18 May | |
| B | ADD T1, DELETE +5V | R | 26 May | |
| C | TUNE UP / TEST DATA | Tvs | 20 July | |

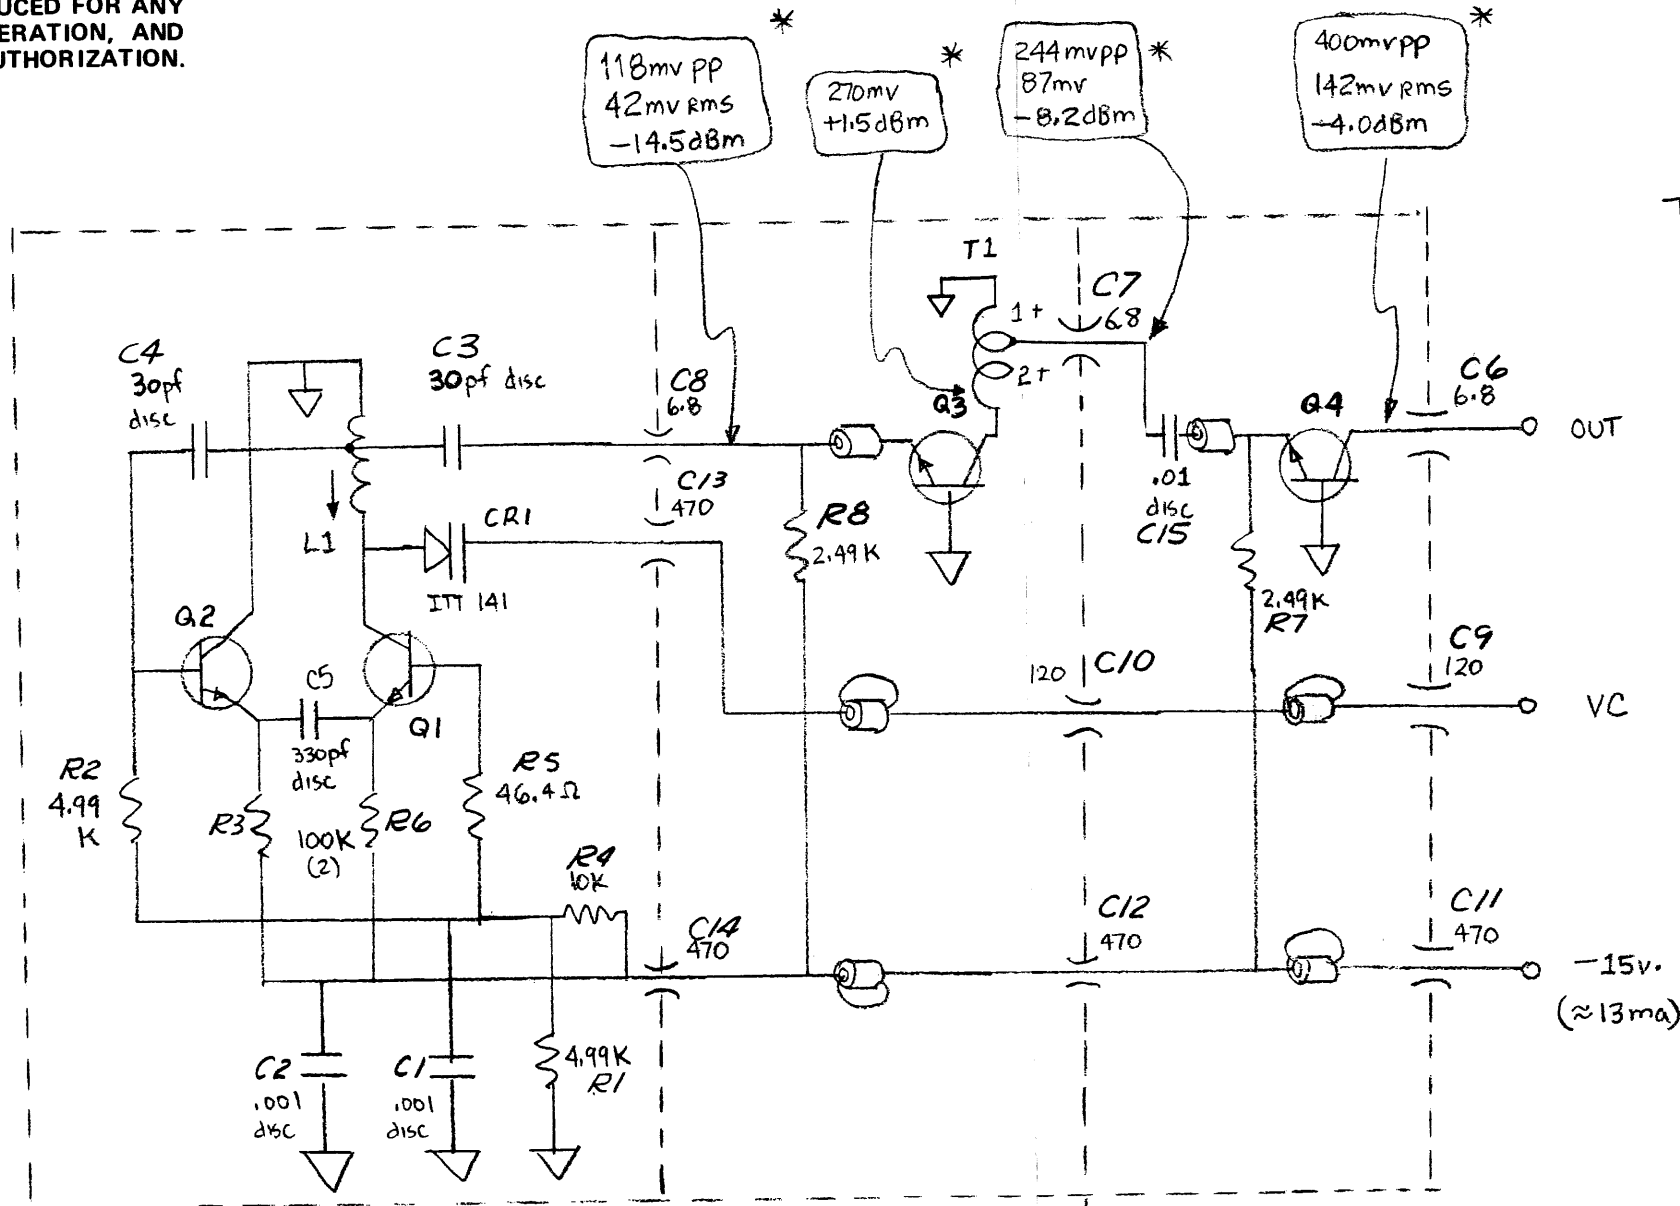

TUNE UP & TEST DATA

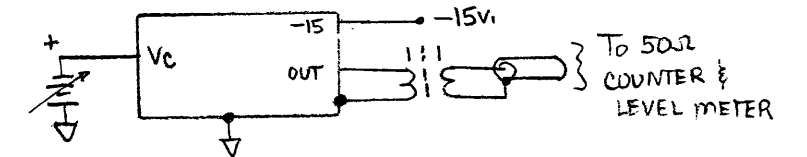

(1) OUTPUT LEVEL VS Vc - (TYPICAL)

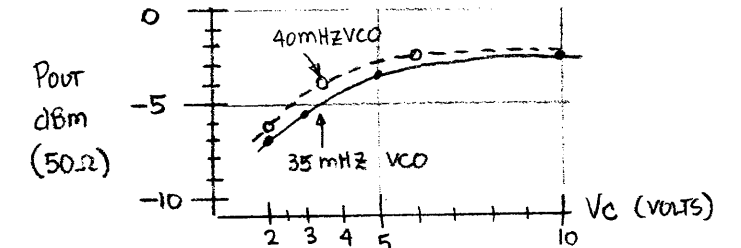

(2) TUNE UP & TEST DATA:

| Vc | FOUT | Comments |
|-------|---------------|------------------|
| 3.0v | 35 ± 0.1 MHz | TUNE L1 FOR THIS |
| 5.0v | 39.4 ± 0.3 | CHECK POINT |
| 10.0v | 47.5 ± 1.5 | " " |
| 3.5v | 40. ± 0.1 MHz | TUNE L1 FOR THIS |
| 6.0v | 45.9 ± 0.35 | CHECK POINT |
| 10v. | 53.1 ± 1.5 | " " |

* FOR 40 MHz VCO and Vc = 3.50V & 50Ω LOAD;
TYPICAL VALUES ONLY

Q1 - Q4: 2N3563 (PRE-TESTED)

L1: 14T, TAP AT 1/4T; ON CAMBION FORM


T1: 3T, TAP AT 1T ON FAIR-RITE 2873002402

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|---------------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN TVS | DATE 16 Apr | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR J. Kolb /TVS | SEP 8 77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV 1976 | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ± .010 ANGLES ± 1° .XX ± .030 | TITLE 35/40 MHz VCO MODULE (FOR DIG1 & DIG23 LOOPS) |
| | DO NOT SCALE DWG | SCALE | MODEL NO. DWG NO. 0104-00-0519 |
| | | | REV C |
| | CODE IDENT 23338 | SHEET 1 OF 1 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


PARTITIONS AND COVERS INSTALLATION

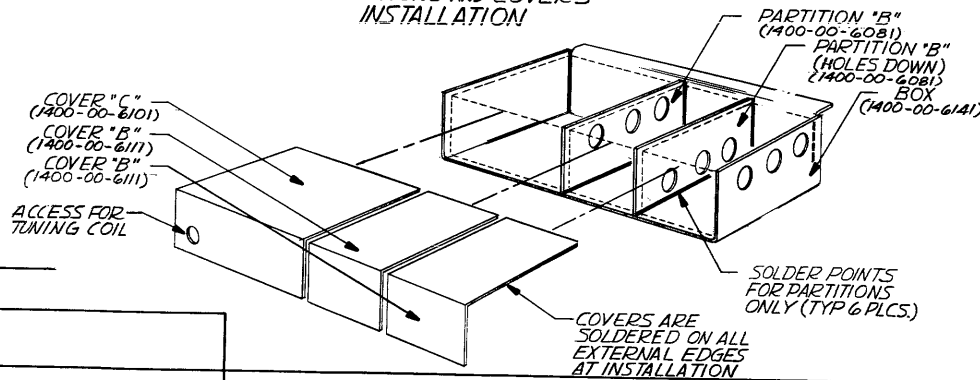

ASSEMBLY SEQUENCE


● **STEP 1** SOLDER CORNERS OF BOX

● **STEP 2** INSTALL FEED THRU CAPACITORS ON BOX


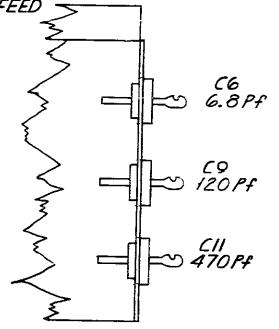


● **STEP 3** INSTALL FEED THRU CAPACITORS ON PARTITION "B"

NOTE: SEE PARTITION AND COVER DETAIL FOR CAPACITOR ORIENTATION OF THIS PARTITION

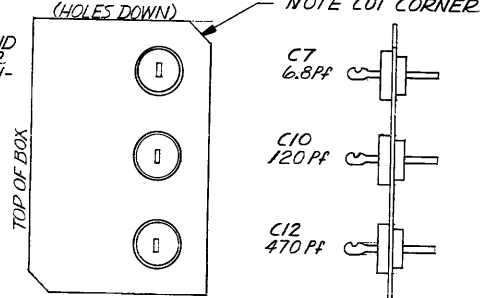


● **STEP 4** INSTALL COMPONENTS ON PARTITION "B"

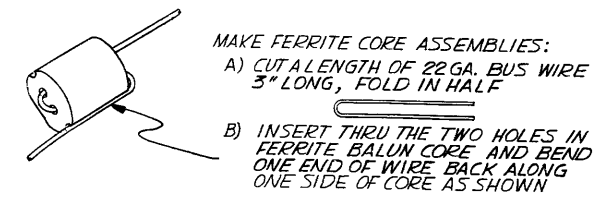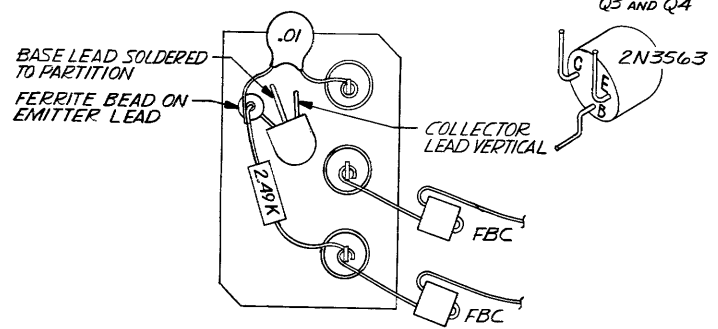


NOTE: UNLESS OTHERWISE SPECIFIED

● **STEP 5** SOLDER COMPLETED PARTITION INTO PLACE IN BOX USING COVER B AS A SPACER. IT WILL BE NECESSARY TO BEND LEADS FROM PARTITION OUT OF THE WAY TO INSTALL COVER.

● **STEP 6** CONNECT WIRES FROM PARTITION TO BOX

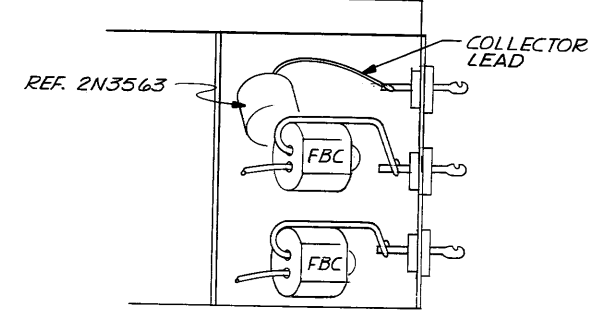


● **STEP 7** ASSEMBLE TRANSFORMER ON FERRITE BALUN CORE NOTE: FOR DETAIL SEE DWG. # 1204-00-0551

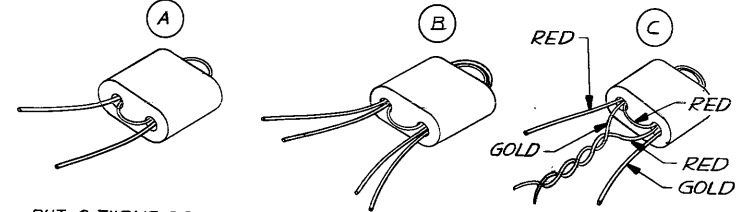


NOTE: AT COMPLETION OF STEP "C" TIN LEADS BY DIPPING IN SOLDER POT TO WITHIN 3/16" OF CORE. HOLD CORE WITH SUITABLE PLIERS TO AVOID BURNING FINGERS. DO NOT TIN TO CLOSE TO CORE, OR HOLD IN SOLDER POT TOO LONG, OR YOU WILL NOT BE ABLE TO DETERMINE COLOR OF WIRE PRIOR TO TINNING.


● **STEP 8** MOUNT TRANSFORMER TO REAR OF PARTITION WITH "RTV."

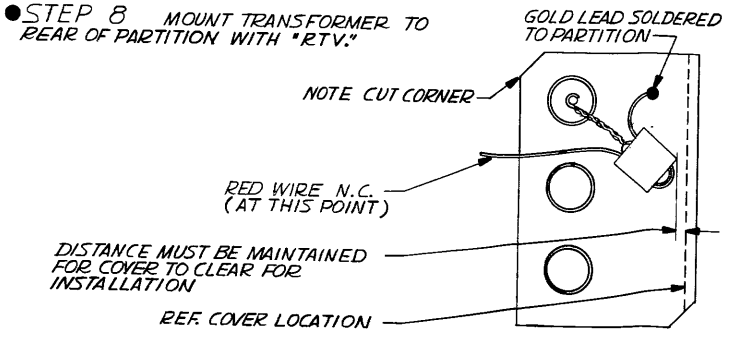

DETAIL "A" COIL DETAIL L1

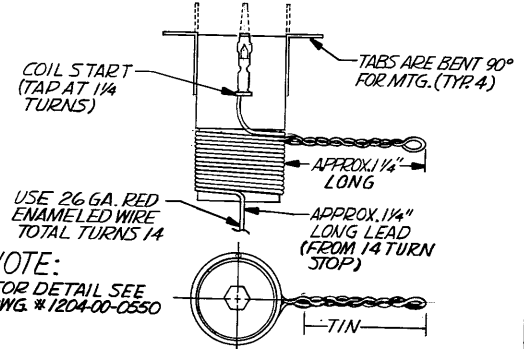


P.C. BOARD COMPONENT INSTALL. (1700-00-0519)

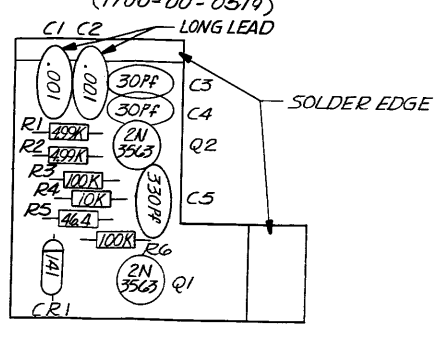

● **STEP 9** MOUNT TWO FERRITE CHOKES TO THE TWO REMAINING FEED THRU CAPACITORS MOUNTED IN THE BOX

● **STEP 10** ASSEMBLE NEXT PARTITION.

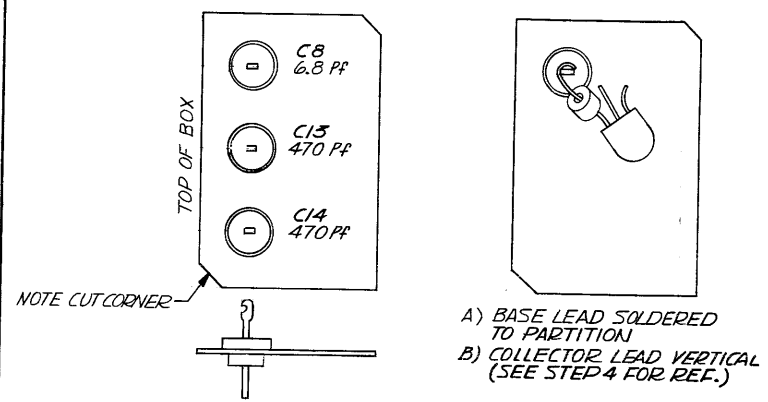



● **STEP 11** INSTALL PARTITION IN BOX USING COVER AS SPACER. JOIN WIRES FROM FIRST PARTITION TO SECOND PARTITION.

● **STEP 12** ASSEMBLE P.C. BOARD.

● **STEP 13** MOUNT COIL IN BOX

● **STEP 14** MOUNT P.C. BOARD IN BOX AND CONNECT TO COIL. NOTE THAT THE P.C. BOARD MUST BE INSTALLED AT ANGLE SHOWN FOR TUNING ACCESS OF COIL

COVERS NOT SHOWN FOR CLARITY

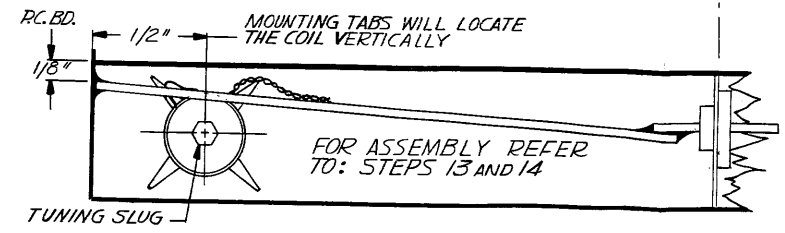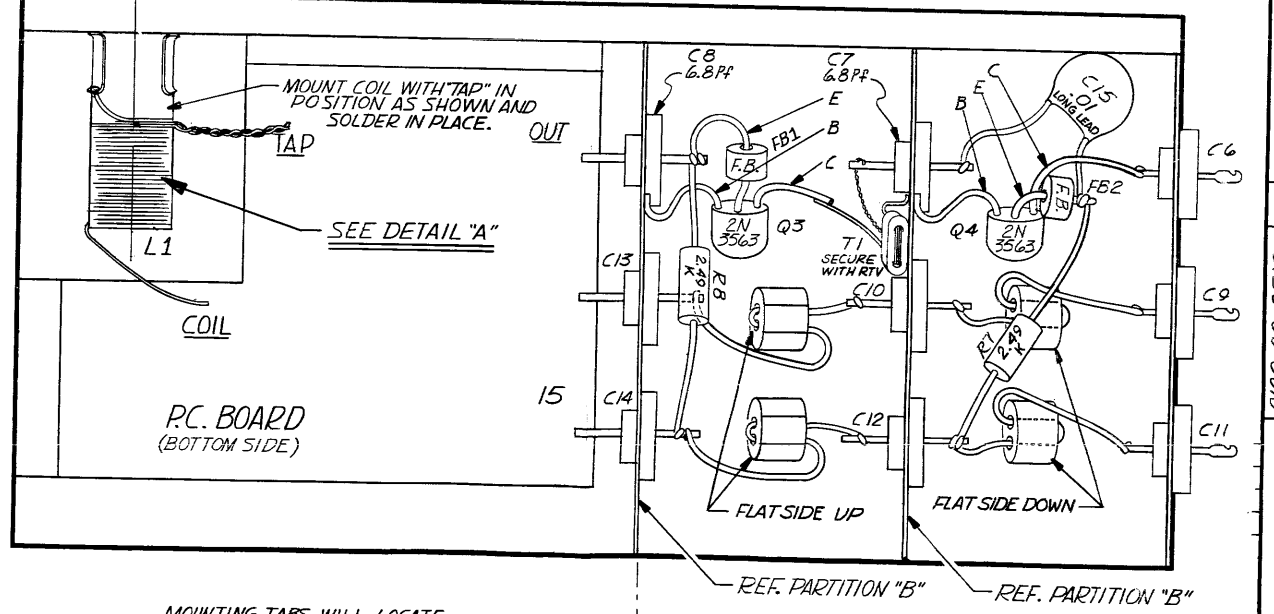

| | | | |
|---|----------------|--|---------------------|
| DRAWN D. COOPER | DATE 7-2776 | WAVETEK SAN DIEGO • CALIFORNIA | |
| PROJECTOR Tom Salza | DATE 8/77 | TITLE ASSEMBLY 35 40 MHz VCO MODULE | |
| RELEASE APPROV. | | MODEL NO. 0102-00-0519 | REV 1 |
| TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± .010 XX ± .030 | | DWG NO. 0102-00-0519 | REV 1 |
| DO NOT SCALE DWG | | SCALE | CODE IDENT 23338 |
| SCALE | | SHEET 1 OF 1 | |

8

7

6

5

4

3

2

1

REV ECN BY DATE APP

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

D

D

C

C

B

B

A

A

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------|----------------------|-------|--------------|--------|
| NONE | ASSY DRWG, VCO MOD | 0102-00-0519 | WVTK | 0102-00-0519 | 1 |
| NONE | SCHEMATIC, VCO MOD | 0104-00-0519 | WVTK | 0104-00-0519 | 1 |
| L1 | COIL, 35MHZ VCO | 172-550 | WVTK | 1204-00-0550 | 1 |
| T1 | TRANSFORMER | 172-551 | WVTK | 1204-00-0551 | 1 |
| NONE | PARTITION (B) | 1400-00-6081 | WVTK | 1400-00-6081 | 2 |
| NONE | COVER (C) | 1400-00-6101 | WVTK | 1400-00-6101 | 1 |
| NONE | COVER (B) | 1400-00-6111 | WVTK | 1400-00-6111 | 2 |
| NONE | BOX, OSCILLATOR | 1400-00-6141 | WVTK | 1400-00-6141 | 1 |
| C1 C2 | CAP, CER, .001MF, 1KV | DD-102 LONG LEAD | CRL | 1500-01-0201 | 2 |
| C13 | CAP, CER, MN, .01MF, 50V | CACD225U103Z100A | CORNG | 1500-01-0310 | 1 |
| C3 C4 | CAP, CER, 30PF, 1KV | DD-300 | CRL | 1500-03-0001 | 2 |
| C5 | CAP, CER, 330PF, 1KV | DD-331 | CRL | 1500-03-3111 | 1 |
| C10 C9 | CAP, FTHRU, 120PF, 500V | 54-794-005-X5R0-121K | SPECT | 1500-61-2106 | 2 |
| C11 C12 C13 C14 | CAP, FTHRU, 470PF, 500V | 54-794-010-X5R0-471M | SPECT | 1500-64-7106 | 4 |
| C6 C7 C8 | CAP, FTHRU, 6.8PF, 500V | 54-794-010-X5E0-689M | SPECT | 1500-66-8906 | 3 |
| NONE | VCO MOD | 1700-00-0519 | WVTK | 1700-00-0519 | 1 |
| FB1 FB2 | FERRITE BEAD | 56-590-65/3B | FERRX | 3100-00-0001 | 2 |
| NONE | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 4 |

WAVETEK
PARTS LIST

TITLE
35/40 MHZ VCO MODULE

ASSEMBLY NO.
1206-00-0519
PAGE: 1

REV
A

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|--------------------------|-------------------|------|--------------|--------|
| R4 | RES, MF, 1/BW, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 1 |
| R3 R6 | RES, MF, 1/BW, 1%, 100K | RN55D-1003F | TRW | 4701-03-1003 | 2 |
| R7 R8 | RES, MF, 1/BW, 1%, 2.49K | RN55D-2491F | TRW | 4701-03-2491 | 2 |
| R5 | RES, MF, 1.8W, 1%, 46.4 | RN55D-46R4F | TRW | 4701-03-4649 | 1 |
| R1 R2 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 2 |
| CR1 | DIODE | 141 | ITT | 4803-02-0141 | 1 |
| G1 G2 G3 G4 | TRANS | 2N3563 | FAIR | 4901-03-5630 | 4 |

WAVETEK
PARTS LIST

TITLE
35/40 MHZ VCO MODULE

ASSEMBLY NO.
1206-00-0519
PAGE: 2

REV
A

| | | | |
|--|------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | <p>WAVETEK SAN DIEGO • CALIFORNIA</p> |
| MATERIAL | PROJ ENGR | TITLE | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030 | |
| SCALE | DO NOT SCALE DWG | MODEL NO. 172B DWG NO. 1206-00-0519 REV A | |
| CODE IDENT | | 23338 | SHEET 1 OF 1 |

NOTE: UNLESS OTHERWISE SPECIFIED

8

7

6

5

4


3

2

1

| REV | ECN | BY | DATE | APP |
|-----|---------------------|-----|---------|-----|
| E | "SBL-1" WAS "MD108" | TLF | 6-30-77 | |
| F | # 2066 | BES | 12-1-79 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

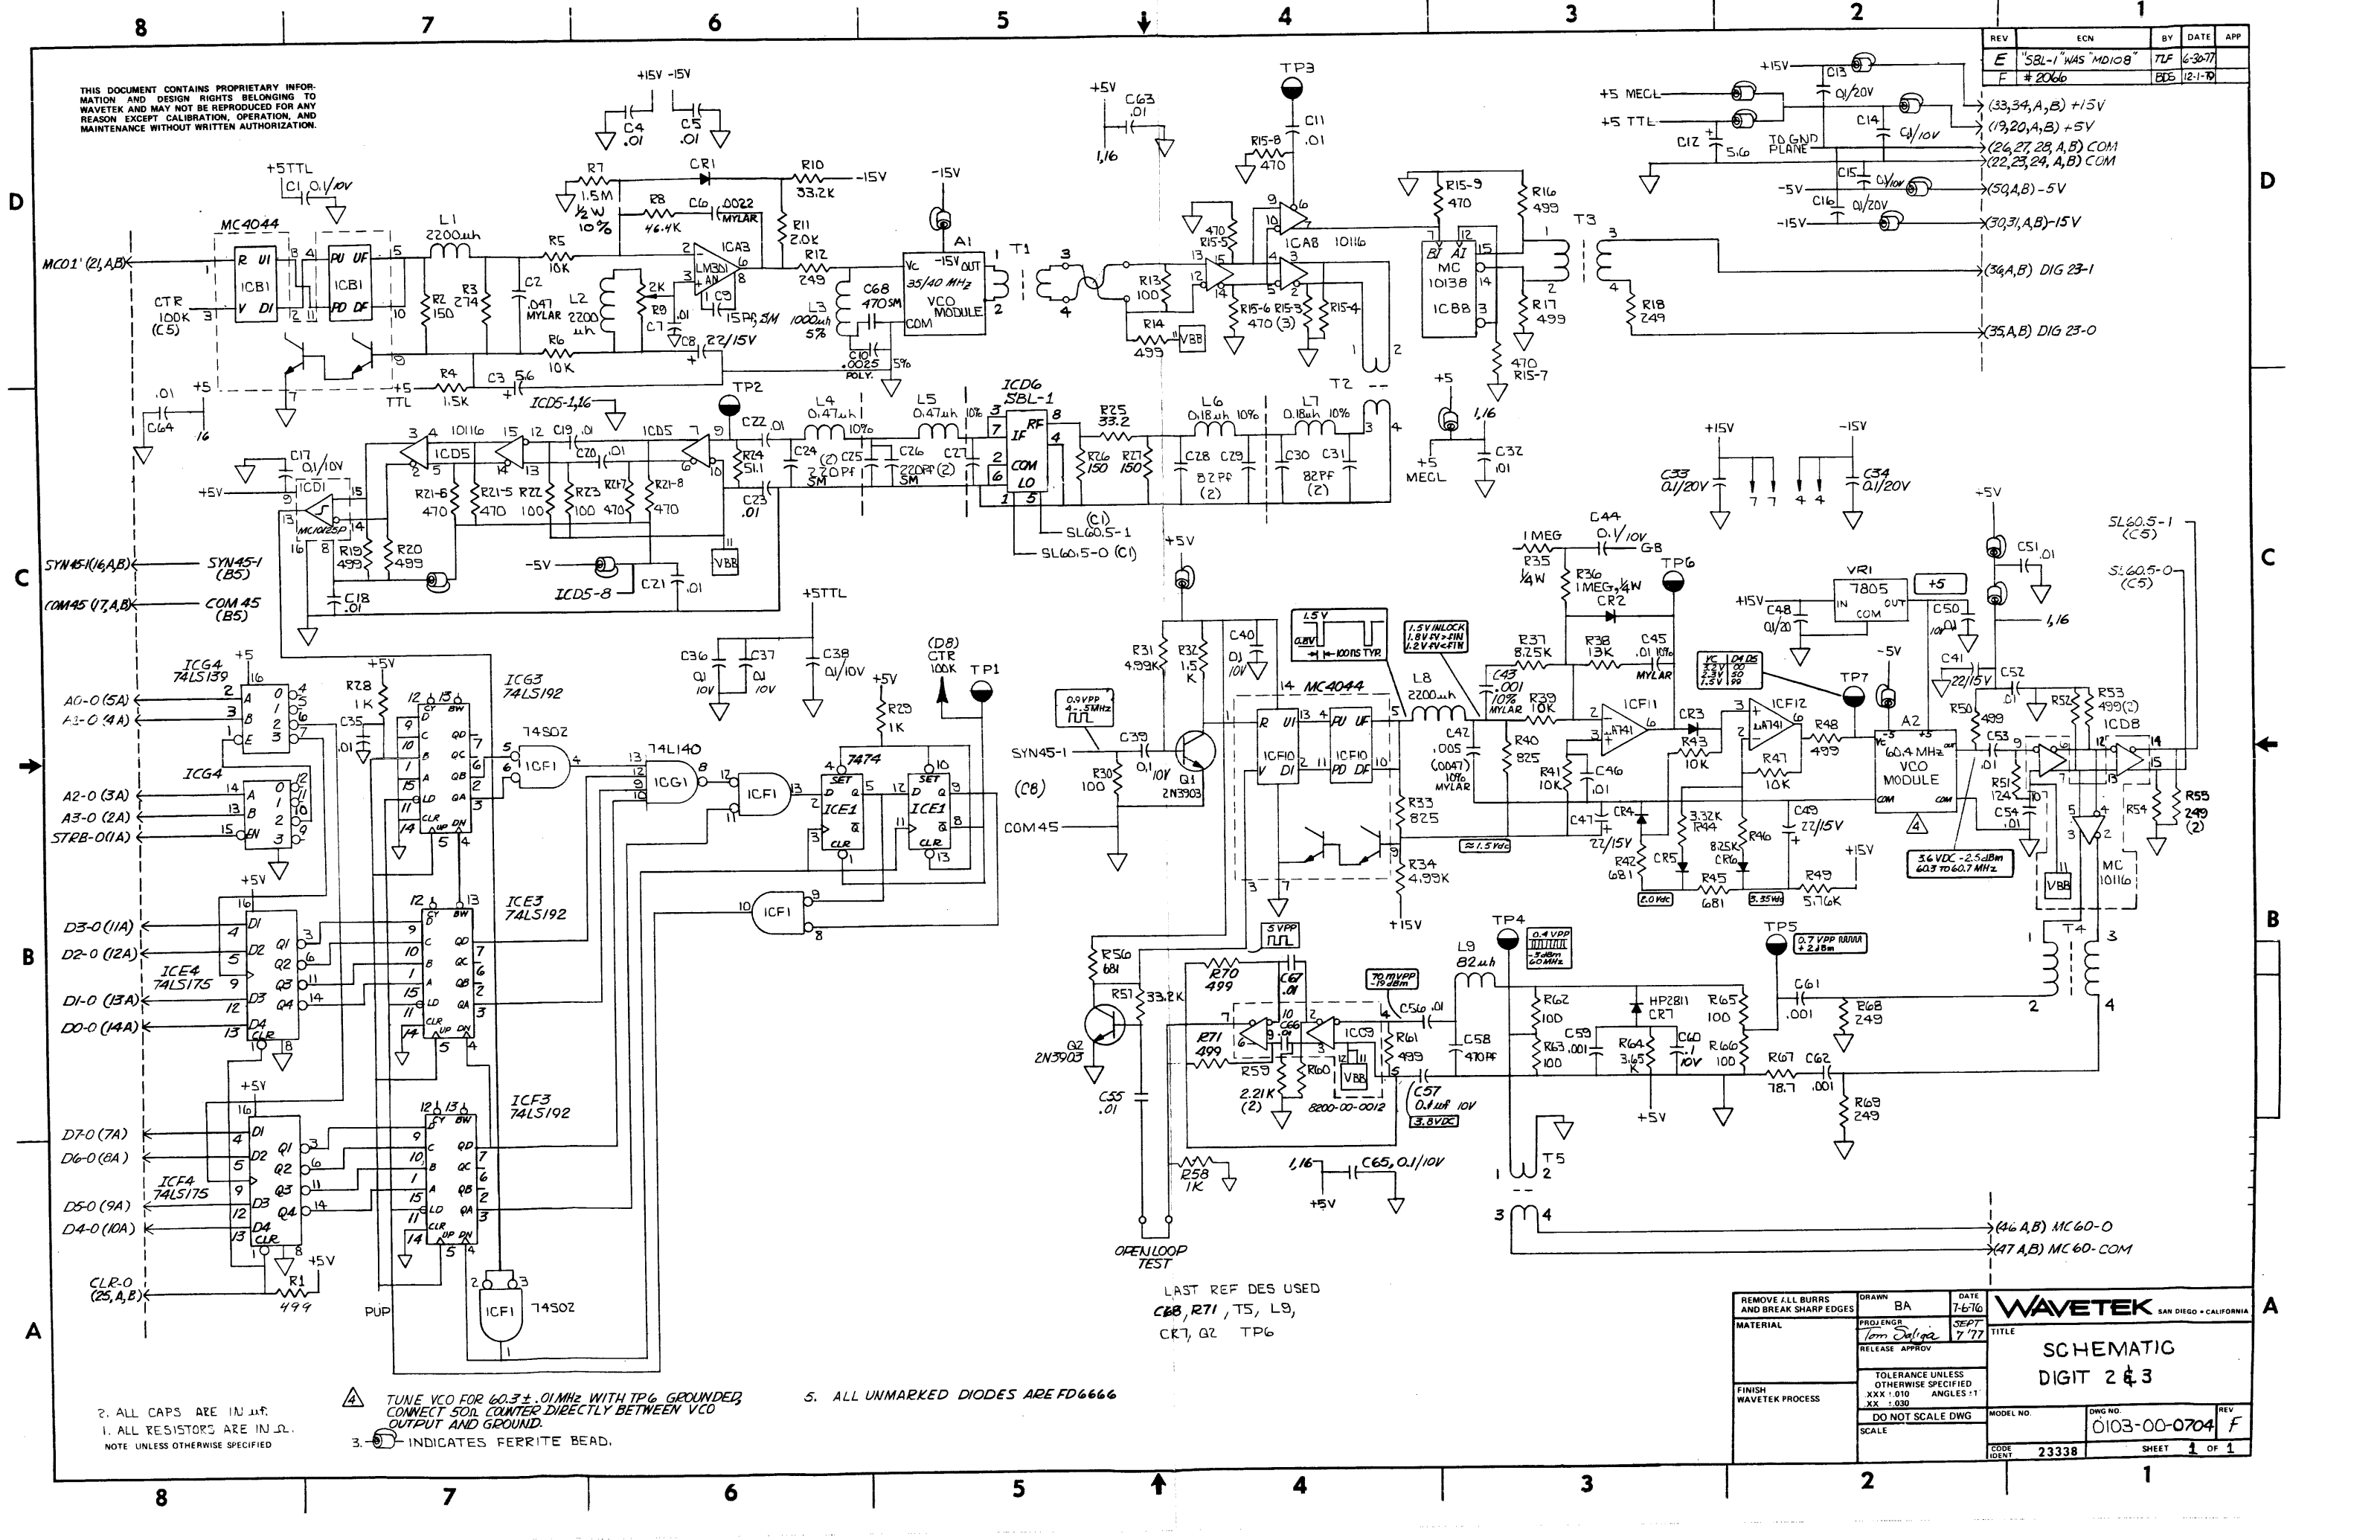

2. ALL CAPS ARE IN μ F.
1. ALL RESISTORS ARE IN Ω .
NOTE: UNLESS OTHERWISE SPECIFIED


3. --- INDICATES FERRITE BEAD.
TUNE VCO FOR $60.3 \pm .01$ MHz WITH TP6 GROUND. CONNECT 50 Ω COUNTER DIRECTLY BETWEEN VCO OUTPUT AND GROUND.

5. ALL UNMARKED DIODES ARE FD6666

LAST REF DES USED
C88, R71, T5, L9,
CR7, Q2 TP6

| | | | |
|--|---|------------------|----------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN BA | DATE 7-6-76 | |
| MATERIAL | PROJENGR Tom Saliga | SEPT 7 '77 | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX: .010 ANGLES: 1:1 XX: .030 | DO NOT SCALE DWG | MODEL NO. |
| | SCALE | | DWG NO. 0103-00-0704 |
| | | | REV F |
| | | | CODE IDENT 23338 |
| | | | SHEET 1 OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION

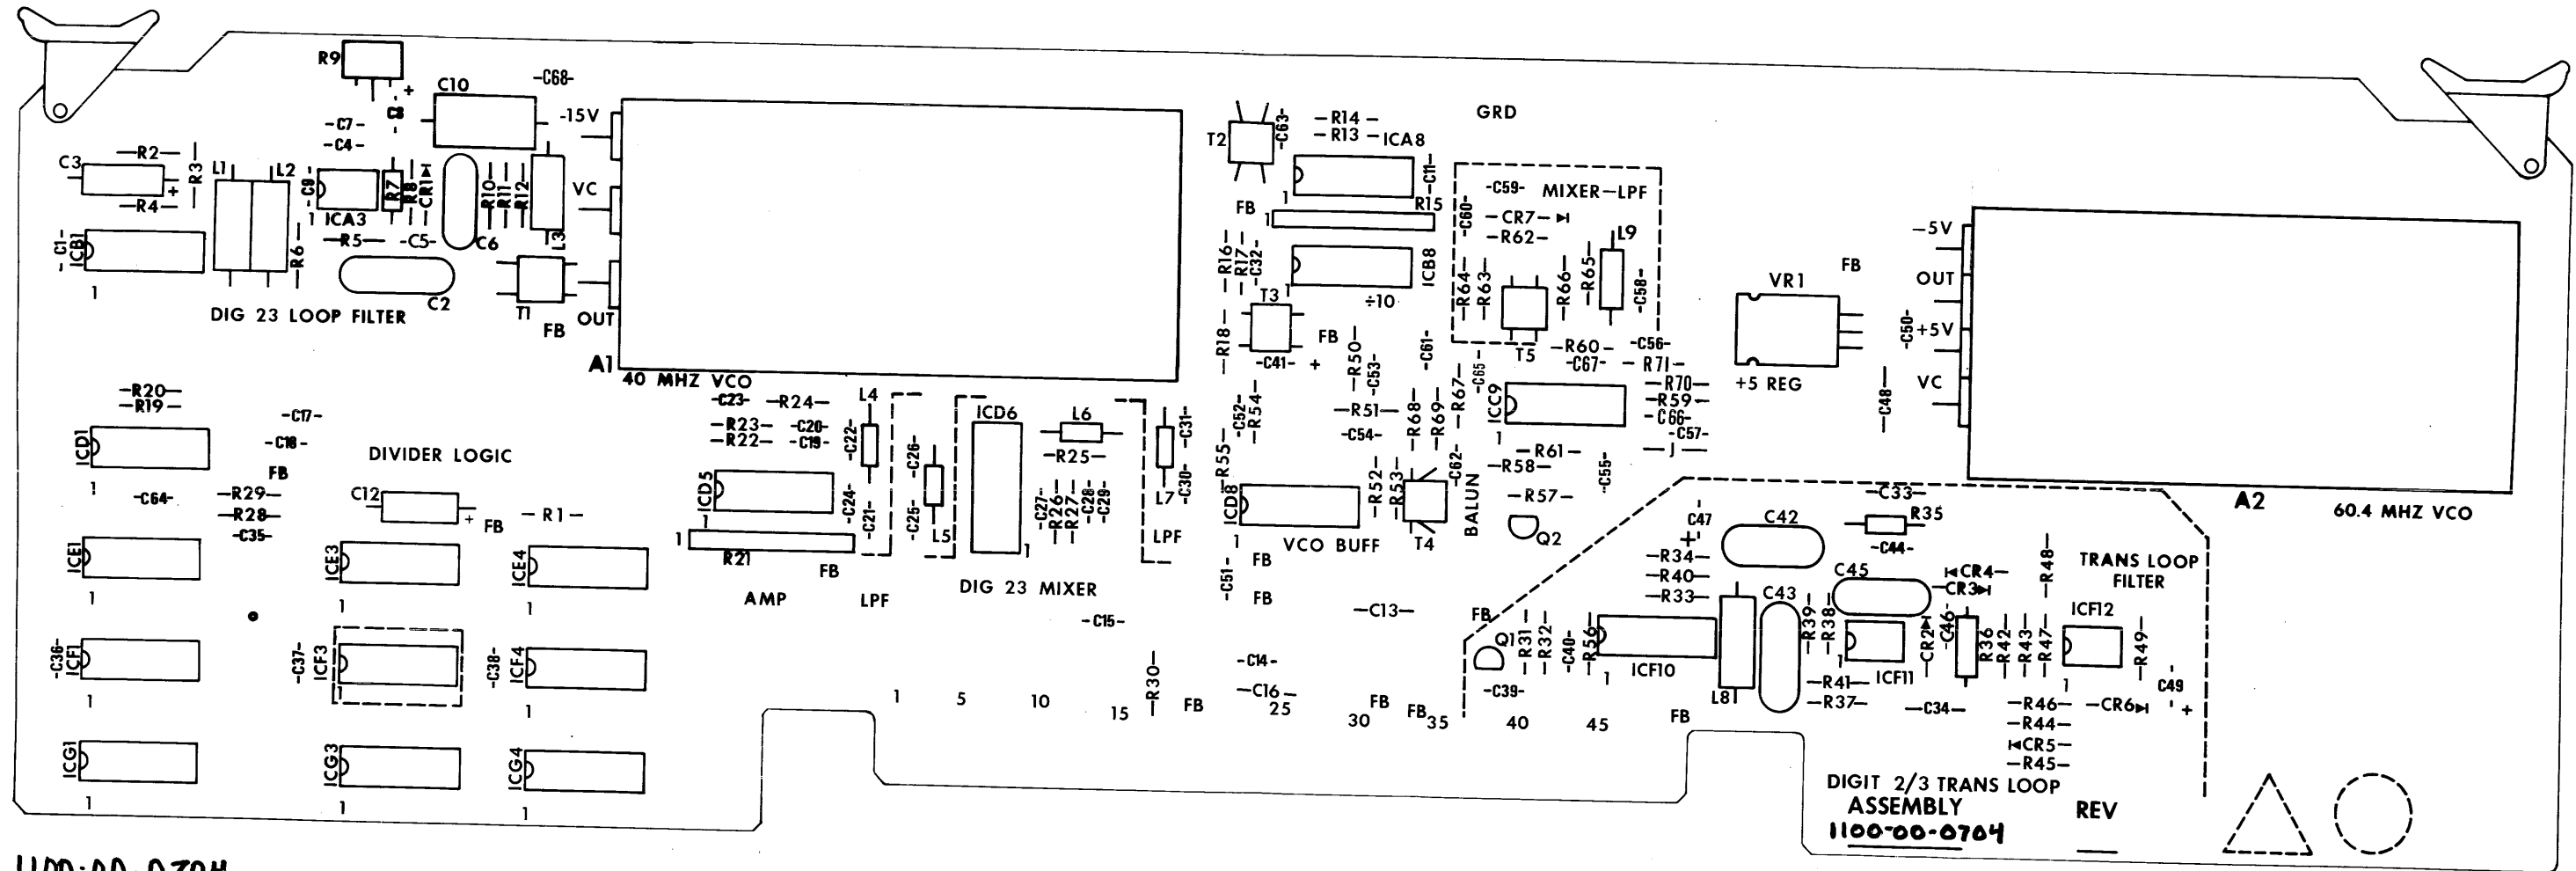

1100-00-0704

DIGIT 2/3 TRANS LOOP ASSEMBLY
1100-00-0704 REV

| | | | | |
|--|--|-------|---------------------------------------|---------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | | TITLE | |
| | RELEASE APPROV | | DIGITS 2 & 3 PCA | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | MODEL NO | DWG NO |
| | DO NOT SCALE DWG | | 172B | 0101-00-0704 |
| | SCALE | | | REV |
| | | | | |
| | CODE IDENT | 23338 | SHEET | 1 OF 1 |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG. DIGIT 2&3 | 0101-00-0704 | WVTK | 0101-00-0704 | 1 |
| NONE | SCHEMATIC. DIGIT 2-3 | 0103-00-0704 | WVTK | 0103-00-0704 | 1 |
| T1 T2 T3 T5 | TRANSFORMER | 172-537 | WVTK | 1204-00-0537 | 4 |
| T4 | TRANSFORMER | 172-539 | WVTK | 1204-00-0539 | 1 |
| A1 | 35/40 MHZ VCO MODULE | 172-519 | WVTK | 1206-00-0519 | 1 |
| A2 | 60.4MHZ VCO MOD | 172-520 | WVTK | 1206-00-0520 | 1 |
| NONE | LOOP 2 SHIELD | 1400-00-6161 | WVTK | 1400-00-6161 | 3 |
| NONE | SHIELD. SYNTH | 1400-00-6193 | WVTK | 1400-00-6193 | 1 |
| C59 C61 C62 | CAP. CER. .001MF, 1KV | DD-102 | CRL | 1500-01-0211 | 3 |
| C11 C18 C19 C20 C21 C22 C23 C32 C35 C4 C46 C5 C51 C52 C53 C54 C55 C56 C63 C64 C66 C67 C7 | CAP. CER. MN. .01MF, 50V | CAC0225U103Z100A | CORNG | 1500-01-0310 | 23 |
| C1 C13 C14 C15 C16 C17 C33 C34 C36 C37 C38 C39 C40 C44 C48 C50 C57 C60 C65 | CAP. CER. MDN. .1MF, 50V | CAC0325U104Z050A | CORNG | 1500-01-0405 | 19 |
| C58 | CAP. CER. 470PF, 1KV | DD-471 | CRL | 1500-04-7111 | 1 |
| C28 C29 C30 C31 | CAP. CER. 82PF, 1KV | DD-820 | CRL | 1500-08-2011 | 4 |
| C9 | CAP. MICA, 15PF, 500V | DM15-150J | ARCO | 1500-11-5000 | 1 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---------------------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | PIN. MALE | 61182-2 | AMP | 2100-05-0020 | 1 |
| NONE | STANDOFF | SS5368-3C-5A | UNICP | 2800-05-6114 | 5 |
| NONE | PC BD EJECTOR | 103 RED | CALMK | 2800-07-0010 | 2 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 14 |
| NONE | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 14 |
| R9 | POT. TRIM, 2K | 91A2K | BECK | 4600-02-0201 | 1 |
| R7 | RES. C. 1/2W, 10%, 1.5M | RC206F-155 | STKPL | 4700-25-1504 | 1 |
| R13 R22 R23 R30 R62 R63 R65 R66 | RES. MF, 1/8W, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 8 |
| R28 R29 R58 | RES. MF, 1/8W, 1%, 1K | RN55D-1001F | TRW | 4701-03-1001 | 3 |
| R39 R41 R43 R47 R5 R6 | RES. MF, 1/8W, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 6 |
| R51 | RES. MF, 1/8W, 1%, 124 | RN55D-1240F | TRW | 4701-03-1240 | 1 |
| R38 | RES. MF, 1/8W, 1%, 13K | RN55D-1302F | TRW | 4701-03-1302 | 1 |
| R2 R26 R27 | RES. MF, 1/8W, 1%, 150 | RN55D-1500F | TRW | 4701-03-1500 | 3 |
| R32 R4 | RES. MF, 1/8W, 1%, 1.5K | RN55D-1501F | TRW | 4701-03-1501 | 2 |
| R11 | RES. MF, 1/8W, 1%, 2K | RN55D-2001F | TRW | 4701-03-2001 | 1 |
| R59 R60 | RES. MF, 1/8W, 1%, 2.21K | RN55D-2211F | TRW | 4701-03-2211 | 2 |
| R12 R18 R54 R55 R68 | RES. MF, 1/8W, 1%, 249 | RN55D-2490F | TRW | 4701-03-2490 | 6 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-------------------------|-------------------|-------------------|-------|--------------|--------|
| CP1 CR2 CR3 CR4 CR5 CR6 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 6 |
| CR7 | DIODE | 5082-2811 | HP | 4809-02-2811 | 1 |
| Q1 Q2 | TRANS | 2N3903 | NSC | 4901-03-9030 | 2 |
| ICD6 | IC, MIXER | MD108 | ANZAC | 7000-01-0800 | 1 |
| ICA3 | IC | LM 301AN | NSC | 7000-03-0100 | 1 |
| ICF11 ICF12 | IC | LM741CN | NSC | 7000-07-4100 | 2 |
| ICF1 | IC | 74S02 | SIG | 8000-74-0201 | 1 |
| ICE1 | IC | 7474 | TI | 8000-74-7400 | 1 |
| VR1 | VOLTAGE REGULATOR | MA7805UC | FAIR | 8000-78-0500 | 1 |
| ICD1 | IC | MC10125P | MOT | 8001-01-2500 | 1 |
| ICB8 | IC | MC10138P | MOT | 8001-01-3800 | 1 |
| ICG4 | IC | 74LS139 | SIG | 8007-41-3910 | 1 |
| ICG1 | IC | 74S140 | TI | 8007-41-4001 | 1 |
| ICE4 ICF4 | IC | 74LS175 | TI | 8007-41-7510 | 2 |
| ICE3 ICF3 ICG3 | IC | 74LS192 | TI | 8007-41-9210 | 3 |
| ICB1 ICF10 | IC | MC4044P | MOT | 8100-40-4400 | 2 |
| ICAB ICC9 ICD5 ICDB | IC, SEL, MC10116P | B200-00-0012 | WVTK | B200-00-0012 | 4 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|-------------------------|-------------------|-------|--------------|--------|
| C24 C25 C26 C27 | CAP. MICA, 220PF, 500V | DM15-221J | ARCO | 1500-12-2100 | 4 |
| C68 | CAP. MICA, 470PF, 500V | DM15-471J | ARCO | 1500-14-7100 | 1 |
| C43 | CAP. MYLAR, .001MF100V | 225P10291MD3 | SPRAG | 1500-41-0204 | 1 |
| C45 | CAP. MYLAR, .01MF, 100V | 225P10391MD3 | SPRAG | 1500-41-0314 | 1 |
| C6 | CAP. MYLR, .0022MF100V | 225P22291MD3 | SPRAG | 1500-42-2214 | 1 |
| C10 | CAP. POLY, .0025MF100V | SX225 | MAL | 1500-42-5204 | 1 |
| C42 | CAP. MLAR, .0047MF100V | 225P47291MD3 | SPRAG | 1500-44-7204 | 1 |
| C2 | CAP. MYLAR, .047MF100V | 225P47391MD3 | SPRAG | 1500-44-7314 | 1 |
| C41 C47 C49 C8 | CAP. TANT, 22MF, 15V | 196D226X9015KA1 | SPRAG | 1500-72-2601 | 4 |
| C12 C3 | CAP. TANT, 5.6MF, 35V | 150D565X9035B2 | SPRAG | 1500-75-6502 | 2 |
| NONE. | 2ND DIGIT TRANS BD | 1700-00-0704 | WVTK | 1700-00-0704 | 1 |
| L3 | CHOKE, 1000MIC H, 5% | 2500-28 | DLVAN | 1800-00-0004 | 1 |
| L9 | CHOKE, 82MH, 5% | 1537-72 | DLVAN | 1800-00-0005 | 1 |
| L1 L2 L8 | CHOKE, 2200MH | 2500-44 | DLVAN | 1800-00-0010 | 3 |
| L4 L5 | CHOKE, .47MH, 10% | 1025-12 | DLVAN | 1800-00-0011 | 2 |
| L6 L7 | CHOKE, .18MH, 10% | 1025-02 | DLVAN | 1800-00-0012 | 2 |
| NONE | SMT, IC, 16PIN | D1LB-16P-108 | BURND | 2100-03-0028 | 1 |


| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|--------------------------|-------------------|-------|--------------|--------|
| R69 | RES. MF, 1/8W, 1%, 274 | RN55D-2740F | TRW | 4701-03-2740 | 1 |
| R3 | RES. MF, 1/8W, 1%, 3.32K | RN55D-3321F | TRW | 4701-03-3321 | 1 |
| R44 | RES. MF, 1/8W, 1%, 33.2K | RN55D-3322F | TRW | 4701-03-3322 | 2 |
| R10 R57 | RES. MF, 1/8W, 1%, 33.2 | RN55D-33R2F | TRW | 4701-03-3329 | 1 |
| R25 | RES. MF, 1/8W, 1%, 33.2 | RN55D-33R2F | TRW | 4701-03-3329 | 1 |
| R64 | RES. MF, 1/8W, 1%, 3.65K | RN55D-3651F | TRW | 4701-03-3651 | 1 |
| R8 | RES. MF, 1/8W, 1%, 46.4K | RN55D-4642F | TRW | 4701-03-4642 | 1 |
| R1 R14 R16 R17 R19 R2C R48 R50 R52 R53 R61 R70 R71 | RES. MF, 1/8, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 13 |
| R31 R34 | RES. MF, 1/8W, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 2 |
| R24 | RES. MF, 1/8W, 1%, 51.1 | RN55D-51R1F | TRW | 4701-03-5119 | 1 |
| R49 | RES. MF, 1/8W, 1%, 5.76K | RN55D-5761F | TRW | 4701-03-5761 | 1 |
| R42 R45 R56 | RES. MF, 1/8W, 1%, 681 | RN55D-6810F | TRW | 4701-03-6810 | 3 |
| R67 | RES. MF, 1/8W, 1%, 78.7 | RN55D-7877F | TRW | 4701-03-7879 | 1 |
| R33 R40 | RES. MF, 1/8W, 1%, 825 | RN55D-8250F | TRW | 4701-03-8250 | 2 |
| R37 R46 | RES. MF, 1/8W, 1%, 8.25K | RN55D-8251F | TRW | 4701-03-8251 | 2 |
| R35 R36 | RES. MF, 1/4W, 1%, 1M | RN60D-1004F | TRW | 4701-13-1004 | 2 |
| R15 R21 | RES. MODULE | 4310R-101-471 | BOURN | 4770-00-0009 | 2 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|----------------------|-------------------|------|-------------|--------|
| | QTY: 1. 8001-01-1600 | | | | |


| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|--|--|--|--|--|--|-----------|------|---------------------------------------|--|--|--|-------|------|---------------------------------------|--|--|----------|-----------|--|-------|--|--|--|----------------|--|------------------------------------|--|--|------------------------|---|--|-------------------|-------------------------|----------|-------|------------------|-------|---------------------|---------|------|
| WAVETEK PARTS LIST TITLE: PCA, 2ND DIGIT TRANS ASSEMBLY NO. 1100-00-0704 PAGE: 1 | WAVETEK PARTS LIST TITLE: PCA, 2ND DIGIT TRANS ASSEMBLY NO. 1100-00-0704 PAGE: 2 | WAVETEK PARTS LIST TITLE: PCA, 2ND DIGIT TRANS ASSEMBLY NO. 1100-00-0704 PAGE: 3 | WAVETEK PARTS LIST TITLE: PCA, 2ND DIGIT TRANS ASSEMBLY NO. 1100-00-0704 PAGE: 4 | WAVETEK PARTS LIST TITLE: PCA, 2ND DIGIT TRANS ASSEMBLY NO. 1100-00-0704 PAGE: 5 | WAVETEK PARTS LIST TITLE: PCA, 2ND DIGIT TRANS ASSEMBLY NO. 1100-00-0704 PAGE: 6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | <table border="1"> <tr> <td>REMOVE ALL BURRS AND BREAK SHARP EDGES</td> <td>DRAWN</td> <td>DATE</td> <td colspan="3"> WAVETEK SAN DIEGO • CALIFORNIA </td> </tr> <tr> <td>MATERIAL</td> <td>PROJ/ENGR</td> <td></td> <td colspan="3">TITLE</td> </tr> <tr> <td></td> <td>RELEASE APPROV</td> <td></td> <td colspan="3">PARTS LIST PCA, 2ND DIGIT TRANS</td> </tr> <tr> <td>FINISH WAVETEK PROCESS</td> <td colspan="2">TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030</td> <td>MODEL NO. 172B</td> <td>DWG NO. 1100-00-0704</td> <td>REV J</td> </tr> <tr> <td>SCALE</td> <td>DO NOT SCALE DWG</td> <td>SCALE</td> <td>CODE IDENT 23338</td> <td>SHEET 1</td> <td>OF 1</td> </tr> </table> | | | | | | REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | | | MATERIAL | PROJ/ENGR | | TITLE | | | | RELEASE APPROV | | PARTS LIST PCA, 2ND DIGIT TRANS | | | FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030 | | MODEL NO. 172B | DWG NO. 1100-00-0704 | REV J | SCALE | DO NOT SCALE DWG | SCALE | CODE IDENT 23338 | SHEET 1 | OF 1 |
| | | | | | | REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | | | | | | MATERIAL | PROJ/ENGR | | TITLE | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | RELEASE APPROV | | PARTS LIST PCA, 2ND DIGIT TRANS | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030 | | MODEL NO. 172B | DWG NO. 1100-00-0704 | REV J | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SCALE | DO NOT SCALE DWG | SCALE | CODE IDENT 23338 | SHEET 1 | OF 1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| NOTE UNLESS OTHERWISE SPECIFIED | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| BISHOP GRAPHICS/ACCPRESS RECORDER NO. 338X | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REV | ECN | BY | DATE | APP |
|-----|------------------------------|-----|---------|-----|
| A | PISTON TRIMMER MOVED | TVS | JUNE 76 | TVS |
| B | CHANGED: C2 FROM .001 TO 910 | DC | 22377 | TVS |

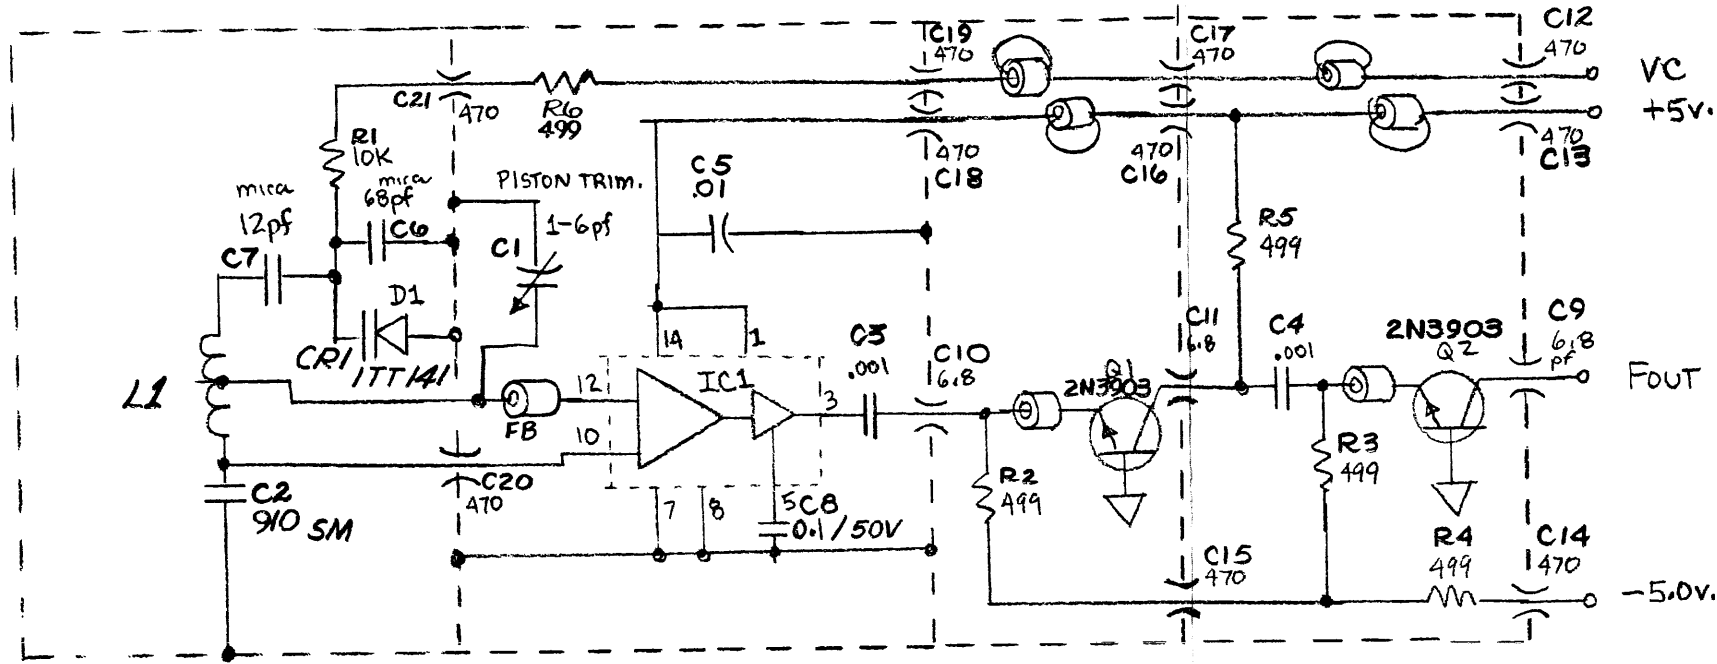

L1: COIL DETAIL

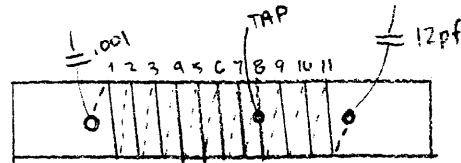

($\frac{1}{2} + 11 + \frac{1}{2}$) T ON 3/8 PLEX ROD
AS PER DWG. # 1400-00-6150

IC1: PRETESTED MC1648
Q1, Q2: " 2N3903
D1: ITT141 DIODE

470pf fATHRU: 10
6.8pf " 3

-Vcc correction: 24Feb

NOTE: UNLESS OTHERWISE SPECIFIED


| | | | | |
|--|--------------------------|--|------------------------|-------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN T.V. Saliga | DATE 16 Feb | SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR T.V. Saliga | SEPT 8 '77 | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° .XX ±.030 | MODEL NO. | DWG NO. 0103-00-0520 |
| | DO NOT SCALE DWG | SCALE | CODE IDENT 23338 | REV B |
| | | | SHEET 1 OF 1 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

ASSEMBLY SEQUENCE



STEP 1 SOLDER CORNERS OF BOX

STEP 2 STAND BOX ON END WITH WEIGHT. INSERT FEED THRU CAPACITORS AND ALIGN TERMINALS ON CAPACITORS IN SAME DIRECTION AS SHOWN.

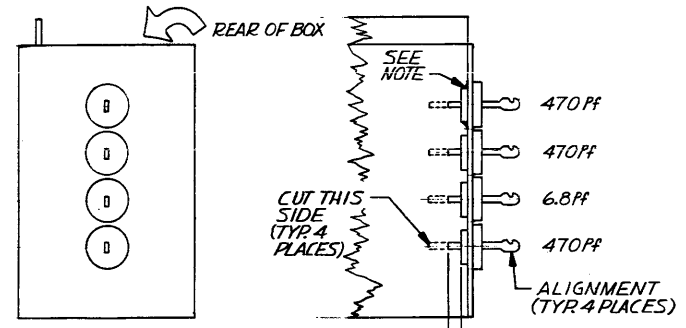


NOTE: SOLDER SO THAT CAPACITOR IS SOLDERED TO BOX ALL AROUND THE ENTIRE CAPACITOR BODY.

STEP 3 HOLD CORNER OF PARTITION "C" IN BENCH VISE, INSTALL FEED THRU CAPACITORS AND ALIGN TERMINALS.

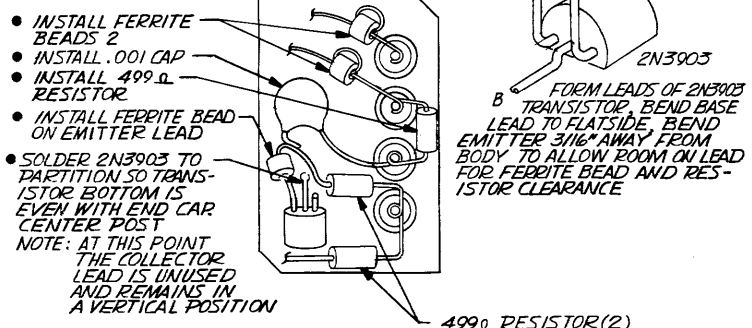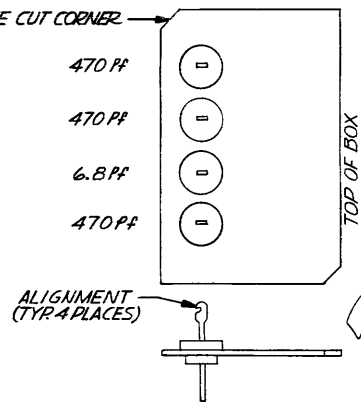


NOTE: UNLESS OTHERWISE SPECIFIED


STEP 4 SOLDER PARTITION "C" INTO BOX 1/2" FROM END OF BOX, MAKE COMPLETE SOLDER BEAD AROUND REAR AND BOTTOM OF BOX AND CONNECT LEADS FROM PARTITION TO FEED THRU CAPACITOR TERMINALS.

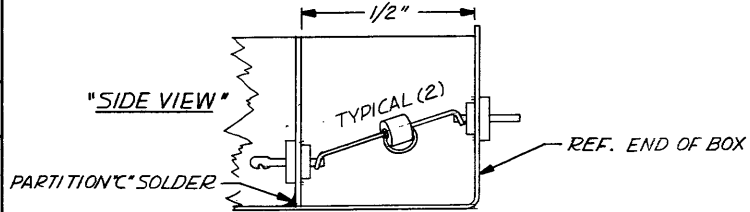

STEP 5 INSTALL PARTS ON REAR OF PARTITION "C"

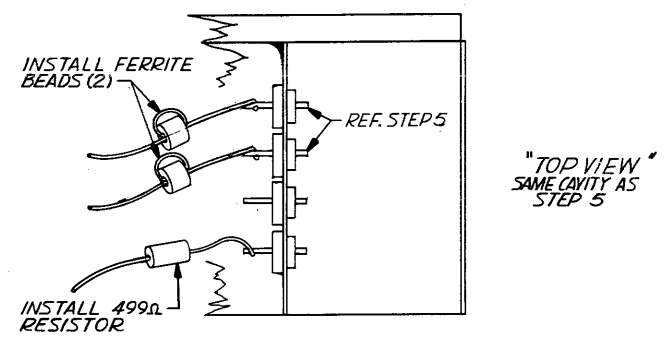


STEP 6 INSTALL FEED THRU CAPACITORS ON PARTITION "B"

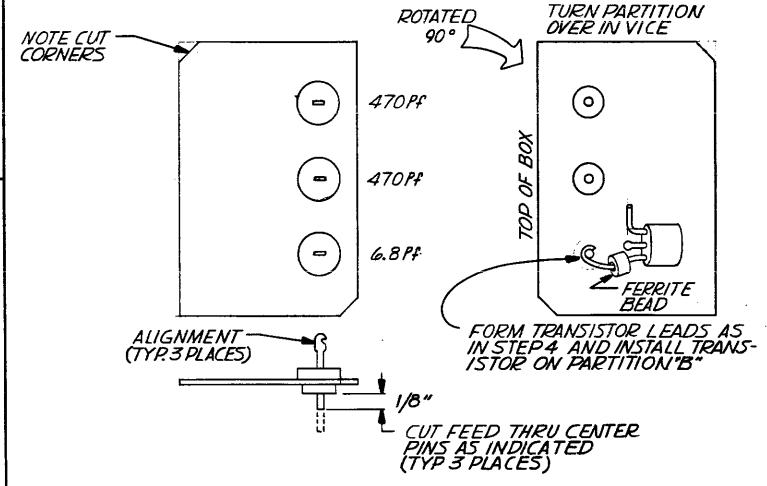


STEP 7 INSTALL PARTITION "B" IN BOX, LAY COVER "A" OVER PARTITION "C" AREA FOR SPACER. AVOID GETTING EXCESS SOLDER ON BOTTOM OF BOX IN CENTER COMPARTMENT.

STEP 8 BUILD P.C. BOARD FOR CENTER COMPARTMENT

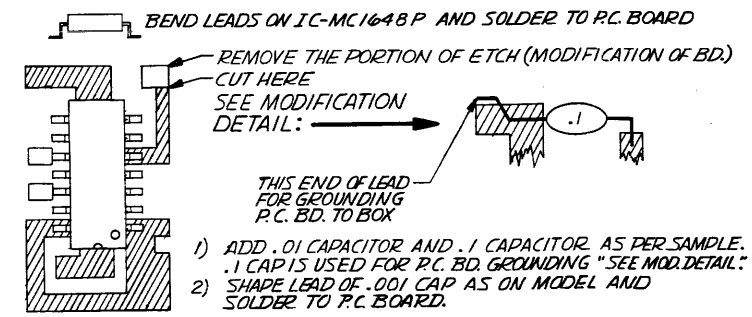

GLUE P.C. BD. TO BOX WITH RTV IN A POSITION WHERE THE .001 CAP LEAD REACHES THE FEED THRU CAP TERMINAL AND THE .1 CAP WILL CLEAR THE TRIMMER CAP. WHEN INSTALLED.


STEP 9 SOLDER FEED THRU CAPACITORS INTO PARTITION "A"

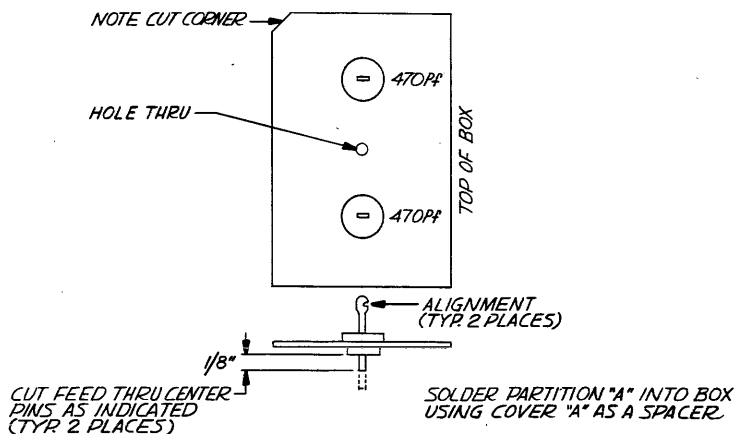


STEP 10 INSTALL TRIMMER CAPACITOR IN MIDDLE COMPARTMENT AND COMPLETE WIRING OF MIDDLE COMPARTMENT AS PER SAMPLE. CAUTION:

NOTE: SGE 146 TRIMMER CAP IS INSTALLED BY SOLDER INSTEAD OF A MOUNTING NUT. GLASS PISTON TRIMMERS ARE VERY FRAGILE TIGHTEN MOUNTING NUT WITH 5/16" OPEN END WRENCH (THIN TYPE), HOLDING CAPACITOR WITH A 7/32" OPEN END WRENCH ON FLATTENED THREADS. ALLOW SLIGHT LOOP IN WIRE FROM CAPACITOR TO P.C. BOARD TO PREVENT STRAIN ON THE CAPACITOR.


STEP 11 INSTALL: 10K RESISTOR, 68PF MICA CAPACITOR, ITT 141 VARICAP ON PARTITION "A" AS PER SAMPLE, DO NOT BLOCK CENTER HOLE IN PARTITION "A" WITH 68PF CAP.

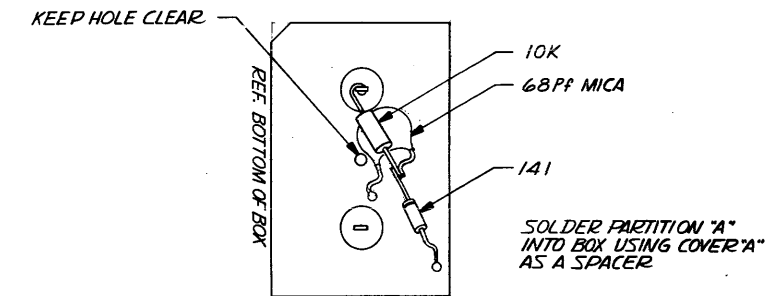

STEP 12 INSTALL COIL IN END COMPARTMENT WITH 6/32 x 1/4 SCREW AND LOCKWASHER. COIL TAP IS INSULATED WITH 22 GA. TEFLON SLEEVING AND FED INTO CENTER COMPARTMENT. SOLDER END WIRE OF COIL TO FEED THRU CAPACITOR WITH SLIGHT LOOP IN WIRE, NOT DIRECT.

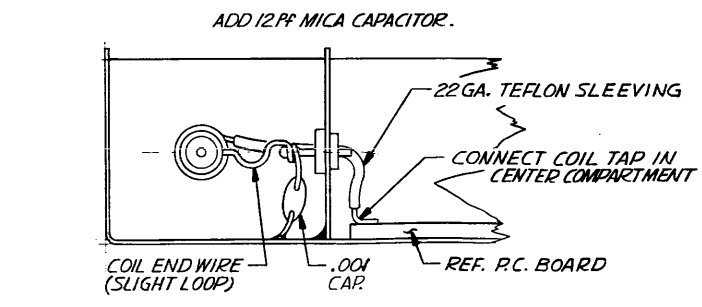

FOR COIL WINDING SEE: "COIL DETAIL"

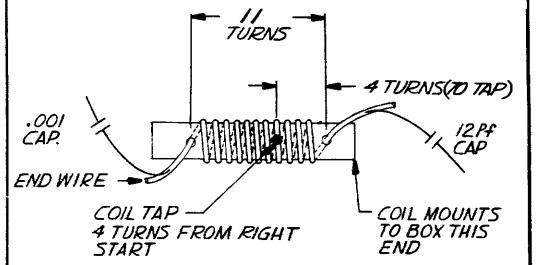

COIL DETAIL

NOTE: USE 20 GA. WIRE AND COAT COIL WIRE WITH POLYSTYRENE Q-DOPE


| | | | |
|--|----------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN: D. COOPER | DATE: 7-29-76 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR: T. Saliga | SEPT 8 1977 | |
| FINISH: WAVETEK PROCESS | RELEASE APPROV: | TOLERANCE UNLESS OTHERWISE SPECIFIED: .010 ANGLES: 1° | ASSEMBLY 60.4 MHz VCO MODULE, DIGITS 2 AND 3 |
| | | DO NOT SCALE DWG | |
| | | SCALE | MODEL NO. 0102-00-0520 |
| | | | DWG NO. 0102-00-0520 |
| | | | REV. C |
| | | | CODE IDENT. 23338 |
| | | | SHEET 1 OF 2 |

0102-00-0520

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.


| REV | ECN | BY | DATE | APP |
|-----|-----|----|------|-----|
| | | | | |

PARTITIONS AND COVERS INSTALLATION

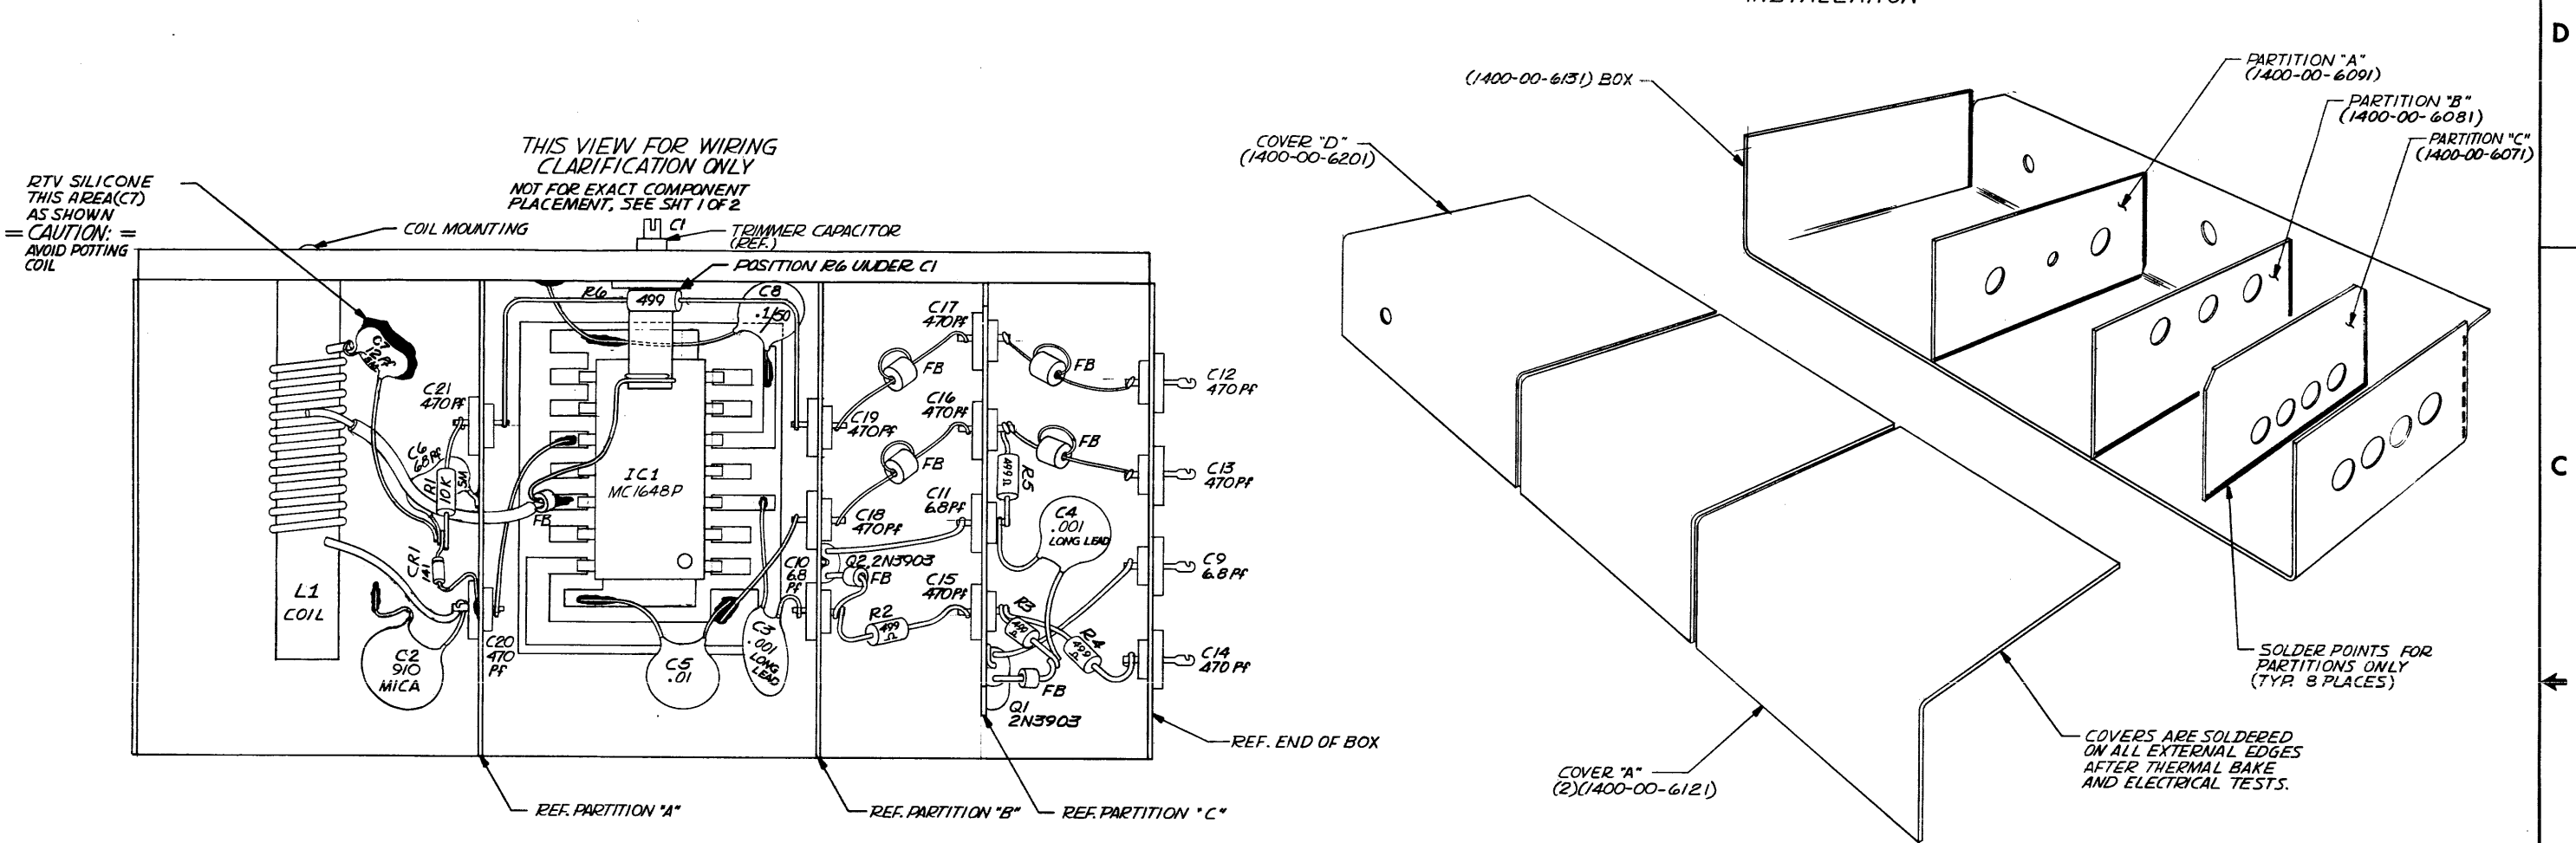

THIS VIEW FOR WIRING CLARIFICATION ONLY NOT FOR EXACT COMPONENT PLACEMENT, SEE SHIT 1 OF 2

THIS VIEW COVERS INSTALLED

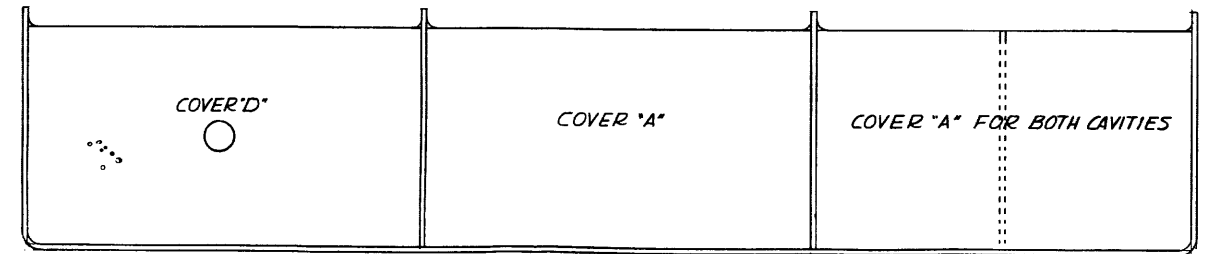

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | |
|--|----------------------|---|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN D. COOPER | DATE 7-30-76 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR Tom Saliga | DATE 8-77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX ± 0.10 ANGLES ± 1° XX ± 0.30 | TITLE ASSEMBLY 60.4 MHz VCO MODULE, DIGITS 2 AND 3 |
| | DO NOT SCALE DWG | SCALE | MODEL NO. 0102-00-0520 |
| | | | DWG NO. 0102-00-0520 |
| | | | REV C |
| | | | CODE IDENT 23338 |
| | | | SHEET 2 OF 2 |

0102-00-0520

8

7

6

5

4

3

2

1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

REV ECN BY DATE APP

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|--------------------------|----------------------|-------|--------------|--------|
| NONE | ASSY DRWG, VCO MOD | 0102-00-00520 | WVTK | 0102-00-0520 | 1 |
| NONE | SCHEMATIC, VCO MOD | 0103-00-0520 | WVTK | 0103-00-0520 | 1 |
| NONE | INDUCTOR, 60.4MHZ | 172-604 | WVTK | 1204-00-0604 | 4 |
| NONE | PARTITION "C" | 1400-00-6071 | WVTK | 1400-00-6071 | 1 |
| NONE | PARTITION (B) | 1400-00-6081 | WVTK | 1400-00-6081 | 1 |
| NONE | PARTITION (A) | 1400-00-6091 | WVTK | 1400-00-6091 | 1 |
| NONE | COVER (A) | 1400-00-6121 | WVTK | 1400-00-6121 | 2 |
| NONE | BOX, OSCILLATOR | 1400-00-6131 | WVTK | 1400-00-6131 | 1 |
| L1 | COIL FORM | 1400-00-6150 | WVTK | 1400-00-6150 | 1 |
| NONE | COVER (D) | 1400-00-6201 | WVTK | 1400-00-6201 | 1 |
| C3 C4 | CAP, CER, .001MF, 1KV | DD-102 LONG LEAD | CRL | 1500-01-0201 | 2 |
| C5 | CAP, CER, MN, .01MF, 50V | CAC0225U103Z100A | CORNG | 1500-01-0310 | 1 |
| C7 | CAP, MICA, 12PF, 500V | DM15-120J | ARCO | 1500-11-2000 | 1 |
| C6 | CAP, MICA, 68PF, 500V | DM15-680J | ARCO | 1500-16-8000 | 1 |
| C2 | CAP, 910PF, 100V, 1% | DM15-911F | ARCO | 1500-19-1101 | 1 |
| C1 | CAP, PISTON TRIMMER | QSG146 | SPRGD | 1500-50-9000 | 1 |
| C12 C13 C14 C15 C16 C17 C18 C19 C20 C21 | CAP, FTHRU, 470PF, 500V | 54-794-010-X5R0-471M | SPECT | 1500-64-7106 | 10 |

WAVETEK PARTS LIST TITLE: 60.4MHZ VCO MOD ASSEMBLY NO. 1206-00-0520 REV C
PAGE: 1

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------|-------------------------|----------------------|-------|--------------|--------|
| C10 C11 C9 | CAP, FTHRU, 6.8PF, 500V | 54-794-010-X5E0-689M | SPECT | 1500-66-8906 | 3 |
| C8 | CAP, CER, .1MF, 50V | D645B104MP | WSTCP | 1509-90-0011 | 1 |
| NONE | 60.4MHZ VCO MODULE | 1700-00-0520 | WVTK | 1700-00-0520 | 1 |
| NONE | FERRITE BEAD | 56-590-65/3B | FERRX | 3100-00-0001 | 3 |
| R1 | RES, MF, 1/8W, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 1 |
| R2 R3 R4 R5 R6 | RES, MF, 1/8, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 5 |
| CR1 | DIODE | 141 | ITT | 4803-02-0141 | 1 |
| Q1 Q2 | TRANS | 2N3903 | NSC | 4901-03-9030 | 2 |
| IC1 | IC | MC1648P | MDT | 8100-16-4810 | 1 |

WAVETEK PARTS LIST TITLE: 60.4MHZ VCO MOD ASSEMBLY NO. 1206-00-0520 REV C
PAGE: 2

| | | | |
|--|--|--------------------------------|---------------------------------------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR | TITLE | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | PARTS LIST 60.4 MHZ VCO MOD | |
| | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX - 010 ANGLES - 1 XX - 030 | | |
| DO NOT SCALE DWG | MODEL NO | DWG NO | REV |
| SCALE | 172B | 1206-00-0520 | C |
| | CODE IDENT | 23338 | SHEET 1 OF 1 |

NOTE UNLESS OTHERWISE SPECIFIED

BISHOP GRAPHICALS/ACCUPRESS REORDER NO. A3884

8

7

6

5


4

3

2

1

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

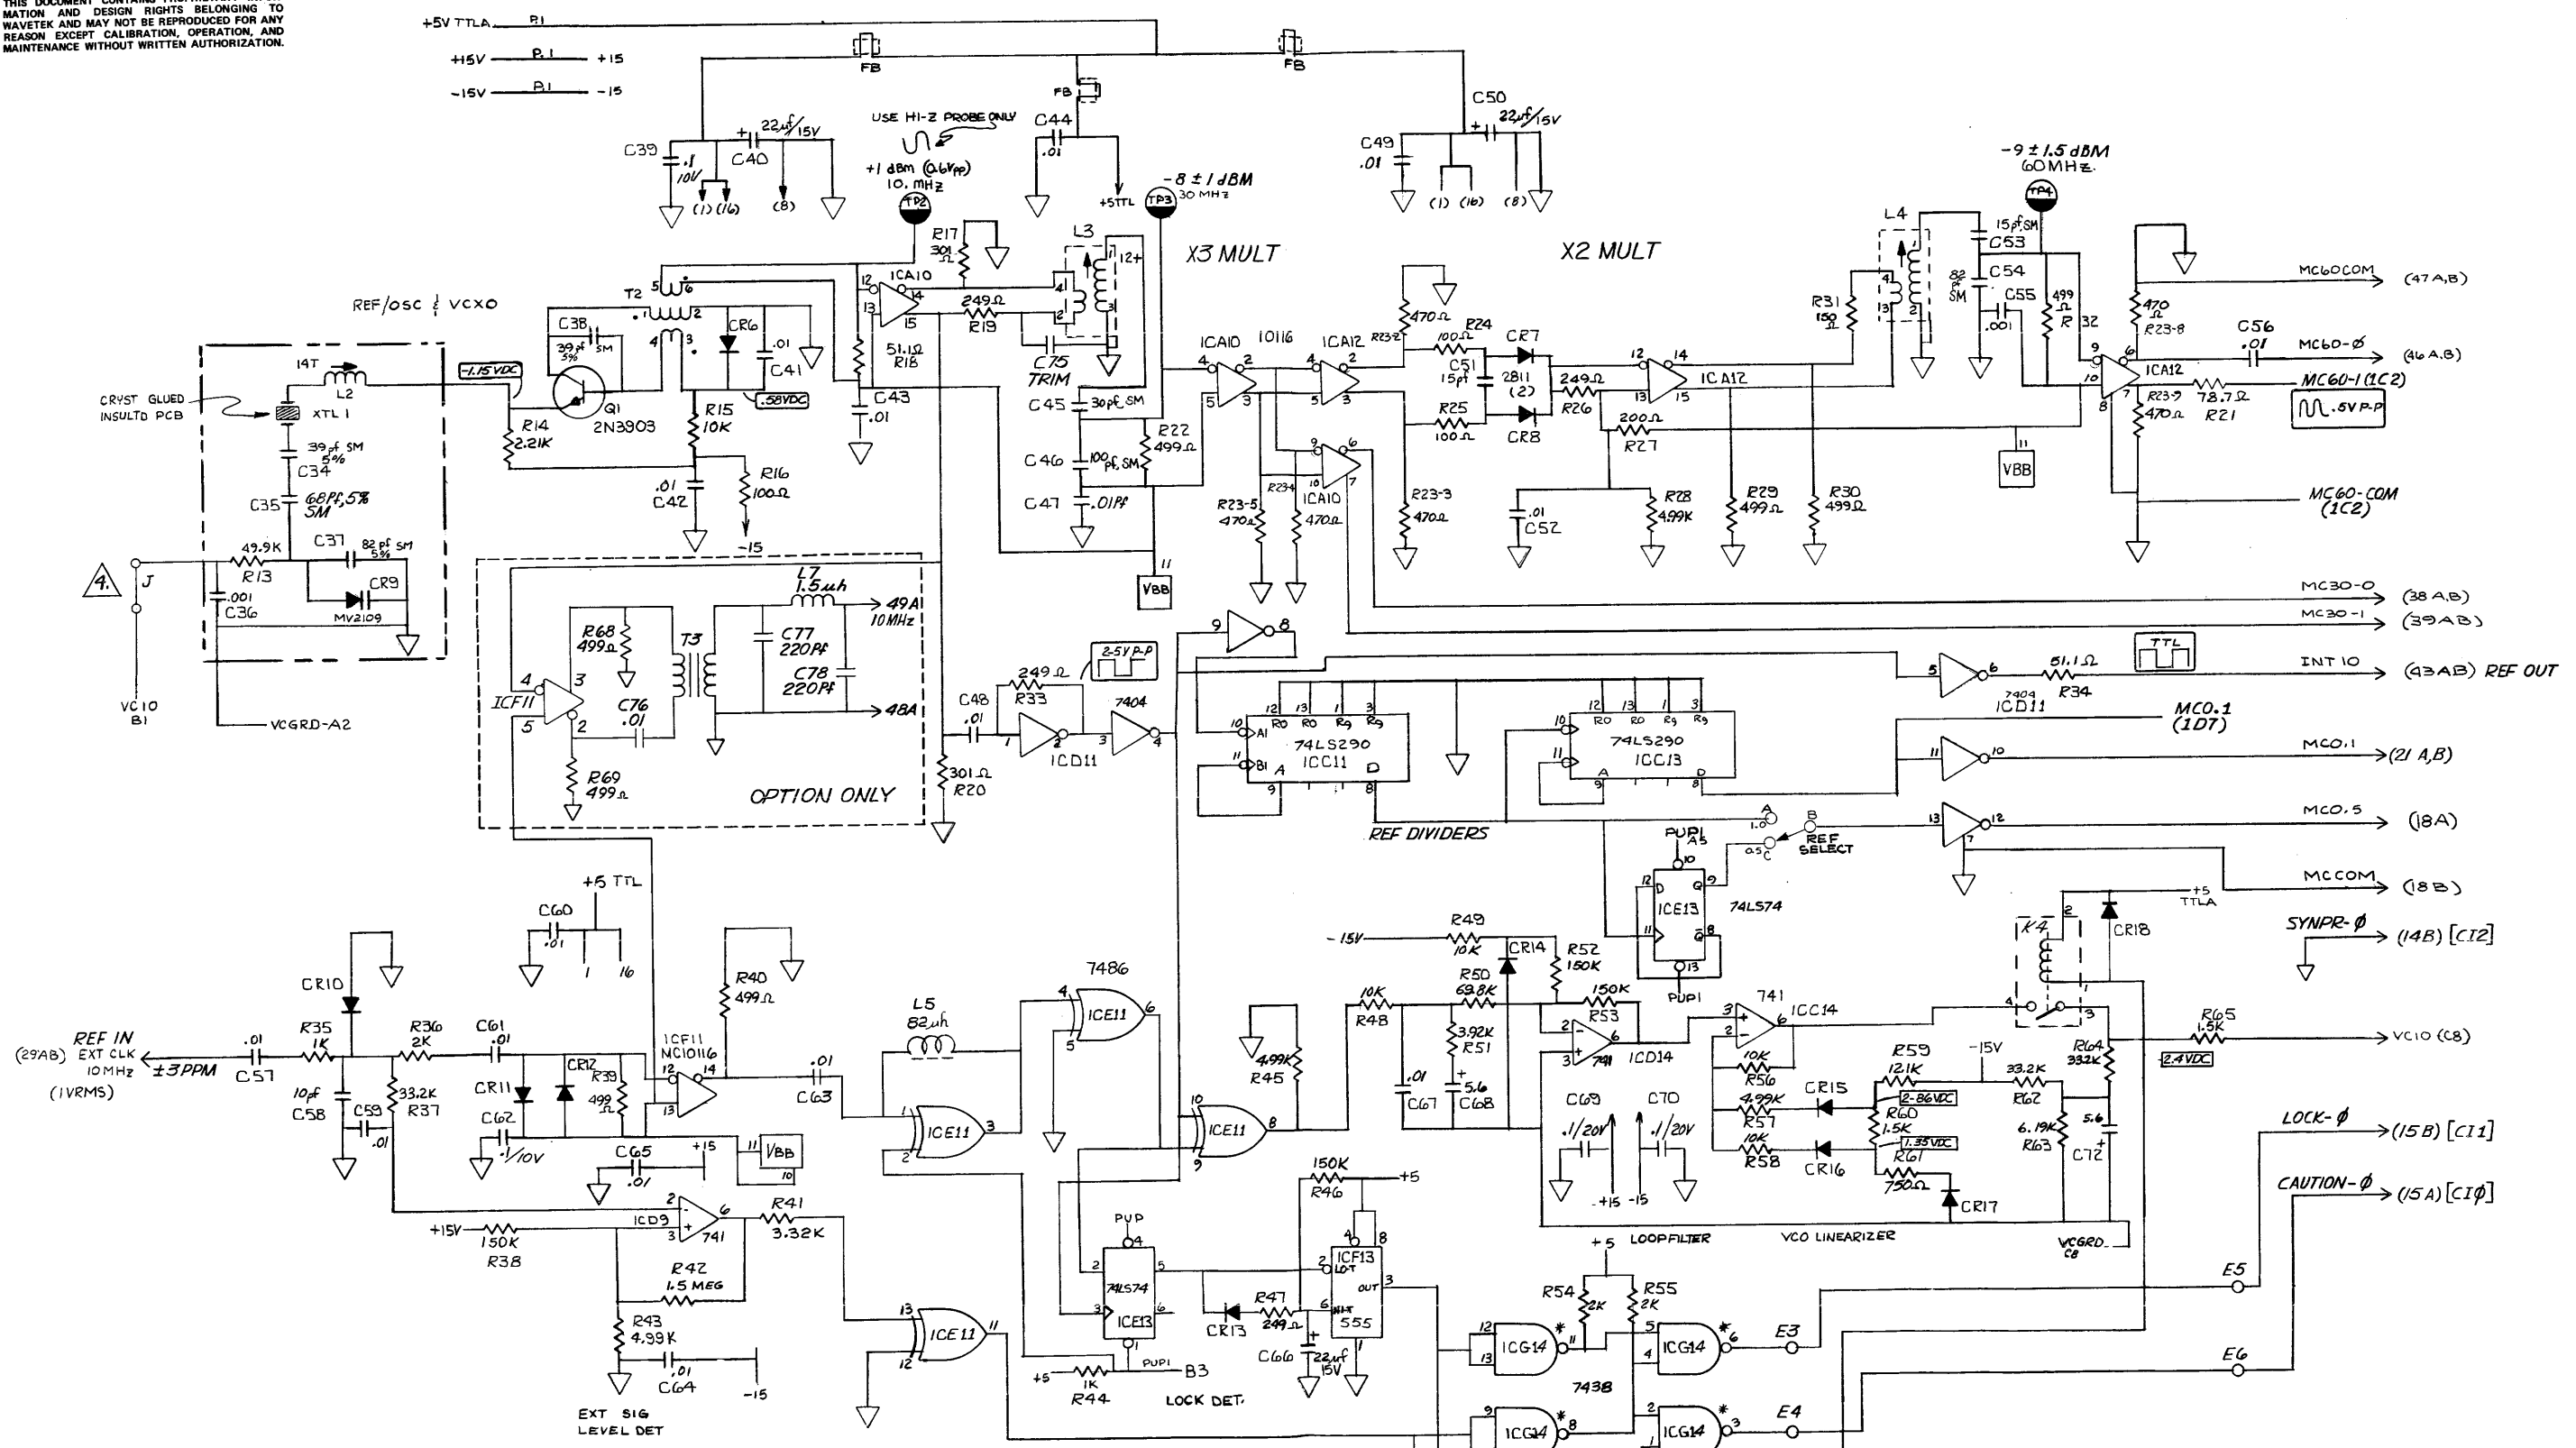


- 8. USE FERRITE BEAD NO.3100-00-0002.
- 7. ALL .001, .01 F.I CAPS ARE CERAMIC DISC.
- 6. DIODES UNMARKED ARE FD6666
- 5. XTL1:10.00 MHZ CRYSTAL PER SPEC.

4 VC10 JUMPERS TO ITSELF ON SAME PCB. & T.P. ±0.4v To -5 vdc RANGE (±100~)
NOTE: UNLESS OTHERWISE SPECIFIED

| LOCK | CAUT | MEANING |
|------|------|-----------------|
| 0 | 0 | (NEVER HAPPENS) |
| 0 | 1 | HAPPY-EXT STD |
| 1 | 0 | ALARM-PROBLEM |
| 1 | 1 | HAPPY-INT STD |

LAST REF. DES. USED: R69 Q1 EG
C78 L7 XTL1
CR19 T3 TP4
1 RELAY, REF K4

| | | | |
|--|----------------------|---|---|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN RD | DATE 6-11-76 | WAVETEK SAN DIEGO • CALIFORNIA |
| MATERIAL | PROJ ENGR 16m Sal/eg | SEPT 7/77 | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED .XXX ±.010 ANGLES ±1° XX ±.030 | TITLE SCHEMATIC, DIGITS 4&5/REFERENCE |
| DO NOT SCALE DWG | SCALE | MODEL NO. | REV 0103-00-0705 G |
| CODE IDENT 23338 | | | SHEET 2 OF 2 |

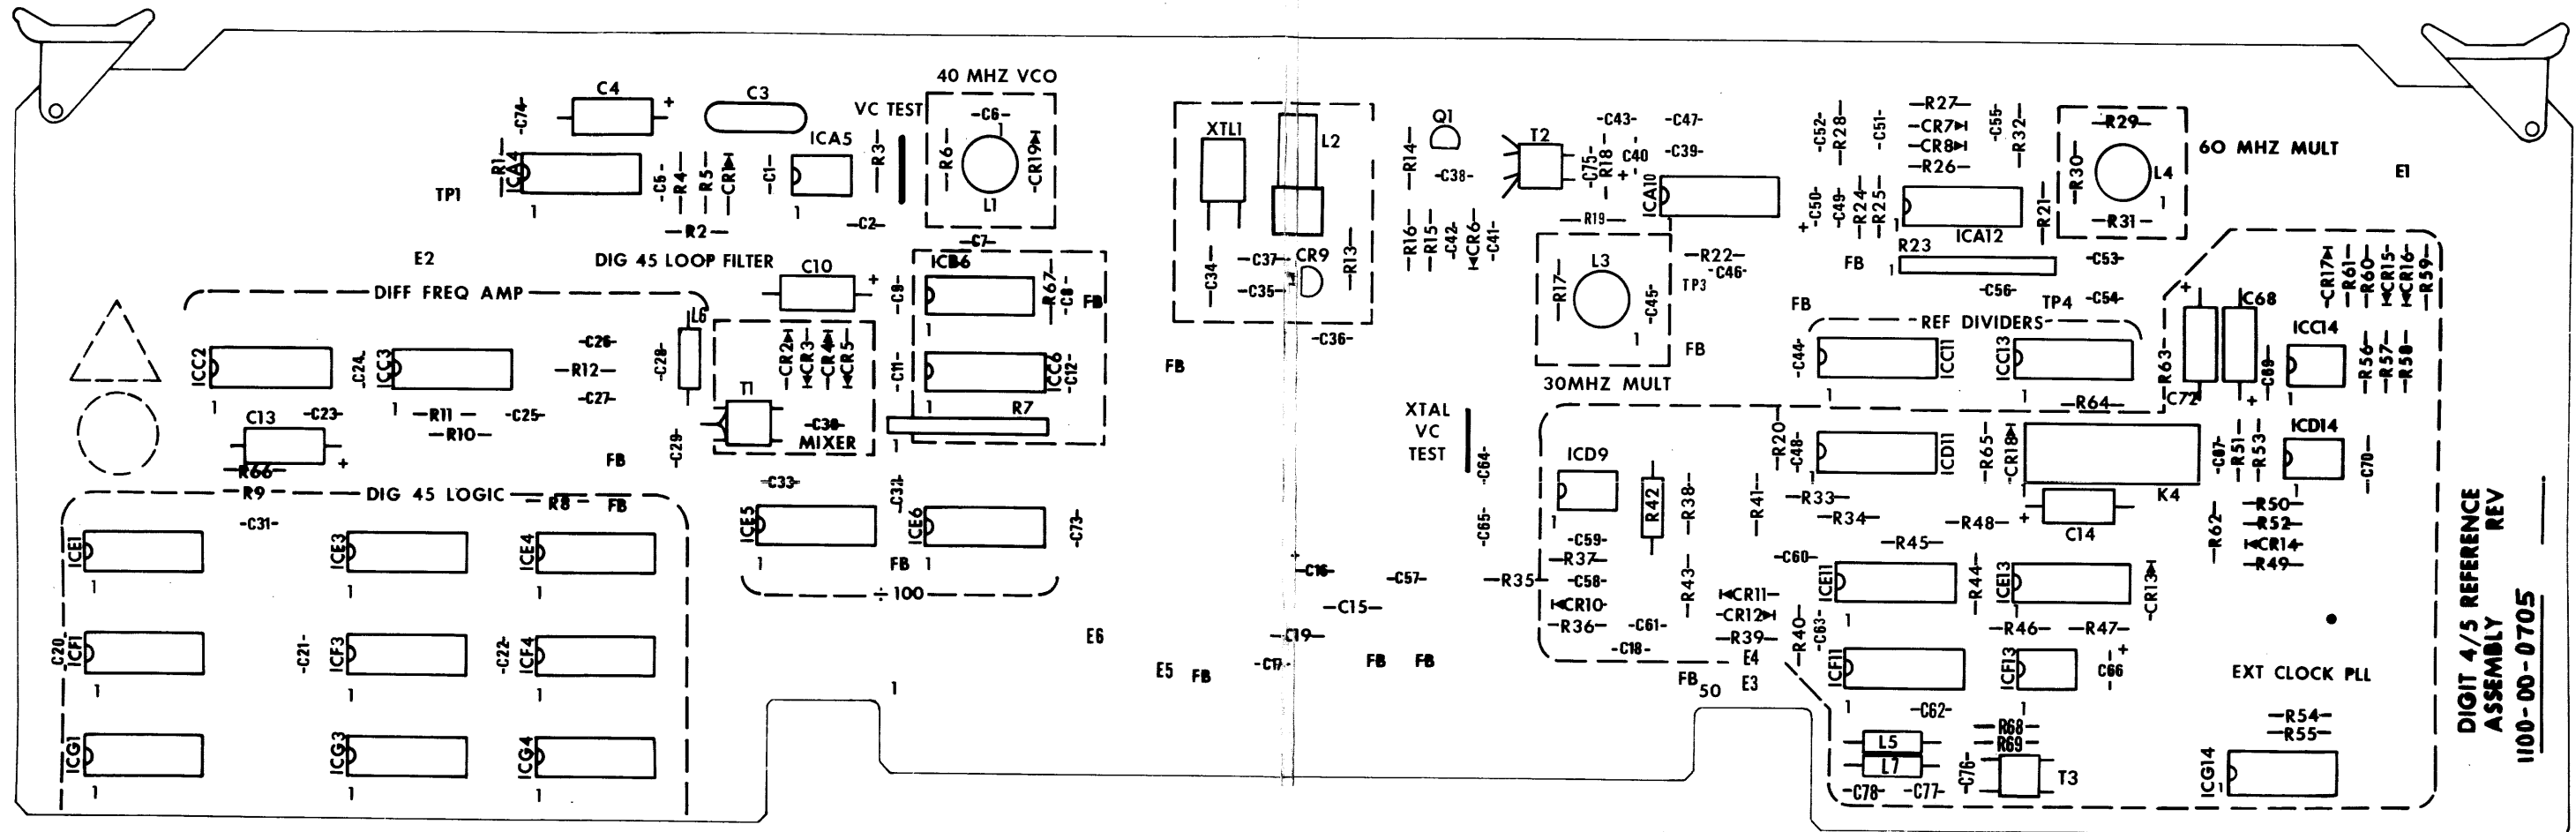

1100-00-0705

| | | | | |
|--|---|--------------|---------------------------------------|--|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| | PROJ ENGR | | | |
| MATERIAL | RELEASE | APPROV | DIGITS 4 & 5 / REF PCA | |
| FINISH WAVETEK PROCESS | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030 | | | |
| DO NOT SCALE DWG | MODEL NO | DWG NO | REV | |
| SCALE | 1725 | 0101-00-0705 | | |
| | CODE IDENT 23338 | SHEET 1 | OF 1 | |

THIS DOCUMENT CONTAINS PROPRIETARY INFORMATION AND DESIGN RIGHTS BELONGING TO WAVETEK AND MAY NOT BE REPRODUCED FOR ANY REASON EXCEPT CALIBRATION, OPERATION, AND MAINTENANCE WITHOUT WRITTEN AUTHORIZATION.

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---|--------------------------|-------------------|-------|--------------|--------|
| NONE | ASSY DRWG. DIGIT 4-5 | 0101-00-0705 | WVTK | 0101-00-0705 | 1 |
| NONE | SCHEMATIC, DIGIT 4-5 | 0103-00-0705 | WVTK | 0103-00-0705 | 1 |
| T1 | TRANSFORMER MIXER | 172-538 | WVTK | 1204-00-0538 | 1 |
| T2 | TRANSFORMER | 172-540 | WVTK | 1204-00-0540 | 1 |
| L1 | COIL, 40MC VCD | 172-541 | WVTK | 1204-00-0541 | 1 |
| L3 | COIL, 30MC MULT | 172-543 | WVTK | 1204-00-0543 | 1 |
| L4 | COIL, 60MC MULT | 172-544 | WVTK | 1204-00-0544 | 1 |
| L2 | COIL, XTAL TUNE | 1204-00-0627 | WVTK | 1204-00-0627 | 1 |
| NONE | SHIELD, SYNTH | 1400-00-6193 | WVTK | 1400-00-6193 | 1 |
| NONE | SHIELD, OSC | 1400-00-6631 | WVTK | 1400-00-6631 | 1 |
| C58 | CAP, CER, 10PF, 1KV | DD-100LL | CRL | 1500-01-0001 | 1 |
| C12 C30 C36 C55 | CAP, CER, .001MF, 1KV | DD-102 LONG LEAD | CRL | 1500-01-0201 | 4 |
| C1 C11 C2 C24 C25 C26 C27 C31 C41 C42 C43 C44 C47 C48 C49 C5 C52 C56 C57 C59 C60 C61 C63 C64 C65 C67 C74 C9 | CAP, CER, MN, .01MF, 50V | CAC0225U103Z100A | CORNG | 1500-01-0310 | 28 |
| C15 C17 C18 C19 C20 C21 C22 C23 C32 C33 C39 C62 C69 C7 C70 | CAP, CER, MDN, .1MF, 50V | CAC0325U104Z050A | CORNG | 1500-01-0405 | 17 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|------------------------|--------------------------|-------------------|-------|--------------|--------|
| NONE | PIN, MALE | 61182-2 | AMP | 2100-05-0020 | 2 |
| XTL1 | CRYSTAL, 10MHZ | 172-010 | WVTK | 2300-99-0007 | 1 |
| NONE | STANDOFF | S55368-3C-5A | UNICP | 2800-05-6114 | 5 |
| NONE | PC BD EJECTOR | 103 BROWN | CALMK | 2800-07-0009 | 2 |
| NONE | TRANSIPAD | 10123N | METRS | 2800-11-0003 | 12 |
| NONE | COIL SHIELD 3/4" | 734-21 | AURA | 3000-00-0015 | 3 |
| NONE | BALUN CORE | 2873000902 | FARIT | 3100-00-0002 | 12 |
| K4 | RELAY, REED, FORM-A | RA3019-1051 | ETROL | 4500-00-0007 | 1 |
| R16 R24 R25 | RES, MF, 1/BW, 1%, 100 | RN55D-1000F | TRW | 4701-03-1000 | 3 |
| R35 R4 R44 R66 R8 R9 | RES, MF, 1/BW, 1%, 1K | RN55D-1001F | TRW | 4701-03-1001 | 6 |
| R15 R48 R49 R56 R58 R6 | RES, MF, 1/BW, 1%, 10K | RN55D-1002F | TRW | 4701-03-1002 | 6 |
| R59 | RES, MF, 1/BW, 1%, 12.1K | RN55D-1212F | TRW | 4701-03-1212 | 1 |
| R31 | RES, MF, 1/BW, 1%, 150 | RN55D-1500F | TRW | 4701-03-1500 | 1 |
| R60 R65 | RES, MF, 1/BW, 1%, 1.5K | RN55D-1501F | TRW | 4701-03-1501 | 2 |
| R38 R46 R52 R53 | RES, MF, 1/BW, 1%, 150K | RN55D-1503F | TRW | 4701-03-1503 | 4 |
| R27 | RES, MF, 1/BW, 1%, 200 | RN55D-2000F | TRW | 4701-03-2000 | 1 |
| R36 R54 R55 | RES, MF, 1/BW, 1%, 2K | RN55D-2001F | TRW | 4701-03-2001 | 3 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|--|--|-------------------|-------|--------------|--------|
| R23 R7 | RES MODULE | 4310R-101-471 | BOURN | 4770-00-0009 | 2 |
| CR19 | DIODE | 141 | ITT | 4803-02-0141 | 1 |
| CR9 | DIODE | HV2109 | MDT | 4803-02-2109 | 1 |
| CR1 CR10 CR11 CR12 CR13 CR14 CR15 CR16 CR17 CR18 CR6 | DIODE | 1N4148 | FAIR | 4807-02-6666 | 11 |
| CR7 CR8 | DIODE | 5082-2811 | HP | 4809-02-2811 | 2 |
| CR2 CR3 CR4 CR5 | DIODE, SET, 5082-2811 QTY: 4. 4809-02-2811 | 4898-00-0012 | WVTK | 4898-00-0012 | 1 |
| Q1 | TRANS | 2N3903 | NSC | 4901-03-9030 | 1 |
| ICF13 | IC | NE555V | SIG | 7000-05-3500 | 1 |
| ICA5 ICC14 ICD14 ICD9 | IC | LM741CN | NSC | 7000-07-4100 | 4 |
| ICF1 | IC | 74502 | SIG | 8000-74-0201 | 1 |
| ICD11 | IC | 7404 | TI | 8000-74-0400 | 1 |
| ICG14 | IC | 7438 | TI | 8000-74-3800 | 1 |
| ICE1 | IC | 7474 | TI | 8000-74-7400 | 1 |
| ICE13 | IC | 74LS74 | TI | 8000-74-7410 | 1 |
| ICE11 | IC | 7486 | TI | 8000-74-8600 | 1 |
| ICC2 | IC | MC10125P | MDT | 8001-01-2500 | 1 |

WAVETEK PARTS LIST TITLE PCA, DIGIT 4-5 ASSEMBLY NO. 1100-00-0705 REV E PAGE: 1

WAVETEK PARTS LIST TITLE PCA, DIGIT 4-5 ASSEMBLY NO. 1100-00-0705 REV E PAGE: 3

WAVETEK PARTS LIST TITLE PCA, DIGIT 4-5 ASSEMBLY NO. 1100-00-0705 REV E PAGE: 5

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|------------------------|------------------------|-------------------|-------|--------------|--------|
| C73 C8 | | | | | |
| C51 | CAP, CER, 15PF, 1KV | DD-150 | CRL | 1500-01-5011 | 1 |
| C46 | CAP, MICA, 100PF, 500V | DM15-101J | ARCO | 1500-11-0100 | 1 |
| C53 | CAP, MICA, 15PF, 500V | DM15-150J | ARCO | 1500-11-5000 | 1 |
| C28 C29 C6 | CAP, MICA, 150PF, 500V | DM15-151J | ARCO | 1500-11-5100 | 3 |
| C45 | CAP, MICA, 30PF, 500V | DM15-300J | ARCO | 1500-13-0000 | 1 |
| C34 C38 | CAP, MICA, 39PF, 500V | DM15-390J | ARCO | 1500-13-9000 | 2 |
| C75T | CAP, MICA, 56PF, 500V | DM15-560J | ARCO | 1500-15-6000 | 1 |
| C37 | CAP, MICA, 68PF, 500V | DM15-680J | ARCO | 1500-16-8000 | 1 |
| C35 C54 | CAP, MICA, 82PF, 500V | DM15-820J | ARCO | 1500-18-2000 | 2 |
| C3 | CAP, MYLAR, .022MF100V | 225P22391WD3 | SPRAG | 1500-42-2314 | 1 |
| C16 C40 C50 C66 | CAP, TANT, 22MF, 15V | 196D226X9015KA1 | SPRAG | 1500-72-2601 | 4 |
| C10 C13 C14 C4 C68 C72 | CAP, TANT, 5.6MF, 35V | 150D565X9035B2 | SPRAG | 1500-75-6502 | 6 |
| NONE | 4TH/5TH FREQ REF BD | 1700-00-0705 | WVTK | 1700-00-0705 | 1 |
| L5 | CHOKER, 82MH, 5% | 1537-72 | DLVAN | 1800-00-0005 | 1 |
| L6 | CHOKER, .33MH, 5% | 1537-04 | DLVAN | 1800-00-0009 | 1 |
| NONE | SKT, IC, 16PIN | D1LB-16P-108 | BURND | 2100-03-0028 | 1 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|---------------------------------|--------------------------|-------------------|------|--------------|--------|
| R14 R2 | RES, MF, 1/BW, 1%, 2.21K | RN55D-2211F | TRW | 4701-03-2211 | 2 |
| R19 R26 R33 R47 | RES, MF, 1/BW, 1%, 249 | RN55D-2490F | TRW | 4701-03-2490 | 4 |
| R67 | RES, MF, 1/BW, 1%, 2.49K | RN55D-2491F | TRW | 4701-03-2491 | 1 |
| R17 R20 | RES, MF, 1/BW, 1%, 301 | RN55D-3010F | TRW | 4701-03-3010 | 2 |
| R41 | RES, MF, 1/BW, 1%, 3.32K | RN55D-3321F | TRW | 4701-03-3321 | 1 |
| R37 R62 R64 | RES, MF, 1/BW, 1%, 33.2K | RN55D-3322F | TRW | 4701-03-3322 | 3 |
| R51 | RES, MF, 1/BW, 1%, 3.92K | RN55D-3921F | TRW | 4701-03-3921 | 1 |
| R10 R11 R22 R29 R30 R32 R39 R40 | RES, MF, 1/B, 1%, 499 | RN55D-4990F | TRW | 4701-03-4990 | 8 |
| R28 R43 R45 R5 R57 | RES, MF, 1/BW, 1%, 4.99K | RN55D-4991F | TRW | 4701-03-4991 | 5 |
| R13 | RES, MF, 1/BW, 1%, 49.9K | RN55D-4992F | TRW | 4701-03-4992 | 1 |
| R12 R18 R34 | RES, MF, 1/BW, 1%, 51.1 | RN55D-5111F | TRW | 4701-03-5119 | 3 |
| R63 | RES, MF, 1/BW, 1%, 6.19K | RN55D-6191F | TRW | 4701-03-6191 | 1 |
| R3 | RES, MF, 1/BW, 1%, 6.98K | RN55D-6981F | TRW | 4701-03-6981 | 1 |
| R50 | RES, MF, 1/BW, 1%, 69.8K | RN55D-6982F | TRW | 4701-03-6982 | 1 |
| R61 | RES, MF, 1/BW, 1%, 750 | RN55D-7500F | TRW | 4701-03-7500 | 1 |
| R21 | RES, MF, 1/BW, 1%, 78.7 | RN55D-787F | TRW | 4701-03-7879 | 1 |
| R42 | RES, MF, 1/2W, 1%, 1.5M | RN65D-1504F | TRW | 4701-23-1504 | 1 |

| REFERENCE DESIGNATORS | PART DESCRIPTION | ORIG-MFGR-PART-NO | MFGR | WAVETEK NO. | QTY/PT |
|-----------------------------|--|-------------------|------|--------------|--------|
| ICES ICE6 | IC | MC10138P | MDT | 8001-01-3800 | 2 |
| ICG4 | IC | 74LS139 | SIG | 8007-41-3910 | 1 |
| ICG1 | IC | 74S140 | TI | 8007-41-4001 | 1 |
| ICE4 ICF4 | IC | 74LS175 | TI | 8007-41-7510 | 2 |
| ICE3 ICF3 ICG3 | IC | 74LS192 | TI | 8007-41-9210 | 3 |
| ICC11 ICC13 | IC | 74LS290 | TI | 8007-42-9010 | 2 |
| ICB6 | IC | MC1648P | MDT | 8100-16-4810 | 1 |
| ICA4 | IC | MC4044P | MDT | 8100-40-4400 | 1 |
| ICA10 ICA12 ICC3 ICC6 ICF11 | IC, SEL, MC10116P QTY: 1. 8001-01-1600 | 8200-00-0012 | WVTK | 8200-00-0012 | 5 |

WAVETEK PARTS LIST TITLE PCA, DIGIT 4-5 ASSEMBLY NO. 1100-00-0705 REV E PAGE: 2

WAVETEK PARTS LIST TITLE PCA, DIGIT 4-5 ASSEMBLY NO. 1100-00-0705 REV E PAGE: 4

WAVETEK PARTS LIST TITLE PCA, DIGIT 4-5 ASSEMBLY NO. 1100-00-0705 REV E PAGE: 6

NOTE: UNLESS OTHERWISE SPECIFIED

| | | | | |
|--|----------------|---|---------------------------------------|-------|
| REMOVE ALL BURRS AND BREAK SHARP EDGES | DRAWN | DATE | WAVETEK SAN DIEGO • CALIFORNIA | |
| MATERIAL | PROJ ENGR | TITLE | | |
| FINISH WAVETEK PROCESS | RELEASE APPROV | TOLERANCE UNLESS OTHERWISE SPECIFIED XXX .010 ANGLES .1 XX .030 | PARTS LIST PCA, DIGIT 4-5 | |
| DO NOT SCALE DWG | SCALE | MODEL NO. 172B | DWG NO. 1100-00-0705 | REV E |
| | | CODE IDENT 23338 | SHEET 1 | OF 1 |

APPENDIX A

Table A-1. American Standard Code for Information Interchange (ASCII)

| BITS | | | | 0 ₀₀ | MSG ¹ | 0 ₀₁ | MSG | 0 ₁₀ | MSG | 0 ₁₁ | MSG | 1 ₀₀ | MSG | 1 ₀₁ | MSG | 1 ₁₀ | MSG | 1 ₁₁ | MSG |
|------|-----|-----|-----|-----------------|------------------|------------------|-----|-----------------|-------|-----------------|-----|-----------------|-----|-----------------|-----|-----------------|-----|-----------------|-----|
| b4 | b3 | b2 | b1 | column | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | | | | | | | |
| row | row | row | row | row | row | row | row | row | row | row | row | row | row | row | row | row | row | row | row |
| 0 | 0 | 0 | 0 | 0 | NUL | DLE | SP | 0 | @ | P | \ | p | | | | | | | |
| 0 | 0 | 0 | 1 | 1 | SOH | GTL | DC1 | LLO | ! | A | / | q | | | | | | | |
| 0 | 0 | 1 | 0 | 2 | STX | DC2 | " | 2 | B | Q | a | q | | | | | | | |
| 0 | 0 | 1 | 1 | 3 | ETX | DC3 | # | 3 | C | R | b | r | | | | | | | |
| 0 | 1 | 0 | 0 | 4 | EOT | SDC | DC4 | DCL | \$ | S | c | s | | | | | | | |
| 0 | 1 | 0 | 1 | 5 | ENQ | PPC ³ | NAK | PPU | % | T | d | t | | | | | | | |
| 0 | 1 | 1 | 0 | 6 | ACK | SYN | | & | 6 | U | e | u | | | | | | | |
| 0 | 1 | 1 | 1 | 7 | BEL | ETB | | , | 7 | V | f | v | | | | | | | |
| 1 | 0 | 0 | 0 | 8 | BS | GET | CAN | SPE | (| W | g | w | | | | | | | |
| 1 | 0 | 0 | 1 | 9 | HT | TCT | EM | SPD |) | X | h | x | | | | | | | |
| 1 | 0 | 1 | 0 | 10 | LF | SUB | | * | : | Y | i | y | | | | | | | |
| 1 | 0 | 1 | 1 | 11 | VT | ESC | | + | : | Z | j | z | | | | | | | |
| 1 | 1 | 0 | 0 | 12 | FF | FS | | , | < | [| k | { | | | | | | | |
| 1 | 1 | 0 | 1 | 13 | CR | GS | | . | = | \ | l | | | | | | | | |
| 1 | 1 | 1 | 0 | 14 | SO | RS | | . | > |] | m | } | | | | | | | |
| 1 | 1 | 1 | 1 | 15 | SI | US | | / | ? UNL | O | n | ~ | | | | | | | |
| | | | | | | | | | | | o | DEL | | | | | | | |

ADDRESSSED
COMMAND
GROUP
(ACG)

UNIVERSAL
COMMAND
GROUP
(UCG)

LISTEN
ADDRESS
GROUP
(LAG)

TALK
ADDRESS
GROUP
(TAG)

MEANING DEFINED BY PCG CODE

MEANING DEFINED BY PCG CODE

PRIMARY COMMAND GROUP (PCG)

SECONDARY COMMAND GROUP (SCG)

¹MSG = INTERFACE MESSAGE
²b1 = DIO1 ... b7 = DIO7
³REQUIRES SECONDARY COMMAND
⁴DENSE SUBSET (COLUMN 2 THROUGH 5)

- | | | | |
|-----------|---------------------------|---|-------------------------|
| DC4 = DCL | Device clear | } | Universal Command Group |
| DC1 = LLO | Local lockout | | |
| NAK = PPU | Parallel poll unconfigure | | |
| EM = SPD | Serial poll disable | | |
| CAN = SPE | Serial poll enable | | |
| | | | |
| SOH = GTL | Go to local | } | Addressed Command Group |
| EOT = SDC | Selected device clear | | |
| ENQ = PPC | Parallel poll configure | | |
| BS = GET | Group execute trigger | | |
| HT = TCT | Take control | | |

APPENDIX C

Table C-1. 172B Programming Examples

In the following examples, the 172B GPIB address switches are set to 00001. Therefore, the 172B's address on the HP 9825 calculator is 701 (the 7 selects the GPIB interface card, and the 01 selects the 172B).

Also, the 172B's address on the HP 9830 calculator is then "!" (Listen address, ASCII exclamation point) or "A" (Talk address, ASCII letter A). Send CMD "?U!" to write; CMD "?A5" to read.

Example 1. Sweep amplitude from 1 to 11 volts in 10 millivolt steps.

Program for the HP 9825 (HPL Language).

| Program | Remarks |
|------------------------------|---|
| 0: wrt 701, "D0F1E4B0C1P1S3" | Set up other 172B waveform parameters: 0 volts offset, 10 kHz frequency, continuous mode, triangle waveshape, load and output connected, and 30% symmetry. Note that since the Execute action (designated by the letter "I") is not programmed, this information is not yet programmed into the waveform generator circuits. This will happen when the first amplitude is programmed. |
| 1: 1→A | The variable A will be used to hold the current value of the amplitude being sent to the instrument. |
| 2: wrt 701, "A", A, "I" | Send amplitude value to 172B. This is done by sending first the ASCII letter A, then the amplitude in variable A, followed by the letter I, which causes the Execute action, that transfers the information programmed since the last Execute was sent to the waveform generator circuits. |
| 3: A + .01→A | Increment amplitude variable by 10 millivolts. |
| 4: if A <= 11; goto 2 | Test if value of amplitude variable is less than or equal to 11 volts. If so, go back to statement 2 and send another amplitude. If not, proceed to statement 5. |
| 5: stp | Stop program. |

Program for the HP 9830 (BASIC Language).

| | |
|----------------------------------|--|
| 1000 CMD "?U!", "D0F1E4B0C1P1S3" | Set up other 172B waveform parameters: 0 volts offset, 10 kHz frequency, continuous mode, triangle waveshape, load and output connected and 30% symmetry. Note that since the Execute action (designated by the letter "I") is not programmed, this information is not yet programmed into the waveform generator circuits. This will happen when the first amplitude is programmed. |
| 1010 FOR A = 1 TO 11 STEP .01 | The variable A will be used to hold the current value of the amplitude being sent to the instrument. |

Table C-1. 172B Programming Examples (Continued)

Example 1. Sweep Amplitude from 1 to 11 volts in 10 millivolt steps. (Continued)

Program for the HP 9830 (BASIC Language) (Continued).

| Program | Remarks |
|-----------------------------|---|
| 1020 CMD "?U!" | |
| 1030 OUTPUT (13,*)"A",A,"I" | Send amplitude value to 172B. This is done by sending first the ASCII letter A, then the amplitude in variable A, followed by the letter I which causes the Execute action, that transfers the information programmed since the last Execute was sent to the waveform generator circuits. |
| 1040 NEXT I | Increment A by 10 millivolts and test if 11 volts have been reached. |
| 1050 STOP | Stop program. |

Example 2. Testing SRQ bit, polling and reading error message from the 172B.

Program for the HP 9825 (using the rds function)

| | |
|------------------------------|---|
| 0: dim E\$ [50] | |
| 1: wrt 701,"C30" | Cause an error in the 172B so that it will request service. |
| 2: if bit (7,rds (7));gto 5 | Wait at statement 2 until SRQ comes on. |
| 3: dsp "SRQ NOT ON" | |
| 4: gto 2 | |
| 5: dsp "SRQ ON" | |
| 6: wrt 701, "T1" | Set 172B Talk message response setting to select the error message. It is necessary to do this before polling because the 9825 polling function sends the instrument talk address before the Serial Poll Enable (SPE) command. Thus, the 172B sees itself briefly addressed as a talker and fetches the selected talk message at that time. |
| 7: rds (701) → A | Poll 172B and put its status byte in the variable A. |
| 8: if A = 69 gto 10 | Test if correct status byte (69 = decimal equivalent of ASCII letter E). |
| 9: dsp "BAD STATUS BYTE";stp | If not, status byte is bad. |
| 10: red 701, E\$ | Read error string into the string variable E\$. |
| 11: dsp E\$ | Display error string. Should look like E 1 C. |
| 12: stp | |

Table C-1. 172B Programming Examples (Continued)

Example 2. Testing SRQ bit, polling and reading error message from the 172B. (Continued)

Program for the HP 9830.

| Program | Remarks |
|--|---|
| 1000 DIM E\$ [50] | |
| 1010 CMD "?U!";"C30C" | Cause an error in the 172B so that it will request service. |
| 1020 IF STAT13 <= 0 THEN 1050 | Wait at statement 1020 until SRQ comes on. |
| 1030 DISP "SRQ NOT ON" | |
| 1040 GO TO 1020 | |
| 1050 DISP "SRQ ON" | |
| 1060 CMD "?U" | Set up calculator to talk for sending commands. |
| 1070 FORMAT 5B | Binary format for sending commands. |
| 1080 OUTPUT (13,1070)256,95,53,24, 65,512 | Perform the following: turn on ATN line; send UNTALK command; send calculator listen address (so calculator can receive status byte); send Serial Poll Enable (SPE) command; send 172B's talk address, which commands it to send the status byte to the calculator; finally, turn off ATN. Note that the 172B's talk address is sent after the SPE command; this ensures that the instrument will not try to access a talk message during a poll. |
| 1090 A=RBYTE13 | Poll 172B and put its status byte in the variable A. |
| 1100 IF A=69 THEN 1130 | Test if correct status byte (69 = decimal equivalent of ASCII letter E). |
| 1120 STOP | |
| 1130 OUTPUT (13,1070)256,95,25,512 | Finish poll by unaddressing 172B (with 95) and sending a Serial Poll Disable command (25). |
| 1140 CMD "?5A" | Address 172B to talk and calculator to listen. |
| 1150 ENTER (13,*) E\$ | Read error string into the string variable E\$. |
| 1160 DISP E\$ | Display error string. Should look like E 1 C. |
| 1170 STOP | |

Table C-1. 172B Programming Examples (Continued)

Example 3. Reading Contents of Stored Settings Into Calculator.

Program for the HP 9825.

| Program | Remarks |
|---|--|
| <p>0: dim S\$ [80]</p> <p>1: wrt 701, "T0Q1Y", A</p> <p>2: red 701, S\$</p> <p>3: wrt 701, "W"</p> <p>4: (instructions to save S\$ on tape or other storage)</p> <p>5: wait (100)</p> <p>6: if not bit (7, rds (7)); goto 2</p> | <p>Initialize: Select talk response zero, which reports back a condensed reading of amplitude, offset, frequency, mode, function, load and symmetry. Also, enable GPIB Service Request (SRQ) for errors and recall the stored setting selected by the value in the variable A, which has previously been set to the lowest numbered setting to be read.</p> <p>Read program information just recalled into the variable S\$.</p> <p>Command 172B to advance to and recall next program.</p> <p>Insure that 100 ms have elapsed since the "W" was sent to allow time for the SRQ to be valid. This statement may be unnecessary if statement 4 lasts longer than 100 ms.</p> <p>Test if SRQ line is on. If not, go to statement 2 and read next program. If on, the last setting has been read.</p> |

Program for the HP 9830.

| | |
|---|---|
| <p>1000 DIM S\$ (80)</p> <p>1010 CMD "?U!", "T0Q1Y"</p> <p>1020 OUTPUT (13, *) A</p> <p>1030 CMD "?A5"</p> <p>1040 ENTER (13, *) S\$</p> <p>1050 CMD "?U!", "W"</p> <p>1060 (instructions to save S\$ on tape or other storage)</p> | <p>Initialize: Select talk response zero, which reports back a condensed reading of amplitude, offset, frequency, mode, function, load and symmetry. Also, enable GPIB Service Request (SRQ) for errors and recall the stored setting selected by the value in the variable A, which has previously been set to the lowest numbered setting to be read.</p> <p>Address 172B to talk and 9830 to listen.</p> <p>Read program information just recalled into the variable S\$.</p> <p>Command 172B to advance to and recall next program.</p> |
|---|---|

Table C-1. 172B Programming Examples (Continued)

Example 3. Reading Contents of Stored Settings Into Calculator (Continued)

Program for the HP 9830 (Continued).

| Program | Remarks |
|----------------------------|---|
| 1070 WAIT (100) | Insure that 100 ms have elapsed since the "W" was sent to allow time for the SRQ to be valid. This statement may be unnecessary if statement 1060 lasts longer than 100 ms. |
| 1080 IF STAT13>1 THEN 1040 | Test if SRQ line is on. If not, go to statement 1040 and read next program. If on, the last setting has been read. |

Example 4. Logarithmic frequency sweep using high speed recall of stored settings.

Program for the HP 9825.

| | |
|---------------------------|--|
| 0: wrt 701,"A1D0B0C0P1S0" | Initialize settings to produce a 1 volt continuous sine wave. |
| 1: for I = 1 to 240 | Generate 240 settings with frequency logarithmically spaced between 1 kHz and 1 MHz. |
| 2: (I-1)/80+3→E | Compute exponent of next frequency. |
| 3: wrt 701,"F",10↑E,"M",I | Send new frequency to instrument and store into the program selected by I. |
| 4: next I | |
| 5: wrt 701,"Y1" | Recall first program to begin sweep. |
| 6: "LOOP": wrt 701,"O1" | Program the 172B to fetch the next stored program when a Group Execute Trigger is sent to it. |
| 7: for I = 1 to 239 | Send 239 GETs to the 172B to fetch and execute the stored programs numbered 2 through 240, which will sweep the output frequency from 1 kHz to 1 MHz. |
| 8: trg 701 | |
| 9: next I | |
| 10: wrt 701,"O-1" | Program the 172B to fetch the previous stored program when a Group Execute Trigger is sent to it. |
| 11: for I = 1 to 239 | Send 239 GETs to the 172B to fetch and execute the stored programs numbered 239 through 1 in descending order, which will sweep the frequency from 1 MHz to 1 kHz. |
| 12: trg 701 | |

Table C-1. 172B Programming Examples (Continued)

Example 4. Logarithmic frequency sweep using high speed recall of stored settings. (Continued)

Program for the HP 9825 (Continued).

| Program | Remarks |
|----------------|---------|
| 13: next I | |
| 14: gto "LOOP" | |

Program for the HP 9830

| | |
|----------------------------------|---|
| 1000 CMD "?U!","A1D0B0C0P1S0" | Initialize settings to produce a 1 volt continuous sine wave. |
| 1010 FOR I = 1 TO 240 | Generate 240 settings with frequencies logarithmically spaced between 1 kHz and 1 MHz. |
| 1020 E = (I-1)/80 + 3 | Compute exponent of next frequency. |
| 1030 CMD "?U!" | |
| 1040 OUTPUT (13,*)"F",101E,"M",I | Send new frequency to instrument and store it into the program selected by I. |
| 1050 NEXT I | |
| 1060 CMD "?U!","Y1" | Recall first program to begin sweep. |
| 1070 CMD "?U!","O1" | Program the 172B to fetch the next stored program when Group Execute Trigger is sent to it. |
| 1080 FOR I = 1 TO 239 | Send 239 GETs to the 172B to fetch and execute the stored programs numbered 2 through 240, which will sweep the output frequency from 1 kHz to 1 MHz. |
| 1090 OUTPUT (13,1100)256,8,512; | |
| 1100 FORMAT 3B | |
| 1110 NEXT I | |
| 1120 CMD "?U!","O-1" | Program the 172B to fetch the previous stored program when a Group Execute Trigger is sent to it. |
| 1130 FOR I = 1 TO 239 | Send 239 GETs to the 172B to fetch and execute the stored programs numbered 239 to 1 in descending order, which will sweep the frequency from 1 MHz to 1 kHz. |
| 1140 OUTPUT (13,1100)256,8,512; | |
| 1150 NEXT I | |
| 1160 GO TO 1070 | |